THE UNIVERSITY OF SOUTHERN MISSISSIPPI

SCHOOL OF CONSTRUCTION AND DESIGN

University of Southern Mississippi


# REINFORCED CMU WALL AR

**CMU**


**MASONRY · AR**

## TOP VIEW · AR ANCHOR

Scale 1:16 · 8" CMU, running bond · #5 bars at 4'-0" o.c.

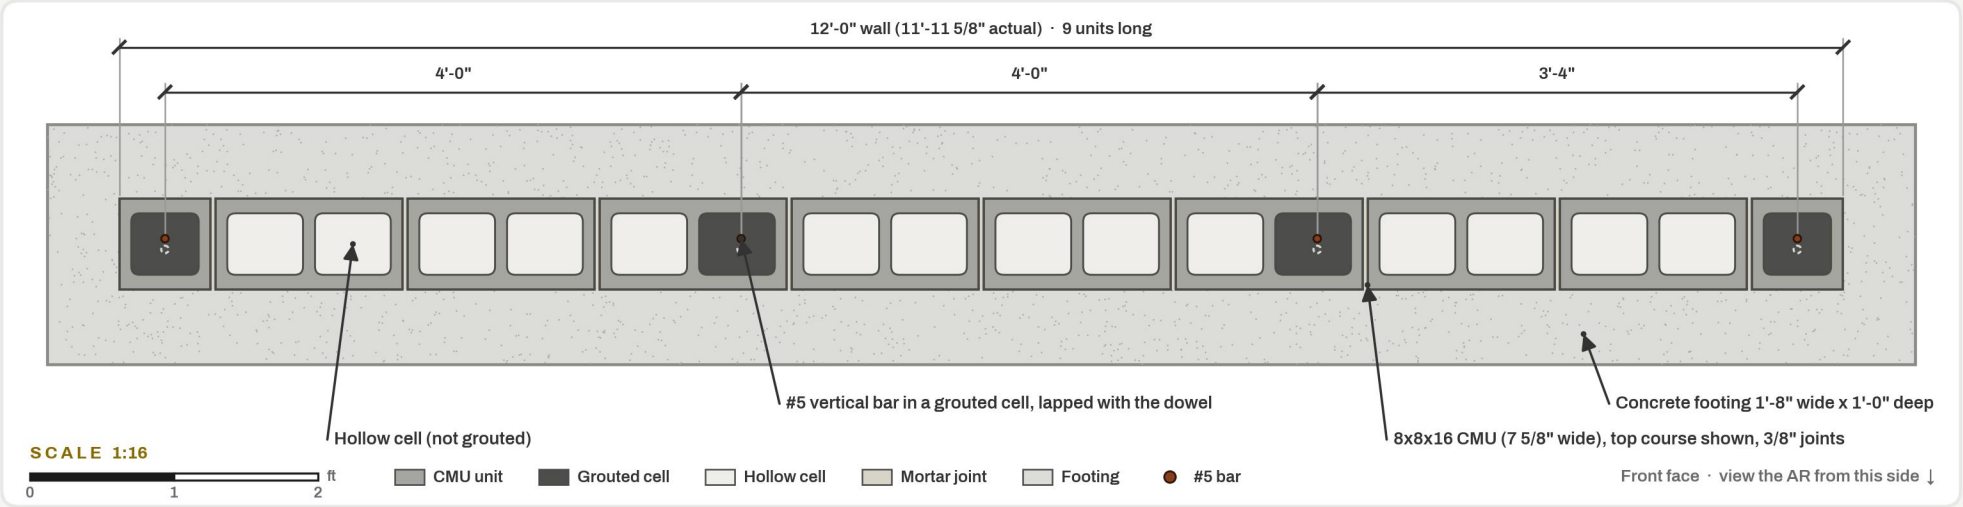



## CONSTRUCTION SEQUENCE · LOW-LIFT GROUTING

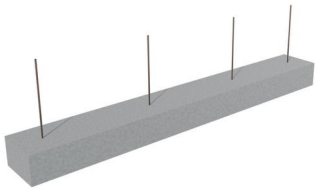


Footing poured; dowels set in line with the reinforced cells

**1 FOOTING & DOWELS**

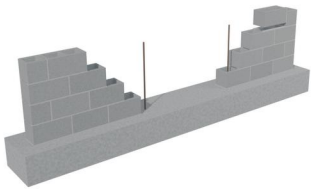


Lay up corner leads, racked back (first course on a full mortar bed)

**2 CORNER LEADS**

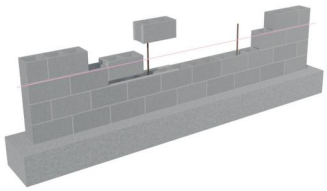


Fill in between the leads along a mason's line

**3 FILL TO THE LINE**

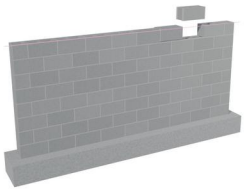


Raise leads and fill to the 5'-4" grout lift height (8 courses)

**4 LIFT HEIGHT 5'-4"**

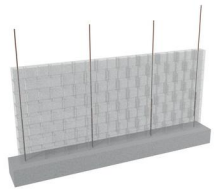


Lower vertical bars into the cells and lap them with the dowels

**5 VERTICAL BARS**

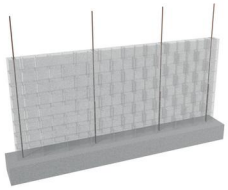


Secure the bars with rebar positioners at the top of the lift

**6 REBAR POSITIONERS**

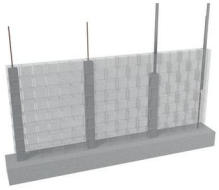


Pour grout into the reinforced cells (one lift, no cleanouts)

**7 GROUT THE CELLS**

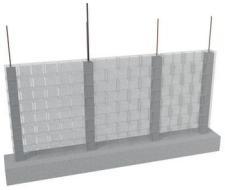

Consolidate the grout with a mechanical vibrator

**8 CONSOLIDATE**

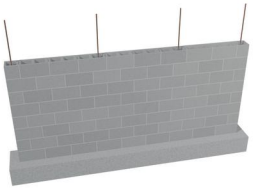

Stop grout 1-1/2" below the top as a key for the next pour

**9 GROUT KEY**

**SCAN TO LAUNCH**

then aim at this sheet

**IN THE APP** Play / pause · jump to any step · speed · X-ray to see bars and grout inside the cells · the wall rises out of this top view at 1:16