THE UNIVERSITY OF SOUTHERN MISSISSIPPI


SCHOOL OF CONSTRUCTION AND DESIGN
University of Southern Mississippi

REINFORCED CMU WALL AR


CMU
MASONRY · AR

TOP VIEW · AR ANCHOR

Scale 1:16 · 8" CMU, running bond · #5 bars at 4'-0" o.c.

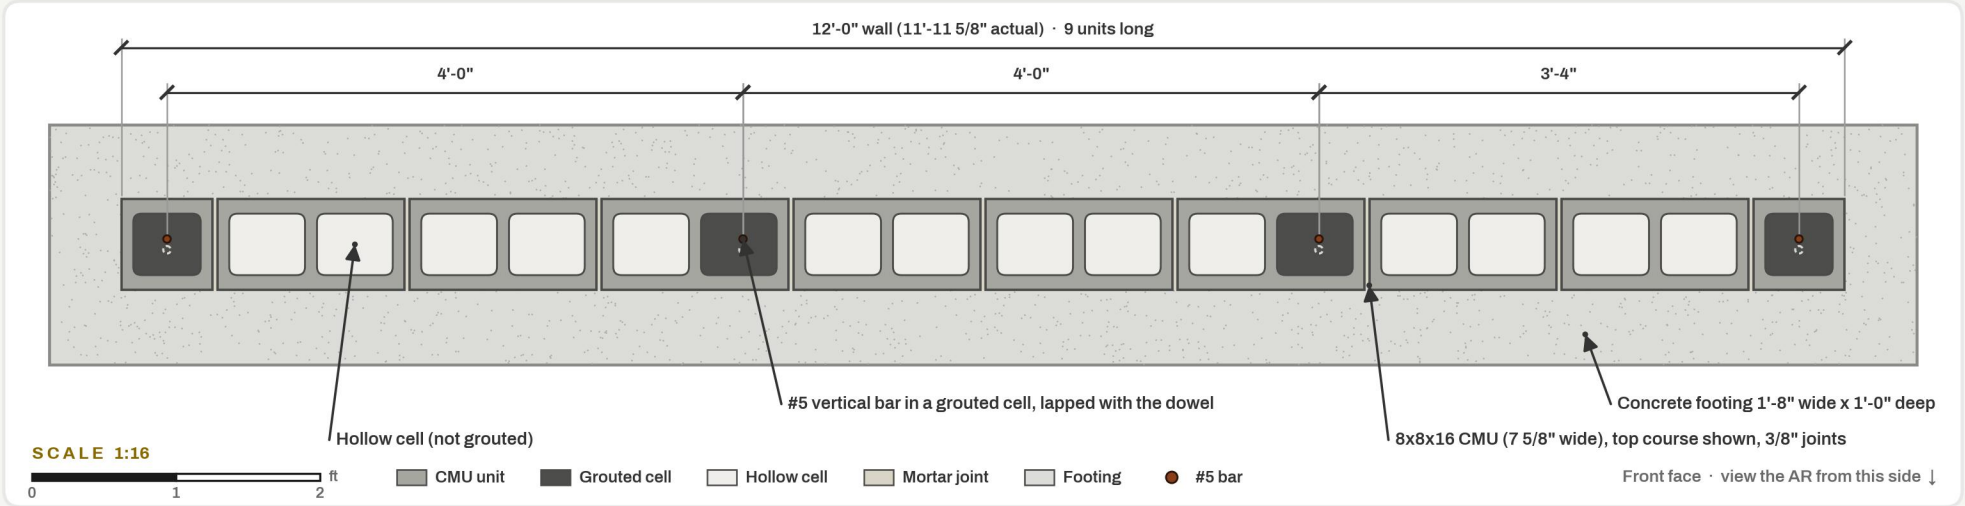


CONSTRUCTION SEQUENCE · LOW-LIFT GROUTING

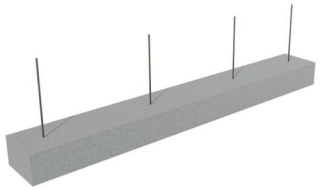


Footing poured; dowels set in line with the reinforced cells

1 FOOTING & DOWELS

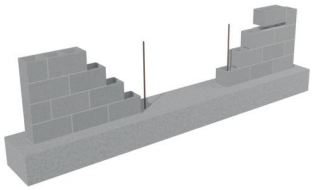


Lay up corner leads, racked back (first course on a full mortar bed)

2 CORNER LEADS

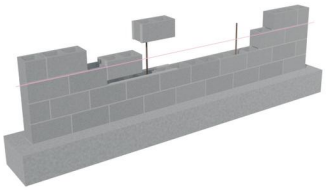


Fill in between the leads along a mason's line

3 FILL TO THE LINE

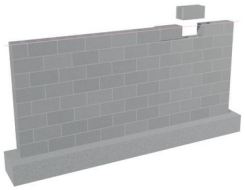


Raise leads and fill to the 5'-4" grout lift height (8 courses)

4 LIFT HEIGHT 5'-4"

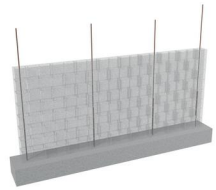


Lower vertical bars into the cells and lap them with the dowels

5 VERTICAL BARS

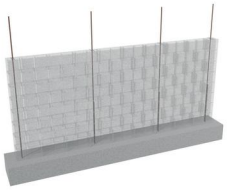


Secure the bars with rebar positioners at the top of the lift

6 REBAR POSITIONERS

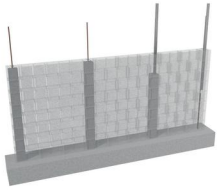


Pour grout into the reinforced cells (one lift, no cleanouts)

7 GROUT THE CELLS

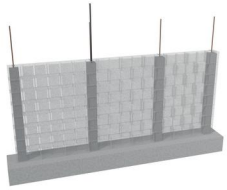

Consolidate the grout with a mechanical vibrator

8 CONSOLIDATE

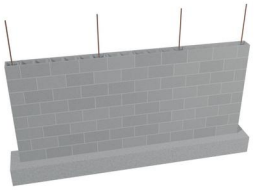

Stop grout 1-1/2" below the top as a key for the next pour

9 GROUT KEY

SCAN TO LAUNCH
then aim at this sheet

IN THE APP Play / pause · jump to any step · speed · X-ray to see bars and grout inside the cells · the wall rises out of this top view at 1:16