US Department of Transportation
Federal Aviation Administration

MAJOR REPAIR AND ALTERATION
(Airframe, Powerplant, Propeller, or Appliance)

OMB No. 2120-0020
Exp: 07/31/2026

Electronic Tracking Number

For FAA Use Only

INSTRUCTIONS: Print or type all entries. See Title 14 CFR §43.9, Part 43 Appendix B, and AC 43.9-1 (or subsequent revision thereof) for instructions and disposition of this form. This report is required by law (49 U.S.C. §44701). Failure to report can result in a civil penalty for each such violation. (49 U.S.C. §46301(a))

1. Aircraft

Nationality and Registration Mark: N9248C
Serial No.: 31347
Make: Cessna
Model: 180
Series:

2. Owner

Name *(As shown on registration certificate)*: DAUGHTRY GREGORY M

Address *(As shown on registration certificate)*
Address: 2465 GLENWOOD DR
City: BOULDER State: COLORADO
Zip: 80304-2825 Country: United States

3. For FAA Use Only

4. Type		5. Unit Identification			
Repair	Alteration	Unit	Make	Model	Serial No.
☐	☐	AIRFRAME	Cessna	*(As described in Item 1 above)*	31347
☐	☐	POWERPLANT			
☐	☐	PROPELLER			
☐	☐	APPLIANCE	Type / Manufacturer		

6. Conformity Statement

A. Agency's Name and Address
Name: Samuel I. Perez Baptista
Address: 9034 Ellis Way
City: Arvada State: CO
Zip: 80003 Country: United States

B. Kind of Agency
- X U. S. Certificated Mechanic
- Foreign Certificated Mechanic
- Certificated Repair Station
- Certificated Maintenance Organization
- Manufacturer

C. Certificate No.: 3815080 AP/IA

D. I certify that the repair and/or alteration made to the unit(s) identified in item 5 above and described on the reverse or attachments hereto have been made in accordance with the requirements of Part 43 of the U.S. Federal Aviation Regulations and that the information furnished herein is true and correct to the best of my knowledge.

Extended range fuel per 14 CFR Part 43 App. B ☐

Signature/Date of Authorized Individual: 10/12/2024

7. Approval for Return to Service

Pursuant to the authority given persons specified below, the unit identified in item 5 was inspected in the manner prescribed by the Administrator of the Federal Aviation Administration and is ☐ Approved ☐ Rejected

BY
- ☐ FAA Flt. Standards Inspector
- ☐ Manufacturer
- ☐ Maintenance Organization
- ☐ Persons Approved by Canadian Department of Transport
- ☐ FAA Designee
- ☐ Repair Station
- X Inspection Authorization
- Other *(Specify)*

Certificate or Designation No.: 3815080 AP/IA

Signature/Date of Authorized Individual: 10/12/2024

FAA Form 337 (10/06)

McFarlane Aviation Products

Instructions for Continued Airworthiness

McFarlane Aviation Inc. FAA-PMA Part Number 1111 Stabilizer Screwjack Actuator Kit.
FAA PMA Number: PQ3732CE

Notice: Verify that this document is the latest approved revision before use! Current version can be found at:
www.McFarlaneAviation.com/ICA

Approved By:

Quality Assurance Manager

Engineering Manager

Production Manager

Revisions

Revision	Date	Summary
Original	04/05/2010	Original release
A	10/26/2010	Updated Assistance and Revision Section. Latest revision now available on website.
B	06/01/2011	Added alignment marks and hinge P/Ns to figure. Added Service and Parts Manual part numbers. Expanded bearing seating instructions.
C	12/11/2011	Added new chain assy. 6361. Deleted reference to part numbers 6464 and 6463
D	02/22/2017	Added identifiers for not-provided parts to figure.
E	06/05/2020	Bearing bore prep instructions, added additional instructional diagrams.

List of Effective Pages

Page	Rev/Date
2	D / 02/22/2017
3	E / 06/05/2020
4	E / 06/05/2020

McFarlane Drawing: 6465

Instructions for Continued Airworthiness
McFarlane Aviation Inc. FAA-PMA Part Number 1111 Stabilizer Screwjack Actuator Kit.
FAA PMA Number: PQ3732CE

Notice: Verify that this document is the latest approved revision before use! Current version can be found at:
www.McFarlaneAviation.com/ICA

The following exceptions to the Cessna instructions, specific to the McFarlane parts, apply:

1. Do not use lapping compounds on the McFarlane barrels and screw bars during replacement.
2. Cessna parts cannot be used to replace McFarlane Components.

The following instructions, specific to the McFarlane parts, apply:

Due to inconsistency found in the original Cessna hinge bearing housings, the bearing bores must be measured and adjusted as necessary to accommodate the more precise bearings utilized in this STC. Failure to do so could result in rough operation/rotation and a shortened life for the bearing.

Bearing Removal and Installation Prep Instructions:

1. Check bore of housing and bearing outer race for proper size and roundness by taking at least four measurements at different locations as illustrated.
2. Calculate average bore measurement and average bearing OD measurement.
3. Subtract housing ID average from bearing OD average to obtain the interference. Utilize the figures and tables below for calculations.

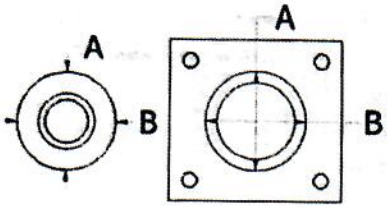

Location	Bearing OD (Per spec: 0.8745"-0.8750")	Housing Bore (Per spec: 0.8739"-0.8744")
A		
B		
Average:		

Bearing OD Avg. [ ] - Housing Bore Avg. [ ] = Interference [ ]

4. If interference is greater than 0.0011", run sandpaper or emery cloth on the housing ID. Remove material evenly and slowly around bore.
5. Repeat steps 1 thru 4 for the bore until interference is less than 0.0011".
6. Check bore for any gouges, dents, etc.
7. Clean the bore and bearing of any grit, residue, etc.

Bearing Installation Instructions:

1. After applying a light coating of lubricant, check bearing alignment with bore in housing.
2. Using a press tool (tube with max OD of 0.873" and min ID of .500"), press down on outer race of the bearing with just enough force to start the bearing into the bore.
3. Stop pressing bearing and re-check alignment between bearing and housing.
4. Continue pressing bearing into housing. Do not exceed 250 lbs of force.
5. Press resistance will increase substantially when bearing is fully seated against housing shoulder. (Note that outer race of bearing may protrude a few thousandths above housing when bearing is fully seated; please see detail view below.)
6. Remove all excess penetrating oil.
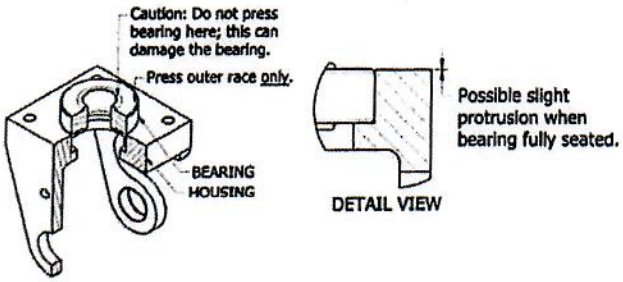
After bearing installation: Inner race should turn smoothly and freely when rotated.