

Topic	ANALOG INPUT AND SENSORS		
Class Description	Students will be introduced to the concept of analog input and sensors and how the sensor communicates with the ESP32 and shows the output in analog format		
Class	PRO C245		
Class time	50 mins		
Goal	 Introduction to the analog input & potentiometer Introduction to DTH11 sensor 		
Resources Required	 Teacher Resources: Laptop with internet connectivity Earphones with mic Notebook and pen Smartphone Student Resources: Laptop with internet connectivity Earphones with mic Notebook and pen 		
Class structure	structure Warm-Up Teacher-Led Activity Student-Led Activity Wrap-Up		10 mins 15 mins 15 mins 10 mins
WARM-UP SESSION - 10 mins			
Teacher Action		Student	t Action
1 *		Hi, thank am exci	ks! ted about it!

^{© 2021 -} WhiteHat Education Technology Private Limited.

Note: This document is the original copyright of WhiteHat Education Technology Private Limited.



Following are the WARM-UP session deliverables:

- Greet the student.
- Revision of previous class activities.
- Quizzes.

Click on the slide show tab and present the slides

WARM-UP QUIZ

Click on In-Class Quiz

Activity Details

Following are the session deliverables:

- Appreciate the student.
- Narrate the story by using hand gestures and voice modulation methods to bring in more interest in students.

TEACHER-LED ACTIVITY - 15 mins

Teacher Initiates Screen Share

ACTIVITY

- Introduction to Analog Input
- Potentiometer

Teacher Action	Student Action
Have you ever noticed the type of meters on vehicles, such as the one on an Activa or a car's which will let you know about the distance and even fuel quantity?	ESR: Varied!
What type of meters are they?	
You must be surprised to know that these meters played an important role in electronics too.	
Working with electronics means dealing with a lot of meters,	

© 2021 - WhiteHat Education Technology Private Limited.

Note: This document is the original copyright of WhiteHat Education Technology Private Limited.



We learned about current, voltage, resistors when we started this module and I told you we measured these quantities too.

To measure these quantities we have units assigned for each but now the thing is how we can measure these things.

Any ideas?

To measure we had a voltmeter, to measure current we had an ammeter,

When we talk about these meters means we are providing input signals to these meters which measure and show output on meters.

To measure these types of inputs and outputs signals we have analog and digital meters.

In electronics circuits, Input & output matter a lot. One device output can be input for others

You know everything around is you infinite, and then infinite signals are known as analog signals

Can you give an example for analog signals?

Yes, more examples ar<mark>e vo</mark>ltage, current

In short, whichever signal we see in the waveform is called an **Analog signal**

You must be curious to see an example of Analog signals:

In our IoT kit, we have the rotary potentiometer

ESR: Audio, Video



Note: The teacher will take the potentiometer out from the IoT kit and show it to the student.	
Potentiometer: A potentiometer is a 3 terminal device in which the resistance is manually varied to control the flow of electric current.	
A potentiometer usually has 3 pins: VCC pin: Connect this pin to VCC (5V or 3.3v) GND pin: connect this pin to GND (0V) DATA pin: Data pin is used to communicate between the potentiometer and ESP32, Data pin outputs the voltage to ESP32's input pin.	Lids
The GND and VCC will be interchangeable	O got
How does Potentiometer Work?	ing
The potentiometer's shaft can be rotated from 0 (Minimum) to 270(Maximum)	O.
The voltage in the output pin is in direct proportion to the angle varying from 0 to VCC.	
The below table shows the relation between the angle and the voltage on the output pin:	


0 degree

270 degree


0 V

VCC (5V)



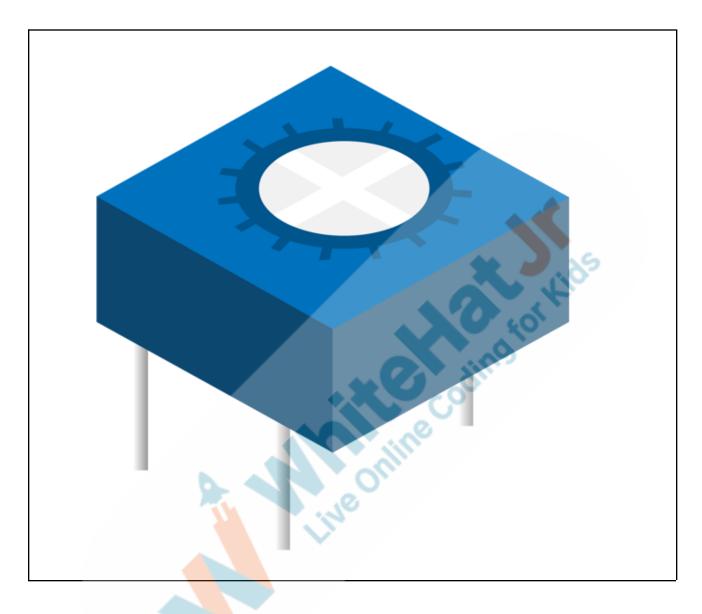



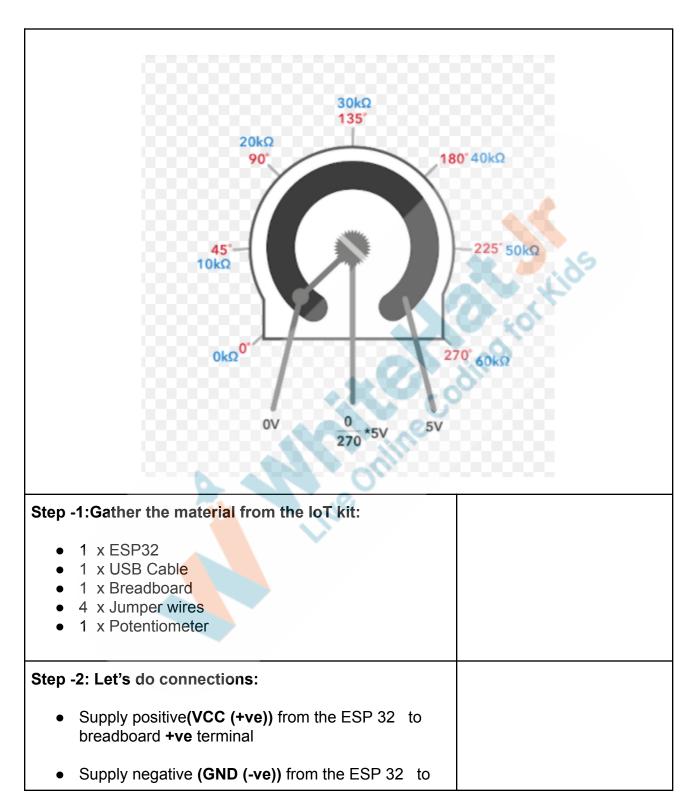

© 2021 - WhiteHat Education Technology Private Limited.



breadboard negative terminal

- Now our breadboard have (VCC (+ve)) and (GND (-ve)) supply
- Insert potentiometer into the breadboard
- Keep track of all three pins, lst and last pin of potentiometer are used for (VCC (+ve)) and (GND (-ve)) respectively

Note: (VCC (+ve)) and (GND (-ve)) of the potentiometer can be interchangeable.


 Provide supply to the potentiometer from the breadboard

•


Note: In Breadboards power rail first five are connected, to make other connected provide jumper wires as shown in the circuit diagram.

 Now it's time to connect the middle pin i.e output of potentiometer. connect the potentiometer's output pin to an ESP32's analog input pin 36. The ESP32's analog input pin converts the voltage (between 0v and 3.3V) into integer values (between 0 and 4095), or analog values.

Note: Multifunctionality of GPIO input pins, here pin 36 will acts as an Analog pin

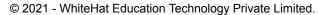



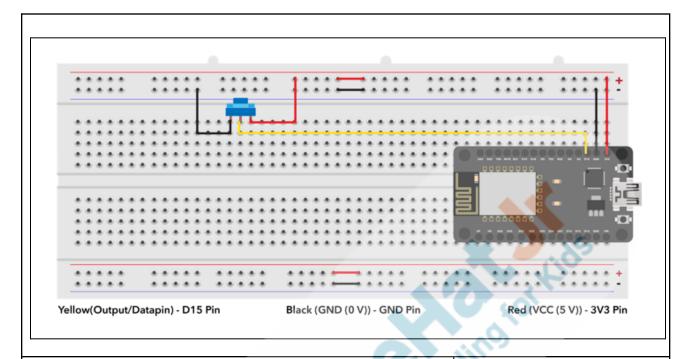

Step-3 Let's write a code:

To Map value of voltage with potentiometer we need to use **float map()** function. It will map 0 to 3.3V/5V according to the rotation of the potentiometer. It will map value from low to high or high to low.

floatMap() is used to get all decimal value

```
float floatMap(float x, float in_min, float in_max, float out_min, float out_max) {
  return (x - in_min) * (out_max - out_min) / (in_max - in_min) + out_min;
}
```

Initialize using void setup() function

 Serial. begin(9600) is used for data exchange speed. speed parameters. This tells the Arduino to get ready to exchange messages with the Serial Monitor at a data rate of 9600 bits per second. That's 9600 binary ones or zeros per second and is commonly called a baud rate.

© 2021 - WhiteHat Education Technology Private Limited.


Note: This document is the original copyright of WhiteHat Education Technology Private Limited.



```
void setup() {
   Serial.begin(9600);
}
```

To execute the main process write the **void loop()**

- The output pin of the potentiometer is connected to the ESP32 analog input pin. To read this value we need to use the analogRead() function. analogRead() function is used to read the value of the potentiometer reading. This means that it will map input voltages between 0 and the operating voltage(5V or 3.3V) into integer values between 0 and 1023
- Rescale to the potentiometer's angle by using the float map() function.
- Rescale to the potentiometer's voltage:
- Serial. print() is used to print the value, print Analog, and then analog value, voltage
- Serial.println(volage*1000) is used to show voltage in terms of 1.00

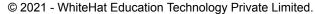



```
void loop() {
   int analogValue = analogRead(4);
   float voltage = floatMap(analogValue, 0, 4095, 0, 3.3);

   Serial.print("Analog: ");
   Serial.print(analogValue);
   Serial.print(", Voltage: ");
   Serial.println(voltage*1000);

   delay(1000);
}
```

Output:


Compile and upload the program to ESP32 board using Arduino IDE

- Verify the program on clicking Tick option
- Upload the program on clicking arrow option

Note: If the port is not selected, insert the USB cable in Computer's port and select the port

- Go to Tools and select Serial Monitor
- Rotate the potentiometer and see the output



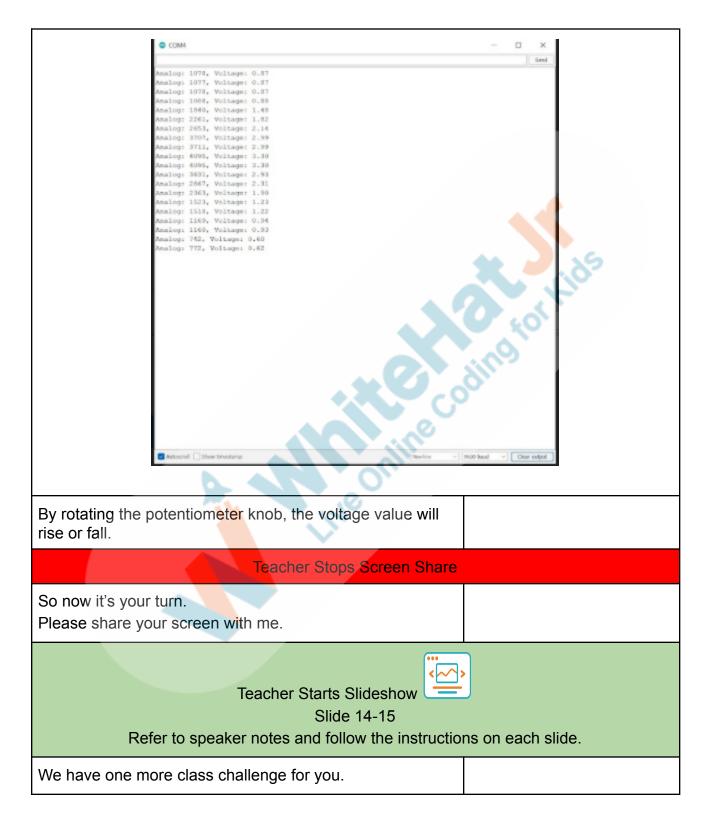

© 2021 - WhiteHat Education Technology Private Limited.



Can you solve it?

Let's try. I will guide you through it.

Teacher Ends Slideshow



STUDENT-LED ACTIVITY - 15 mins

- Ask the student to press the ESC key to come back to the panel.
- Guide the student to start Screen Share.
- The teacher gets into Full Screen.

Student Initiates Screen Share

ACTIVITY

• DHT11

Teacher Action	Student Action
Can you see pressure or temperature?	ESR: Varied!
We can't see with our eyes but we can record them, Right!	ESR: Varied!
But how?	ESR: Using Sensors!
Yes, we need to use sensors!	
Sensors: A sensor is a device that measures a physical quantity like pressure temperature and converts it into a 'signal' which can be read by an observer or by an instrument.	


© 2021 - WhiteHat Education Technology Private Limited.

 ${\bf Note: This\ document\ is\ the\ original\ copyright\ of\ WhiteHat\ Education\ Technology\ Private\ Limited.}$



Like current can be checked by Ammeter, voltage by voltmeter	
What if you want to measure pressure and humidity surrounding you?	ESR: We need sensors!
Yes, we need sensors.	
To measure Temperature and humidity sensors we have a DTH11 sensor	* (ids
Open your lot Kit and check the DHT11 sensor	O got
So our main task is to read the temperature and humidity value from DHT11 and print it to Serial Monitor and check the same in the form of analog input too.	ding
DHT11 Sensor : Use to measure Temperature and Humidity sensors	
DHT11 include 4 pins:	
GND pin: connect this pin to GND (0V) VCC pin: connect this pin to VCC (3.3V) DATA pin: the pin is used to communicate between	
the sensor and ESP32, outputs the voltage to ESP32's input pin.	



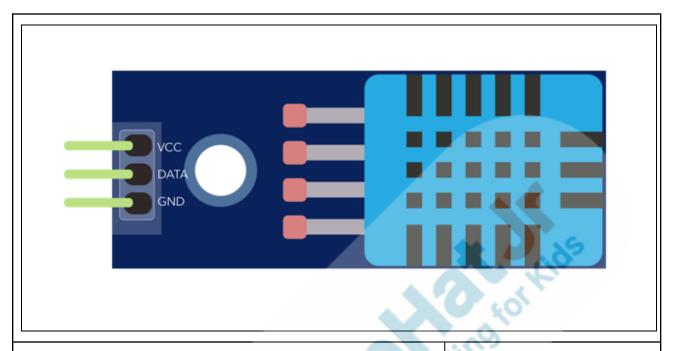

Step -1: Gather the material from the IoT kit:

- 1 x ESP32
- 1 x USB Cable
- 1 x Breadboard
- 4 x Jumper wires
- 1 x Potentiometer
- 1 x Rotary Potentiometer

Step -2: Let's do connections:


- Supply positive(VCC (+ve)) from the ESP 32 to breadboard terminal
- Supply negative(GND (-ve)) from the ESP 32 to breadboard negative terminal
- Now our breadboard have (VCC (+ve)) and (GND (-ve)) supply
- Take the DHT11 sensor, female jumper wires are already connected with DHT11
- Take three male jumper wires to insert into DHT11 sensor
- Now connect VCC (+ve) of DHT11 with VCC (+ve)

© 2021 - WhiteHat Education Technology Private Limited.



of the breadboard

- connect GND(-ve) of DHT11 with GND(-ve) of the breadboard
- Connect data/output pin of DHT11 with D15 of the ESP32

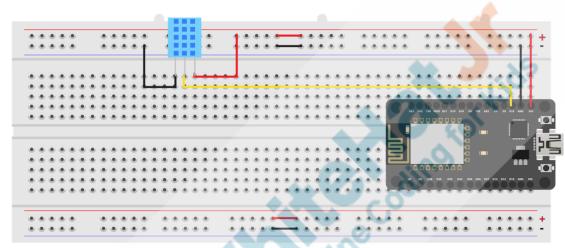

Yellow(Output/Datapin) - D15 Pin

Black (GND (0 V)) - GND Pin

Red (VCC (5 V)) - 3V3 Pin

Step-3 Let's write a code:

Define Pins

- define **DHTPIN** 15
- define DHTPIN DHT11

#define DHTPIN 15

#define DHTTYPE DHT11

DHT dht (DHTPIN, DHTTYPE);

© 2021 - WhiteHat Education Technology Private Limited.

Note: This document is the original copyright of WhiteHat Education Technology Private Limited.



Initialize the setup()

- Serial. begin(9600) is used for data exchange speed This tells the Arduino to get ready to exchange messages with the Serial Monitor at a data rate of 9600 bits per second. That's 9600 binary ones or zeros per second and is commonly called a baud rate.
- Serial.println is used to print data. Print ("DHT11 sensor!")
- dht. begin() is used to begin the process

```
void setup() {
   Serial.begin(9600);
   Serial.println("DHT11 sensor!");
   //call begin to start sensor
   dht.begin();
}
```

To execute the main process write the void loop()

- Create float h and float t variable to store decimal value
- readHumidity() will read the sensor's humidity value.
- readTemperature() will read the sensor's temperature value.
- Check if any reads failed and exit early using isnan()
- Serial.print used to print data. Print ("Failed to read from DHT sensor!")
- Return the process using return()
- Serial.print() is used to print the value, print Humidity, (h), Temperature, (t)
- Set delay of 2000ms



```
void loop() {
    float h = dht.readHumidity();
    float t = dht.readTemperature();
    if (isnan(h) || isnan(t)) {
        Serial.println("Failed to read from DHT sensor!");
        return;
    }
    // print the result to Terminal
    Serial.print("Humidity: ");
    Serial.print(h);
    Serial.print(",");
    Serial.print("Temperature: ");
    Serial.println(t);
    delay(2000);
}
```

Output:

Compile and upload the program to ESP32 board using **Arduino IDE**

- Verify the program on clicking **Tick** option
- Upload the program on clicking arrow option

Note: If port is not selected, insert the USB cable in Computer's port and select the port

- Go to Tools and select Serial Monitor
- Rotate the potentiometer and see the output

Error Message: If an error message comes like no such file or directory then use the below method to resolve this error


```
DHT.h: No such file or directory
compilation terminated.
exit status 1
DHT.h: No such file or directory
```

Go to Tools

- Click on Manage Libraries
- Write the component name which needs to install
- Click on Install

© 2021 - WhiteHat Education Technology Private Limited.



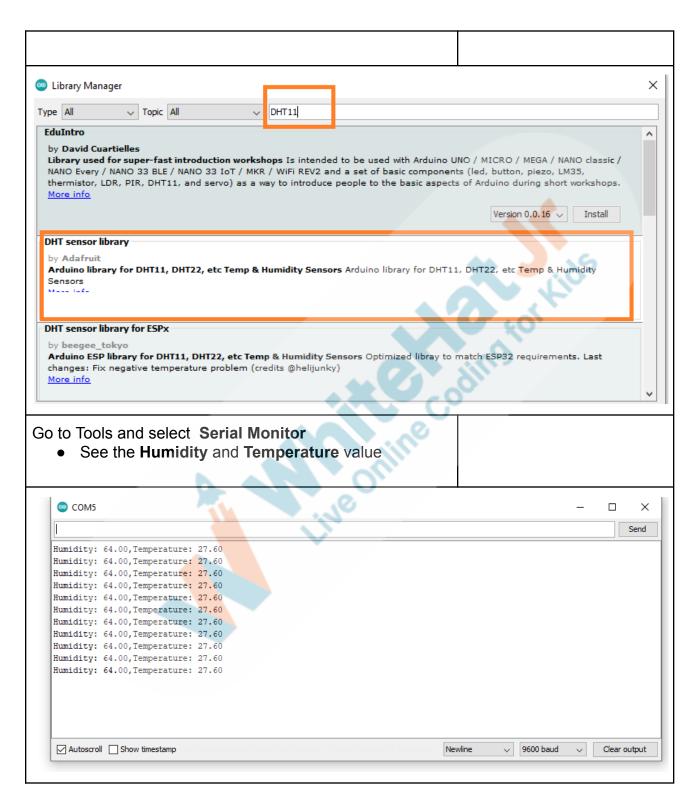

© 2021 - WhiteHat Education Technology Private Limited.



As we are learning analog input let's see analog waveform

- Go to Tools and select Serial Plotter
- See the **Humidity** and **Temperature** value



So, Today we made an arrangement where we saw the exact readings of the humidity and temperature around us using a **DHT11** sensor and even we learned how potentiometer works

That's fun!

Teacher Guides Student to Stop Screen Share

WRAP-UP SESSION - 10 mins

Activity details

Following are the WRAP-UP session deliverables:

- Appreciate the student.
- Revise the current class activities.
- Discuss the quizzes.

WRAP-UP QUIZ

© 2021 - WhiteHat Education Technology Private Limited.

Note: This document is the original copyright of WhiteHat Education Technology Private Limited.



Click on In-Class Quiz

Activity Details

Following are the session deliverables:

- Explain the facts and trivia
- Next class challenge
- Project for the day
- Additional Activity (Optional)

FEEDBACK

- Appreciate and compliment the student for trying to learn a difficult concept.
- Get to know how they are feeling after the session.
- Review and check their understanding.

Teacher Action You get "hats-off" for your excellent work! Make sure you have given at least 2 hats-off during the class In the next class, we will learn about RGB LED Strong Concentration Student Action Creatively Solved Activities Strong Concentration

PROJECT OVERVIEW DISCUSSION

Refer the document below in Activity Links Sections

Teacher Clicks

× End Class



ACTIVITY LINKS			
Activity Name	Description	Links	
Teacher Activity 1	Reference Code for Potentiometer	https://github.com/procodingclass/P RO-C245-Reference-Code	
Teacher Reference 1	Reference Code for DHT11	https://github.com/procodingclass/P RO-C245-Reference-Code-SA	
Teacher Reference 2	In-Class Quiz	https://s3-whjr-curriculum-uploads. whjr.online/27bfe922-fd27-4ac1-8fb 0-cb9bcd235172.docx	