Vader 5 Pro: underside comparison

Print A4 at Actual size / 100%. Disable Fit to page.

1 mm grid; darker lines every 5 mm. Check the 50 mm bar.

Place OEM and bare V28 B with hooks facing the camera.

Photograph straight down, centered, close enough to see hooks.

OEM

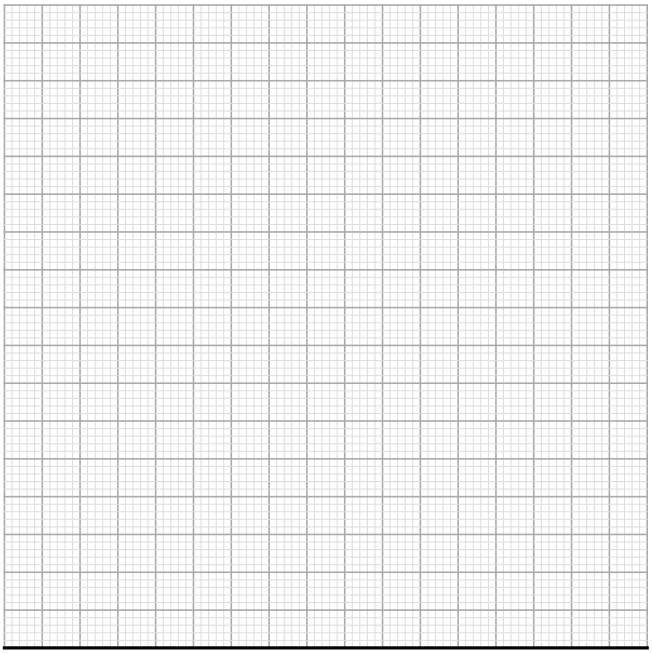

V28 B

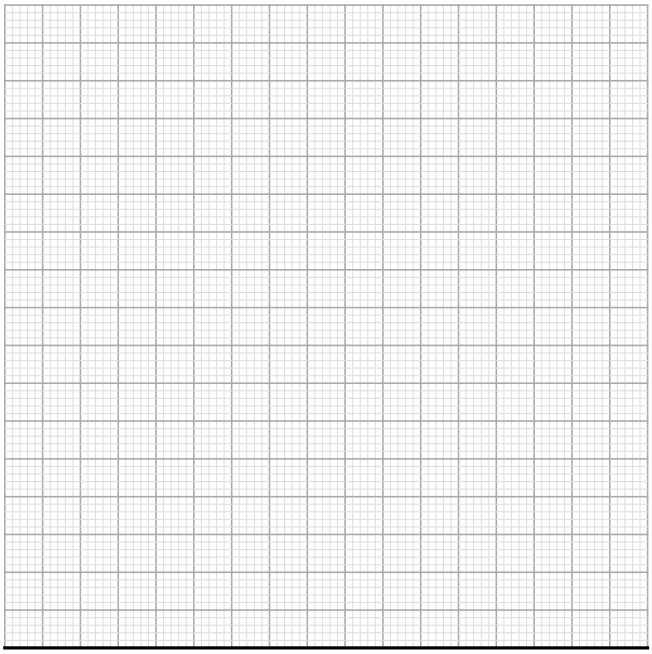

Keep all brim/supports off. Do not force, bend or modify the OEM.

Photo reference only: curvature and camera perspective limit precision.

This bar must measure 50 mm after printing.

Vader 5 Pro: side-profile comparison

Stand this page upright behind the covers; keep it close to them.

Rest both covers on the same flat table. Photograph horizontally.

Camera square to the profile: avoid looking down at the parts.

OEM V28 B

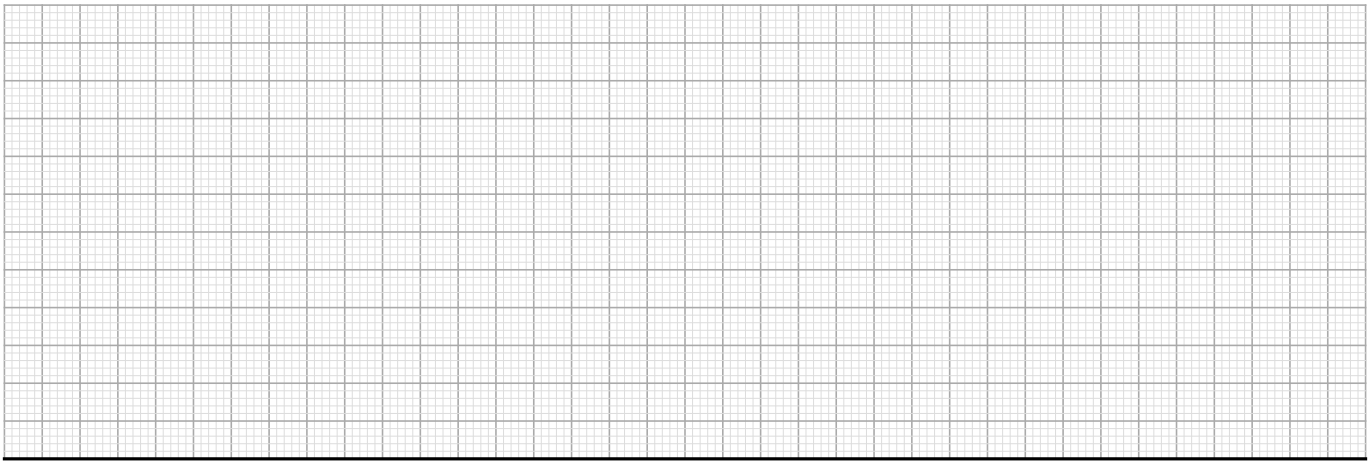

Align the grid baseline with the table. Show shell and hook tips.

Take a second side-profile photo after rotating both covers 90 degrees.

No printer? Use a millimeter ruler immediately beside the parts instead.

Calipers are better for wall thickness and hook-clearance measurements.

This bar must measure 50 mm after printing.