

PRESTART

- 1 Parking brake SET (*pulled OUT*)
- 2 ENGINE switch ON
- 3 INTR / EXTR lights* As desired / As req.
- 4 Extr. lights master switch ... OFF / **FIELD: ON**
- 5 ANTI-SKID switch OFF / **FIELD: ON**
- 6 Standby baro altimeter Set pressure
- 7 HOOK BYPASS switch As req.
- 8 GEN switch ON
- 9 BATT 1 and BATT 2 switches ON

THE BATTERIES WILL DISCHARGE AFTER 25 MIN. UNDER LOAD, RENDERING THE AIRCRAFT INOP.

STARTING ENGINE

- 1 GTS start button Press momentarily, wait for the 'GTS' light (*15 sec*)
- 2 ENGINE switch Hold in START position until the 'READY' light goes on
- 3 Throttle Finger Lift Press at 15-20% RPM
- 4 HUD, MFDs ON (*left to ADI, right to HSI*)
- 5 Radios / Nav aids ON / Tuned
- 6 OBOGS switch / FLOW knob ON / ON

POSTSTART / PRIOR TO TAXI

- 1 Throttle Advance slowly to 70% RPM
- 2 HYD 2 RESET button PRESS
Check that the 'HYD' caution light goes out
- 3 Throttle IDLE
- 4 Pitch trim 3.5° UP / **FIELD: 2° to 3° UP**
Ensure no pressure on the stick
- 5 LAW, BINGO SET (*via DEP or ADI*)
- 6 Flaps FULL / **FIELD: 1/2**
- 7 Parking brake RELEASE (*pushed IN*)

DURING TAXI ABOARD SHIP CANOPY MUST BE CLOSED AND EJECTION SEAT ARMED.
(DECK CREW) EXTEND FLAPS TO 'UNFOLD WINGS'.

BEFORE TAKEOFF / CATAPULT HOOK-UP

- 1 PITOT HEAT switch As req.
- 2 Anti-skid, Flaps, Trim Checked
- 3 Canopy / Seat CLOSED / ARMED

RAISE LANDING GEAR PRIOR TO 200 KIAS.
RAISE FLAPS ABOVE 140 KIAS AT SAFE ALTITUDE.

DESCENT / PENETRATION

- 1 MASTER ARM switch SAFE
- 2 Nav aids Tuned
- 3 Standby baro altimeter Set pressure
- 4 LAW SET

LANDING

- 1 Gear (*below 200 KIAS*) DOWN
- 2 Flaps As req.
- 3 Hook As req.
- 4 Speed brakes As req.
- 5 ANTI-SKID switch OFF / **FIELD: ON**



AFTER LANDING / CLEAR OF RUNWAY

- (DECK CREW) RETRACT FLAPS TO 'FOLD WINGS'.
- 1 Seat ARMED / **FIELD: SAFE**
 - 2 Speed brakes RETRACT
 - 3 Flaps UP
 - 4 Trim Set to zero
 - 5 HUD, NAV equipment OFF
 - 6 PITOT HEAT switch OFF

BEFORE ENGINE SHUTDOWN


- 1 Parking brake SET
 - 2 MFDs, Radios OFF
 - 3 OBOGS switch / FLOW knob OFF / OFF
 - 4 Throttle OFF
 - 5 Seat / Canopy SAFE / As desired
- 45 SECONDS AFTER SETTING THROTTLE TO OFF:
- 6 BATT 1 and BATT 2 switches OFF
 - 7 All remaining switches OFF
 - 8 ENGINE switch OFF

* EXTERIOR LIGHTS	NAVIG	FORMAT	A-COLL	LAND.LT
ON DECK - DAY RECOVERY - DAY	OFF			OFF
ON DECK - NIGHT	START, TAXI OFF 'SALUTE' ON, BRIGHT NO-GO OFF ASAP ONCE TRAPPED OFF			OFF
RECOVERY - NIGHT	ON, BRIGHT			OFF
FIELD: START, TAXI	AS REQ, NIGHT ONLY		ON	AS DES.
FIELD: RWY ENTRY	AS REQ, NIGHT ONLY		ON	ON

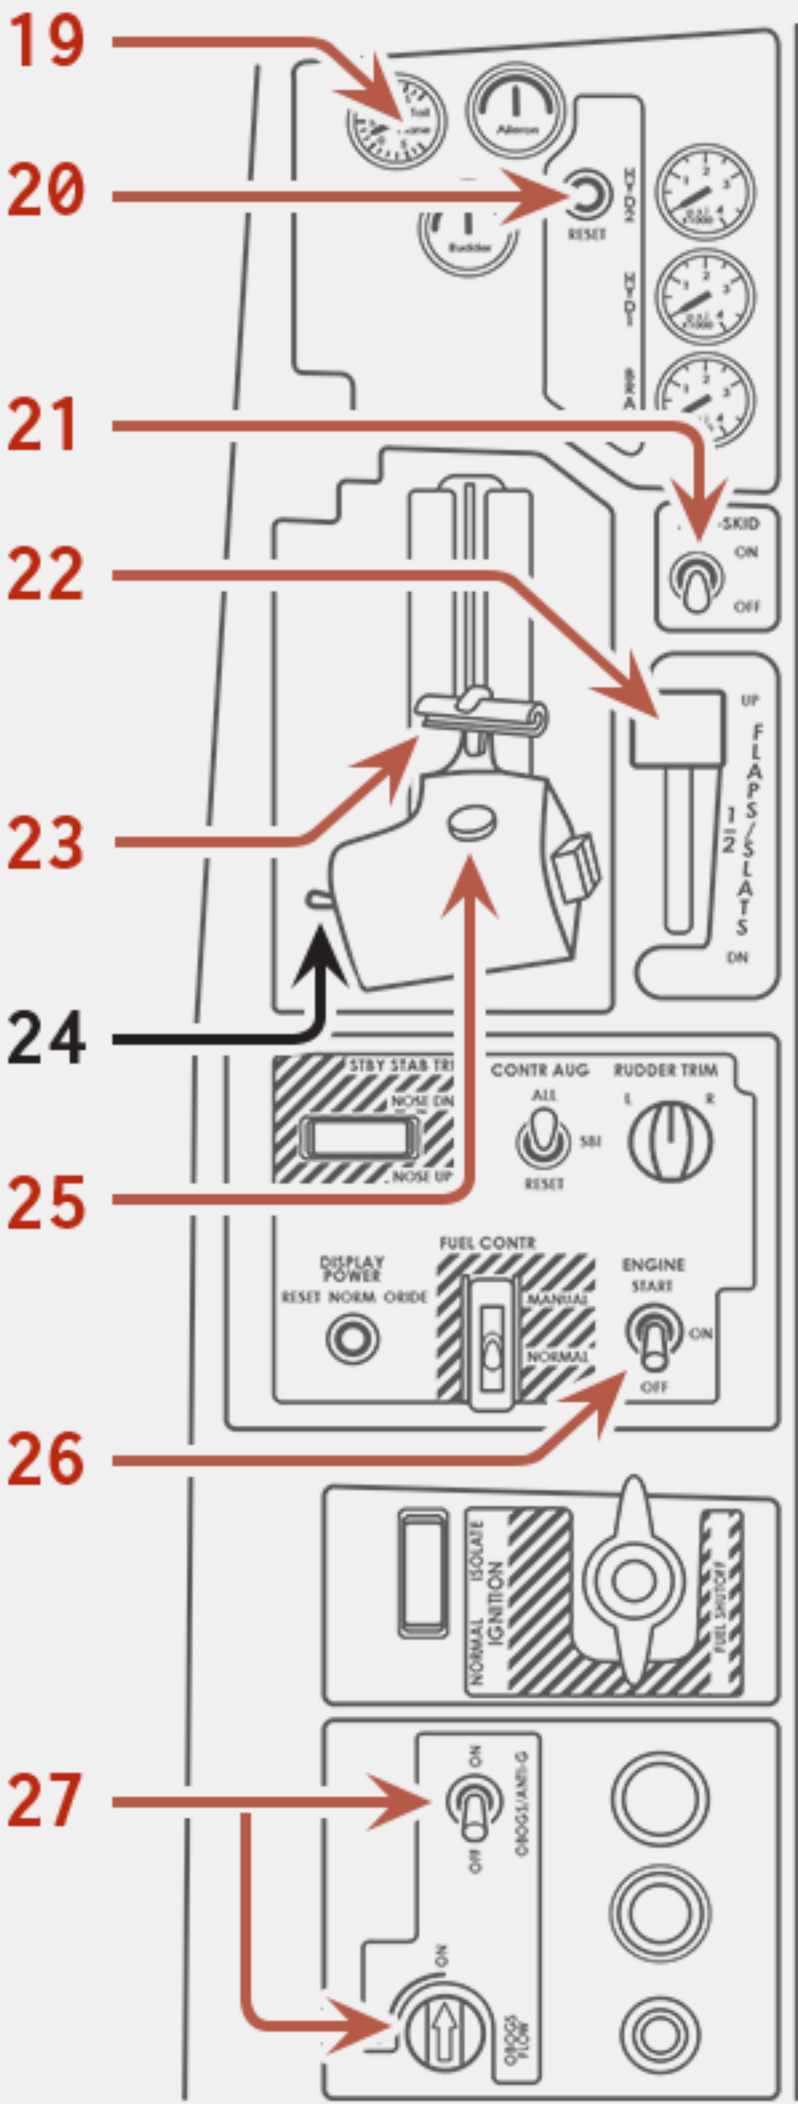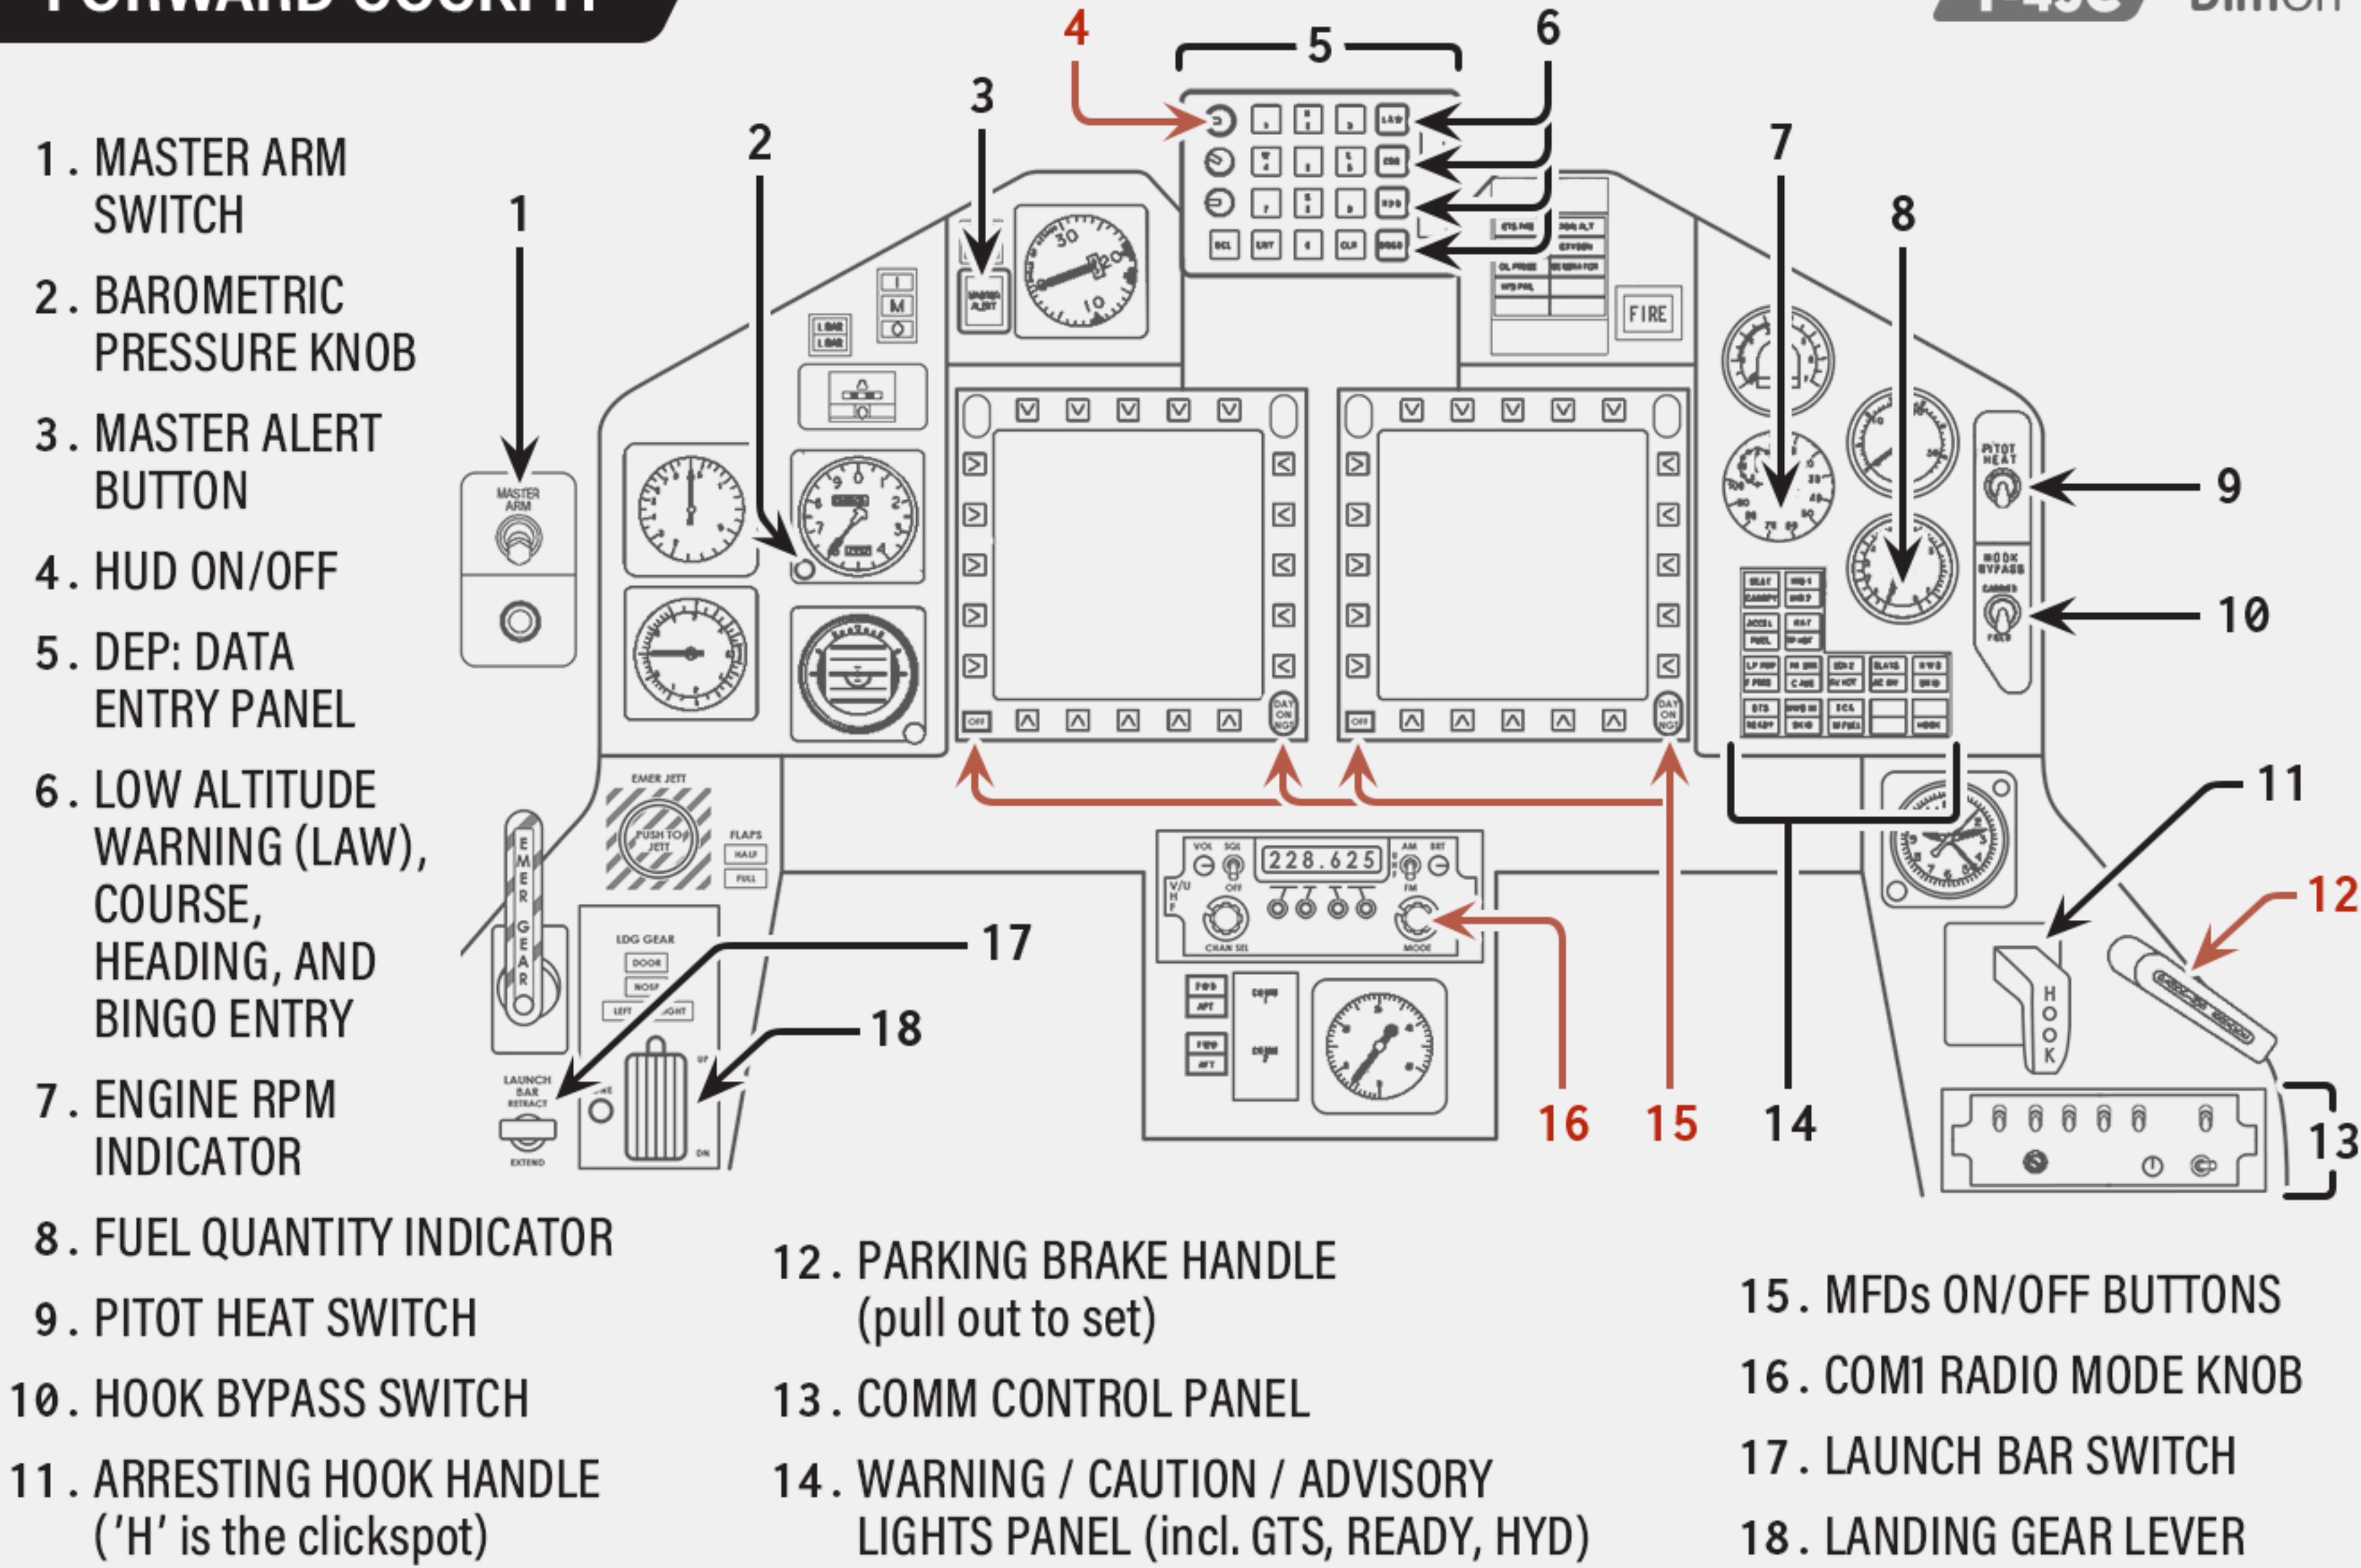

- LEFT CONSOLE**
- 19. STABILATOR POSITION INDICATOR (for pitch trim)
 - 20. HYD 2 RESET BUTTON
 - 21. ANTI-SKID SWITCH
 - 22. FLAP LEVER
 - 23. THROTTLE FINGER LIFT
 - 24. EXTERIOR LIGHTS MASTER SWITCH
 - 25. GTS START BUTTON
 - 26. ENGINE SWITCH
 - 27. OBOGS/ANTI-G SWITCH, OBOGS FLOW KNOB

- RIGHT CONSOLE**
- 28. VOR/ILS CONTROL PANEL
 - 29. EJECTION SEAT ARM
 - 30. TACAN CONTROL PANEL
 - 31. COM2 RADIO (not functional)
 - 32. BATT 1 AND BATT 2 SWITCHES
 - 33. GEN SWITCH
 - 34. INTERIOR LIGHTS PANEL
 - 35. EXTERIOR LIGHTS PANEL

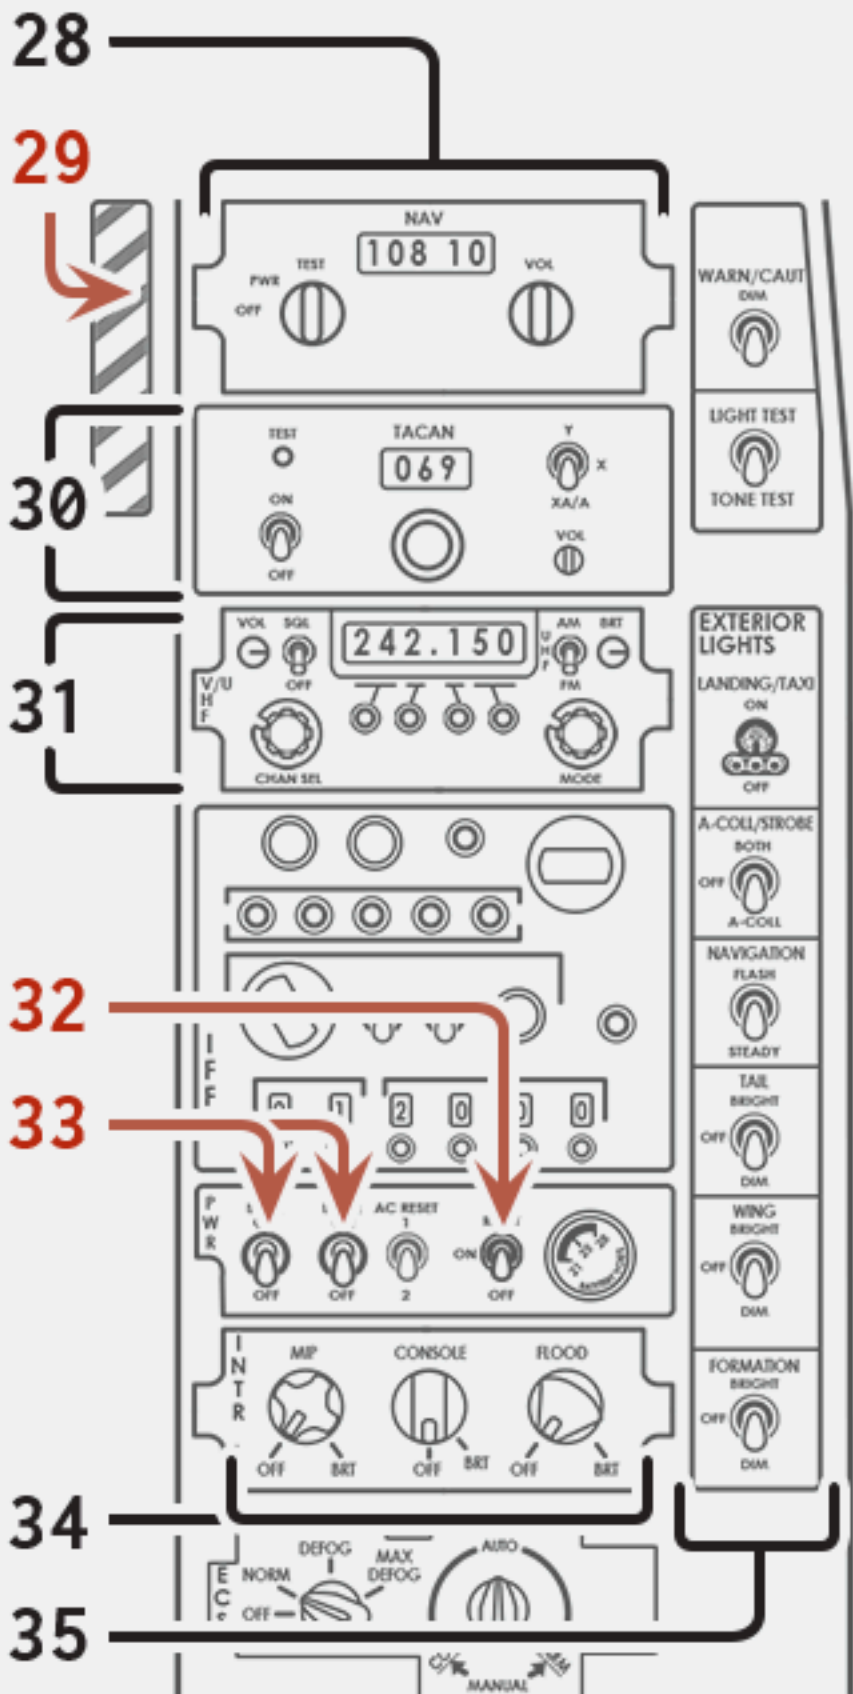

QUICKSTART

- | | | |
|-------------------------------------|--|---|
| 12 P. BRAKE - SET | 26 ENGINE - HOLD IN START POSITION FOR 5 SEC | 19 PITCH TRIM: CV - 3.5° UP
FIELD - 2 to 3° UP |
| 26 ENGINE - ON | 23 FINGER LIFT - PRESS | 22 FLAPS: CV - FULL
FIELD - 1/2 |
| 21 ANTI-SKID: CV - OFF / FIELD - ON | 4 HUD - ON | • CANOPY (LCtrl+C) |
| 32 GEN - ON | 15 MFD - ON | 29 SEAT - ARM |
| 33 BATT 1 & 2 - ON | 16 COM 1 MODE - T/R&G | 12 P. BRAKE |
| 25 GTS - PRESS | 27 OBOGS & FLOW - ON | |
| ! WAIT 15 SEC | 20 HYD 2 RESET - PRESS | |