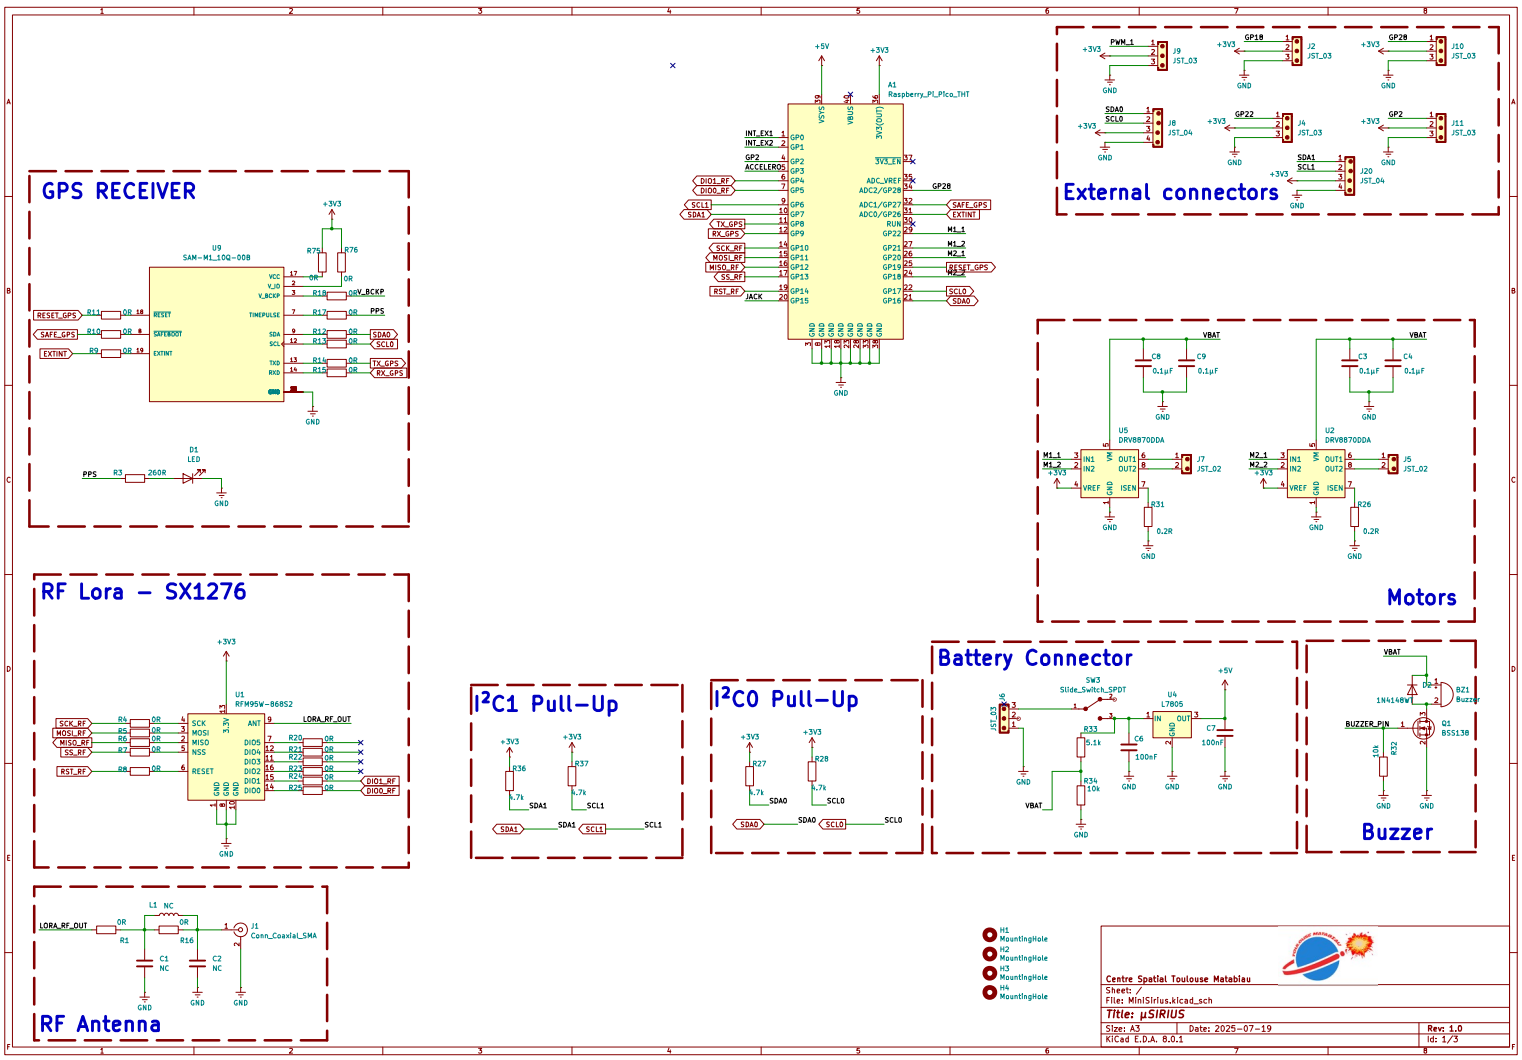
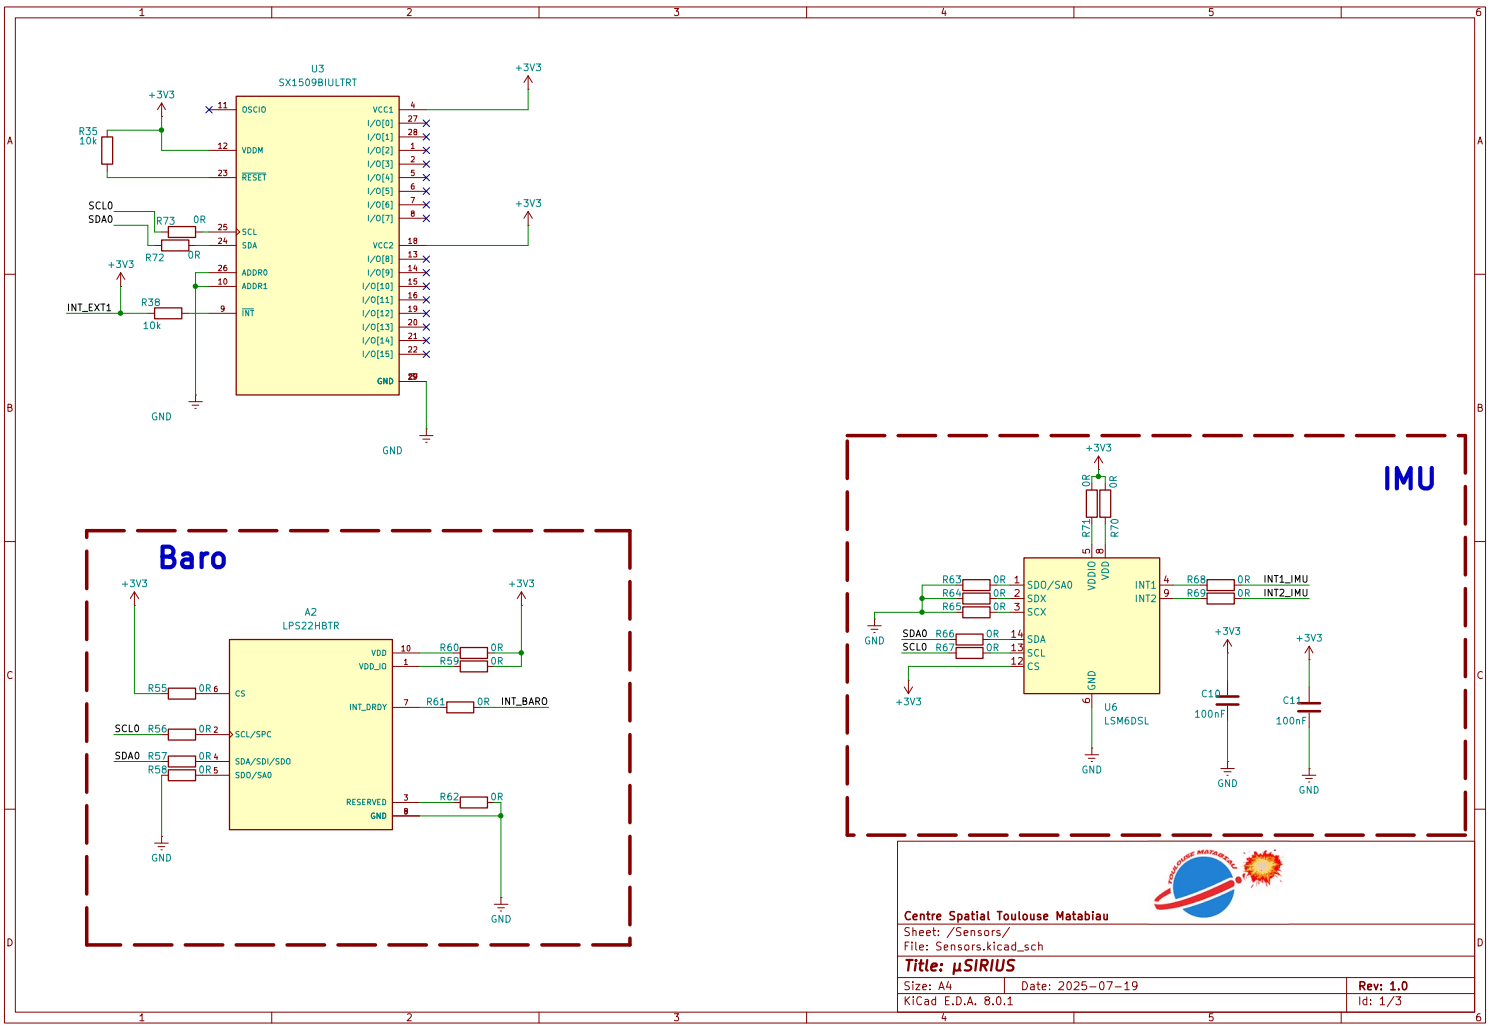
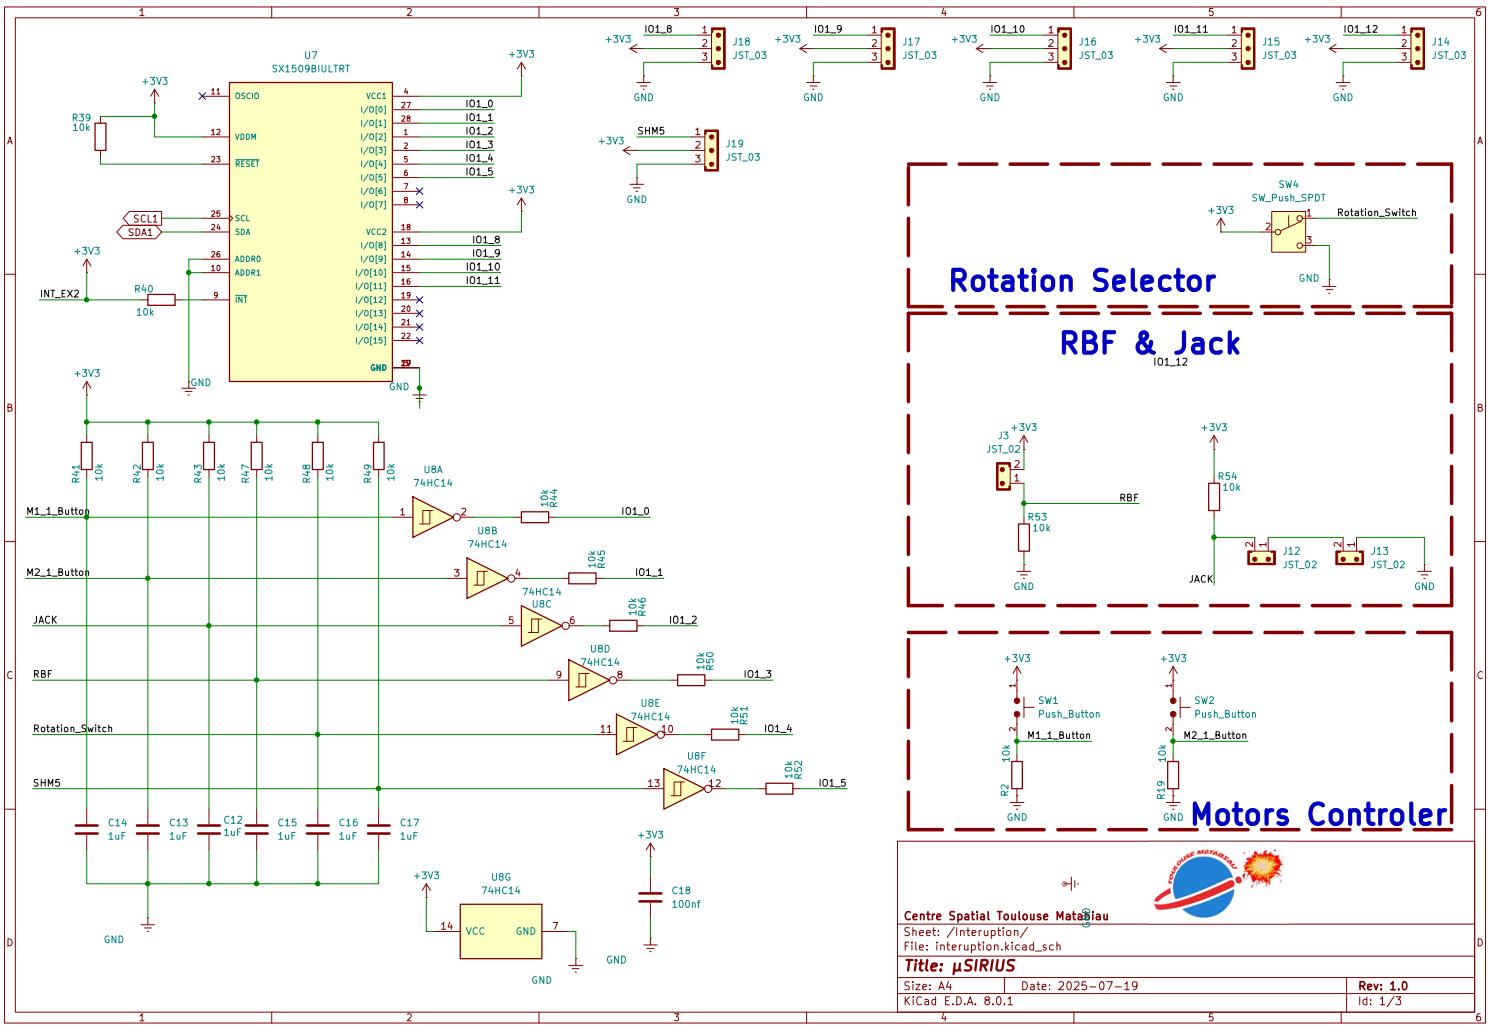

GPS RECEIVER
U9
SAM-M1_10Q-00B
RESET_GPS
SAFE_GPS
EXTINT
PPS
TX_GPS
RX_GPS
SDA0
SCL0
D1
LED
RF Lora - SX1276
U1
RFM95W-868S2
SCK_RF
MOSI_RF
MISO_RF
SS_RF
RST_RF
LORA_RF_OUT
DIO1_RF
DIO0_RF
RF Antenna
LORA_RF_OUT
L1 NC
R1
R16
C1 NC
C2 NC
J1
Conn_Coaxial_SMA
I²C1 Pull-Up
R36
R37
4.7k
SDA1
SCL1
I²C0 Pull-Up
R27
R28
SDA0
SCL0
A1
Raspberry_Pi_Pico_THT
INT_EX1
INT_EX2
GP2
ACCELERO5
DIO1_RF
DIO0_RF
SCL1
SDA1
TX_GPS
RX_GPS
SCK_RF
MOSI_RF
MISO_RF
SS_RF
RST_RF
JACK
GP28
SAFE_GPS
EXTINT
M1_1
M1_2
M2_1
M2_2
RESET_GPS
SCL0
SDA0
External connectors
PWM_1
GP18
GP28
SDA0
SCL0
GP22
GP2
SDA1
SCL1
Motors
U5
DRV8870DDA
U2
DRV8870DDA
VBAT
M1_1
M1_2
M2_1
M2_2
0.2R
Battery Connector
SW3
Slide_Switch_SPDT
U4
L7805
R33
5.1k
R34
10k
C6
100nF
C7
100nF
VBAT
Buzzer
BUZZER_PIN
1N4148W
BZ1
Buzzer
Q1
BSS138
R32
10k
H1
MountingHole
H2
MountingHole
H3
MountingHole
H4
MountingHole
Centre Spatial Toulouse Matabiau
Sheet: /
File: MiniSIrius.kicad_sch
Title: µSIRIUS
Size: A3
Date: 2025-07-19
Rev: 1.0
KiCad E.D.A. 8.0.1
Id: 1/3

Sensors


U3
SX1509BIULTRT
+3V3
R35
10k
SCL0
SDA0
R73
0R
R72
0R
INT_EXT1
R38
10k
OSCIO
VDDM
RESET
SCL
SDA
ADDR0
ADDR1
INT
VCC1
I/O[0]
I/O[1]
I/O[2]
I/O[3]
I/O[4]
I/O[5]
I/O[6]
I/O[7]
VCC2
I/O[8]
I/O[9]
I/O[10]
I/O[11]
I/O[12]
I/O[13]
I/O[14]
I/O[15]
GND
Baro
A2
LPS22HBTR
R55
R56
R57
R58
R60
R59
R61
R62
INT_BARO
CS
SCL/SPC
SDA/SDI/SDO
SDO/SAO
VDD
VDD_IO
INT_DRDY
RESERVED
IMU
U6
LSM6DSL
R71
R70
R63
R64
R65
R66
R67
R68
R69
INT1_IMU
INT2_IMU
SDO/SAO
SDX
SCX
SDA
SCL
CS
VDDIO
VDD
INT1
INT2
C10
100nF
C11
100nF
Centre Spatial Toulouse Matabiau
Sheet: /Sensors/
File: Sensors.kicad_sch
Title: µSIRIUS
Size: A4
Date: 2025-07-19
Rev: 1.0
KiCad E.D.A. 8.0.1
Id: 1/3



Centre Spatial Toulouse Matabiau	
Sheet: /Interuption/	
File: interuption.kicad_sch	
Title: µSIRIUS	
Size: A4	Date: 2025-07-19
KiCad E.D.A. 8.0.1	Id: 1/3
	Rev: 1.0