
Auto 1 Vertical Halfmoon - Build Sheet

Visuals

Rack Assembly

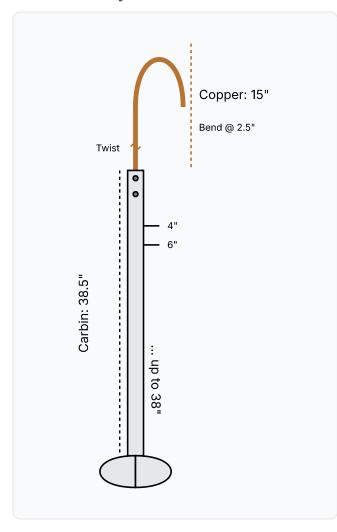

Materials & Cuts

• Carbin: 38.5" length

• Copper: 15" length

• **Tips:** Any size rod (1/4", 3/16", 1/8")

• Full Length: 47.5"

Instructions

- 1 Form Copper Hook: Take the 15" copper piece, make the J-bend at 2.5", add the twist, and form the straight section for mounting.
- Mount Hook: Bolt the copper hook to the top of the 38.5" carbin spine.
- Bend & Weld Tips: Bend the rod stock for tips. Weld them onto the carbin spine according to the spacing measurements.

Tip Spacing (From Top of Carbin)

First tip starts 4" down. Then 2" spacing between each subsequent tip.

4", 6", 8", 10", 12", 14", 16", 18", 20", 22", 24", 26", 28", 30", 32", 34", 36", 38"