
SQD J Frames - Build Sheet

Visuals

J Frame Assembly

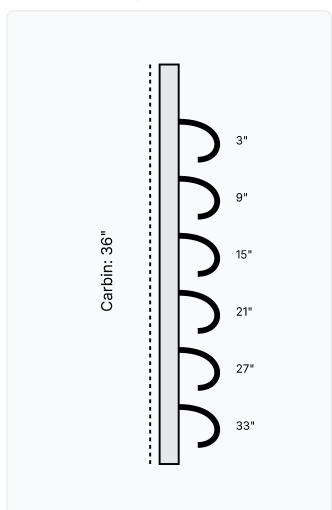

Materials & Cuts

• Carbin: 36" length

• **Tips:** 3/8" rod, 11 1/2" long per tip

Instructions

- **Form Tips:** Cut and bend the 3/8" rod to form the J-hook shapes.
- Weld: Weld the J-hook tips onto the 36" carbin spine according to the spacing measurements.

Tip Spacing (From Top)

3", 9", 15", 21", 27", 33"