
SQD Tree Rack (12 Hook) - Build Sheet

Visuals

Tree Rack Assembly

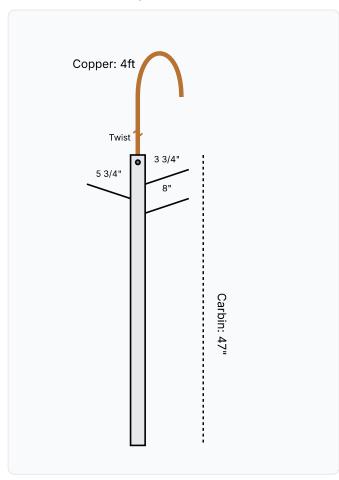

Materials & Cuts

- Carbin: 47" length
- Copper Hook: 4ft length, bent @ 2 1/2" with a twist
- **Tips:** 3/8" rod, 8 1/2" long

Instructions

- Form Hook: Take the 4ft copper piece, make the J-bend at 2 1/2", and add the twist.
- Assemble: Bolt the copper hook to the top of the 47" carbin spine.
- Weld Tips: Cut and bend the 3/8" rod for the 12 tips. Weld them onto the spine according to the spacing measurements.

Tip Spacing (From Top)

3 3/4", 5 3/4", 8", 10", 13 3/4", 15 3/4", 19 3/4", 21 3/4", 26", 27 3/4", 31 1/4", 33 1/4"