
Auto 1 Frame J's - Build Sheet

Visuals

Frame Assembly

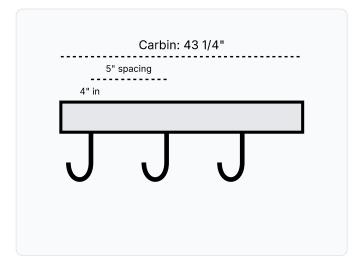

Materials & Cuts

• Carbin Bar: 43 1/4" length

• **J-Hooks:** 3/8" rod, 11 1/2" long

Instructions

- Cut Carbin: Cut the main carbin bar to its 43 1/4" length.
- Form & Attach Hooks: Cut the 3/8" rod to 11 1/2" lengths and bend them into J-hooks.
 Weld them to the bottom of the carbin bar according to the spacing notes.

Hook Spacing

First tip starts 4" in from the side. Then, there is 5" spacing between each subsequent hook.