
# **SQD Halfmoon - Build Sheet**

#### **Visuals**

#### **Rack Assembly**

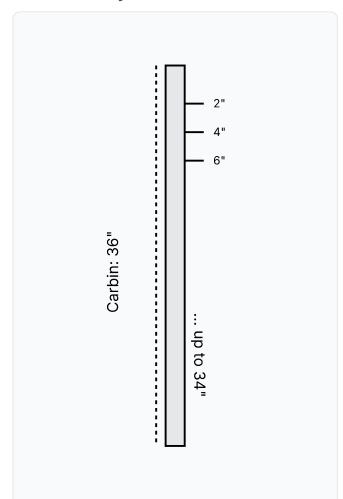

#### **Materials & Cuts**

• Carbin: 36" length

• **Tips:** 12" long (3/16" or 1/8" rod)

### Instructions

- Prepare Carbin: Start with the 36" carbin spine.
- **Bend Tips:** Cut the 12" tips and bend them using a jig in the press.
- Weld Tips: Weld the finished tips onto the carbin spine according to the spacing measurements.

## **Tip Spacing (From Top)**

2, 4, 6, 8, 10, 12, 14, 16, 18, 20, 22, 24, 26, 28, 30, 32, 34