
# **Auto 1 Halfmoon (20 tip) - Build Sheet**

## **Visuals**

#### **Rack Assembly**

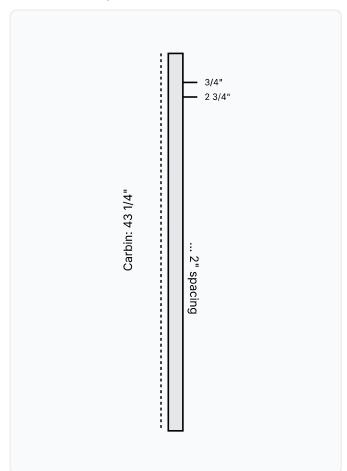

#### **Materials & Cuts**

- Carbin: 43 1/4" length
- **Tips (20 total):** Any size rod (1/4", 3/16", 1/8"), 12" long

### **Instructions**

- Prepare Carbin: Cut the carbin stock to 43 1/4" and form the halfmoon shape at the top.
- Bend & Weld Tips: Bend the 20 tips using a jig in a press. Weld them onto the carbin spine according to the spacing measurements.

# **Tip Spacing (From Top)**

First tip starts 3/4" down from the top. Then, there is 2" spacing between each subsequent tip.