
Auto 1 Vertical Halfmoon (3 Tip) - Build Sheet

Visuals

3-Tip Rack Assembly

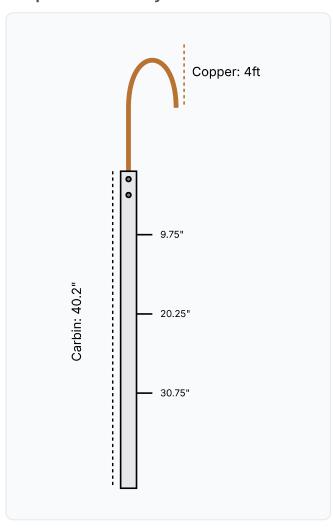

Materials & Cuts

• Carbin: 40.2" length

• Copper: 4 ft length (raw material)

• **Tips:** 12" length, any size rod (1/4", 3/16", 1/8")

• Full Length: 47"

Instructions

- Form Hook & Tips: Take the 4ft copper piece and form the J-hook hanger. Bend the three 12" rods for the tips.
- Assemble: Bolt the copper hook to the top of the carbin spine. Then, weld the three tips onto the spine at the specified measurements.

Tip Spacing (From Top of Carbin)

9.75" | 20.25" | 30.75"