
Auto 1 Turned Halfmoon (20 tips) - Build Sheet

Visuals

Rack Assembly

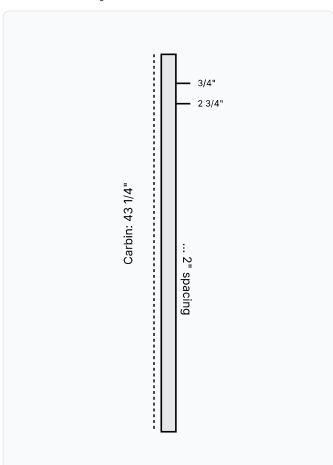

Materials & Cuts

• Carbin: 43 1/4" length

• Tips (20 total): 1/4", 3/16", or 1/8" rod, 12" long

Instructions

- Cut Carbin: Cut the main carbin spine to its 43 1/4" length.
- Bend & Weld Tips: Bend the rod for the 20 tips using a jig in a press, then use a vise to make the final 90° angle. Weld them onto the spine according to the spacing notes.

Hook Spacing

First tip starts 3/4" from the top. Then, there is 2" spacing between each subsequent tip.