
SQD Sleeve Rack - Build Sheet

Visuals

Rack Assembly

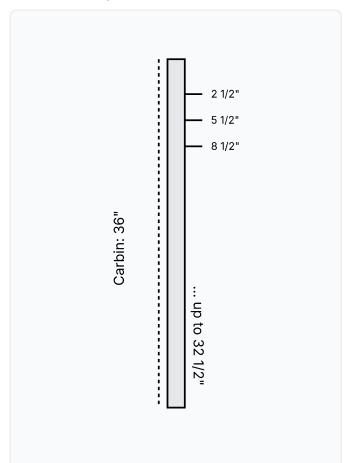

Materials & Cuts

- Carbin: 36" length
- **Tips:** 16" long (1/4" or 3/16" rod)

Instructions

- Prepare Carbin: Start with the 36" carbin spine.
- **Bend Tips:** Cut the 16" tips and bend them in the bending machine.
- Weld Tips: Weld the finished tips onto the carbin spine according to the spacing measurements.

Tip Spacing (From Top)

2 1/2", 5 1/2", 8 1/2", 11 1/2", 14 1/2", 17 1/2", 20 1/2", 23 1/2", 26 1/2", 29 1/2", 32 1/2"