REV	CHANGE DESCRIPTION	NAME	DATE
А	Release		01-20-10
В	Changed VDDCR Bypass Capacitor Value		01-19-11
		TM	
	Trile		
	Auto		

Any assistance, services, comments, information, or suggestions provided by SMSC (including without limitation any comments to the effect that the Company's product designs do not require any changes) (collectively, "SMSC Feedback") are provided solely for the purpose of assisting the Company in the Company's attempt to optimize compatibility of the Company's product designs with certain SMSC products. SMSC does not promise that such compatibility optimization will actually be achieved. Circuit diagrams utilizing SMSC products are included as a means of illustrating typical applications; consequently, complete information sufficient for construction purposes is not necessarily given. Although the information has been checked and is believed to be accurate, no responsibility is assumed for inaccuracies. SMSC reserves the right to make changes to specifications and product descriptions at any time without notice.

### **DOCUMENT DESCRIPTION**

Component Placement Checklist for the LAN88710, 32-pin QFN Package





SMSC 80 Arkay Drive Hauppauge, New York 11788	
Document Number	Revision

CC524357

B

# **Component Placement Checklist for LAN88710**

Information Particular for the 32-pin QFN Package

# LAN88710 QFN Phy Interface:

- 1. If the Auto MDIX functionality is enabled, place the 49.9  $\Omega$  TX termination pull-up (TXP, pin 29) as close to the LAN88710 as possible. If the Auto MDIX feature is disabled in the application, place this pull-up termination as close as possible to the magnetics.
- 2. If the Auto MDIX functionality is enabled, place the 49.9  $\Omega$  TX termination pull-up (TXN, pin 28) as close to the LAN88710 as possible. If the Auto MDIX feature is disabled in the application, place this pull-up termination as close as possible to the magnetics.
- 3. Place the 49.9  $\Omega$  RX termination pull-up (RXP, pin 31) as close to the LAN88710 as possible.
- 4. Place the 49.9  $\Omega$  RX termination pull-up (RXN, pin 30) as close to the LAN88710 as possible.
- 5. See Figure No. 1 for the placement of the termination resistors for the differential pairs for the LAN88710 Phy. These resistors are R1, R2, R3 & R4 in Figure No. 1.
- 6. Place the four optional, low-valued, common mode capacitors for each differential signal as close as possible to the magnetics. They should be placed as to create the smallest possible stub. These caps are C1, C2, C3 & C4 in Figure No. 1.
- 7. All the components discussed in this section should be considered critical components. To ensure the best signal integrity and good EMI performance, these critical components should be placed on the component side of the PCB. This will ensure that these components will be referenced to a contiguous ground plane reference on Layer 2 of the design.

# LAN88710 QFN Magnetics:

- 1. Place the 0.022  $\mu F$  TX Channel Center Tap termination capacitor as close to the magnetics as possible.
- 2. Place the 75  $\Omega$  cable side center tap termination resistors and the 1000  $\rho$ F, 2KV capacitor (C<sub>maqterm</sub>) cap as close to the magnetics as possible.
- 3. See Figure No. 1 below for the placement of the center tap termination components for the LAN88710 Phy. These resistors/capacitors are C5, R6, R7 & C6 in Figure No. 1.
- 4. C5 in this section should be considered a critical component. To ensure the best signal integrity and good EMI performance, this critical component should be placed on the component side of the PCB. This will ensure that this component will be referenced to a contiguous ground plane reference on Layer 2 of the design.
- 5. R6, R7 & C6 may be considered non-critical components. These components make up part of the high voltage barrier for the Ethernet front end. The best location for these components is typically on the solder side of the PCB. They should be placed such that none of the resultant routing crosses the differential pairs. These components have both ESD and EMI implications.

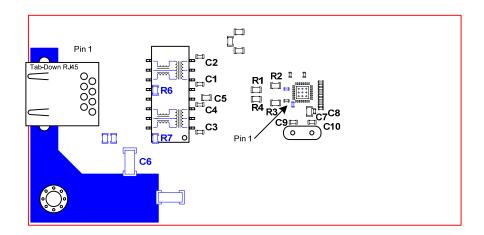


Figure No. 1

#### **RJ45 Connector:**

- 1. Place the RJ45 connector, the magnetics and the LAN88710 QFN as close together as possible.
- 2. If No. 1 is not possible, keep the RJ45 connector and the magnetics as close as possible. This will allow remote placement of the LAN88710 QFN.
- 3. See Figure No. 2 below for minimum distance requirements related to the RJ45 connector, the magnetics and the LAN88710 Phy.
- 4. The distance from the RJ45 connector to the magnetics should be 0.50" at a minimum and 0.75" at a maximum.
- 5. The distance from the magnetics to the LAN88710 should be 1.0" at a minimum and 3.0" at a maximum.
- 6. Select and place the magnetics as to set up the best routing scheme from the LAN88710 QFN to the magnetics to the RJ45 connector. There are many styles and sizes of magnetics with different pin outs to facilitate this operation. Investigate Tab-Up & Tab-Down RJ45 connectors in order to facilitate layout.
- 7. Place the Unused Wire Pair termination resistors and the 1000  $\rho$ F, 2KV capacitor ( $C_{rjterm}$ ) as close to the RJ45 connector as possible.
- 8. The Unused Wire Pair termination resistors may be considered as non-critical components. These components make up part of the high voltage barrier for the Ethernet front end. The best location for these components is typically the solder side of the PCB. They should be placed such that none of the resultant routing crosses the differential pairs. These components have both ESD and EMI implications.
- 9. Make sure to not place any other components in or near the TX Channel & RX Channel lanes of the PCB. These lanes should be clear of any other signals and components.

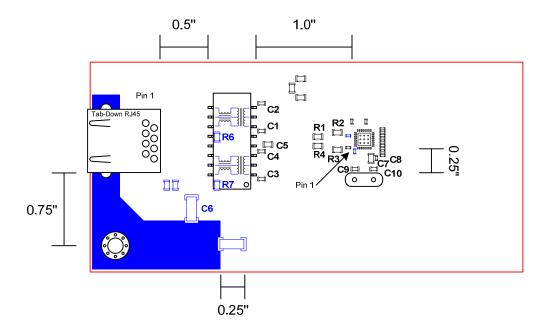


Figure No. 2

# **Power Supply Connections:**

- 1. Place the (1) VDDIO decoupling capacitor for the LAN88710 QFN as close to the power pin as possible. Using an SMD\_0402 package will make this task easier.
- 2. Place the (2) VDD1A & VDD2A decoupling capacitors for the LAN88710 QFN as close to each separate power pin as possible. Using an SMD\_0402 package will make this task easier.
- 3. Decoupling capacitors, in general, are best placed on the component side of the PCB. This should allow the board designer to minimize the use of vias and provide a short, direct copper connection from the capacitor to the power pin.

#### **Ground Connections:**

1. There are no component placement issues associated with the LAN88710 QFN ground connections. The LAN88710 has an Exposed Die Paddle ground connection on the package bottom. Since the PCB design has an all encompassing digital ground plane, the ground plane connections will automatically be as short as possible.

#### VDDCR:

- 1. VDDCR (pin 6) requires a 470 pF decoupling capacitor and a low ESR 1.0  $\mu$ F bulk capacitor placed as close as possible to pin 6.
- 2. These caps are shown as C7 & C8 in Figure No. 3 below.
- These bulking and bypassing capacitors, in general, are best placed on the component side of the PCB. This should allow the board designer to minimize the use of vias and provide a short, direct copper connection from the capacitor to the power pin.

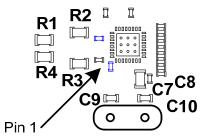


Figure No. 3

# **Crystal Connections:**

- Place the 25.000 MHz crystal and the associated 15 33 ρF capacitors as close together as possible and as close to the LAN88710 QFN (XTAL1, pin 5 & XTAL2, pin 4) as possible. They should form a tight loop. Keep the crystal circuitry away from any other sensitive circuitry (address lines, data lines, Ethernet traces, etc.). Refer to Figure No. 3 for crystal component placement (C9 & C10).
- 2. See Figure No. 2 for distance requirements related to the LAN88710 Phy. The crystal and associated components should be located within 0.25" of the LAN88710.
- 3. Place all the crystal components on the component side of the PCB with a digital ground plane layer on the next layer. This will minimize vias in the circuit connections and assure that all crystal components are referenced to the same reference plane.

### **Clock Oscillator Connections:**


- When using the LAN88710 in RMII mode, place the 50 MHz clock oscillator approximately half-way between the LAN88710 and the RMII MAC in the application. This should ensure relatively matched clock runs to each.
- 2. Place any series terminations for splitting the 50 MHz clock as close as possible to the clock oscillator in the design.
- 3. As controlled by the different component placements, the two resultant clock traces should be matched to within 0.10" and have an overall trace length of less than 6.0".

### **RBIAS** Resistor:

- 1. Place the RBIAS resistor as close to pin 32 of the LAN88710 QFN as possible.
- 2. The RBIAS resistor should be considered a critical component. This critical component should be placed on the component side of the PCB. This will ensure that this component will be referenced to a contiguous ground plane reference on Layer 2 of the design.

### **MII Interface:**

- When physically placing the LAN88710 in an MII application, the designer should be aware of the relative trace lengths determined by the relationship of the Phy and the MAC in the application. By placing the MAC too far away from the LAN88710, this may result in operational problems associated with excessive trace lengths.
- 2. The designer has some latitude in the placement of the LAN88710 with respect to the magnetics; see Figure 2. This should allow for some adjustment on the Phy-to-MAC MII interface, should this be necessary. By moving the Phy farther away from the magnetics, the MII interface can be shortened.
- 3. SMSC recommends the final MII interface trace lengths to remain under 12" long. Due to operational frequencies involved, the MII interface should allow longer trace lengths as compared to the RMII interface.

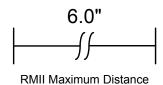

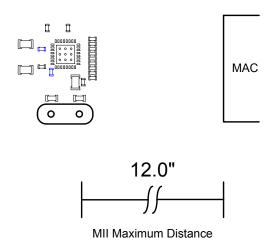


Figure No. 4

#### **RMII Interface:**

- 1. When physically placing the LAN88710 in an RMII application, the designer should be aware of the relative trace lengths determined by the relationship of the Phy and the MAC in the application. By placing the MAC too far away from the LAN88710, this may result in operational problems associated with excessive trace lengths.
- 2. The designer has some latitude in the placement of the LAN88710 with respect to the magnetics; see Figure 2. This should allow for some adjustment on the Phy-to-MAC RMII interface, should this be necessary. By moving the Phy farther away from the magnetics, the RMII interface can be shortened.
- 3. SMSC recommends the final RMII interface trace lengths to remain under 6" long. When compared to the MII interface, due to the higher operational frequencies involved, the trace lengths in the RMII interface are much more critical.

#### **MII/RMII Series Terminations:**

- 1. If the designer has elected to use impedance matching terminations in his design, these series resistors should be placed as close as possible to the source of the driving signal.
- 2. The MII/RMII Series Terminations should be considered critical components. To ensure the best signal integrity and good EMI performance, these critical components should be placed on the component side of the PCB. This will ensure that these components will be referenced to a contiguous ground plane reference on Layer 2 of the design. This will also minimize the use of vias in routing these signals.

## **Required External Pull-ups:**

1. Typically, there are no component placement issues associated with the LAN88710 QFN External Pull-up connections.

## **Mode Pins:**

- Since the MODE Pins are shared with the RXD[1..0] and the COL signals of the LAN88710, any resistor used for termination for the power-on-reset MODE selection, should be placed on the component side of the PCB. This will minimize vias and ensure the reference plane remains constant.
- Any stub added to the MII lines due to MODE pin terminations should be kept to a minimum.

## **Phy Address Pins:**

- Phy Address pins PHYAD[2..0] should considered critical. These pins are shared with the RXD3, RX\_CLK and RX\_ER functions of the MII interface. Any resistor used for termination for the power-on-reset Phy Address selection, should be placed on the component side of the PCB. This will minimize vias and ensure the reference plane remains constant for these three MII signals.
- 2. Any stub added to the MII lines due to Phy Address pin terminations should be kept to a minimum.

### **LED Pins:**

1. There are no component placement issues associated with the LAN88710 LED pins.

## **Interrupt Functionality:**

1. There are no component placement issues associated with the LAN88710 Interrupt Functionality.

### Miscellaneous:

- Place the SMD\_1210 Digital Ground / Chassis Ground shorting resistor near the RJ45 in a logical place to short the two planes. Typically, this component is placed on the back of the PCB. This component has both ESD and EMI implications.
- 2. Bulk capacitors for each power plane can reside anywhere on the plane they serve.