FollowYou

User manual

Follow-spot control for moving heads

VERSION 2.7.1

Sceneproff
NOVEMBER 2026

Contents

01 Welcome to FollowYou 4
What FollowYou does 4
How it works, in one minute 4
What you need 5
About this manual 5

02 Installing, licence and updates 6
Installing FollowYou 6
Licence 7
Updates 8

03 A tour of the window 9
The top bar 9
The tabs 10
The status bar 10
The menus 10
What the colours mean 11

04 Quick start: your first follow spot 12
1. Patch the fixtures 12
2. Send DMX 12
3. Set up the stage and tape the marks 12
4. Align each fixture 13
5. Make a spot and follow 13
6. Save the show 13
Where to go next 13

05 Patch and fixture profiles 14
The Patch tab 14
Fixture profiles 15
Making a profile 16
Profiles and show files 17
The Test tab 17

06 Outputs and lighting desk input 18
Outputs 18
USB DMX interfaces 19
Lighting desk input 20
DMX Monitor 21

07 The stage 22
Coordinates 22
Stage size and marks 23
Risers 23
Icons 24
Stage layouts 24

08 Alignment 25
Aligning a moving head 25
Reading the result 26
Aligning from your phone 26
Follow washes 27
Solid objects and off-stage 28

09 Following: show time 29
Spots 29
Driving a spot on the plan 30
Spot settings 30
Fades 31
Multi-spot 31
The Safety panel 32
Arranging the Follow page 32
Lamps (bulb and discharge fixtures) 33

10 Executors and faders 35
What an executor is 35
Making executors 36
Faders 38

11 Video and auto-track 39
Which camera 39
Where to put the camera 39
Calibrate (once per venue, about a minute) 40
Zoom and framing 40
Following on the picture 41
Auto-track 41

12 MIDI controllers 43
Connecting 43
Learning buttons and faders 44
Controller lights 44
Akai APC mini mk2 (recommended) 45
Other ready-made controllers 46

13 Joystick 47
Connecting and calibrating 47

What the axes can do 48
Drift at centre 48
Buttons and the hat 48

14 Phones, tablets and operator stations 50
Remote access 50
Follow spot from a phone or tablet 51
Operator stations 51
Executors for operator stations 52
Windows Firewall 53

15 Console looks, themes and the presentation screen 54
Console looks 54
Theme (accent colour) 55
Presentation screen 56

16 Lock and show files 58
Lock 58
Show files 59

17 Recommended hardware 60
The show PC 60
Custom console case 60

18 Troubleshooting 61

A Show-day checklist 63

B Keys and mouse 64

C Files and folders 66

D Glossary 67

E Version history 69

01

Welcome to FollowYou

FollowYou turns the moving heads you already have into follow spots. You move a point on a stage plan, a joystick, a phone or a camera picture, and every fixture on that spot aims at the performer, with the right zoom, focus and intensity.


What FollowYou does

A classic follow spot needs a person behind a big light at the back of the room. FollowYou does the same job with the moving heads in your rig. You tell FollowYou where the performer is; it works out the pan and tilt for every fixture on that spot, from wherever each one hangs.

- **One performer, many fixtures.** A spot can drive one fixture or a whole wall of them. Front, side and back light all land on the same person.
- **Several performers.** Each performer gets their own spot, with their own colour, level and beam size.
- **Any way of driving it.** Mouse on the stage plan, a joystick, a MIDI controller, a phone or tablet, a second station, or a camera with **auto-track**.
- **Works with your desk.** FollowYou can sit between the lighting desk and the nodes. The desk keeps colour, gobos and everything else; FollowYou only takes the channels it follows with.

How it works, in one minute

Everything in FollowYou happens on a **stage plan** in metres. Before the show you tape a few marks on the floor and aim each fixture at them once. From those marks FollowYou calculates where each fixture hangs and how it is turned: that is the **alignment**. After that, any point on the stage (at any height) can be turned into pan and tilt for every aligned fixture.

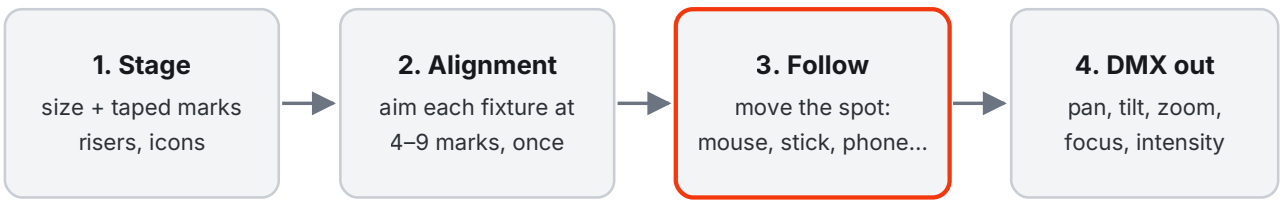

Steps 1 and 2 are done once per venue and saved in the show file.

From taped marks to DMX: the stage and alignment are set up once per venue.

What you need

WHAT	DETAILS
A Windows PC	Windows 10 or 11, 64-bit. FollowYou is one program: no Python or other software to install.
A way to send DMX	An Art-Net or sACN node, or a USB DMX interface (ENTTEC DMX USB Pro or compatible, or an Open DMX / FTDI cable).
Moving heads	Any moving head with pan and tilt. A fixture profile describes its channels; 19 come with FollowYou and you can make your own.
A licence	A FollowYou USB key or a licence file. Without one, FollowYou runs in DEMO mode (see Licence).
Optional	A MIDI controller, a joystick, a webcam or capture card for auto-track, phones or a second PC for more operators.

About this manual

This manual is for FollowYou **2.7.1**. If you are new, read Quick start first: it takes you from an empty show to a working follow spot. The chapters after that go into each part of the program. The appendices have every key, a show-day checklist and troubleshooting.

Conventions used here:

- **View → Console look** means: open the **View** menu and pick **Console look**.
- Ctrl+L means: hold Ctrl and press L.
- **Bold** words are buttons, tabs or settings as they are named on screen.
- Positions are always given as seen from FOH (front of house), looking at the stage.

> **TIP**
> Words like *spot*, *active spot*, *main station* and *executor* have a specific meaning in FollowYou. The Glossary explains them all.

02

Installing, licence and updates

Install FollowYou once, unlock it with a USB key or a licence file, and it keeps itself up to date between shows.

Installing FollowYou

With the installer (recommended)

1. Download **FollowYou-Setup-x.y.z.exe** from the FollowYou download page (the QR code on your licence card goes there).
2. Run it. Windows may say *"Windows protected your PC"*: click **More info → Run anyway**.
3. Choose the folder (the default is `%LOCALAPPDATA%\Programs\FollowYou`, which needs no administrator rights) and whether you want a desktop shortcut.
4. Start FollowYou from the Start menu or the desktop.

FollowYou is one program, `FollowYou.exe`. Nothing else needs installing and it does not need the internet to run.

Portable (zip)

Unzip the `FollowYou` folder somewhere permanent, for example `Documents\FollowYou`, and start **FollowYou.exe**. Handy for a show PC where you can't run installers.


Installing a newer version, and uninstalling

- Run a newer installer over the old one, or let FollowYou offer the update itself (see Updates). Your fixture profiles are kept, including ones you edited; only new profiles are added. Settings, MIDI, joystick and your last show carry over.
- Installing over a version from before 2.4 (which ran on Python) cleans up the old files by itself.
- **Uninstalling** (Start menu, or Windows **Settings → Apps**) asks whether to delete your fixture profiles (the default is to keep them) and whether to remove FollowYou's firewall rules. Show files are never touched.

> **ERRORS**
> If something goes wrong, FollowYou shows a message and writes the details to `logs\FollowYou.log` in the FollowYou folder. Send that file to Sceneproff support with a description of what happened.

Licence

FollowYou is unlocked with either a **FollowYou USB key** or a **licence file**. Open `Help → Licence` to see which one you have.

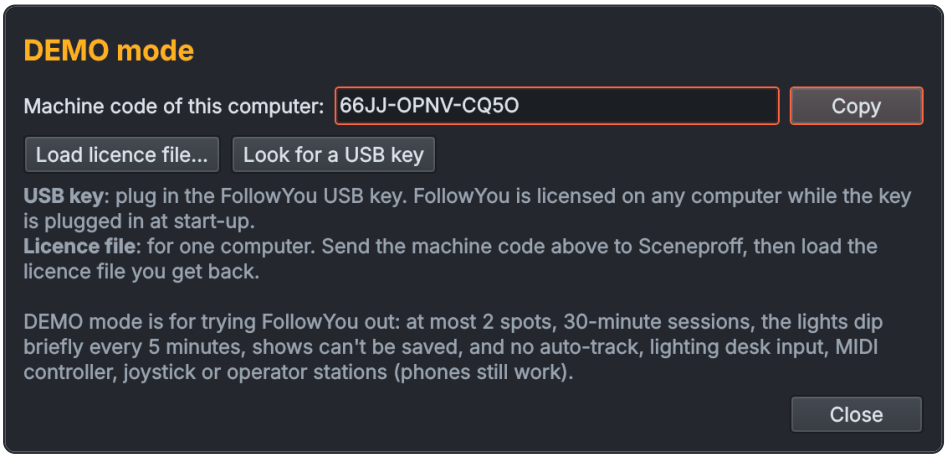

Help → Licence. Without a licence it shows DEMO mode and this computer's machine code.

USB key

Plug the key in **before** you start FollowYou, and FollowYou is licensed on any computer. This is the best choice when the show PC changes from gig to gig.

- The key is tied to that one stick. Copying its files to another stick doesn't work.
- If the stick is pulled out during a show, nothing stops. FollowYou stays licensed until it is closed, and the status bar says *USB key removed*.
- Plugged it in after starting? Press **Look for a USB key** in the Licence window.

> **KEEP THE KEY SAFE**
> The USB key is the licence. Treat it like the key to a road case: label it, and keep it with the show PC or on your keyring.

Licence file

A licence file unlocks **one computer**.

1. Open `Help → Licence`. It shows this computer's **machine code**. Press **Copy**.
2. Send the machine code to Sceneproff.
3. You get a licence file back (`.fylicence`, with a green key icon). **Double-click** it, or use **Load licence file...** in the Licence window.

A new Windows installation gives the computer a new machine code, so ask for a new file after reinstalling Windows.

Licence types

The Licence window shows the type: **Internal**, **Free trial**, **Rental** or **Purchased**. Free trial and rental licences usually have an end date. After that date FollowYou starts in DEMO mode.

Operator stations (a second PC that drives spots through the main station) don't need a licence of their own: they use the main station's.

DEMO mode

Without a licence FollowYou runs in DEMO mode, made for trying it out:

- Sessions last 30 minutes. Then FOLLOW turns off and the output goes dark; restart FollowYou to carry on. The status bar shows the minutes left.
- The lights dip briefly every 5 minutes.
- Shows can't be saved (shows made on a licensed station still open).
- At most 2 spots.
- No auto-track, lighting desk input, MIDI controller, joystick or operator stations. Phones still work.
- The title bar and the presentation screen say DEMO.

Plug in a USB key or load a licence file and everything opens up straight away, without a restart.

Updates

When the station is online, FollowYou checks for a new version a little after it starts, and then every few hours. If there is one, a **blue bar** appears under the top bar with **What's new / install...**, **Later** and **Skip this version**.


- The bar only shows while **FOLLOW is off** and the desk isn't locked, so it never pops up in the middle of a show. Offline stations never see it.
- **Install** downloads the new version and checks that it really comes from Sceneproff. Updates are signed, so a changed or fake file is refused. It then asks to save the show, closes FollowYou and starts the installer. Your profiles, shows and settings are kept.
- **Help → Check for updates...** checks straight away.
- Untick **Help → Check for updates automatically** to turn the check off on a station.

> **SHOW DAY**
> Don't update on show day. Update on a prep day, open your show and do a quick check before the next gig.

03

A tour of the window

The top bar is always there, whatever tab you are on. Below it, the tabs take you from setting up the rig to running the show.

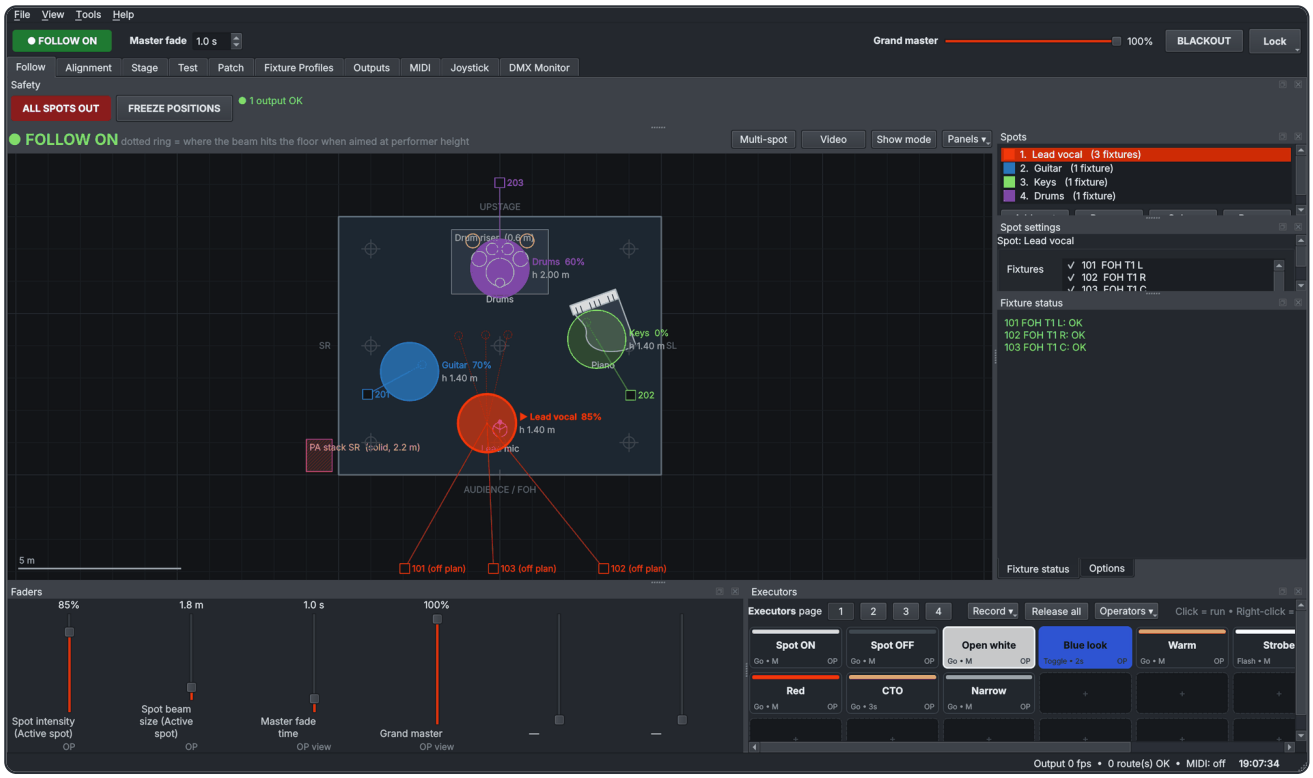

The main window on the Follow tab, with four spots following.

The top bar



CONTROL	WHAT IT DOES
FOLLOW ON / OFF	The main switch. While FOLLOW is on, every fixture on a spot is driven by FollowYou. FollowYou always starts with FOLLOW off.
Master fade	The fade time used by spot on/off (Space), Full/Off, ALL SPOTS OUT and executors that use the master fade.
Grand master	Scales every intensity FollowYou sends.

CONTROL	WHAT IT DOES
BLACKOUT	All intensities FollowYou sends go to zero until you press it again.
Lock	Locks the station so nothing changes by accident. The arrow next to it has **Lock all** and **Lock password...**. See Lock.

A **red bar** appears under the top bar if an output has a problem for more than a second (a USB interface unplugged, the network gone), whatever tab you are on. A **blue bar** means an update is available (only shown while FOLLOW is off).

The tabs

TAB	USED FOR	CHAPTER
Follow	Running the show: the stage plan, spots, executors, faders and safety.	Following
Alignment	Aiming each fixture at the marks; follow washes; solid objects and off-stage.	Alignment
Stage	Stage size, marks, risers, icons and stage layouts.	The stage
Test	Driving any parameter of any fixture by hand.	Test tab
Patch	Adding fixtures and setting their addresses.	Patch
Fixture Profiles	The profile library: channels, ranges and physical data.	Fixture profiles
Outputs	Art-Net, sACN and USB DMX outputs, and lighting desk input.	Outputs
MIDI	MIDI controller, global controls, controller lights.	MIDI controllers
Joystick	Joystick or gamepad, calibration and mapping.	Joystick
DMX Monitor	A live view of every channel FollowYou sends.	DMX Monitor

The status bar

The bottom line of the window shows the output rate (frames per second), how many outputs are OK, the MIDI state and the time of day (turn the clock on or off with **View → Show clock (status bar)**). In DEMO mode it also shows the minutes left of the session; with a USB key that was pulled out it says *USB key removed*.

The menus

MENU	ITEMS
File	New show (Ctrl+N), Open show... (Ctrl+O), Save show (Ctrl+S), Save show as..., Open profile folder, Quit.
View	Follow page panels, Show mode (F10), Full screen (F11), Presentation screen (F9), Show clock, Console look, Theme (accent colour).

MENU	ITEMS
Tools	Remote access (phones, operator stations)..., Connect to a main station (become an operator station)..., Lamps..., Windows Firewall ▸ Open firewall for FollowYou / Put firewall back to normal.
Help	Licence (USB key / licence file)..., Check for updates..., Check for updates automatically, About FollowYou.

What the colours mean

Status colours are the same in every theme and console look, so they always mean the same thing:

- **Green**: OK, running, receiving.
- **Amber**: warning, needs attention, waiting.
- **Red**: error or danger.

Spot colours belong to the spots (change them with **Colour** in the Spots panel). The accent colour (selected rows, slider fills) comes from the theme.

04

Quick start: your first follow spot

From an empty show to a working follow spot. Allow about 15 minutes for the first fixture; each extra fixture takes a couple of minutes.

> **BEFORE YOU START**
> Rig and address the fixtures, connect the DMX node or USB interface, and have a roll of tape and a tape measure ready.

1. Patch the fixtures

1. Go to the **Patch** tab and press **Add fixtures...**.
2. Pick the **Profile** and **Mode** the fixture runs in, the **Quantity**, the **Universe** and **Start address**. **Next free** finds the first free address.
3. Press OK. The Status column turns green when the addresses don't overlap.

No profile for your fixture? See Making a profile.

2. Send DMX

1. Go to **Outputs** and press **Add output**.
2. Pick the **Type**: *Art-Net*, *sACN (E1.31)*, *USB DMX (Enttec Pro)* or *USB DMX (Enttec Open DMX)*.
3. Set the **Out universe** and the **Destination IP** (Art-Net/sACN) or the **USB port**.
4. Press **Apply**. The Status column and the Safety panel show green when the output runs.

Check it: in the **Test** tab, select a fixture and press **Highlight**. It should open up at full.

3. Set up the stage and tape the marks

1. Go to **Stage**. Enter the **Width (across)** and **Depth** in metres.
2. Pick **3 × 3 grid (9 marks, best accuracy)** and press **Generate marks**.
3. Tape a cross on the stage floor for every mark, measured from the centre line (X) and the downstage edge (Y). The table shows each mark's position.

ACCURACY STARTS HERE
The follow is only as good as the tape. Measure carefully, and put the cross in the middle of where you'd stand.

4. Align each fixture

1. Go to **Alignment → Moving heads**. Select the fixture and tick **Light up the fixture**.
2. Select a mark (in the list, or click it on the plan).
3. Drag the pad until the centre of the beam sits exactly on the tape. Hold **Shift** for 10× finer; arrow keys nudge.
4. Press **Store** (or **Enter**). It jumps to the next mark.
5. After 4 marks the fixture is solved, and FollowYou pre-aims at each next mark for you. Store all 9 if you can.

The **Result** box shows the accuracy: under 0.5° is good. Repeat for every fixture you want to follow with.

5. Make a spot and follow

1. Go to **Follow**. A new show has one spot, *Spot A*; press **Add spot** for more and **Rename** them after the performers.
2. In **Spot settings**, tick the fixtures that belong to this spot.
3. Turn **FOLLOW ON** in the top bar.
4. Press **Space** to bring the spot up over the master fade, then click and drag on the plan. The fixtures follow.

LIGHT LANDS BEHIND THE DOT?
That's correct on an empty stage. The spot aims at the performer's chest (Aim height 1.4 m), so on the floor the beam lands further upstage. Tick **Floor test** in Options to aim at the floor while you check the alignment, and untick it for the show.

6. Save the show

Press **Ctrl**+**S**. The show file (`.fyshow`) holds everything: patch, outputs, stage, alignment, spots, executors and a copy of every profile used. Next time at the same venue, open it and you're ready.

Where to go next


- Put presets on buttons: Executors and faders.
- Drive it with hardware: MIDI controllers and Joystick.
- Let a camera do the following: Video and auto-track.
- Hand spots to other operators: Phones, tablets and operator stations.

05

Patch and fixture profiles

The patch says which fixtures you have and where they are addressed. Profiles say what each fixture's channels do and how far it pans, tilts and zooms.

The Patch tab

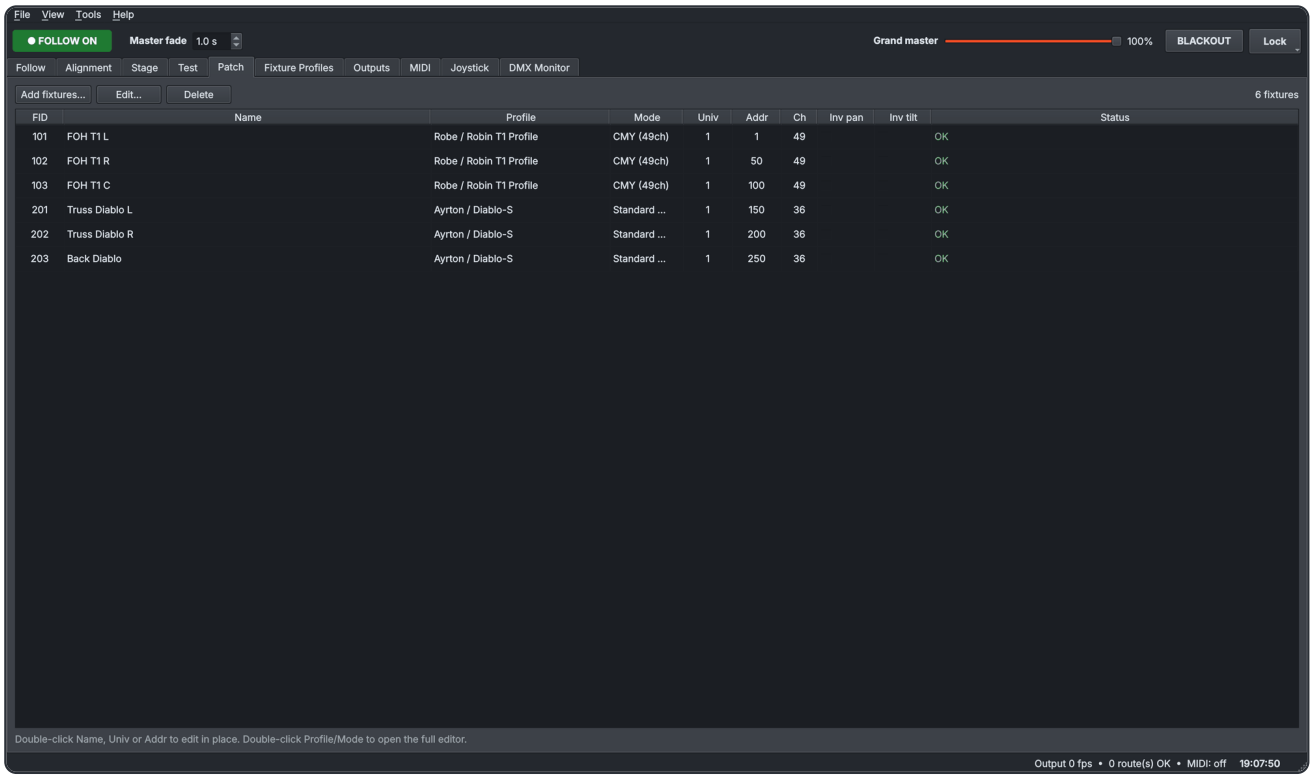


The Patch tab. Status turns green when a fixture's addresses are free.

Each row is one fixture: **FID** (fixture number), **Name**, **Profile**, **Mode**, **Univ**(erse), **Addr**(ess), **Ch**(annel count), **Inv pan**, **Inv tilt** and **Status**.

- **Add fixtures...** adds one or many at once: pick the profile and mode, the **Quantity**, the **First FID**, a **Name prefix** (“Spot” gives Spot 1, Spot 2...), the **Universe**, the **Start address** and the **Gap between fixtures**. **Next free** finds the first free address.
- **Edit...** changes one fixture. Double-click Name, Univ or Addr to edit in place; double-click Profile or Mode to open the full editor.
- **Delete** removes the selected fixtures.
- **Invert pan / Invert tilt**: for fixtures hung or set up the other way round. You rarely need these for following, because the alignment works out the direction by itself.

> **LIGHTING DESK INPUT**
> If FollowYou sits between your desk and the nodes, patch the fixtures at the **same universe and address** as on the desk.

Fixture profiles

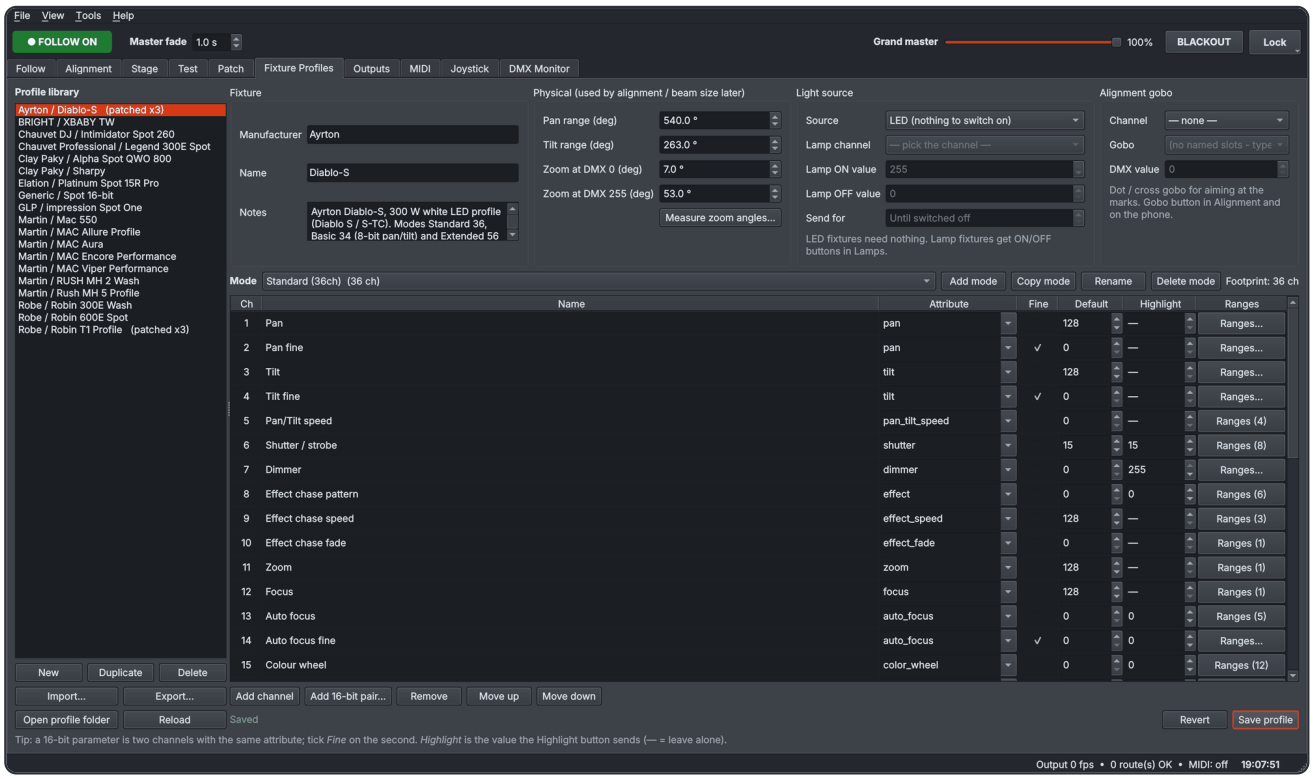

The Fixture Profiles tab: library on the left, physical data and light source at the top, channels below.

A profile is a `.json` file in the profile library. FollowYou comes with these 19:

Ayrton Diablo-S · BRIGHT XBABY TW · Chauvet DJ Intimidator Spot 260 · Chauvet Legend 300E Spot · Clay Paky Alpha Spot QWO 800 · Clay Paky Sharpy · Elation Platinum Spot 15R Pro · Generic Spot 16-bit · GLP impression Spot One · Martin MAC 550 · Martin MAC Allure Profile · Martin MAC Aura · Martin MAC Encore Performance · Martin MAC Viper Performance · Martin RUSH MH 2 Wash · Martin RUSH MH 5 Profile · Robe Robin 300E Wash · Robe Robin 600E Spot · Robe Robin T1 Profile

> **CHECK BEFORE THE SHOW**
> The Robe, Clay Paky, GLP, Elation, Chauvet DJ, MAC Aura / Encore / Viper and RUSH MH 5 profiles come from the Open Fixture Library. Check them against your fixture's DMX chart (firmware versions differ), and measure the zoom angles where the profile notes say so.

Library buttons

- **New**, **Duplicate**, **Delete**: make, copy or remove a profile. Duplicate an existing profile that's close to your fixture: it's the quickest way to a new one.
- **Import...** / **Export...**: share profiles between PCs.
- **Open profile folder**: opens the folder with the `.json` files (also in **File → Open profile folder**). Copy profiles in and press **Reload**.
- **Save profile** stores your changes; **Revert** throws them away.

Making a profile

Open the fixture's user manual at the DMX protocol table and pick the mode you run the fixture in. Fill in the **Manufacturer**, **Name** and any **Notes**, then add one row per DMX channel, in order. **Add 16-bit pair…** adds a coarse and fine channel in one go.

COLUMN	WHAT TO PUT IN
Name	Anything readable, e.g. “Colour wheel”.
Attribute	What the channel does: `pan`, `tilt`, `dimmer`, `zoom`, `focus`, `shutter`, `color_wheel` … or type your own. FollowYou follows with pan, tilt, zoom, focus, dimmer and shutter, so those must be right.
Fine	Tick on the *second* channel of a 16-bit pair (e.g. “Pan fine”).
Default	The value sent when nothing controls the channel (pan/tilt usually 128 = centre). For the **shutter**, use its open value: the dimmer then does all the fading, and the light isn't cut by a closed shutter.
Highlight	The value the **Highlight** button sends (shutter open, dimmer 255, colour open). The Follow tab uses the shutter's Highlight value as “open”. Leave as — to ignore.
Ranges	Named slots, e.g. colour wheel *Red 10–19*. They become quick-pick presets in the Test tab and in executors.

A profile can have several **modes** (Add mode, Copy mode, Rename, Delete mode), one per DMX mode of the fixture.

Physical

- **Pan range** and **Tilt range** (degrees), e.g. 540° / 265°. Used by the alignment. Small errors are corrected automatically.
- **Zoom at DMX 0** and **Zoom at DMX 255** (degrees). Used by *Beam size*. For the Ayrton Diablo-S the spec sheet gives 7°–53°, narrow at DMX 0. Some fixtures are the other way round: the Legend 300E Spot is 20° at DMX 0 and 4° at 255.

Measure zoom angles…

If the manual doesn't give the zoom angles, measure them. Point the fixture at a wall or the floor, enter the **Distance lens to wall/floor**, then measure the **Beam width at Zoom DMX 0** and **at Zoom DMX 255**. FollowYou works the angles out.

Light source

Leave LED fixtures on **LED**. For lamp fixtures, pick **Lamp / bulb**, the **Lamp channel** (often called Control, Lamp or Reset), the **Lamp ON value** and **Lamp OFF value**, and **Send for**: *Until switched off*, or a number of seconds if the manual says e.g. “hold 5 s”. See Lamps.

Alignment gobo


Optional, and very helpful. Pick the gobo wheel **Channel**, then the **Gobo** from the channel's named slots, or type its **DMX value**. Choose a small dot or cross. The Alignment tab and the phone then get a Gobo toggle for that fixture: a small dot is much easier to centre on the tape than a full beam.

Profiles and show files

Each PC has its own profile library, and every show file keeps a copy of the profiles it uses. If a show was saved with a different version of a profile than the one on this PC (for example you measured the zoom angles on one PC and not the other), FollowYou lists the differences when the show opens and asks which to use.

- **Use the show's versions** updates this PC's library and keeps the old file in `profiles\backup`.
- If you keep this PC's versions, the show behaves the way those profiles say (e.g. no beam size without zoom angles).

The Test tab

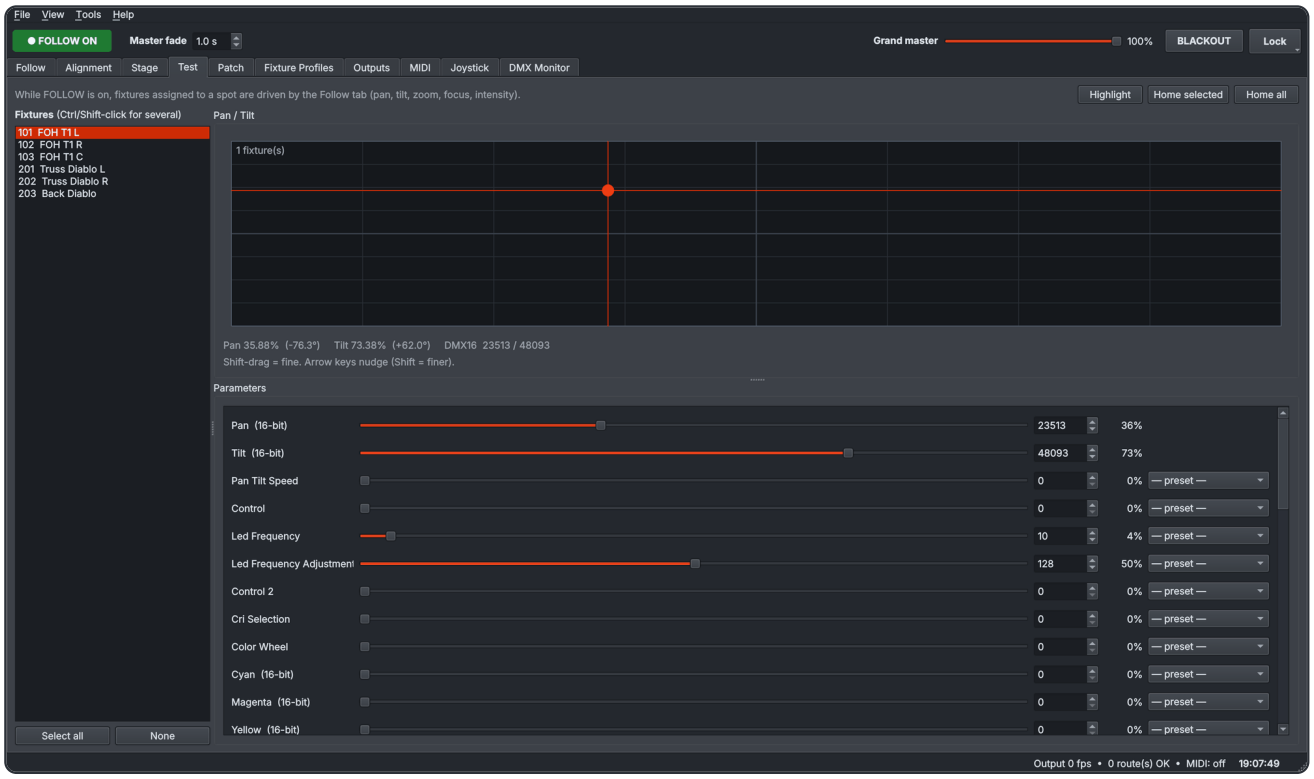

The Test tab: select fixtures on the left, drive pan/tilt on the pad and every parameter with a slider.


- Select one or more fixtures (Ctrl/Shift-click for several, or **Select all**).
- Drag the **Pan / Tilt** pad; Shift-drag is fine, arrow keys nudge.
- Every parameter gets a slider. Channels with named ranges get a *preset* list.
- **Highlight** sends the Highlight values; **Home selected** / **Home all** send the defaults.

While FOLLOW is on, fixtures on a spot are driven by the Follow tab (pan, tilt, zoom, focus, intensity), so the Test tab only changes their other parameters.

06

Outputs and lighting desk input

FollowYou sends DMX over Art-Net, sACN or a USB interface, and can take your lighting desk's output and pass it through.

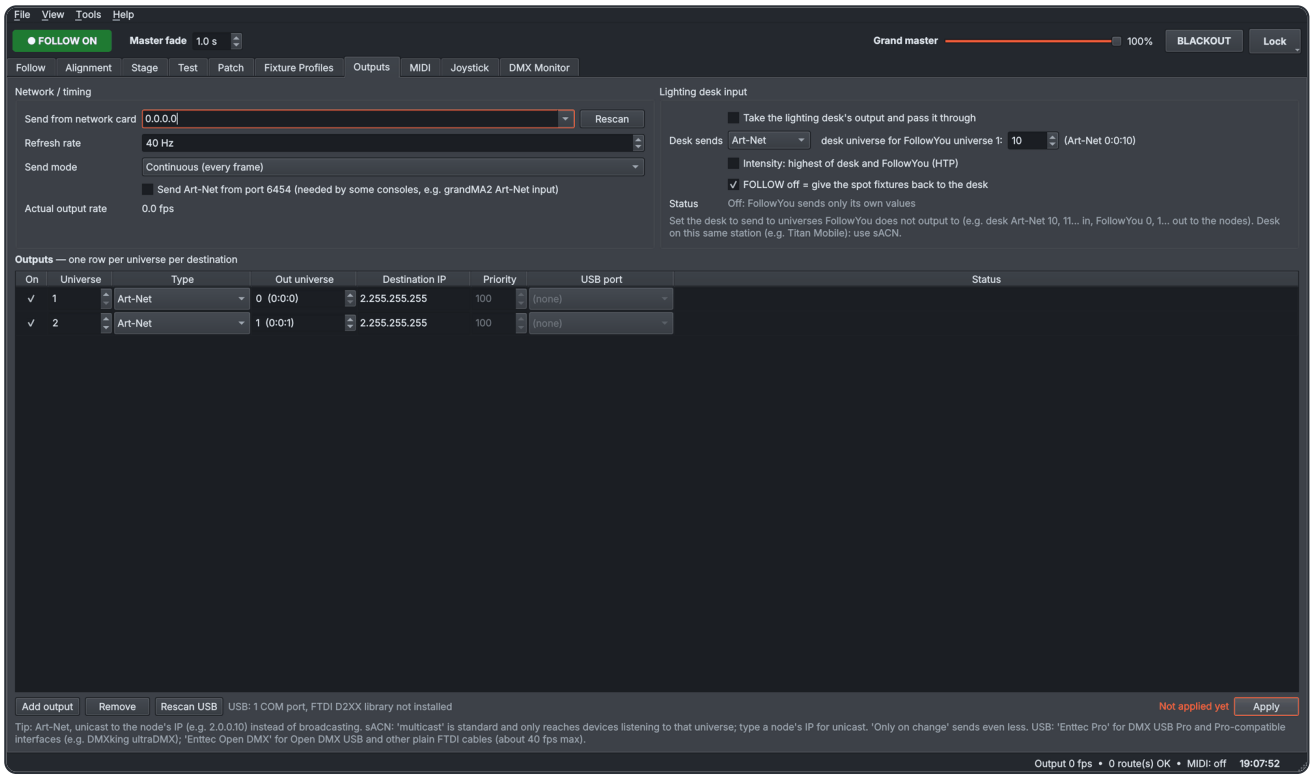

The Outputs tab: network and timing at the top left, lighting desk input at the top right, one row per output below.

Outputs

Each row sends one FollowYou universe to one destination. Press **Add output**, fill in the row and press **Apply** (“Not applied yet” reminds you).

COLUMN	MEANING
On	Tick to send. Untick to stop that output without deleting it.
Universe	The FollowYou universe (as used in the Patch).
Type	Art-Net, sACN (E1.31), USB DMX (Enttec Pro) or USB DMX (Enttec Open DMX).
Out universe	The universe on the wire. Art-Net: a 15-bit port address shown as Net:Sub:Uni. sACN: 1–63999.

COLUMN	MEANING
Destination IP	Art-Net: the node's IP, or broadcast (e.g. 2.255.255.255). sACN: `multicast`, or a node's IP for unicast.
Priority	sACN only, 0–200, default 100. When a receiver gets the same universe from several sources, the highest priority wins.
USB port	USB types only: the interface (see below).
Status	Whether the output is running, and why not.

Send one universe to two places (a node and a visualiser, say) by adding two rows with the same Universe.

Network / timing

- **Send from network card**: pick the network card the nodes are on (**Rescan** after plugging in a cable).
- **Refresh rate**: 10–44 Hz. The actual rate is shown next to it.
- **Send mode**: *Continuous (every frame)*, or *Only on change (+1 s keep-alive)* to send a universe only when something changed, plus once a second.
- **Send Art-Net from port 6454**: needed by some consoles, e.g. grandMA2 Art-Net input. Normally FollowYou never claims port 6454 for sending, so a visualiser on the same PC keeps working.

Art-Net and sACN tips

- Art-Net: unicast straight to the node's IP (e.g. 2.0.0.10) instead of broadcasting.
- sACN: `multicast` is standard and only reaches devices listening to that universe.
- FollowYou keeps the same sACN source ID between starts. When you switch an sACN output off, or close FollowYou, it tells receivers the stream has ended, so they drop it straight away instead of holding the last look for about 2.5 seconds.

USB DMX interfaces

- **USB DMX (Enttec Pro)**: ENTTEC DMX USB Pro / Pro Mk2 (port 1), DMXking ultraDMX Micro / ultraDMX2 PRO, and other Enttec Pro protocol interfaces.
- **USB DMX (Enttec Open DMX)**: ENTTEC Open DMX USB and other plain FTDI "Open DMX" cables. These have no processor, so FollowYou makes the DMX signal itself and keeps repeating it (about 40 frames a second, the most DMX allows with a full universe).

The USB port list shows two kinds of entries:

- **COM ports**, e.g. `COM4 USB Serial Port`.
- **FTDI direct** devices, e.g. `ftdi:A700ABCD FT232R USB UART [A700ABCD] - FTDI direct`. These use FTDI's own driver (the same way QLC+ does) and work even when the interface has no COM port. **Pick this one for an Enttec interface** if you can. It needs the FTDI driver (`ftd2xx.dll`), which is installed if QLC+ can see the interface.

The line next to **Rescan USB** says what was found, e.g. "USB: 0 COM ports, 1 FTDI device", or that the FTDI driver is missing.

ONLY ONE PROGRAM AT A TIME


Close QLC+ (or any other lighting software) before using a USB interface, otherwise the status says the device is in use. The Pro and the Open DMX use the same USB chip: choosing the wrong type outputs nothing. The serial number in brackets tells two interfaces apart.

SMOOTHER OPEN DMX

Set the port's latency timer to 1 ms: Device Manager → the COM port → Port Settings → Advanced → Latency Timer.

Lighting desk input

FollowYou can sit between your lighting desk (Avolites Titan, grandMA, ChamSys, any desk with Art-Net or sACN out) and the nodes. The desk keeps control of everything; FollowYou only takes over the channels it actually drives.

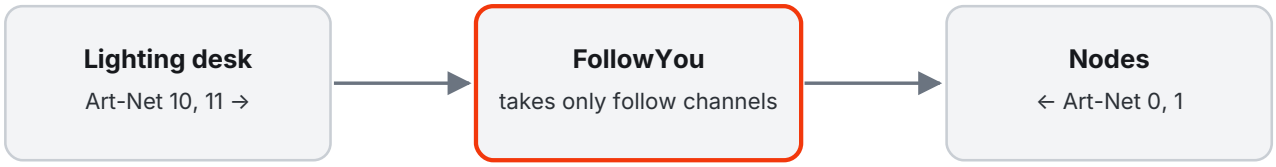

The desk sends to universes FollowYou does not output to.

1. On the desk, send Art-Net or sACN to universes **FollowYou does not output to**. For example the desk sends Art-Net 10 and 11, and FollowYou outputs 0 and 1 to the nodes. If the desk runs on the same PC as FollowYou (e.g. Titan Mobile), use **sACN**.
2. In **Lighting desk input**, tick **Take the lighting desk's output and pass it through**, pick Art-Net or sACN and the **desk universe for FollowYou universe 1**. The next desk universe becomes FollowYou universe 2, and so on. Press **Apply**.
3. The status line shows each universe: green = receiving from the desk (with its IP or name), amber = nothing received yet, or the desk stopped.

What FollowYou takes over

- **Fixtures on a spot while FOLLOW is on**: pan, tilt, zoom, focus, intensity and shutter.
- Anything you set yourself in FollowYou: executors, the Test tab, Highlight, the alignment and lamp commands.


Everything else (colour, gobos, prism, frost, and all fixtures not on a spot) comes straight from the desk.

Options

- **FOLLOW off = give the spot fixtures back to the desk** (on by default): switching FOLLOW off hands pan, tilt, zoom, focus and intensity of the spot fixtures back to the desk.
- **Intensity: highest of desk and FollowYou (HTP)**: off (default) means FollowYou decides the intensity of the fixtures it follows with; on means the desk can bring them up too.
- **Grand master and BLACKOUT** in FollowYou only affect the intensities FollowYou sends. The desk's own levels pass through as they are.

- If the desk stops sending, FollowYou **keeps its last look**, like a node would, and the Safety panel says so.
- FollowYou ignores its own output, so a wrong universe can't loop. If the desk and FollowYou use the same universe, the status says so in red.

DMX Monitor

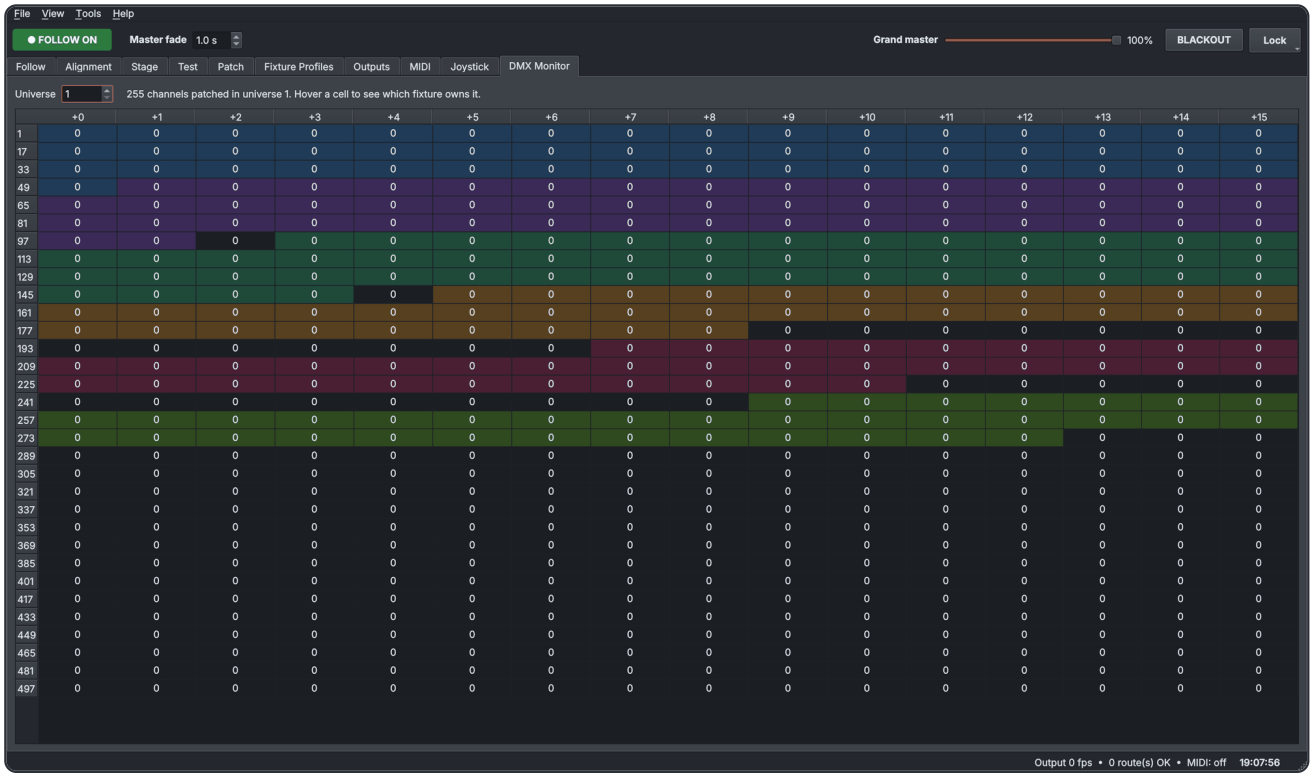


The DMX Monitor: every channel of a universe, coloured by the fixture patched there.

Pick a **Universe** to see the 512 values FollowYou sends, live. Channels are coloured by the fixture they belong to; hover over a cell to see which fixture and parameter it is. Use it to check that a fixture really gets what you expect before blaming the fixture or the cable.

07

The stage

The Stage tab describes the floor in metres: its size, the taped marks, risers, icons and stored stage layouts.

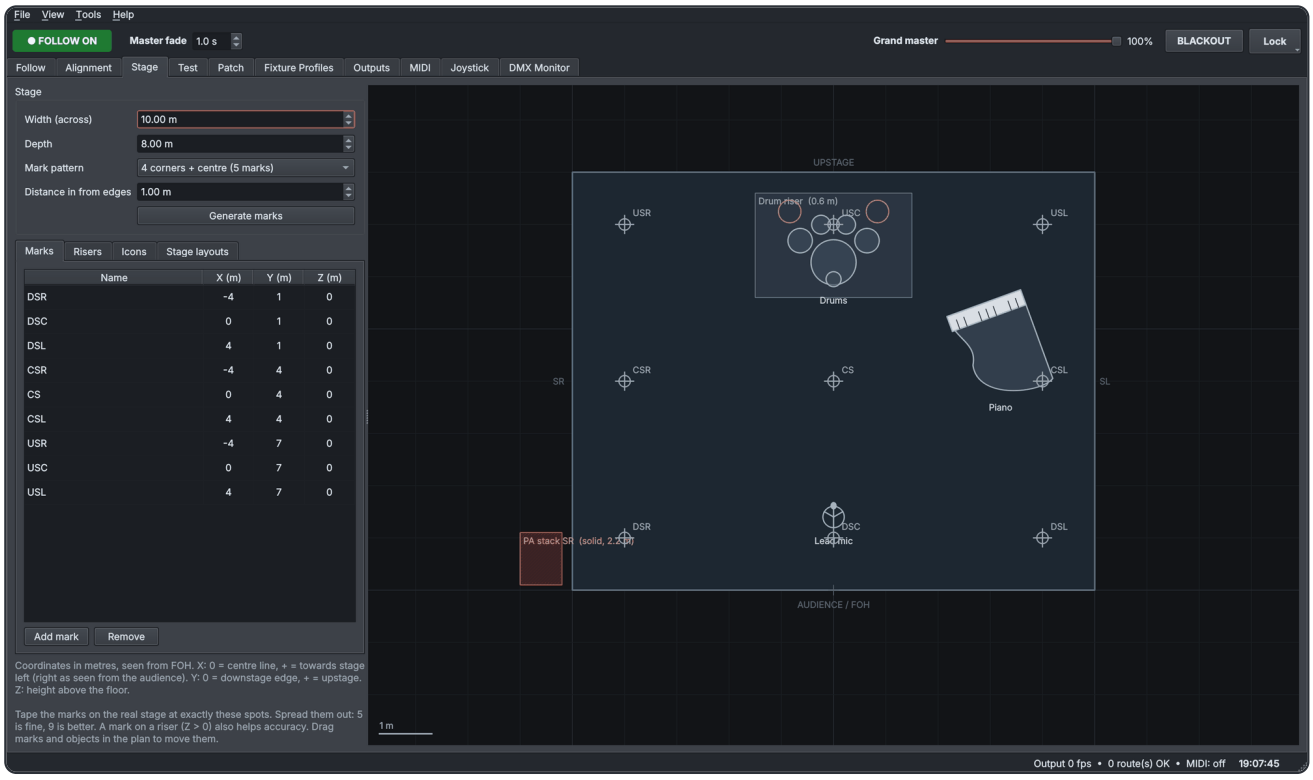


The Stage tab with nine marks, a drum riser, a piano and a PA stack.

Coordinates

All positions are in metres, **as seen from FOH**:

- **X** = 0 is the centre line; + is towards stage left (the audience's right).
- **Y** = 0 is the downstage edge; + is upstage.
- **Z** is height above the stage floor.

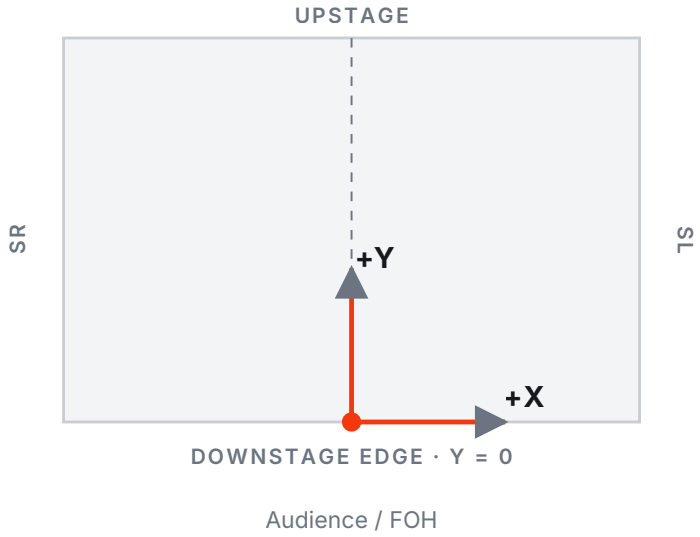

X = 0 on the centre line, Y = 0 at the downstage edge.

Stage size and marks

1. Enter the stage **Width (across)** and **Depth** in metres.
2. Pick a **Mark pattern**: *3 × 3 grid (9 marks, best accuracy)* or *4 corners + centre (5 marks)*.
3. Set **Distance in from edges** (how far the outer marks are from the edges) and press **Generate marks**.
4. Tape the marks on the real stage at exactly those positions. Use a tape measure from the centre line (X) and the downstage edge (Y).

The marks are named the way crews say them: **DSR**, **DSC**, **DSL** (downstage right, centre, left), **CSR**, **CS**, **CSL**, **USR**, **USC**, **USL**. Generating marks again moves marks with the same name rather than replacing them, so the alignment stored on them is kept. You can also add, edit and remove marks by hand (**Add mark**, or drag them on the plan).


> **BETTER HEIGHT ACCURACY**
> Add one extra mark on top of a riser and set its Z to the riser's height. Marks at different heights help the alignment work out exactly how high each fixture hangs.

Risers

A riser is anything a performer stands on: a drum riser, a podium, a step. Add it in the **Risers** tab with its position, size and **height**. When a spot moves onto a riser, the aim point is raised by the riser height automatically.

Things that *block* light (speaker stacks, pillars, set walls) are **solid objects**; they're set up under **Alignment → Solid objects & off-stage**.

Icons

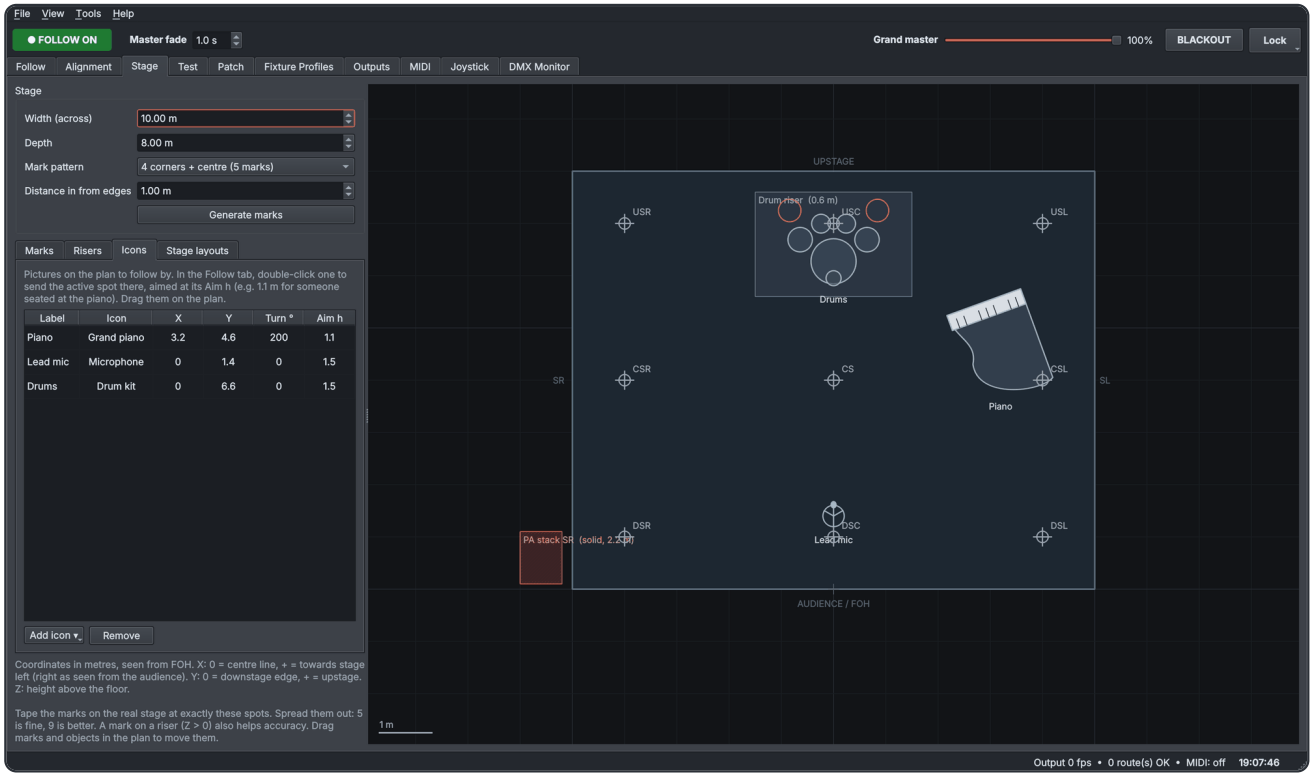

Icons put the band's positions on the plan. Double-click one in the Follow tab to send the active spot there.

Add icon ▾ puts a picture on the plan: grand piano, keyboard, guitar, drum kit, microphone, podium / lectern, chair, table, DJ booth, monitor wedge, screen, or a plain position star. Drag them on the plan, name them, turn them, and set **Aim h**: the height a spot sent there aims at (1.1 m for someone seated at the piano).

Icons show on the Follow tab, the operator stations and the 3D view. In the Follow tab, **double-click an icon** to send the active spot there: it glides over the master fade.

Stage layouts

For shows with scenery changes. A stage layout stores the risers, solid objects and icons.


- **Save as new...** stores the stage as it is now.
- **Update** overwrites the selected layout.
- **Recall** (or double-click) puts it on stage.
- During the show, **Layout ▾** in the Follow tab recalls one with a click.

The marks and the alignment are not part of a layout, so they stay as they are.

08

Alignment

Aim each fixture at a few taped marks, once per venue. FollowYou works out where it hangs and how it is turned, and from then on it can aim at any point on stage.

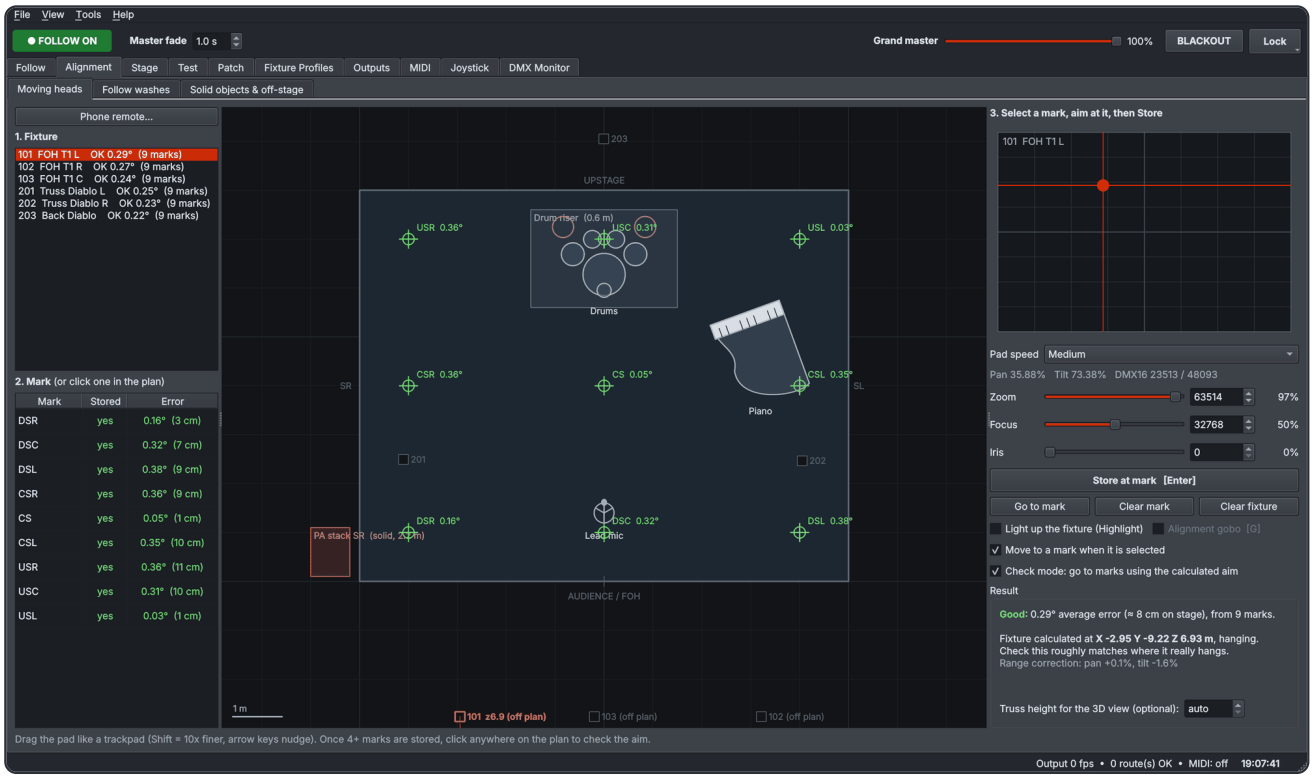

Alignment → Moving heads: 1. pick the fixture, 2. pick a mark, 3. aim and store. The Result box is at the bottom right.

Aligning a moving head

1. Select the fixture in list **1** and tick **Light up the fixture**.
2. Select a mark in list **2**, or click it on the plan.
3. Drag the pad like a trackpad until the centre of the beam sits exactly on the tape. **Pad speed** changes how fast it moves; hold **Shift** for 10× finer. Arrow keys nudge. Set zoom and focus too if you want them stored for that mark.
4. Press **Store** (or **Enter**). It jumps to the next mark.
5. After 4 marks the fixture is solved. From then on, selecting a new mark pre-aims the fixture there, so you only touch it up and store.

Aiming aids

- **Iris** (if the fixture has one) makes the spot smaller and sharper, so it's easier to put exactly on the tape. It's only an aiming aid: it isn't stored, and it goes back to how it was when you pick another fixture or leave Alignment.
- **Alignment gobo** (G) puts a dot or cross gobo in, if the profile has one set (see Alignment gobo). It comes out again when you untick it, pick another fixture or leave Alignment.

> **WORK IN THE DARK**
> Align with the other lights off or low, and from a spot where you can see the tape clearly. Even better: align from the stage with your phone (see below).

Reading the result

The **Result** box shows the accuracy and where FollowYou thinks the fixture hangs. Check that position roughly matches reality: it's the quickest sanity check.

- **Under 0.5°** is good.
- If one mark has a much bigger error than the others, re-store that one, or check the tape is where the Stage tab says it is.
- **4 marks** always fit exactly, so the error can't be measured. Store a 5th (ideally all 9) before trusting it.
- **Suspicious** means the solve needed a huge range correction to fit. That almost always means one mark was stored aimed at the wrong spot. Re-store (or clear) the mark with the biggest error.

Pan and tilt range come from the fixture profile. Small errors in them are corrected automatically (“Range correction”).

Check mode

On by default. Once a fixture is solved, selecting a mark aims there using the same calculation the Follow tab uses, so what you see is the real accuracy. If it's off, nudge it onto the tape and press Store again. Clicking anywhere on the plan aims at that point on the floor, again using the calculation.

Truss height for the 3D view

Optional. The calculated height is sometimes a little off, which the 3D view on the presentation screen shows. Type the real truss height in **Truss height for the 3D view** and the fixture is drawn hanging from that height. It's only for the drawing: the follow doesn't use it. Leave it on *auto* and nothing needs measuring.

> **WHILE FOLLOW IS ON**
> The fixture you are working on in the Alignment tab is paused from following automatically, so you can align with the show running.

Aligning from your phone

Walk on stage and align without carrying the station.


1. **Tools → Remote access…** (or **Phone remote…** above the fixture list). Tick **Remote access on** and pick *Phone: alignment (walk the stage)*.

2. Connect the phone to the **same Wi-Fi** as the station. No Wi-Fi at the venue? Turn on Windows **Mobile hotspot** and join that, then pick the hotspot network in the window (usually 192.168.137.1).
3. Scan the QR code with the phone camera, or type the address shown. Enter the 4-digit PIN once.
4. On the phone: pick the fixture, tap **Light**, tap a mark (on the plan or in the list), drag the pad until the beam is on the tape, press **STORE**. Two fingers on the pad = 10× finer. The arrow buttons nudge, and repeat while held. Zoom, focus and iris are under the pad.

The station jumps to **Alignment → Moving heads** and shows the same fixture and mark as the phone. Both stay usable, and a phone can't move a fixture that was just changed on the station.

- **Direction & options**: if dragging moves the beam the wrong way from where you're standing, flip left/right, flip up/down or swap them. This is saved per fixture on that phone. You can also turn the plan round so the audience is at the top, as you see it from the stage.
- Phone browser menu → **Add to Home screen** gives a full-screen app icon.
- The phone can't connect? Windows Firewall is the usual cause: see Windows Firewall.

Follow washes

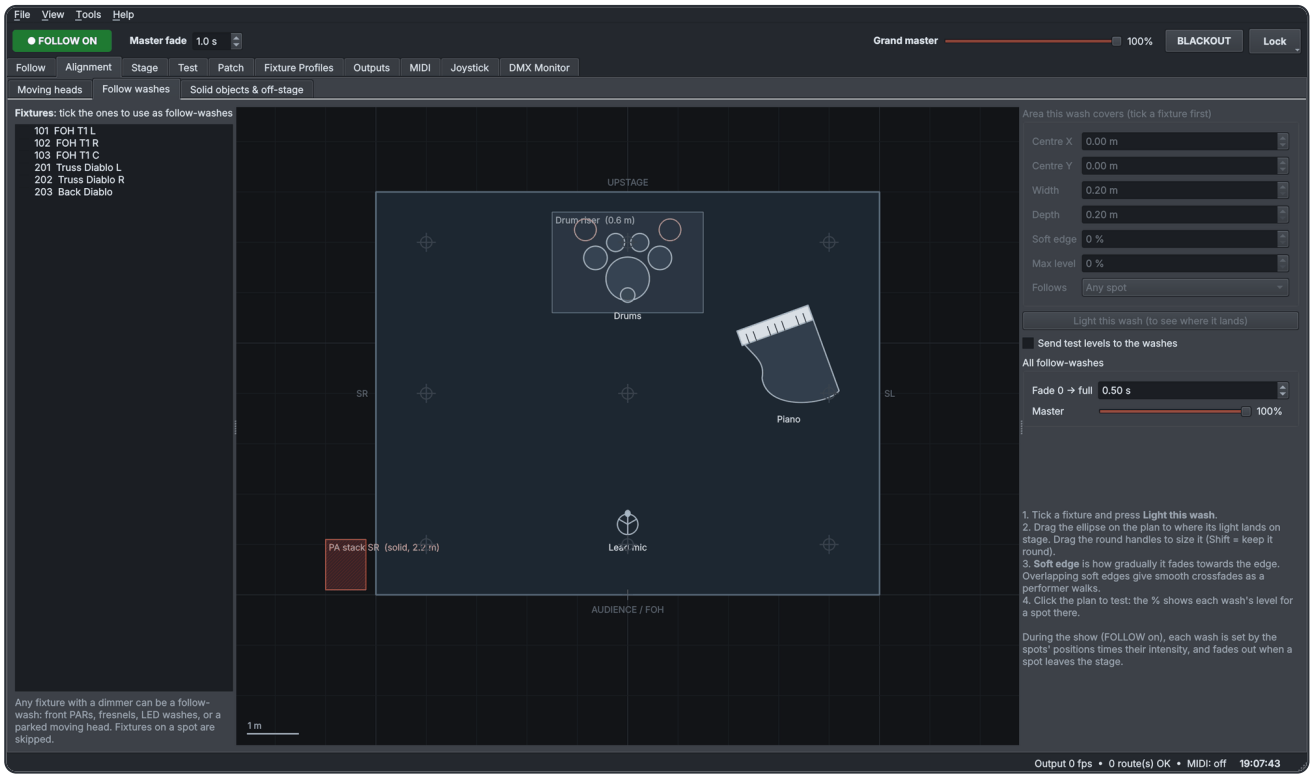

Follow washes: static fixtures that come up wherever a spot is.


Follow washes are static fixtures (front PARs, fresnels, LED washes) that come up wherever a performer is. Each wash covers an area of the stage, drawn as an ellipse with a soft edge. As a spot walks around, each wash is set by how central the spot is in its area, times the spot's intensity.

1. Tick a fixture, then press **Light this wash** and look where it lands.
2. Drag the ellipse on the plan to match it, and drag the round handles to size it (Shift keeps it round).
3. **Soft edge**: how gradually it fades towards the edge. Overlap the soft edges of neighbouring washes for smooth crossfades.

4. Click the plan to test. The % shows each wash's level for a spot standing there. Tick **Send test levels to the washes** to see it on stage.

- **Follows**: *Any spot*, or one spot only, to tie a wash to one performer.
- **Fade 0 → full**: how fast the washes react.
- **Master**: also in the Follow tab (*Follow washes* in Options), and it can be put on a fader.
- Washes only run while FOLLOW is on.

Solid objects and off-stage

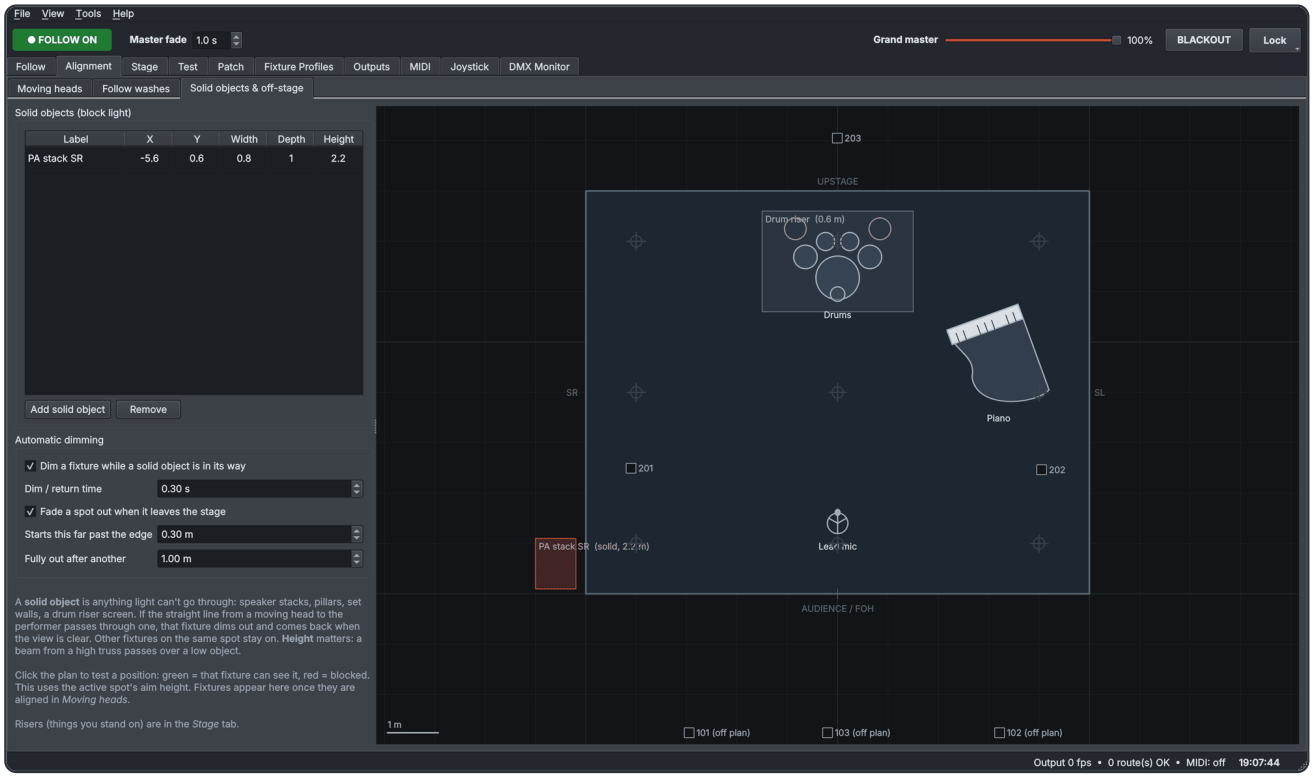

Solid objects block light; the off-stage settings fade a spot out past the stage edge.

Solid objects

Solid objects are boxes light can't pass through: speaker stacks, pillars, set walls. If the straight line from a moving head to the performer goes through one, *that fixture* dims out and comes back when the view is clear. Other fixtures on the spot stay on. Height matters: a beam from a high truss passes over a low object.

Click the plan to test a position: green = that fixture can see it, red = blocked. **Dim / return time** sets how quickly a blocked fixture dims and comes back.


Off-stage

A spot fades out as it moves past the stage edge. **Starts this far past the edge** gives some leeway for the lip of the stage; **Fully out after another** sets how gradual the fade is.

09

Following: show time

The Follow tab is where the show runs. The stage plan is in the middle; spots, settings, executors, faders and safety sit in panels around it.

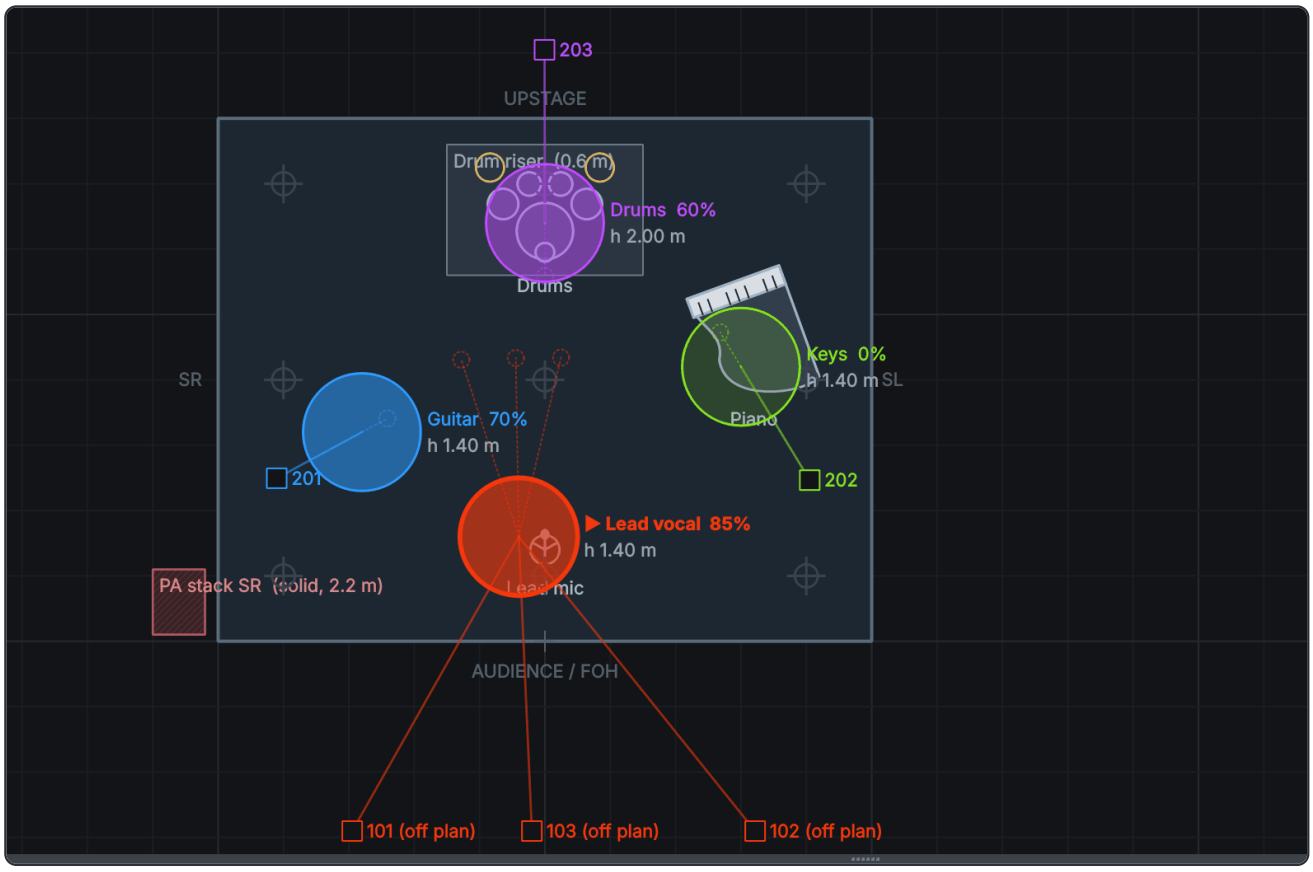

The stage plan. Each circle is a spot; lines run to the fixtures on it. Dotted rings show where each beam would hit the empty floor.

Spots

Each **spot** is one performer. The **Spots** panel lists them: **Add spot**, **Rename**, **Colour** and **Remove**. The spot's colour is used on the plan, the video ghosts, the spot strip and the phones.

The **active spot** is the one you are driving: it's highlighted in the list and drawn with ▶ on the plan. Pick it with 1–9, by clicking it in the list or the spot strip, or by right-clicking near it on the plan.


In **Spot settings**, tick the fixtures that belong to the active spot. A fixture can only be on one spot at a time. **Fixture status** shows each one: green *OK*, amber *OK – …* with a warning (a zoom it can't reach, say), red when it can't follow (not aligned, or the point is out of its reach).

Driving a spot on the plan

DO THIS	TO
Click / drag on the plan	Move the active spot
Shift-drag	Move it finely
Arrow keys	Nudge it
Mouse wheel	Beam size (zoom level in Manual zoom)
Ctrl+wheel	Aim height
1–**9**	Pick a spot
Space	Active spot on/off over the master fade
Right-click	Pick the nearest spot
Double-click an icon	Send the active spot to it (glides over the master fade)
M	Multi-spot on/off

Turn **FOLLOW ON** in the top bar first. FollowYou always starts dark: FOLLOW off and every spot at 0.

Spot settings

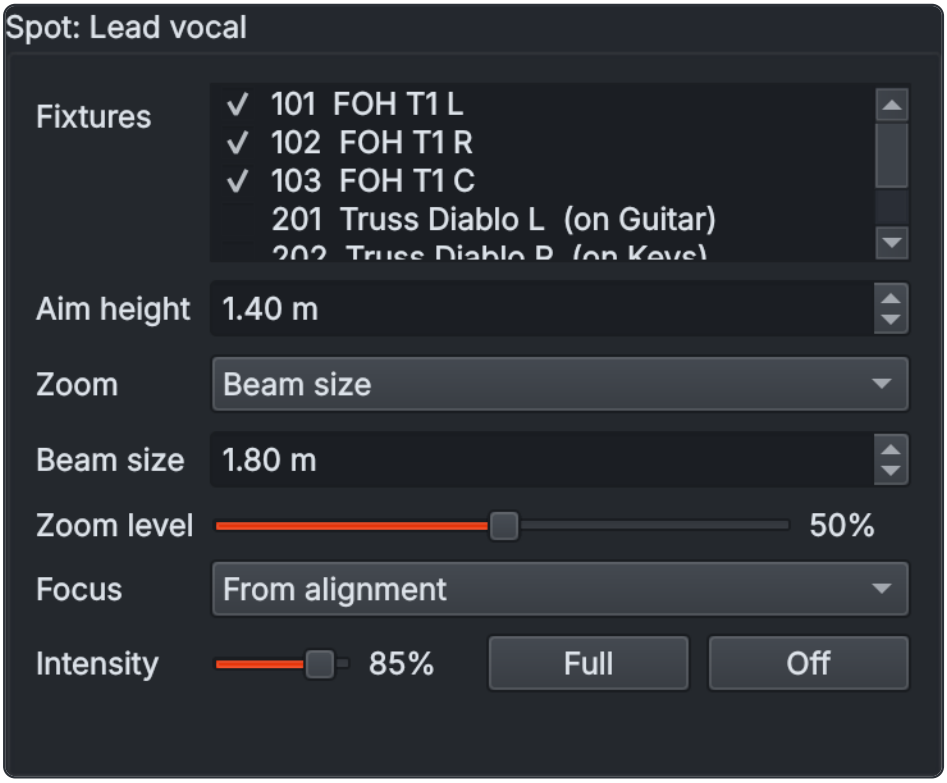

Aim height

Where on the performer to aim: 1.4 m is about chest height. **Ctrl**+wheel changes it. On an **empty stage** this makes the light land behind the dot: a front-of-house fixture aimed at 1.4 m hits the floor several metres

further upstage, and the dotted rings on the plan show where. That's correct: with someone standing on the dot, it's on them.

Floor test

In **Options**, tick **Floor test** to aim at the floor instead, so the beam lands exactly on the dot. Use it to check the alignment on an empty stage, then untick it for the show. It isn't saved with the show.

Zoom

- **From alignment** blends the zoom you stored at each mark.
- **Beam size** keeps the beam the same width in metres anywhere on stage. The wheel changes the size. This needs the zoom angles in the profile (see Measure zoom angles); without them, Spot settings says so and the zoom is left alone. A size the fixture can't reach from where it hangs (e.g. 1 m from 15 m away with a 15° narrowest zoom) stays at the narrowest or widest, and the status says what the limit is.
- **Manual (zoom level slider)** gives a **Zoom level** slider (0–100 %) that sends the zoom channel directly. The wheel changes it too, and so can a fader (*Spot zoom level*) or an executor. Moving the slider switches the spot to Manual.

Focus

From alignment blends the focus stored at each mark, or **Manual**.

Intensity

The spot's dimmer. When it's above 0, the shutter opens using the shutter channel's Highlight value from the profile. Underneath it shows **what last changed it**: “Joystick Z axis”, “MIDI CC 48”, “Executor ‘Spot ON’”, a phone's name...

> **A SPOT WON'T GO OFF, OR KEEPS JUMPING BACK?**
> Look at the line under Intensity first: it names whatever is fighting you. MIDI faders that keep re-sending the same value are ignored until the value actually changes, so a controller can't force a level back after you changed it.

Smoothing

In **Options**. Makes mouse movement less jerky: 50–150 ms feels natural; 0 = instant.

Fades

- Space turns the active spot on/off over the master fade time. **Full** and **Off** in the spot panel fade too.
- The intensity slider and faders are always instant.
- Grabbing a control while it's fading takes over straight away. For example, dragging the spot during a position fade stops the fade.

Multi-spot

Multi-spot (top right of the plan, or M) drives several spots at once.

- Ctrl+click a spot tile, Ctrl+right-click a spot on the plan, or press Ctrl+1–9 to add a spot to the group or take it out. The button shows how many spots are in it; dashed lines join them to the active spot on the plan.

- The **active spot leads**. When it moves (mouse, joystick, phone, auto-track, a position preset), the others keep their distance to it, so a formation moves as one. They copy its level, beam size, aim height and zoom.
- Space, Full/Off and the intensity fader work on the whole group.
- Executors for the **active spot** act on every spot in the group (a colour preset colours them all). A position preset moves the lead and the others follow.
- Picking another active spot keeps the group and adds the new one to it.

The Safety panel




- **ALL SPOTS OUT** fades every spot (and the follow washes with them) out over the master fade. Press it **again within 3 s to cut instantly**. Each spot remembers its level for the next "on".
- **FREEZE POSITIONS**: every spot stays exactly where it is. Mouse, joystick, executors, phones and operator stations can't move them until you click it again. Useful if a joystick plays up or someone grabs the wrong phone.
- It shows the **output health**: every output, with a warning when an output sends a universe with nothing patched in it, fixtures on a spot that aren't aligned, BLACKOUT, and the phones and operator stations that are connected.

Arranging the Follow page

The stage plan stays in the middle; everything else is a **panel**: Safety, Spot strip, Spots, Spot settings, Fixture status, Options, Faders, Executors, Keys and mouse help, and Video.


- **Drag a panel by its title** to move it to another side, drop it on another panel to make tabs, or drag it out to float it, for example onto a second screen.
- The × closes a panel; **Panels ▾** (top right of the plan) or **View → Follow page panels** brings it back.
- **Panels ▾ → Lock panels** hides the title bars (more room) and stops panels being moved by accident during a show.
- **Panels ▾ → Save layout as…** stores the arrangement under a name ("Setup", "Show", "Two screens"); *Load layout* switches between them. *Reset to the standard layout* if you get lost.
- The layout is remembered per computer, not per show. A panel made smaller than its content gets a scrollbar, so any arrangement works on any screen size.

Show mode

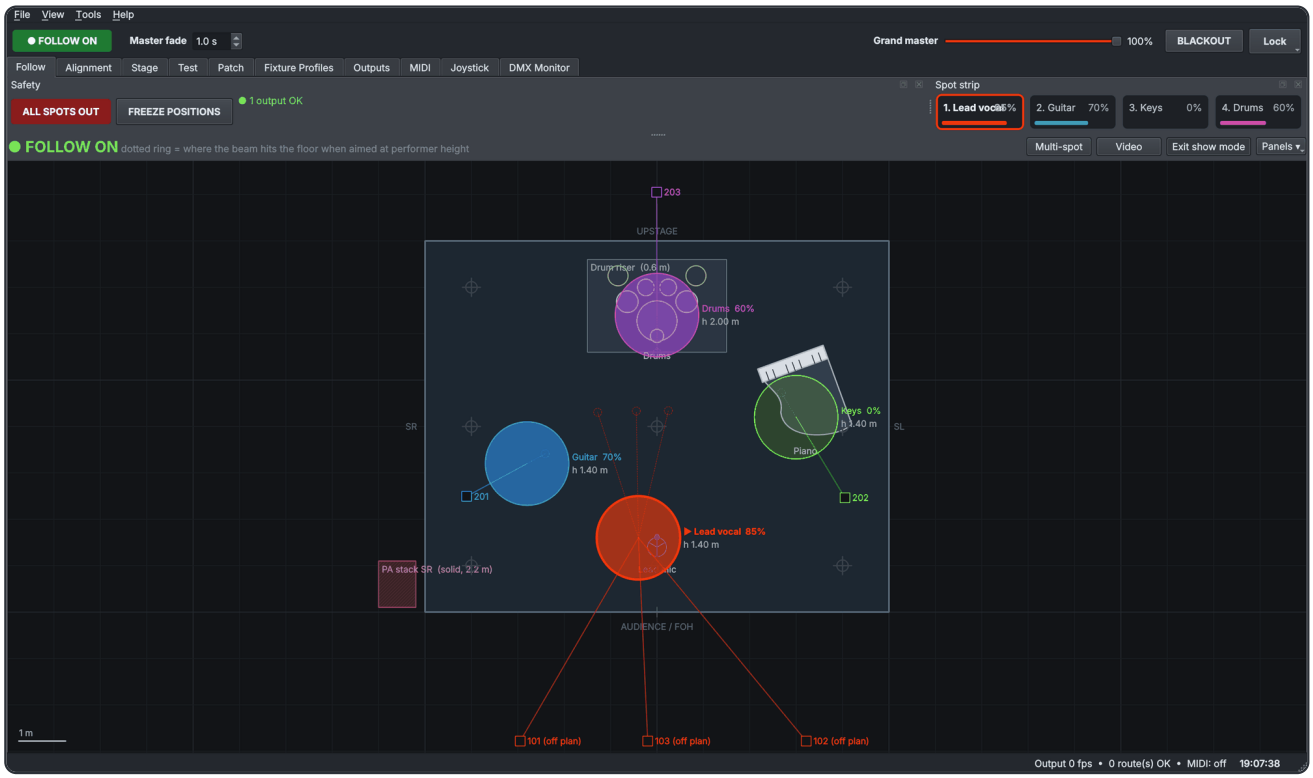

Show mode (F10): just the plan, the spot strip and the safety panel.

Show mode (button, or F10) leaves just the plan, the **spot strip** and the safety panel (and the Video panel, if it was open). The spot strip has one tile per spot: pick it, see its level, switch it on/off. Press Show mode again to get your panels back. F11 = full screen.



Lamps (bulb and discharge fixtures)

Fixtures with a lamp instead of LEDs have to be switched on (“struck”) and off with a DMX value on a control channel, often held for a few seconds. Set the lamp channel and values in the profile first (Light source).

1. Open **Tools → Lamps** (or **Panels ▾ → Lamps** on the Follow page). Every lamp fixture gets a **Lamp ON** and a **Lamp OFF** button.
2. Press one: FollowYou keeps sending that value until you press it again (or the time runs out). Then the lamp channel goes back to its default value, so the fixture doesn't keep seeing the command (on many fixtures that channel also does resets).
3. **All lamps ON**, **All lamps OFF…** (asks first) and **Stop sending** work on the whole rig. While a lamp command is being sent, the Safety panel says so.


> **COOL-DOWN**
> Lamps need to cool down (often minutes) after being switched off before they strike again. Don't switch lamps off between songs.

Operator stations can use the Lamps panel too; the main station sends the DMX.

10

Executors and faders

Executors are the buttons under the stage plan: presets for colour, position, beam and anything else. Faders sit next to them for levels and sizes.

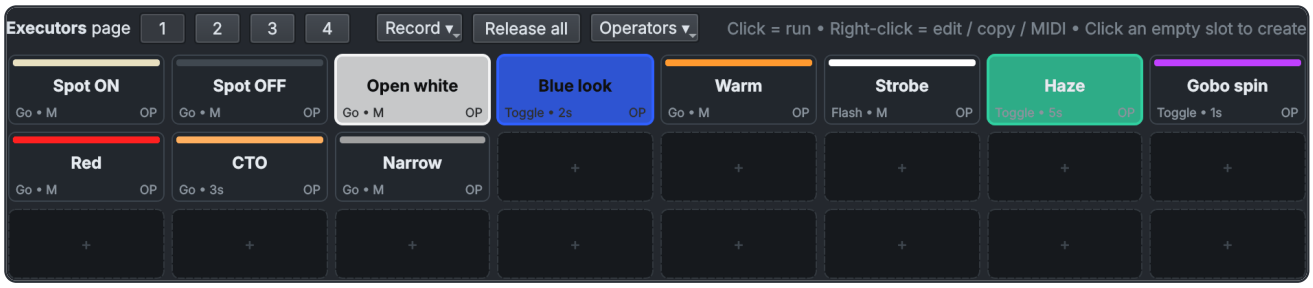

The Executors panel: pages 1–4, Record ▾, Release all and Operators ▾ above the buttons.

What an executor is

There are **4 pages of 24** executors. Each one is a list of lines of the form *"set this parameter to this value on these things"*. You can mix anything in one button.

APPLIES TO	MEANING
Active spot	Whichever spot is selected when you press it. Use this for colour and position presets you want to reuse on any performer.
Spot: *name*	Always that spot.
All spots	Every spot.
Fixtures…	Exactly the fixtures you pick (click anywhere on a fixture's line to tick it).
All fixtures	Everything patched.

Parameters

- **Spot parameters**: *intensity*, *position X/Y*, *aim height* and *beam size*. A preset that sets position X/Y is a **position preset**: the spot glides there and the fixtures follow.
- **Fixture parameters**: anything in the profile, e.g. cyan, colour wheel, gobo, prism, frost. If the channel has named ranges, you can pick a slot (e.g. "Red") next to the value.

While FOLLOW is on, a spot controls pan, tilt, zoom, focus, dimmer and shutter of its fixtures. Use the spot parameters (intensity, beam size, aim height) for those. The editor warns you if a line would clash.

Button types


TYPE	BEHAVIOUR
Go	Sets the values. They stay until something else changes them. The button lights up while its values are live.
Toggle	Press to apply, press again to go back to how it was before.
Flash	Applies the values only while held.

Fades

- An executor uses the **Master fade** (top bar) or its own fade time.
- Each line has a **Fade** tick box. Colour wheels, gobo wheels, prisms and shutters snap by default, because fading a wheel scrolls through every slot in between.
- Position presets glide with an eased start and stop.

Making executors

- **Record ▾**: one click captures the active spot's *position*, *colour* or *beam* (gobo, prism, frost and so on) into the next free button. *Custom…* lets you pick fixtures and parameters. The editor then opens so you can name it.
- **Click an empty slot** to build one from scratch.
- **Right-click** a button to edit, learn MIDI or a joystick button, duplicate, copy or delete it.
- **Release all** turns off every toggle and flash executor.

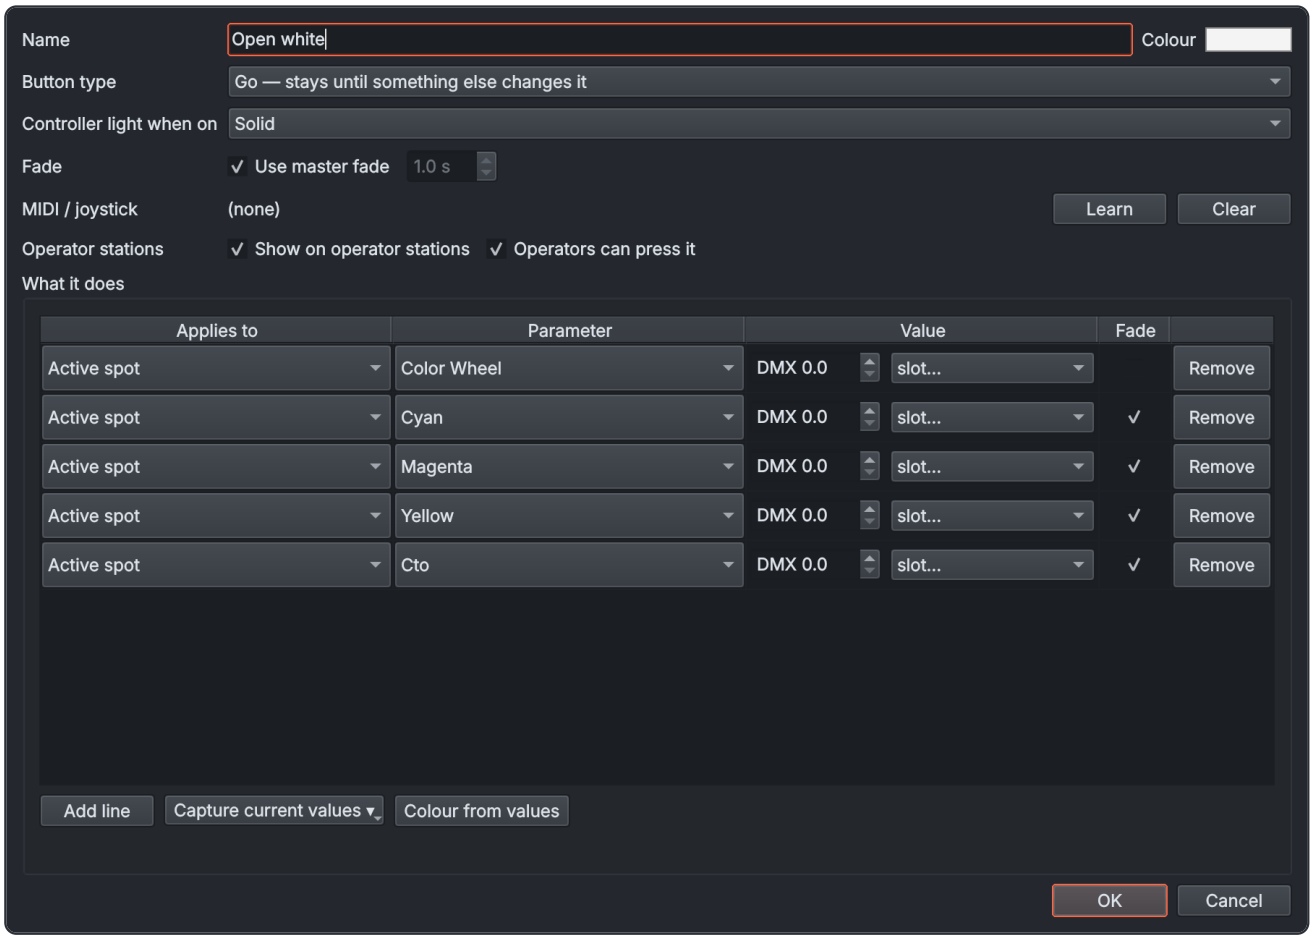


The executor editor. Each row is one line: what it applies to, the parameter, the value and whether it fades.

The editor

SETTING	MEANING
Name, **Colour**	What the button says and its colour. **Colour from values** colours the button from its CMY/RGB lines.
Button type	Go, Toggle or Flash.
Controller light when on	Solid, Blink or Pulse on a MIDI controller with lights, in the executor's colour.
Fade	**Use master fade**, or its own time.
MIDI / joystick	**Learn** a pad, key or joystick button for it; **Clear** removes it.
Operator stations	**Show on operator stations** and **Operators can press it**. See Executors for operator stations.
What it does	The lines. **Add line**, or **Capture current values ▾** to pull in live values.

Faders

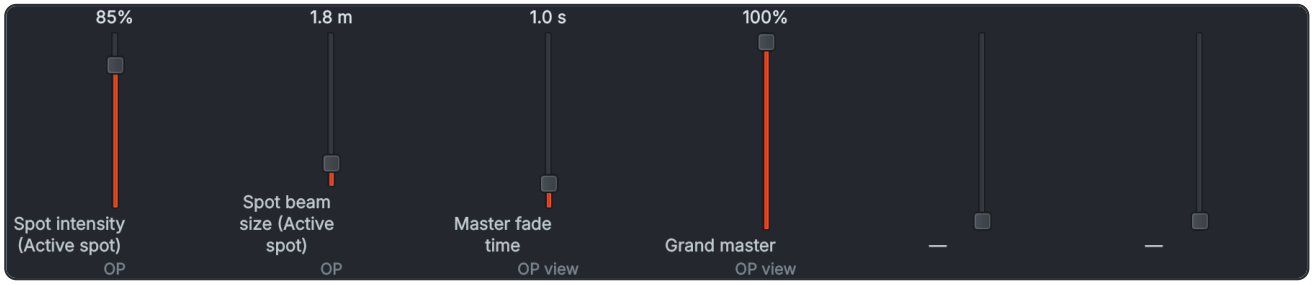

There are **6 faders** next to the buttons. Double-click or right-click a fader to choose what it controls:

- Grand master
- Master fade time
- Spot intensity, beam size, zoom level (Manual zoom) or aim height: of the active spot, a named spot, or all spots
- Any fixture parameter (for example frost on the active spot's fixtures)
- The follow-wash master

Right-click → *Learn MIDI fader/knob* and move a fader or knob on your controller to put it on hardware.

> **A GOOD STARTING SET**
> Fader 1 active spot intensity, 2 active spot beam size, 3 aim height, 4 master fade time, 5 follow washes, 6 grand master. Put the key presets of each song on page 1 and leave pages 2–4 for specials.

11

Video and auto-track

Press **Video** (top right of the plan) to open the Video panel. Instead of moving a dot on the plan, you drag on the performer in a camera picture, and **auto-track** can follow someone for you.

Which camera

CAMERA	NOTES
Webcams and HDMI-to-USB capture cards	Show up by name in the camera list. The Elgato Facecam is a good one: 1080p60, fixed focus that works from a few metres to the back of a stage, low delay.
GoPro (HERO9 and newer) over USB	On the GoPro set *Preferences → Connections → USB Connection* to **GoPro Connect** (not MTP), plug it in and pick **GoPro over USB (webcam mode)**. FollowYou starts the webcam stream itself. Pick the **lens** next to the camera list: **Linear** (default, no fisheye), **Narrow** or Wide (fisheye, avoid). Open the firewall once (**Tools → Windows Firewall**), because the picture arrives as network video.
DirectShow camera #0–3	Virtual cameras such as the GoPro Webcam app or OBS Virtual Camera.
Network stream	Any `rtsp://` or `http://` video address, e.g. an old phone with an IP-camera app. Cheap, but usually 0.2–0.5 s behind: too much for auto-track on fast movement.

- **720p** is plenty and lighter for the computer. Calibrate at the size you'll use in the show; another size of the same shape (720p ↔ 1080p) is fine.
- Long USB runs: use an *active* USB extension cable (passive ones stop at about 5 m).

> **GOPRO OVER USB**
> This mode is new and hasn't been tested on a real GoPro yet. If it doesn't start, use the GoPro Webcam app and pick *DirectShow camera #…* instead. Calibrate again after changing the lens.

Where to put the camera

High, and looking down on the stage: on the FOH truss, a lighting stand at FOH above the audience's heads, or the front truss. A camera at eye height in front of the stage sees left/right very sharply but **front/back (depth) badly**: everybody's feet end up on nearly the same line of the picture.

The calibration tells you how good your position is, in cm per pixel, and warns if the camera is low. Rough guide for a 10 × 8 m stage, camera 12 m from the front edge:

CAMERA HEIGHT	FRONT/BACK ACCURACY
4 m	≈ 13 cm per pixel
6 m	≈ 8 cm per pixel
On a truss over the stage	far better

Left/right is around 2 cm per pixel anywhere. Mount it firmly. **If the camera moves, calibrate again.**

Calibrate (once per venue, about a minute)

1. Tape the stage marks on the floor: the same marks as for the alignment. The 3 × 3 grid is best.
2. Pick the camera, press **Start**, then **Calibrate**.
3. **Zoom in on the stage first** if it's small in the picture (wide GoPro, camera far back): it makes the clicks several times more precise.
4. FollowYou says which mark to click (“Click on mark: DSR”). Click the middle of that tape cross. It moves on to the next mark by itself. Drag a dot to move it, right-click a dot to remove it, and ◀ ▶ skip a mark you can't see.
5. From 4 marks on (6+ recommended, spread over the whole stage) it works out where the camera is and what the lens does.
6. Leave **Lens** on *Auto*. Type the field of view only if you have very few marks (Facecam ≈ 82°, GoPro Linear ≈ 87°).
7. Save the show. The calibration is stored in it, with the camera's name. On an operator station it's stored on that station instead, since its camera is its own.

Reading the calibration

- *Clicks fit within X px*: under 3 px is good. A mark listed under **Check** is probably clicked on the wrong cross.
- Where it thinks the camera is (metres in front of the stage, across, how high). Compare with reality: that's the quickest sanity check.
- **cm per pixel** left/right and front/back at centre stage.
- Blue crosses show where the calibration puts each mark, and the stage outline and 1 m grid are drawn over the picture. They should sit on the real floor.

Zoom and framing

- **Zoom slider**, **+ / –** buttons or keys, or the **mouse wheel** (zooms around the pointer), up to ×8.
- **Move the picture**: Alt +drag (works on a touchpad) or middle-drag.
- **Fit** or Home = the whole picture again.
- The framing is saved with the camera setup, in the show.

Zooming only changes what you see: the calibration and clicks stay exact at any zoom, and auto-track always looks at the whole picture.

Following on the picture

Every spot is drawn as a **ghost**: a ring on the floor where the performer stands, a 1.8 m line (a person), a **dot at the spot's aim height** and the spot's name. Solid = the spot is on, dashed = off. The active spot is drawn thicker.

- **Drag on the performer at the dot's height** (their chest, if aim height is 1.4 m), not anywhere on the body. Where you click on a person changes how far away FollowYou thinks they are, so click consistently at that height.
- **Click at their feet** (option at the top) is the most accurate in depth when you can see the floor. With feet hidden (monitors, audience heads), use aim height.
- Ctrl-drag or **Lock depth**: only move left/right and keep the spot's distance from the front. That's the sharp direction for a front camera, and great for a singer walking along the front edge.
- **Right-click** a ghost to make it the active spot; 1–9 pick spots; Space = spot on/off; **Stage grid** shows or hides the floor grid.
- The line under the picture shows **how many cm one pixel is** at the active spot (green = sharp, orange = OK, red = rough).
- Clicks on a riser use its height automatically.

Auto-track

1. Put the spot's ghost on the performer (feet in the ring, dot on the chest), by dragging on the picture or on the plan, and press **Auto-track** or T. Or simply **double-click the performer** in the picture: the active spot goes to them and locks on.
2. The spot follows. Drag on the picture and let go to lock onto someone else.

How it follows

Every camera picture, a body model finds the people in it (up to 6) with their joints: head, shoulders, elbows, hips, knees, ankles. Tick **People** to see them drawn as skeletons; the tracked one is drawn in its spot's colour. Each spot picks "its" performer by combining:

- **where they should be now** (last position plus walking speed and direction),
- **what their clothes look like** (the colour of the chest between shoulders and hips),
- **whether the body has the right size** for that place on stage.

The position comes from the performer's **feet** when the ankles are seen, otherwise from their hips or shoulders at that performer's own measured heights. Several tracked spots are matched together, so two performers walking side by side keep their own spots, and two spots never take the same person. If the body points are lost (behind a monitor, very dark), it switches to a colour tracker, labelled "(colours)", and back again as soon as the performer is found.

What the states mean

STATE	MEANING
TRACKING (body) TRACKING (colours)	It's following.

STATE	MEANING
HOLDING	It isn't sure (two people close together, someone walks in front, a sudden jump). The spot stays still and carries on by itself once it's sure again.
SEARCHING	It lost them (hidden, left the picture, a blackout, a big light change). The spot stays where it was, and it keeps looking within the distance the performer could have walked. It locks on again by itself when someone clearly has the performer's clothes and build. **Double-click them** to help it, or press T to stop.
LOST	The tracker stopped answering and was restarted (after about 2 s). The spots held still meanwhile: drag or double-click onto the performers to lock on again.

Rules it always keeps

- **It never switches a spot on or off** and never touches intensity. You stay in charge of the light.
- It would rather hold than guess.
- The spot moves **at most 4 m/s**, so a glitch can't whip the light across the stage.
- **Any other move of that spot stops auto-track at once**: plan, joystick, executors, phones, operator stations. **FREEZE** makes it hold.
- Esc stops all auto-tracking.


> **IT'S AN ASSIST**
> At most 6 people are found per picture. Two performers in the same clothes who cross or hug can fool it (it usually holds). Haze, heavy strobes and blackouts make it hold or switch to colours. Performers small in the picture (under about 50 pixels tall) are found less reliably. Keep your hand near the mouse.

Speed: the body model takes about 20–40 ms per picture on a normal computer, shared by all spots (the line under the picture shows it). The colour tracker adds 20–35 ms per spot while it's in use. The body model is MoveNet MultiPose by Google (Apache 2.0).

12

MIDI controllers

A MIDI controller puts executors, faders and the important switches under your fingers, with lights that show what is on.

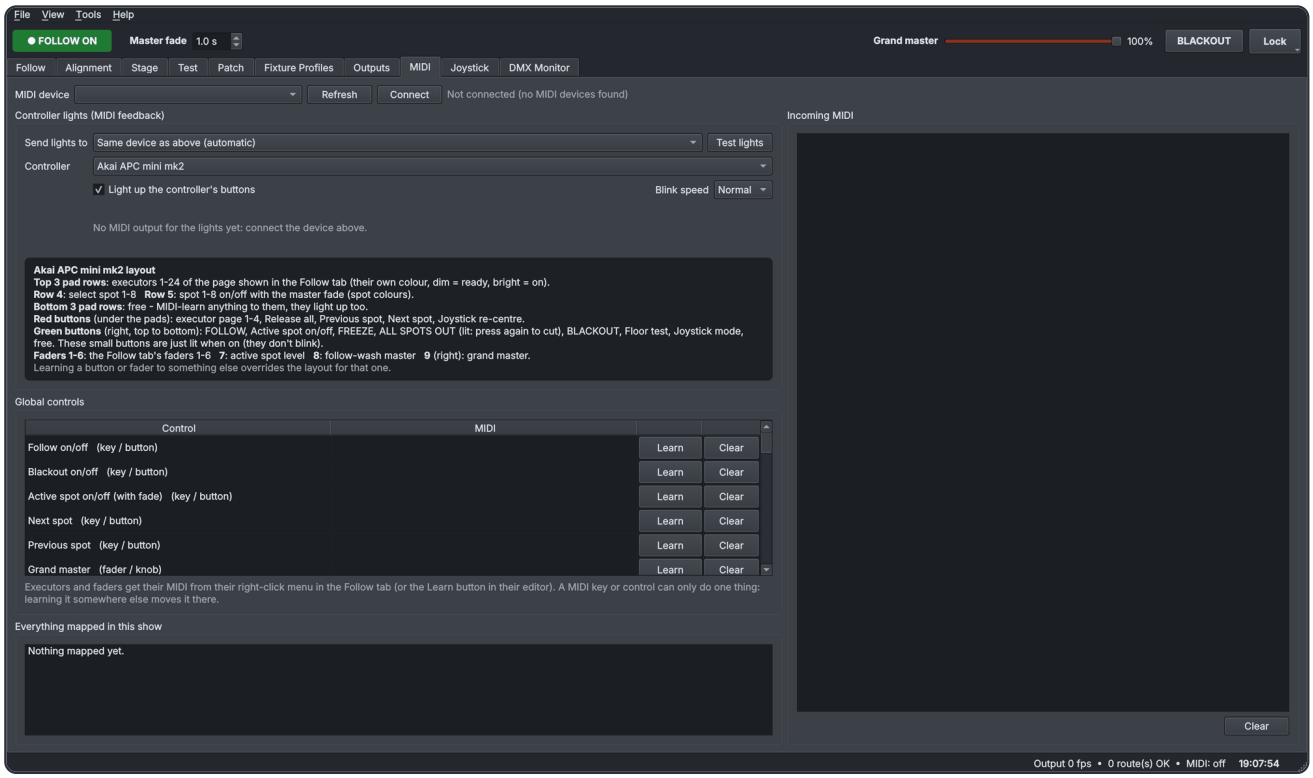

The MIDI tab: device and controller lights at the top, the controller's layout, global controls, and incoming MIDI on the right.

Connecting

1. Plug the controller in, go to the **MIDI** tab, pick it under **MIDI device** and press **Connect**. Next time it reconnects automatically if it's plugged in.
2. Known controllers are recognised by name and get their ready-made layout straight away (**Controller**: *Auto-detect*, or pick one).
3. Press a pad: it shows under **Incoming MIDI**, so you can check the controller is talking.

On Windows, MIDI uses the built-in Windows MIDI system, so nothing extra needs installing. **Only one program can use a MIDI device at a time**, so close other software that has the controller open.

Learning buttons and faders

- **Executor**: right-click it → *Learn MIDI / joystick button*, then press a pad or key.
- **Fader**: right-click it → *Learn MIDI fader/knob*, then move a fader or knob.
- **Global controls** (MIDI tab): press **Learn** next to a control and press or move the control on your controller. **Clear** removes it.

Notes and CC both work for buttons (CC: 64 and above = pressed). Each MIDI control can only do one thing; learning it somewhere else moves it. **Everything mapped in this show** lists all of it. Learning a button or fader overrides the controller's ready-made layout for that one control only.

Global controls

CONTROL	TYPE
Follow on/off	button
Blackout on/off	button
Active spot on/off (with fade)	button
Next spot / Previous spot	button
Grand master	fader
Active spot intensity	fader
Master fade time	fader
Joystick: re-centre (fix drift)	button
Joystick: toggle speed / position mode	button
Joystick: fine control (hold)	hold
Freeze positions on/off	button
ALL SPOTS OUT (press twice = cut)	button
Release all executors	button
Floor test on/off	button
Select spot 1–8	button
Spot 1–8 on/off (with fade)	button

Controller lights

FollowYou lights up the controller's buttons to show what is on (**Controller lights** in the MIDI tab, **Light up the controller's buttons**).

- **Send lights to**: normally *Same device as above (automatic)*; it finds the controller's MIDI output by itself. *Nowhere* turns lights off.

- **Controller**: *Auto-detect* picks the right preset. *Generic* works with most controllers: a lit button gets note-on velocity 127, an unlit one 0, on the same note and channel the button sends. Some cheap controllers only light a button while it's pressed and can't be lit from outside.
- **Dim** = ready, **bright** = on. FOLLOW and Floor test light when on; FREEZE, BLACKOUT and ALL SPOTS OUT (while “press again to cut” is armed) **blink**. Spot buttons use the spot's colour.
- Each executor has **Controller light when on: Solid / Blink / Pulse** in its editor, in the executor's own colour.
- **Blink speed**: Slow / Normal / Fast (half a blink, one, or two blinks a second).
- **Test lights** runs a rainbow over the controller to check it's connected.
- While the desk is locked, the pads slowly fade red up and down; a green wave runs over them when it's unlocked. The controller goes dark when FollowYou closes.

Akai APC mini mk2 (recommended)

Plug it in, pick it in the MIDI tab and press Connect. It's detected automatically and gets this layout, in exact colours:



APC mini mk2: what each part of the controller does in FollowYou.

WHERE	WHAT
Top 3 pad rows	Executors 1–24 of the page shown in the Follow tab
Pad row 4	Select spot 1–8
Pad row 5	Spot 1–8 on/off with the master fade
Bottom 3 pad rows	Free: MIDI-learn anything to them (they light up too)
Red buttons (under the pads)	Executor page 1–4, Release all, Previous spot, Next spot, Joystick re-centre
Green buttons (right, top to bottom)	FOLLOW, Active spot on/off, FREEZE, ALL SPOTS OUT, BLACKOUT, Floor test, Joystick mode, free
Faders 1–6	The Follow tab's faders 1–6
Fader 7 / 8 / 9 (right)	Active spot level / Follow-wash master / Grand master

The executor page on the controller and on screen are the same: change it on either. On the APC mini the small single-colour buttons (above the faders and on the right) don't blink: they're simply lit when on.

Other ready-made controllers


CONTROLLER	LAYOUT
Akai APC mini (mk1)	The same layout as the mk2.
Novation Launchpad Mini MK3 and **Launchpad X**	The same 8 × 8 grid layout as the APC mini. The top row of round buttons: page 1–4, Release all, Previous spot, Next spot, Joystick re-centre. The right-hand column: the same switches as the APC's green buttons. FollowYou puts it in Programmer mode itself. No faders.
Korg nanoKONTROL2	Faders 1–6 = the Follow tab's faders, 7 = active spot level, 8 = grand master; knobs 1 and 2 = follow-wash master and master fade. S buttons = executors 1–8, M = select spot 1–8, R = spot 1–8 on/off. Transport: play = FOLLOW, stop = ALL SPOTS OUT, record = BLACKOUT, cycle = FREEZE, ◀◀ / ▶▶ = previous / next spot, track ◀ / ▶ = executor page, marker set / ◀ / ▶ = Release all / Joystick re-centre / Floor test. For the button lights, set *LED Mode* to External once in the KORG KONTROL Editor.

The APC mini mk2 layout is tested on the real controller; the other layouts are made from the makers' MIDI documentation.

13

Joystick

A joystick is the most natural way to follow by hand: push to move, twist for beam size, throttle for intensity.

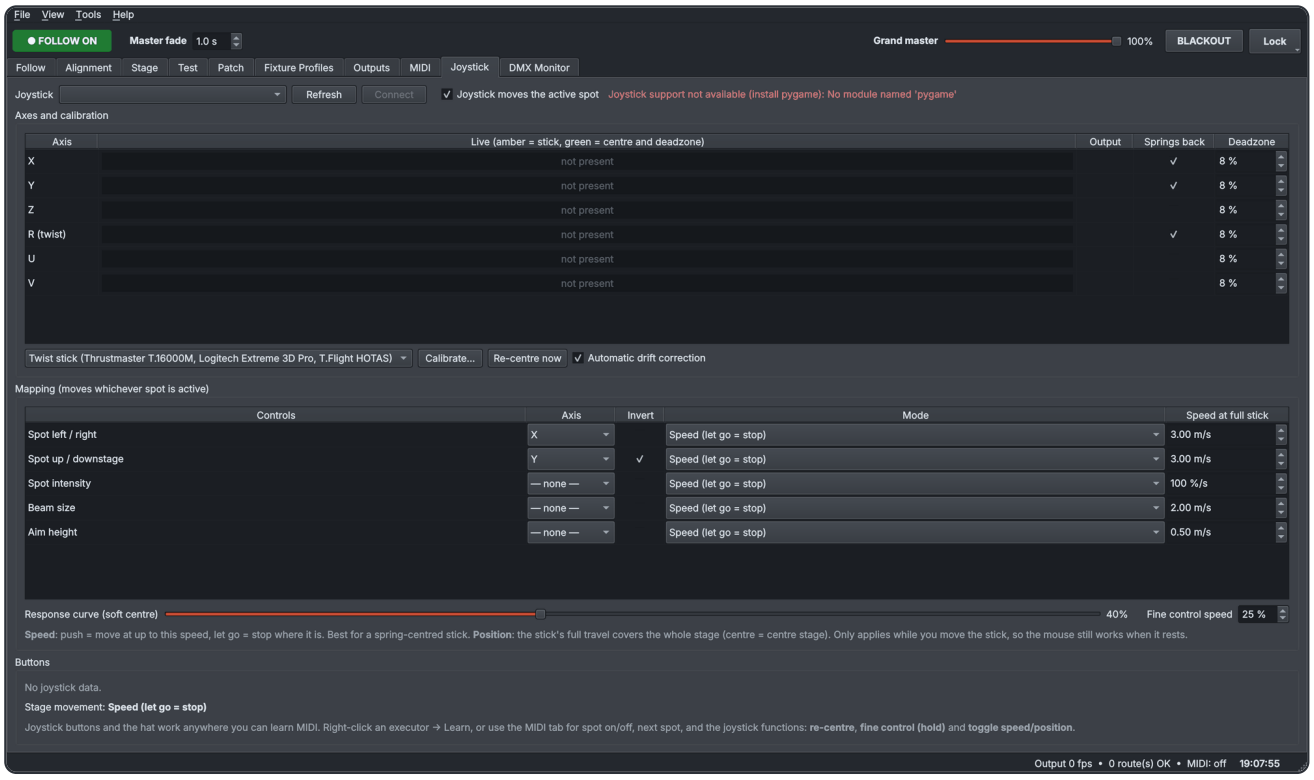

The Joystick tab: axes with live bars and deadzones at the top, the mapping below.

Connecting and calibrating

FollowYou works with any USB joystick, flight stick or gamepad that Windows sees (check in Windows' *Set up USB game controllers*). Nothing extra needs installing.

1. In the **Joystick** tab, pick it and press **Connect**. It reconnects automatically, including if the cable gets pulled mid-show.
2. A stick FollowYou knows loads its preset by itself. To load one by hand: **Load a preset...**.
3. **Calibrate...**: let go of the stick (it measures the centre), then move the stick, twist and throttle to all their limits and press **Finish**.
4. Check the **Mapping** with the live bars. Windows numbers the axes differently for some models, and any axis can be changed in the table.

By default X moves the spot left/right and Y moves it up/downstage, with pushing forward going upstage. Untick **Joystick moves the active spot** to ignore the stick without disconnecting it.

Ready-made presets

- **Twist stick**: Thrustmaster T.16000M, Logitech Extreme 3D Pro, Thrustmaster T.Flight HOTAS.
- **Xbox controller** (and other XInput gamepads).
- **PlayStation controller** (DualShock 4 / DualSense).

What the axes can do

Each of these can be put on an axis: **Spot left / right**, **Spot up / downstage**, **Spot intensity**, **Beam size** and **Aim height**. Each mapping has an **Invert** tick, a **Mode** and a **Speed at full stick**.

MODE	HOW IT WORKS	BEST FOR
Speed (let go = stop)	Push = move, how far you push = how fast (up to *Speed at full stick*), let go = it stops where it is. **Response curve** makes small movements extra fine.	A self-centring stick (default).
Position (full stick = full range)	The stick's full travel = the whole stage, so stick centre is centre stage. It only takes over while you move it, so the mouse still works when the stick is resting.	A throttle used for intensity.

- A **lever that stays where you leave it** (throttle, slider: *Springs back* unticked) always works in Position mode. In Speed mode it would never stop pushing.
- In Position mode the lever only takes control when you **move it on purpose** (about 2.5 % of its travel). As soon as anything else changes that value (Off button, MIDI, a fader, an executor, the mouse), the lever lets go until you move it again. A lever resting at the top can't hold a spot on, and noise from a worn lever never yanks the spot back.

Drift at centre

- **Deadzone** per axis: small movements around the centre are ignored. The green band in the live view shows it. 8 % is a good start; raise it for a worn stick.
- **Automatic drift correction**: while the stick rests inside the deadzone, its centre quietly follows the real resting position, so slow drift never builds up.
- **Re-centre now**: if the stick rests *outside* the deadzone and the spot creeps, let go and press this. Better: map a joystick button to *Joystick: re-centre* in the MIDI tab, so you can fix it mid-show without touching the mouse.
- **Springs back**: tick for sticks that return to the middle, untick for throttles that stay where you leave them.

Buttons and the hat

Joystick buttons and the hat are learned exactly like MIDI: right-click an executor → *Learn MIDI / joystick button* and press the button. The MIDI tab's global controls include joystick-only functions:

- **Joystick: re-centre**

- **Joystick: fine control (hold)**: everything moves at the *Fine control speed* (25 % by default) while held. Great on the trigger.
- **Joystick: toggle speed / position mode**

> **WHERE IT'S SAVED**
> Joystick settings are saved on this PC, not in the show file, because they belong to the hardware. Button mappings to executors are saved in the show.


14

Phones, tablets and operator stations

One station does the DMX output: the **main station**. Phones, tablets and other PCs can drive spots through it.

Remote access

Turn on **Tools → Remote access...** on the main station and note the PIN.

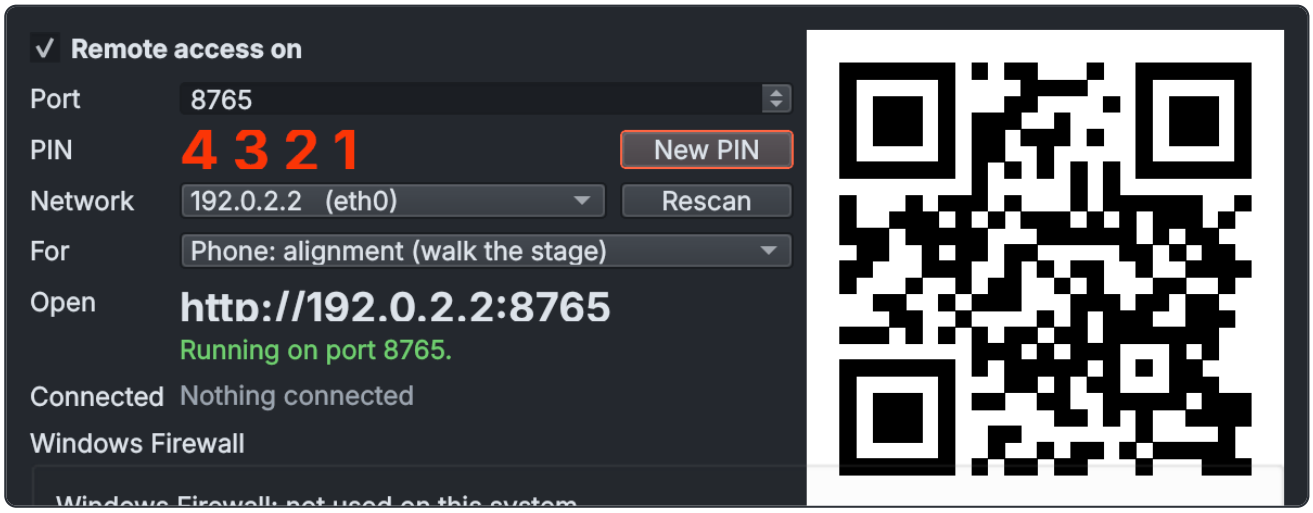

Remote access: the PIN, the network, what the QR code opens, and who is connected.

- **Remote access on**: starts it. It remembers being on and starts again with FollowYou.
- **Port**: default 8080. After changing it, open the firewall again.
- **PIN**: 4 digits. **New PIN** locks out phones that knew the old one.
- **Network**: the network the phones are on (**Rescan** after joining one).
- **For**: what the QR code opens: *Phone: alignment (walk the stage)*, *Phone / tablet: follow spot* or *Another computer as operator station*.
- **Connected**: every phone and station that's connected.

Everyone can work on the same spots; the last change wins, and every screen shows who is driving which spot (e.g. "Singer ← Station-2").

NO WI-FI AT THE VENUE?

Turn on Windows **Mobile hotspot** on the main station, join it with the phones, then pick the hotspot network in the Remote access window (usually 192.168.137.1).


Follow spot from a phone or tablet

In Remote access pick *Phone / tablet: follow spot* and scan the QR code, or open `http://<address>:8080/follow`. This page is separate from the alignment page.

- Tap a spot at the top, then drag on the stage plan.
- **Trackpad** (default): drag anywhere; Slow / Normal / Fast sets the speed and two fingers make it 4× finer. **Touch = position**: the spot goes where your finger is.
- **ON/OFF** uses the master fade, **FULL** fades to full, plus a level slider, beam size and aim height.
- Options: turn the plan round (audience at the top), the name shown on the main station, and ALL SPOTS OUT.
- Phone browser menu → **Add to Home screen** gives a full-screen app icon.

Operator stations

A second (third...) PC runs FollowYou too and drives spots with its own mouse, joystick and MIDI, while the main station keeps doing all the DMX output.

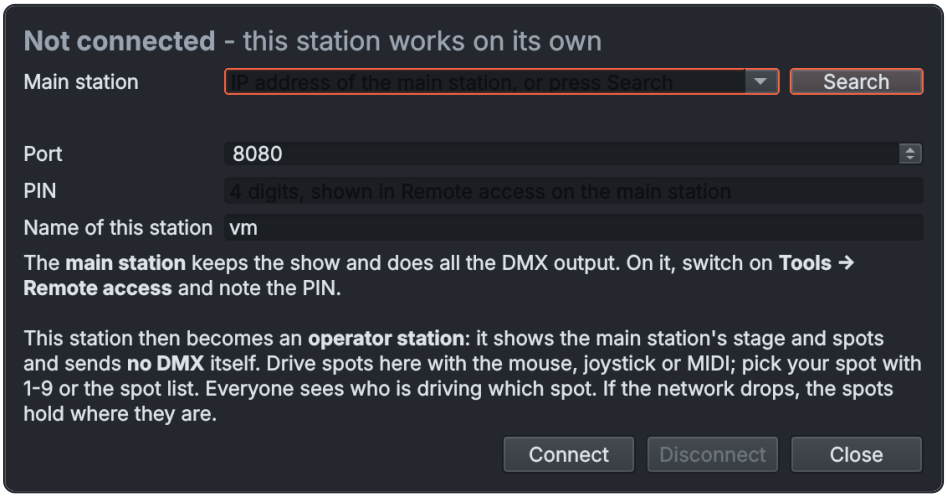

1. Main station: **Tools → Remote access**, tick it on.
2. Operator station: **Tools → Connect to a main station**, press **Search** (or type the main station's IP), enter the PIN and a **Name of this station**, then **Connect**.
3. The operator station gets the main station's stage, spots and alignment. Pick your spot (**1**–**9**, the spot list or the spot strip) and follow. FOLLOW ON/OFF, **Space**, ALL SPOTS OUT and FREEZE all work from here too.

On an operator station

- It sends **no DMX**: its outputs are switched off while connected.
- Setting up (patch, alignment, stage, outputs, adding spots) happens on the main station, and so does editing executors. The show is saved there too.
- **"Active spot" means the operator's own spot**: "Spot ON" pressed on an operator station that's on the Singer turns the Singer on. Buttons light up when they're live on the main station. An APC mini on the operator station presses (and lights) its executors too.
- Spot faders (intensity, beam size, aim height, zoom) work on the operator's own spot straight away; the others (e.g. grand master) are moved on the main station.

- **Multi-spot** works too if the main station allows it (**Operators ▾ → Operators may control several spots at once**). Each station has its own group.
- If the network drops, a **red bar** says so and it reconnects by itself. On the main station the spots **hold where they are**, and the Safety panel shows the station as LOST.
- **Disconnect** (same window) returns the station to working on its own, with no show loaded and no DMX output.
- Operator stations don't need a licence of their own.

> **NETWORK**
> Both stations must be on the same network, by cable or Wi-Fi. A cable or a small switch is the most reliable for shows.

Executors for operator stations

On the main station, **Operators ▾** in the executor panel chooses what operator stations get:

- **Operators use the main executors**: they get the main executors. Each executor has two options (right-click → *Operator stations*, or in its editor):
  - **Show on operator stations**: they see it, and see it light up.
  - **Operators can press it**: off = they see it, marked *main*, but only the main station can run it.

  On the main station, buttons operators can press are marked **OP**, view-only ones **OP view**. Both are on for new executors.
- **One executor bank for all operators**: every operator station gets the bank *All operators*.
- **A separate bank for each operator**: an operator station gets the bank with its name (the name it connects with), or *All operators* if it has none.

Building banks

- **Operators ▾ → Show / edit** picks which bank the executor grid shows (it says *Editing bank: …* above the buttons). Make executors there as usual. Pressing them on the main station runs them with the main station's active spot, so you can try them.
- **New bank for an operator…**: pick a connected operator station or type its name; it can start as a copy of *All operators*.
- **Copy / Paste**: right-click an executor → *Copy*, then right-click a slot in any bank → *Paste*. **Copy to bank** puts a copy straight into another bank.
- **Copy '…' to** copies a whole bank to another operator, or to every operator bank. From the main bank it copies the executors marked *Show on operator stations*.
- **Rename** / **Delete** a bank in the same menu.

Faders work the same way. With *Operators use the main executors*, each fader has **Show on operator stations** and **Operators can move it**; spot faders can be moved by operators, the others only shown, unless you change it. In an operator bank the six faders are that bank's own; a new bank starts with the operator's spot intensity, beam size and aim height.

Banks are saved in the show. Each operator station has its **own toggles and flashes**, even in a shared bank: one operator's press never turns another operator's toggle off.

Windows Firewall

Phones and operator stations have to get through the main station's firewall. In **Tools → Remote access** (or **Tools → Windows Firewall**):

- **Open firewall for FollowYou** asks Windows for administrator approval, then allows FollowYou's remote-access port (TCP) and its *Search* (UDP). Only **devices on the local network** are let in, on every network type (venue networks are often “Public”). It also lets in the picture from a GoPro on USB (UDP 8554, local only).
- If someone once pressed *Cancel* on Windows' “allow this app?” prompt, Windows made a rule that blocks it. That rule beats everything else, so it is switched off too (and remembered).
- **Put firewall back to normal** removes FollowYou's rules and switches those old block rules on again.
- The window shows whether the firewall is open, and warns if it was opened for a different port.

Operator stations don't need this: they only connect out.


15

Console looks, themes and the presentation screen


Make FollowYou look like part of the desk next to it, and give a client or the audience a clean view of what the spots are doing.

Console looks


View → Console look dresses FollowYou like the lighting desk next to it. A console look changes the panels, buttons, tabs, the stage plan, the corners and the font, and each look draws its own **executor buttons and faders** the way that desk does.

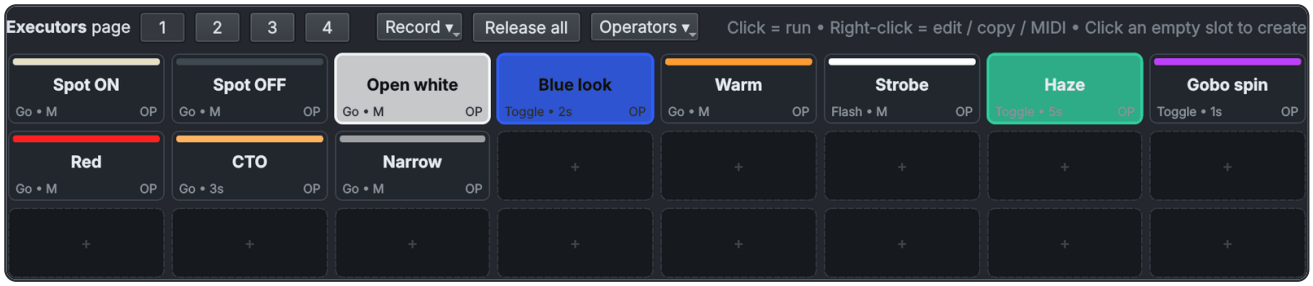


FollowYou (standard)

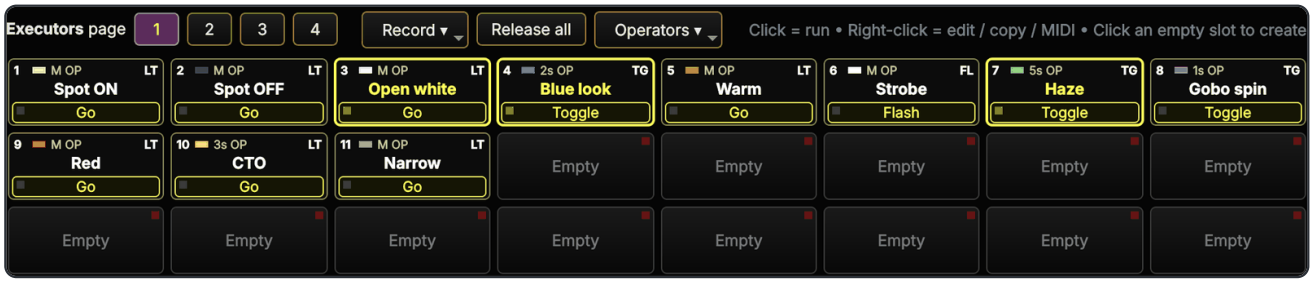


grandMA2 style: black tiles with a thin outline, number and type on top, the function in yellow under a small LED (green = on); empty = "Empty" with a red mark. Amber-outlined buttons, purple when on, deep-blue title bars.

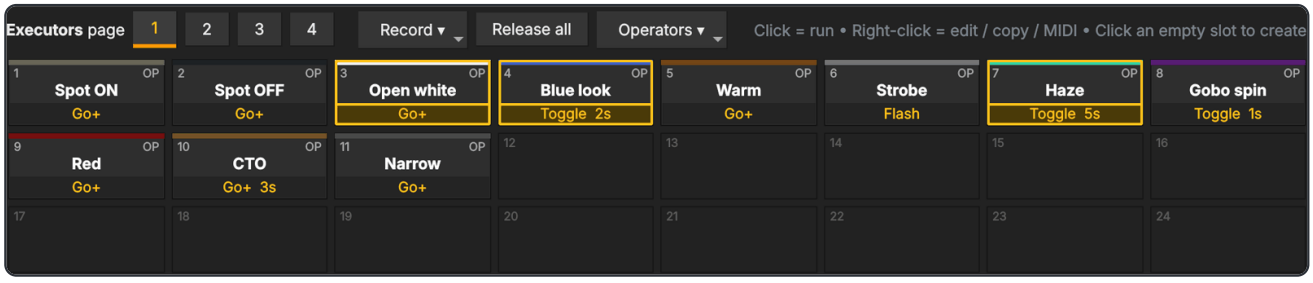

grandMA3 style: flat dark tiles with a coloured band on top (bright when on), "Go+" / "Toggle" / "Flash" in yellow; on = yellow frame. Selected = yellow text with an orange underline.

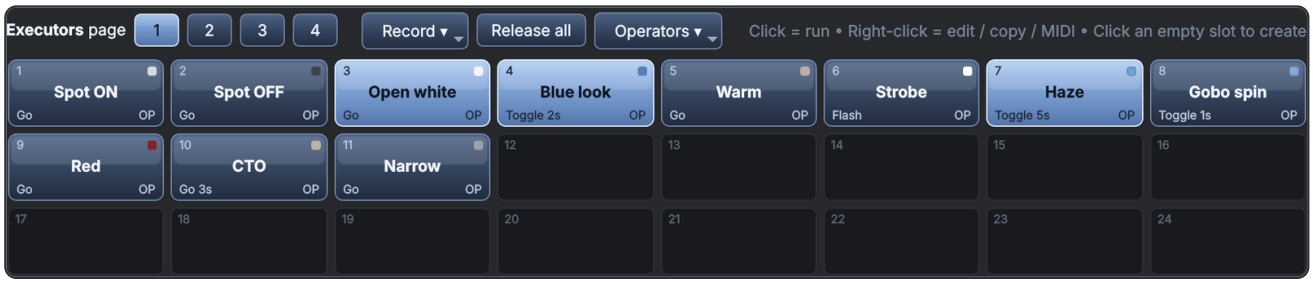


Avolites Titan style: glossy navy touch buttons with rounded corners, light blue when on. Grey title bars.

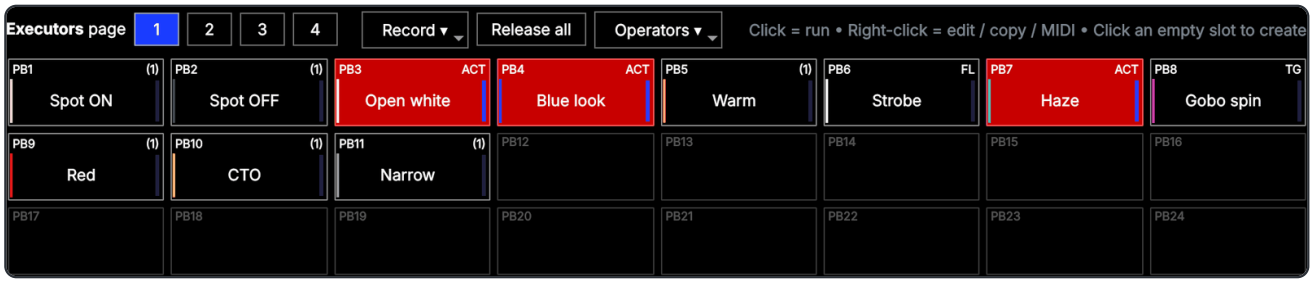

ChamSys MagicQ style: square black playback boxes “PB1”, red with “ACT” when on, a level bar on the right. Blue for the current item, blue title bars.

The looks copy colours, shapes and layout only: no makers' logos, icons or artwork. Each console look brings its own accent colour (*Console look's colour* at the top of **View → Theme**); pick any other accent on top if you like.

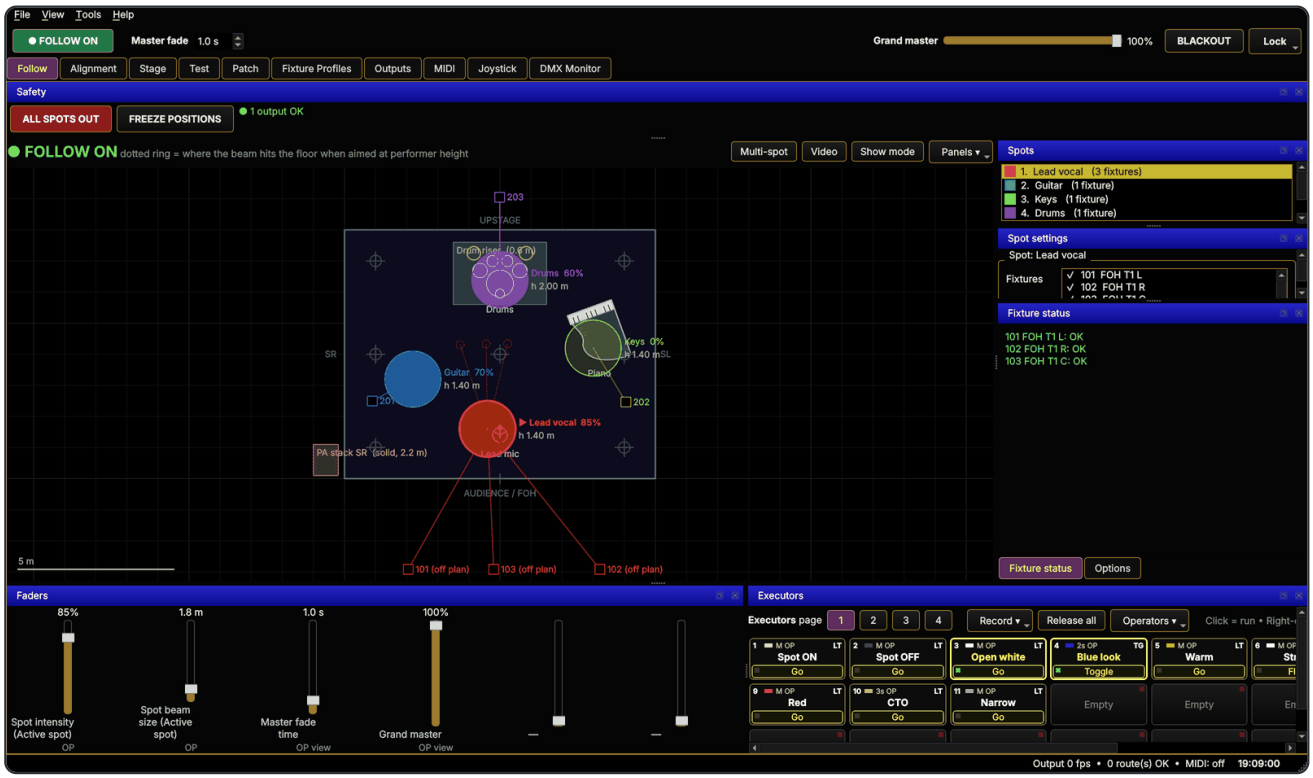

The whole window in grandMA2 style.


Theme (accent colour)

View → Theme (accent colour) changes the accent colour: selected rows, slider fills, the selected item on the plan, the joystick pad and the phone pages. Pick *Sceneproff red* (standard), *Amber* (the classic

FollowYou look), orange, blue, teal, purple, pink, white, or **Custom colour...** for any colour. It's remembered per computer and changes straight away (phones on their next page load). Status colours never change: green, amber and red always mean the same.

Presentation screen

View → Presentation screen (F9) opens a clean full-screen view on the second screen or projector: a **3D view of the rig**, the stage plan and/or the camera picture with the spot ghosts. The header shows FOLLOW, every spot's level, its auto-track state and who is driving it; the status line shows fixtures aligned, DMX output, desk input, camera, connected phones and operator stations, and the time. Nothing on it changes the show, so it can face a client or an audience.

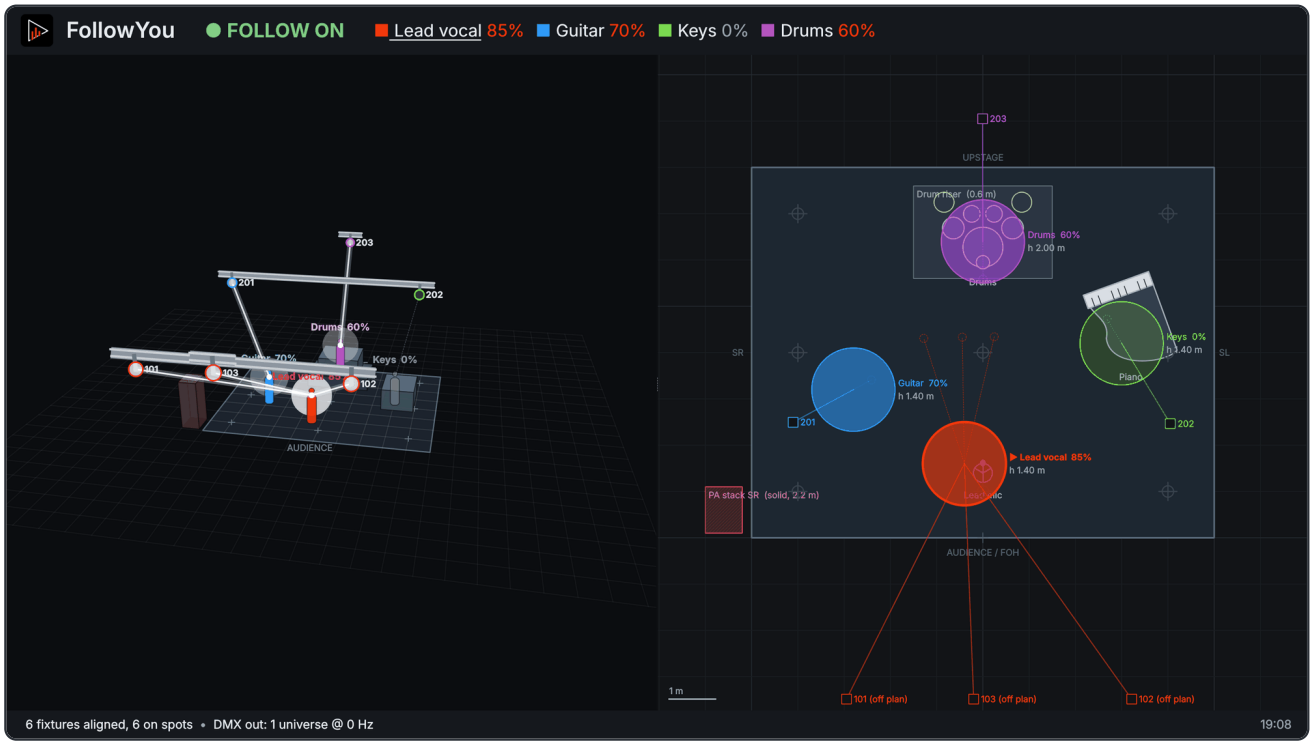

The presentation screen in 3D + plan view (6).

KEY	VIEW
1	Plan
2	Camera
3	Plan + camera
4	3D
5	3D + camera
6	3D + plan
F	Full screen on/off
O	Slow side-to-side sway of the 3D view on/off
Esc or F9	Close

Without a camera running, the camera is simply left out. With only one screen it opens as a normal window. The camera picture uses the same zoom as the Video panel.

The 3D view


- Every aligned fixture where the alignment worked out it hangs, on a truss. Fixtures at about the same height and depth share one truss bar automatically.
- Each beam as a line in the fixture's colour (from its CMY or RGB) to where it hits: the performer (a glow on them), or the floor or a riser (a pool the size of the beam). A fixture at 0 % shows a faint dotted line.
- The performers as figures in their spot's colour, with a trail of the last few seconds; risers and solid objects as blocks, and the marks.
- Drag with the mouse to turn it, wheel to go closer, double-click for the front view again.

16

Lock and show files

Lock the desk during a break, and keep each venue's setup in its own show file.

Lock

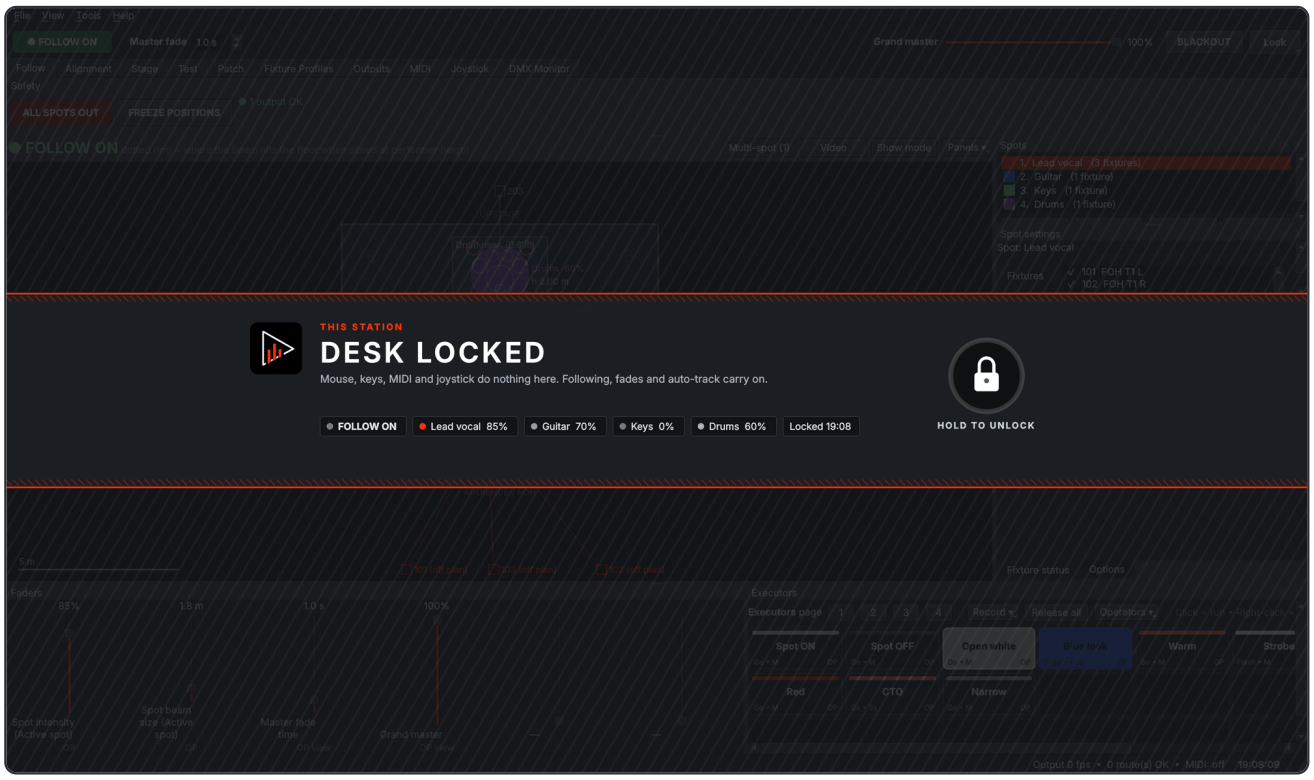

The lock screen: a band across the window with the show status and the hold-to-unlock ring.

Lock (top bar, or Ctrl+L) stops anything changing by accident, e.g. during a break or with people around the desk.

- **Lock this station**: mouse clicks, keys, the wheel, MIDI and the joystick do nothing on this station. Following, fades and auto-track carry on. FollowYou can't be closed while it's locked.
- **Lock all** (main station): this station, every operator station and every phone are locked. Only the main station can unlock it.
- While locked, the band shows what the show is doing: FOLLOW, each spot's level and when it was locked.
- **Unlock**: without a lock password, hold the ring until it fills. With a password, type it and press Enter.

- **Lock ▾ → Lock password…** sets, changes or removes the password. It's saved on this station (as a hash, not the password itself), not in the show, so each station can have its own. Leave it empty to unlock by holding.
- A controller with lights (APC mini): the pads slowly fade red up and down while locked, and a green wave runs over them when it's unlocked.
- The lock screen follows the colours of your console look.

> **EMERGENCIES**
> ALL SPOTS OUT is locked too. Unlock first in an emergency, or use the desk.

Show files

File → Save show (Ctrl+S) writes a `.fyshow` file containing everything: patch, outputs, stage, alignment, washes, solid objects, spots, executors, faders, banks, MIDI map, camera calibration and a copy of every profile used.

- Show files have their own icon: the FollowYou logo with blue bars. **Double-click a show file** to open it. If FollowYou is already running, that window opens it (it asks to save first), so there is never a second FollowYou sending DMX.
- The alignment is stored in the show, so the next night at the same venue you just open it. A different venue, or a rig that has been moved, needs a fresh alignment.
- `.nfshow` files from the Pre-Dev versions open fine. Saving one writes a new `.fyshow` next to it and leaves the old file untouched.
- Moving a show to another PC: see Profiles and show files.

What is saved where

IN THE SHOW FILE	ON THIS COMPUTER
Patch, outputs, desk input, stage, marks, risers, icons, stage layouts, alignment, washes, solid objects, spots, executors, faders, operator banks, MIDI and joystick-button map, master fade time, smoothing, camera calibration and framing, a copy of the profiles	Panel layout of the Follow page, console look and theme, joystick calibration and axis mapping, lock password, remote-access port and PIN, update settings, the profile library, the licence

> **ONE SHOW PER VENUE**
> Use *Save show as…* to keep one show file per venue (“Olavshallen 2026.fyshow”). Keep a copy on a USB stick or in the cloud: a show file is all you need to rebuild the setup on another PC.

17

Recommended hardware

FollowYou runs with a mouse alone, but the right hardware makes following easier and faster. Sceneproff recommends, and FollowYou has ready-made setups for:

WHAT	RECOMMENDED	ALSO READY-MADE
MIDI controller	**Akai APC mini mk2**: RGB pads, 9 faders	Akai APC mini (mk1), Novation Launchpad Mini MK3 / Launchpad X, Korg nanoKONTROL2
Joystick	**Thrustmaster T.16000M FCS**: precise, twist for beam size, throttle for intensity	Logitech Extreme 3D Pro, Thrustmaster T.Flight HOTAS, Xbox controller, PlayStation controller
DMX	An Art-Net / sACN node, or an ENTTEC DMX USB Pro	ENTTEC Open DMX / FTDI cables
Camera (auto-track)	Elgato Facecam	Other webcams, HDMI cameras through a USB capture card, GoPro HERO9+ over USB, virtual cameras, network streams

The show PC

- Windows 10 or 11, 64-bit. Any recent laptop runs the follow itself easily.
- For **auto-track**, a reasonably recent CPU: the body model takes about 20–40 ms per picture on a normal computer.
- A wired network port (or a USB network adapter) for the DMX node. Keep the lighting network off the venue's Wi-Fi where you can.
- Turn off sleep, screen savers and Windows Update restarts for show days.

Custom console case

Sceneproff builds custom FollowYou consoles: a road case with the controller, joystick and a mount for the laptop or screen, cut to fit. Contact Sceneproff for a quote.

18

Troubleshooting

The usual problems, and what fixes them.

PROBLEM	WHAT TO CHECK
Nothing comes out of the fixtures	Is **FOLLOW ON**, the spot above 0 and BLACKOUT off? Is the Grand master up? Does the Safety panel show the output OK? Check the **DMX Monitor**, then the patch addresses against the fixtures' menus.
Red bar under the top bar	An output has a problem: USB interface unplugged, network cable out, wrong network card in **Send from network card**.
USB interface: “device is in use”	Close QLC+ or other lighting software. Pick the **FTDI direct** entry for Enttec interfaces. Check you picked Pro vs Open DMX correctly.
Light lands behind the performer on an empty stage	That's correct: the spot aims at chest height. Tick **Floor test** to check the alignment on the floor.
The follow is off in one area of the stage	Check the fixture's Result: re-store the mark with the biggest error, or store more marks there. Check the tape is where the Stage tab says.
Result says **Suspicious**	One mark was stored aimed at the wrong spot. Re-store or clear the mark with the biggest error.
A spot won't go off, or keeps jumping back	Look at the line under **Intensity** in Spot settings: it names what last changed it (a joystick axis, a MIDI fader, an executor, a phone).
The spot creeps by itself with a joystick	Let go and press **Re-centre now**, raise the **Deadzone**, or map *Joystick: re-centre* to a button.
Beam size does nothing	The profile has no zoom angles. Add them, or use **Measure zoom angles…**. If the size is out of the fixture's reach, the status says so.
A phone or operator station can't connect	Same network? Right PIN and port? Press **Open firewall for FollowYou** on the main station. On a venue network that blocks devices from seeing each other, use the Windows Mobile hotspot.
MIDI controller doesn't respond	Close other software using it, press **Refresh**, then **Connect**. Check **Incoming MIDI**. In DEMO mode MIDI is ignored.
Controller lights don't work	Check **Send lights to** and **Controller**; press **Test lights**. nanoKONTROL2: set LED Mode to External.

PROBLEM	WHAT TO CHECK
Auto-track holds or searches a lot	Raise the camera, zoom in on the stage, calibrate again. Haze, strobes, look-alike costumes and small performers in the picture make it hold. Double-click the performer to help it.
Lights dip every few minutes, or go dark after 30 minutes	FollowYou is in DEMO mode. Plug in the USB key (before starting) or load the licence file.
A show opens with different fixture behaviour	The show was saved with other profile versions. Choose **Use the show's versions** when asked.
Something else	Look in `logs\FollowYou.log` and send it to Sceneproff support.

APPENDIX A

Show-day checklist

Print this page and tick it off at every venue.

Before you leave

- [ ] USB licence key with the show PC
- [ ] Show file for this venue (or last time's), plus a copy on a stick
- [ ] FollowYou updated on a prep day, not today
- [ ] Controller, joystick, cables, DMX node or USB interface
- [ ] Camera, mount and active USB extension (for auto-track)
- [ ] Tape (two colours), tape measure

Setup

- [ ] USB key in **before** starting FollowYou
- [ ] Outputs green in the Safety panel
- [ ] Stage size entered, marks generated and taped
- [ ] Every follow fixture aligned, Result under 0.5°
- [ ] Floor test: beams land on the dots everywhere
- [ ] Floor test **off** again
- [ ] Spots named, fixtures ticked, colours set
- [ ] Camera calibrated (if used), under 3 px

Line check

- [ ] MIDI controller connected, Test lights OK
- [ ] Joystick connected and calibrated, no creep
- [ ] Phones / operator stations connected, PIN known
- [ ] Executors and faders do what you expect
- [ ] ALL SPOTS OUT and FREEZE tested
- [ ] Show saved (Ctrl+S)

Show

- [ ] Sleep and screen saver off on the show PC
- [ ] Show mode (F10) and panels locked
- [ ] Lock (Ctrl+L) during breaks
- [ ] Hand near the mouse when auto-tracking
- [ ] Save the show at the end of the night

APPENDIX B

Keys and mouse

Anywhere

Ctrl + N	New show
Ctrl + O	Open show
Ctrl + S	Save show
Ctrl + L	Lock this station
F9	Presentation screen
F10	Show mode
F11	Full screen

Follow tab (stage plan)

Click / drag	Move the active spot
Shift -drag	Move finely
Arrows	Nudge
Wheel	Beam size (zoom level in Manual)
Ctrl +wheel	Aim height
1 – 9	Pick a spot
Ctrl + 1 – 9	Add / remove a spot (multi-spot)
Space	Active spot on/off (master fade)
M	Multi-spot on/off
Right-click	Pick the nearest spot
Ctrl +right-click	Add / remove a spot (multi-spot)
Double-click an icon	Send the active spot there

Alignment

Drag the pad	Aim the fixture
Shift -drag	10× finer
Arrows	Nudge
Enter	Store at this mark
G	Alignment gobo on/off

Video panel

Drag on a performer	Move the active spot there
Ctrl -drag	Left/right only (lock depth)
Double-click a performer	Go there and auto-track
T	Auto-track on/off for the active spot
Esc	Stop all auto-tracking
Right-click a ghost	Make it the active spot
1 – 9	Pick a spot
Space	Active spot on/off
Wheel, + / –	Zoom the picture
Alt +drag, middle-drag	Move the picture
Home or 0	Fit the whole picture
◀ ▶	Skip a mark while calibrating

Presentation screen

1–6	Plan, camera, plan+camera, 3D, 3D+camera, 3D+plan
F	Full screen on/off
O	3D sway on/off
Drag / wheel / double-click	Turn / zoom / front view (3D)
Esc, F9	Close

Phone

Two fingers	Finer (10× aligning, 4× following)
Hold an arrow	Repeat the nudge

APPENDIX C

Files and folders

FILE	WHAT IT IS
`.fyshow`	A show file (blue bars icon). Double-click to open.
`.nfshow`	A show file from the Pre-Dev versions. Opens fine; saving writes a new `.fyshow`.
`.fylicence`	A licence file (green key icon). Double-click to install.
`.json` in `profiles\`	Fixture profiles.

The installed FollowYou folder:

```
FollowYou.exe      the program
profiles\          your fixture profile library (kept on updates)
profiles\backup\   old profile versions replaced by a show's versions
assets\            icons
models\            body-pose model for auto-track (MoveNet, Apache 2.0)
ui\remote\         the phone pages
setup\firewall.ps1 used by Tools → Windows Firewall
logs\              FollowYou.log (errors)
```

APPENDIX D

Glossary

Active spot
The spot you are driving right now. Executors set to *Active spot* act on it. On an operator station, the operator's own spot.

Aim height
How high above the floor a spot aims: 1.4 m is about chest height.

Alignment
Aiming each fixture at taped marks so FollowYou can work out where it hangs. Done once per venue, saved in the show.

Auto-track
The camera follows a performer and moves their spot. It never changes intensity.

Bank
A set of executors and faders for operator stations.

Beam size
The beam's width in metres at the performer, kept the same anywhere on stage. Needs the profile's zoom angles.

Executor
A button that sets parameters: Go, Toggle or Flash. 4 pages of 24.

FOLLOW
The main switch: while on, fixtures on a spot are driven by FollowYou.

Follow wash
A static fixture that comes up wherever a spot is, by how close the spot is to its area.

Ghost
A spot drawn on the camera picture: a ring on the floor, a person-height line and a dot at aim height.

Main station
The PC that does the DMX output and keeps the show. Phones and operator stations connect to it.

Mark
A taped cross on the stage floor at a known position, used for alignment and camera calibration.

Multi-spot
Several spots driven together, led by the active spot.

Operator station
Another PC running FollowYou, connected to the main station. It drives spots but sends no DMX.

Profile
A description of a fixture type: channels, ranges, pan/tilt range, zoom angles.

Riser
Something performers stand on. A spot on it aims higher by the riser's height.

Solid object
Something that blocks light. A fixture whose view is blocked dims out.

Spot
One performer, with the fixtures that follow them.

Stage layout
A stored set of risers, solid objects and icons, for scenery changes.

APPENDIX E

Version history

2.7.1	New lock screen: a locked band across the screen with the show status (FOLLOW, spot levels, when it was locked) and a hold-to-unlock ring.
2.7	Licence files (`.fylicence`) have their own icon and install with a double-click.
2.6	Console looks draw executor buttons, faders, buttons, tabs and title bars like each desk.
2.5	Console looks: grandMA2, grandMA3, Avolites Titan and ChamSys MagicQ style.
2.4.1	A clock in the status bar.
2.4	One compiled program (no Python needed), 19 fixture profiles, ready-made layouts for more MIDI controllers and joysticks.
2.3	A real DEMO mode. 2.3.1: updates signed with their own key.
2.2	Updates, with the blue bar (never during a show).
2.1	Licences: USB key or licence file. 2.1.1: licence types.
2.0	Multi-spot, faders on operator stations, stage icons and layouts, desk lock, show files with their own icon. 2.0.1: lock password, operator stations. 2.0.2: calmer controller lights.
1.8	Executors on operator stations, with banks.
1.7	Lighting desk input, presentation screen with 3D view, auto-track that searches and locks on again.
1.6	Auto-track with body points and clothes colour. 1.6.1–1.6.3: alignment gobo, Manual zoom level, profile versions in show files, Ayrton Diablo-S.
1.5	Lamp control, zoom warnings and Measure zoom angles.
1.4	Sceneproff logo and name, colour themes, spot colours.



FollowYou

FollowYou 2.7.1 · User manual · November 2026

© Sceneproff. FollowYou is made by Sceneproff, Orkanger, Norway.

grandMA2, grandMA3, Avolites Titan, ChamSys MagicQ, Akai, Novation, Korg, Thrustmaster, Logitech, Elgato, GoPro, ENTTEC and other names are trademarks of their owners. FollowYou is not affiliated with them.