

☒ CAMPUS 1
ABERDEEN INNOVATION PARK
BALGOWNIE ROAD
BRIDGE OF DON
ABERDEEN
AB22 8GT

Tel: (01224) 226500

☐ AIRPORT INDUSTRIAL ESTATE
WICK
CAITHNESS
KW1 4QS

Tel: (01955) 603606

TITLE:

**Quick start document
for
Multi Product GUI (0350-5100)**

The copyright in this work is vested in Imenco UK Limited and the document is issued in confidence for the purpose only for which it is supplied. It must not be reproduced in whole or in part or used for tendering or manufacturing purposes except under an agreement or with the consent of Imenco UK Limited, and then only on the condition that this notice is included in any such reproduction.

IMENCO UK		DATE			
DRAWN:	Niel Stofberg	07/13	C	16464	12/18
CHECKED:	Ross Taggart	07/13	B	15802	05/17
APPROVED:	Ian Shepherd	07/13	A	---	07/13
ORIGIN DOC No:			ISS	MOD	DATE
DRAWING No: 0350-5021			SHEET 1 of 15		

TABLE OF CONTENTS

1.	INTRODUCTION	4
1.1	SCOPE	4
1.2	CURRENT VERSION	4
2.	GETTING STARTED	5
2.1	INSTALLING THE GUI.....	5
2.2	BASIC GUI LAYOUT	7
2.3	CAMERA SETUP.....	8
2.4	NETWORK SETUP.....	10
2.5	JOYSTICK SETUP.....	11
2.6	GENERAL OPERATION.....	12
2.6.1	Pan and Tilt.....	12
2.6.2	GO TO	12
2.6.3	Preset.....	12
2.6.4	Zoom	13
2.6.5	Focus	13
2.6.6	Power	14
2.6.7	Long Line Drive.....	14
2.6.8	Video Mode	14
2.6.9	White Balance.....	14
2.6.10	Exposure compensation	14
2.6.11	Backlight compensation	15
2.6.12	Exposure mode.....	15
2.6.13	Shutter speed, Iris and Gain.....	15

C	16464	12/18
Iss	Mod	Date
Drawing No. 0350-5021		Sheet 2

RECORD OF REVISION

DATE	REV NO.	CRN	DETAILS	AUTHORISED
07/13	A	---	New document first issue	Ian Shepherd
05/17	B	15802	Update as per mark-up	R. Begg
12/18	C	16464	Change to Imenco GUI	Ian Shepherd

Authorised amendments shall be notified by or under cover of this page of the Document and shall be issued as complete pages, which shall replace the equivalent unamended pages. The amended pages shall carry the Document reference and Amendment number.

Amendments are to be embodied by the authorised holders of the Document and superseded pages shall be withdrawn and destroyed. The Amendment Record above shall be completed.

A Change Request Note (CRN) shall be used to request and document any change.

C	16464	12/18
Iss	Mod	Date
Drawing No. 0350-5021		Sheet 3

1. INTRODUCTION

1.1 Scope

This document provides some instruction for installing the GUI and setting up a camera that can be operated controlled using the GUI

1.2 Current Version


The Current version of the GUI at the writing of this document is Version 2.0.x.x

C	16464	12/18
Iss	Mod	Date
Drawing No. 0350-5021		Sheet 4


2. GETTING STARTED

2.1 Installing the GUI

1. Locate the installation file named MultiProductGUISetup.exe.
Double click the file to run it.
2. Click Next to proceed with installation

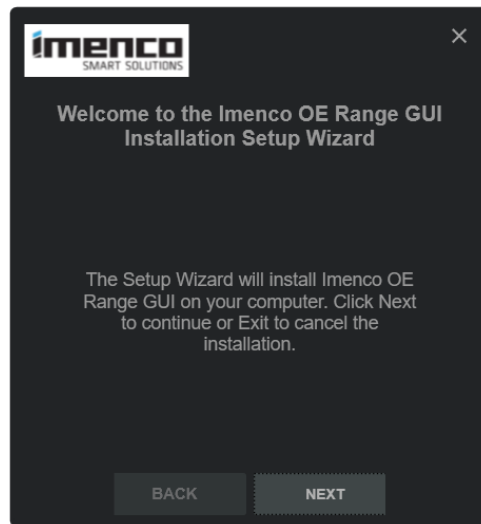


3. Read the license agreement and click Accept.

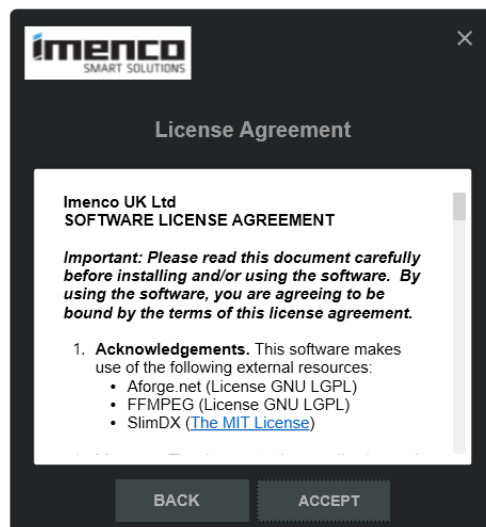


C	16464	12/18
Iss	Mod	Date
Drawing No.		Sheet
0350-5021		5

4. Select the drivers for the Imenco devices you wish to control. Then click Install.

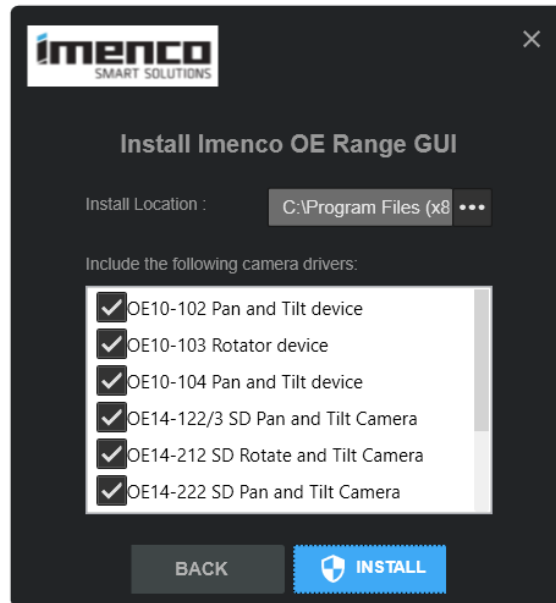

5. After the installation completed, click Finish to close the window.

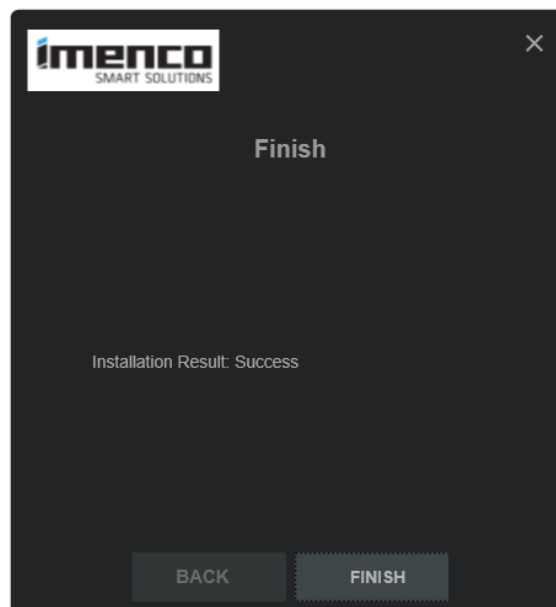


C	16464	12/18
Iss	Mod	Date
Drawing No.		Sheet
0350-5021		6

6. The setup procedure will create an icon labelled Multi Product GUI on the desktop and one on the Start menu.




2.2 Basic GUI Layout

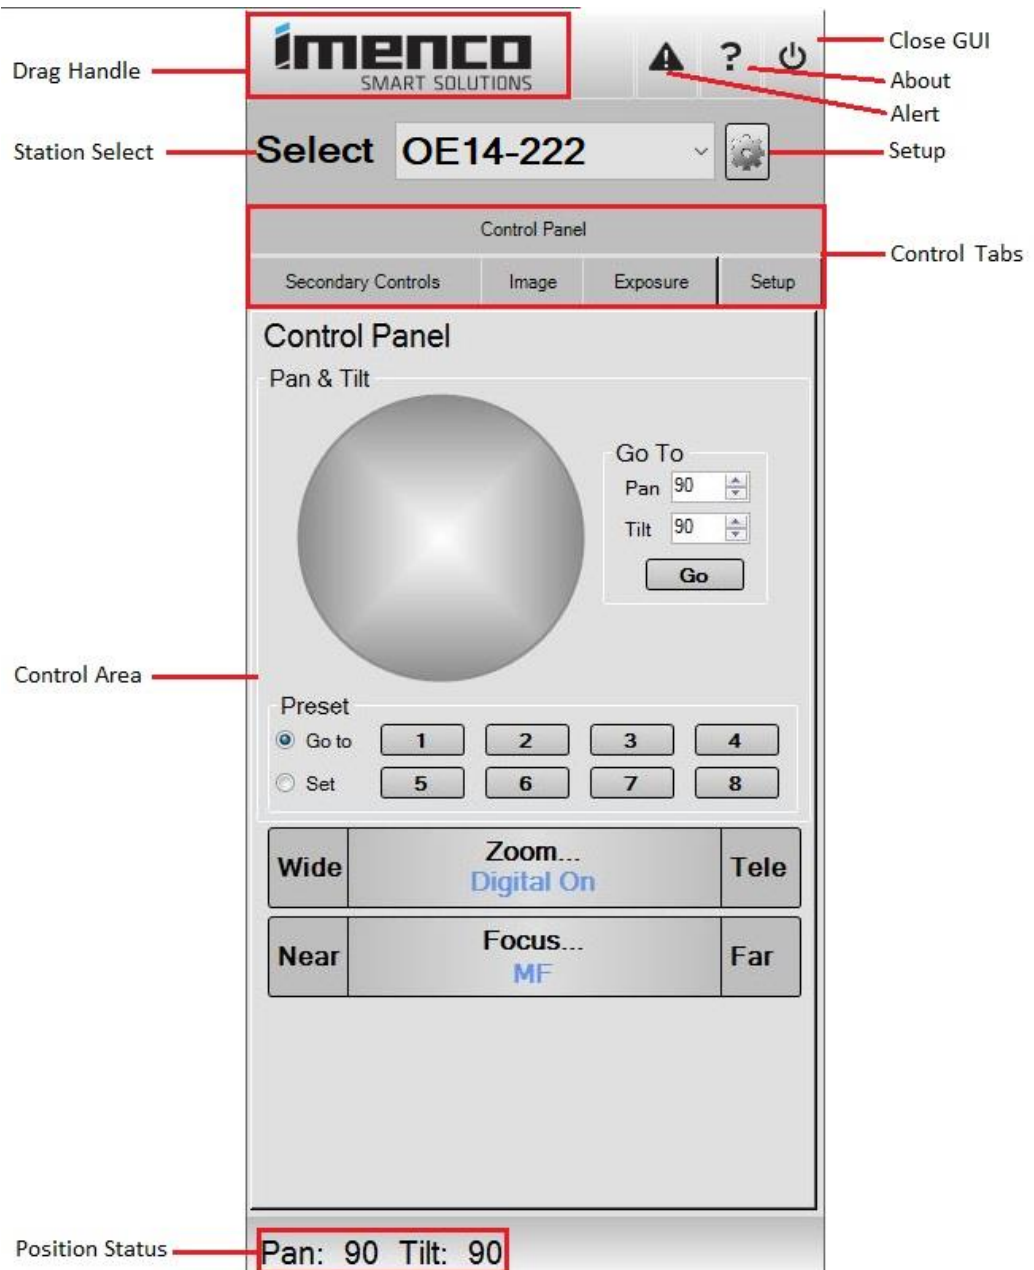

C	16464	12/18
Iss	Mod	Date
Drawing No.		Sheet
0350-5021		7

2.3 Camera Setup

1. Use either of the icons to open the GUI. The GUI will look as follows:

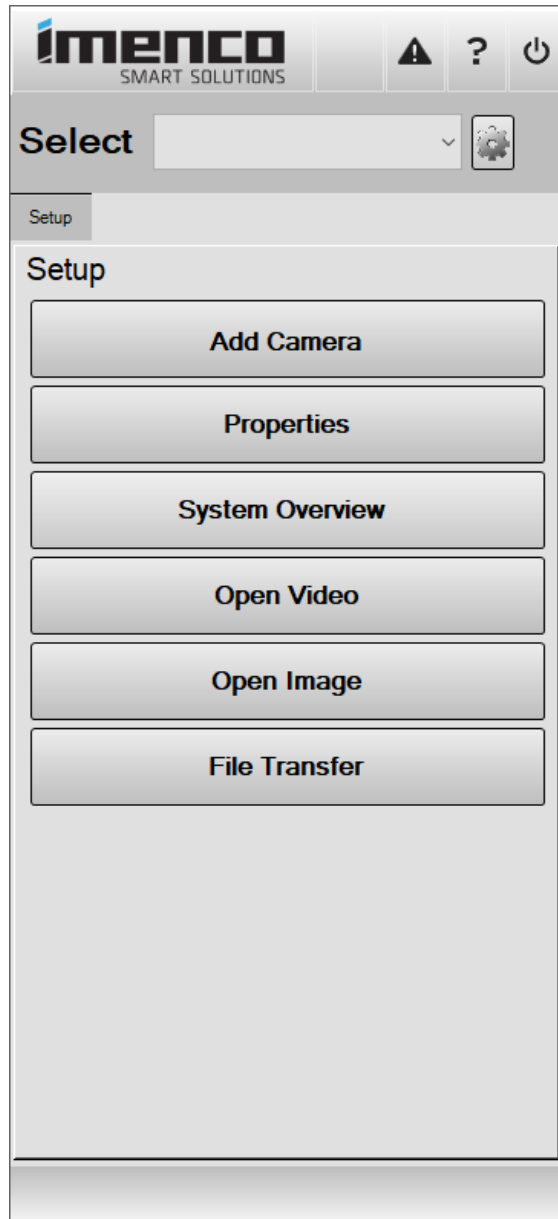

2. Click on Add Camera to open the Camera Station Setup Dialog.
3. Enter a Camera Station Name. This name will be used by the user to identify the specific camera being used.
4. Select the Camera model you want to control.
5. Select the serial port the camera is connected to.
6. Leave all other fields in the default state.

C	16464	12/18
Iss	Mod	Date
Drawing No.		Sheet
0350-5021		8

7. Check that the default ID (Usually 2 for cameras) is the same as that of the camera you want to operate.

Camera Station Setup

Station Name

Camera

Camera Model

Cam serial port ID: 2

Capture device

Pan & Tilt Unit

P&T Device

P&T Serial Port ID: _

Lamp Controller

Lamp Driver

Lamp serial Port ID: _

Invert Pan Movement ☐ Invert Tilt Movement ☐

Low Power Mode ☐

8. Click OK to save the camera setup.

Now, the GUI will display the camera station name in the dropdown box labelled Select. The GUI will also show several menu tabs. (Control Panel, Image, Exposure etc.) Each tab displays a different set of controls that are used to control the camera. To return to the setup page, click the Setup button ([See 2.2](#)).

Notes:

In this example, the selected camera has pan and tilt capabilities so the option to select a Pan and Tilt unit is disabled. If a non-PTZ (or none) camera is selected, the user will have the option to also add a pan and tilt unit.

C	16464	12/18
Iss	Mod	Date
Drawing No.		Sheet
0350-5021		9

2.4 Network Setup

Network setup enables the user to set the ID in the camera setup of the GUI to match that of the camera if that is not already the case. It also allows the user to change the ID of a camera if needed.

1. Open the Camera Station Setup Dialog by clicking the setup button next



to the Select dropdown box.

2. Click Set up network.

Set up network

3. In the first number box, enter the current address of the camera. One can use the Find link to get the ID from the device if it is connected to the system however it will not work if there is more than one device connected on the RS485 bus.
4. If it is required to change the ID of the camera, check Change Network ID.
5. Enter the required camera Id on the second number box.
6. Click Next. This will take you to the summary page or to the setup page of the next device in the station if there is one.

7. Click Finish and close the Camera Station Setup Dialog.


****Note**** ID 255 is a broadcast address that will be accepted by a device regardless of its ID. Do not use address 255 if more than one camera is connected to the RS485 bus as this will send commands to all connected cameras.

C	16464	12/18
Iss	Mod	Date
Drawing No.		Sheet
0350-5021		10

2.5 Joystick setup

If a user wants to use a USB joystick to control the camera one can be enabled as follows:

1. Connect the USB joystick to the computer and install all the required drivers as per the instructions of the supplier.
2. In the GUI go to setup page and click Properties.
3. On the properties box select the Joystick tab.
4. Select the joystick from the first dropdown.
5. Select a function for the Z axis (if applicable).
6. Select the functions for any buttons the joystick may have.
7. Select functions for any sliders/throttles the joystick may have.

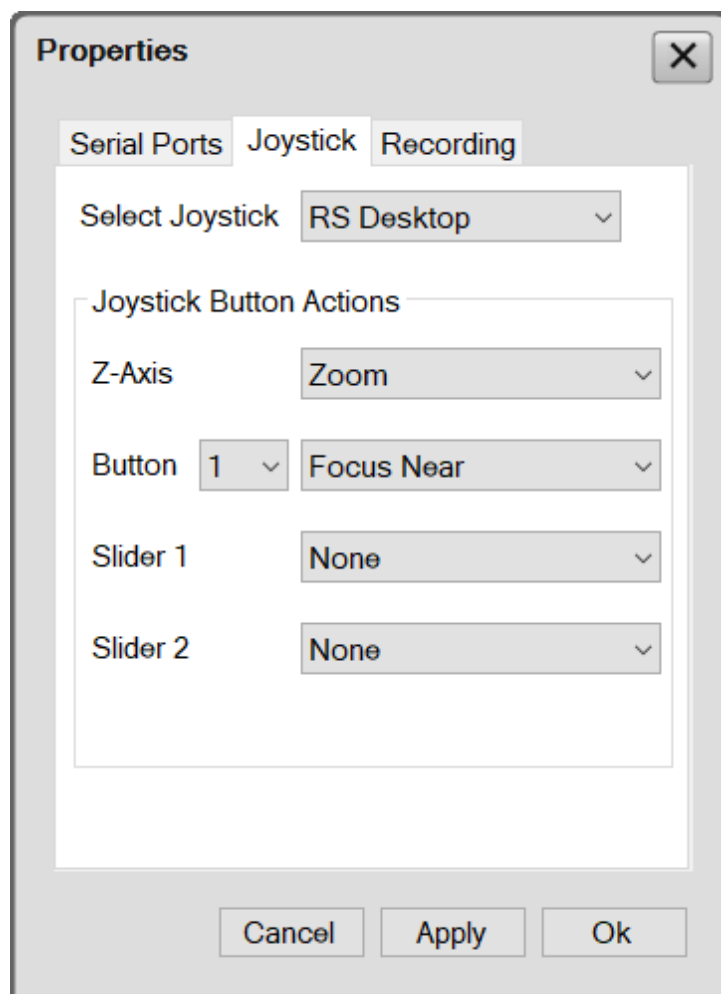

Click OK to confirm the settings.

C	16464	12/18
Iss	Mod	Date
Drawing No.		Sheet
0350-5021		11


2.6 General Operation

Note that only the functions supported by the selected camera are displayed on the GUI. Therefore depending on the selected camera model some of the functions described below may not be visible.

2.6.1 Pan and Tilt

The pan and tilt controls are found on the Control Panel.

To move the camera, click on the pan and tilt control in the direction you would like it to move. Pan and tilt speed increases as the mouse is moved to the outside of the control. The lowest speed is near the centre. Depending on the camera model it may support only single axis movement or two axis movement.

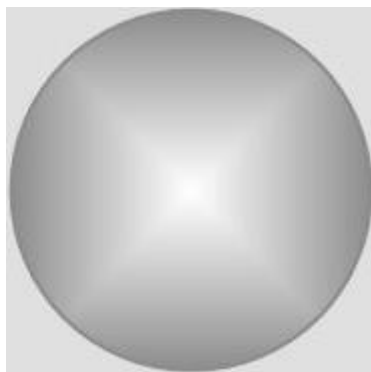

The current position of the camera is displayed in the status bar. Depending on the model of the camera, the position will update continually or when it stops moving.

2.6.2 GO TO

The Go-To controls are found on the Control Panel.

Select the Pan and the Tilt values of the desired position and press GO. This will send the camera to the selected position.



2.6.3 Preset


The Preset controls are found on the Control Panel.

Navigate the camera to a position that will be preset.

C	16464	12/18
Iss	Mod	Date
Drawing No.		Sheet
0350-5021		12

Select Set and then click the preset button that the position should be saved to.


To return the camera to that position select Go to (default selection) and click the preset button the position was saved to.

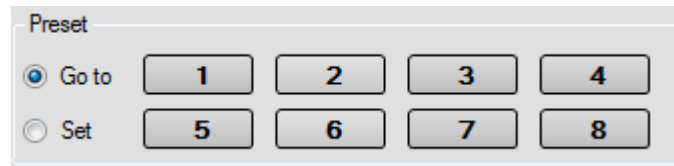

2.6.4 Zoom

The Zoom control is found on the Control Panel.

If the camera supports digital zoom that can be disabled, the zoom control will show the digital zoom On/Off status in blue. Digital zoom can be switched on and off by right clicking on the middle section of the zoom control and checking/un-checking the Digital Zoom Enabled checkbox.

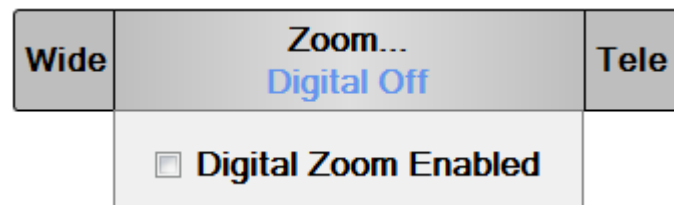

Left click anywhere left of centre on the control to zoom wide and anywhere right of centre to zoom tele.

If supported by the camera, the zoom speed is proportional to where the user clicks the control. Nearer to centre sets lower zoom speed and further to the outside sets higher zoom speed. Clicking in the left (Wide) or right (Tele) boxes sets zoom speed to 100%

2.6.5 Focus

The Focus control is found on the Control Panel.

If the camera supports Auto focus that can be disabled, the focus control will show AF for auto focus or MF for manual focus in blue. Auto focus can be switched on and off by right clicking on the middle section of the focus control and checking/un-checking the Auto Focus On checkbox.



C	16464	12/18
Iss	Mod	Date
Drawing No.		Sheet
0350-5021		13

When Auto Focus is enabled, the focus controls will be disabled.

When Auto Focus is disabled, left click anywhere left of centre on the control to focus near and anywhere right of centre to focus far.

If supported by the camera, the focus speed is proportional to where the user clicks the control. Nearer to centre sets lower focus speed and further to the outside sets higher focus speed. Clicking in the left (Near) or right (Far) boxes sets focus speed to 100%.

2.6.6 Power

The power button is located on the Image tab.

The power button displays the On/Off status of the camera module and toggles the power of the camera module when clicked.

2.6.7 Long Line Drive

The Long Line Drive dropdown is located on the Image tab.

Click the button to drop down the available options.

The control shows the selected setting in blue.

2.6.8 Video Mode

The Video Mode dropdown is located on the Image tab.

Click the button to drop down the available options.

The control shows the selected setting in blue.

2.6.9 White Balance

The Video Mode dropdown is located on the Image tab.

Click the button to drop down the available options.

The control shows the selected setting in blue.

2.6.10 Exposure compensation

The Exposure Compensation control is located on the Exposure tab.

Click the middle section to turn exposure compensation on or off. When turned on, click the + box to increase compensation and – to decrease compensation.

The On/Off status is displayed on the control in blue.

C	16464	12/18
Iss	Mod	Date
Drawing No.		Sheet
0350-5021		14

2.6.11 Backlight compensation

The Backlight Compensation control is located on the Exposure tab.

Click the Backlight compensation button to turn backlight compensation on or off.

The button displays the current On/Off status in blue.

2.6.12 Exposure mode

The Exposure Mode dropdown is located on the Exposure tab.

Click the button to drop down the available options.

The control shows the selected setting in blue.

The selected exposure mode will define which of the Shutter Speed, Iris or Gain controls are enabled.

2.6.13 Shutter speed, Iris and Gain

Click the + box to increase and – to decrease the value on the camera.
Clicking the middle section will reset the value to its default.

C	16464	12/18
Iss	Mod	Date
Drawing No.		Sheet
0350-5021		15