CAVE SURVEY INSTRUMENT

JedEye

QUICK START

From switch-on to your first survey,
one move at a time.



Firmware 2.9 • Ariane's Line

THE DEVICE

MEET YOUR JEDEYE

1 **LASER**
points at the target

2 **SCREEN**
menus and readings

3 **SLIDER**
↑ select • ↓ next

4 **USB-C**
charge • back end



THE CONTROL

ONE SLIDER, TWO MOVES

SELECT
push up,
towards the laser

NEXT
push down,
away from the laser






Bright = highlighted

STEP 1

SWITCH ON

OFF: EXIT › CONFIRM

HOLD

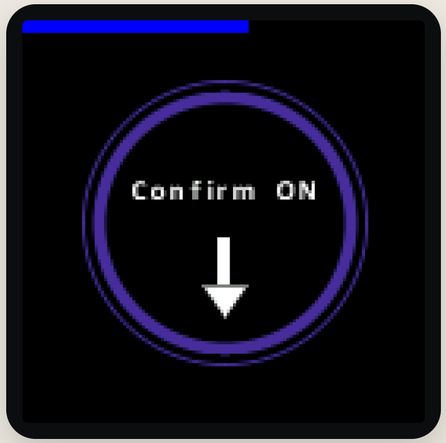


Hold until
“Confirm ON”

WITHIN 4 s



Sensors OK

OK

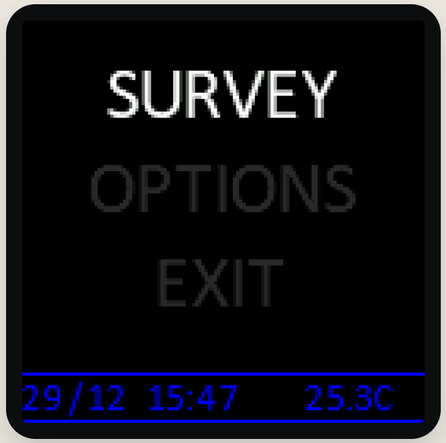

Main menu

STEP 2 • BEFORE THE FIRST TRIP


CALIBRATE THE COMPASS

OPTIONS › SETTINGS › SENSORS › COMPASS › CALIBRATE



TURN

all the way round

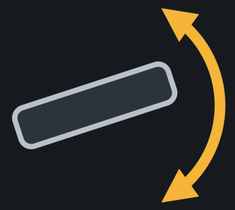

NOD

up and down ±45°



ROLL

side to side ±45°



NO METAL

magnets, phones, cars away

≈ 1 MIN



red: keep going | yellow: save OK | green: best

SAVE CAL.

EXCELLENT • GOOD • FAIR

STEP 3

START A SURVEY

SURVEY › NEW SURVEY

↑ NEW SURVEY



↓ next letter
↑ change it

↑ OK



Pick a direction

IN



surveyed ● → new ○

OUT



new ○ → surveyed ●

STEP 4

TAKE A SHOT



READY



White square:
ready

TARGET



Laser on:
aim at the target

MEASURE



Red:
hold still

SAVED



Shot number +1:
next station

WHILE SURVEYING

THE SURVEY MENU



TARGET

take the next shot



SLEEP

rest between shots




UNDO

drop the last shot



END

close the section



MAP

the survey so far

UNDO and END ask **CONFIRM**

WHILE SURVEYING

READ THE SCREEN

RED
hold still: measuring



RED, FLASHING
rolled over: level it

WHITE
saved, ready for the next



MAGNET
interference: check your gear

BLUE
room scan: too fast


YELLOW
room scan: paused

OPTIONAL

ROOM SCAN


OPTIONS › SETTINGS › SURVEY (Room)

AFTER EACH SHOT

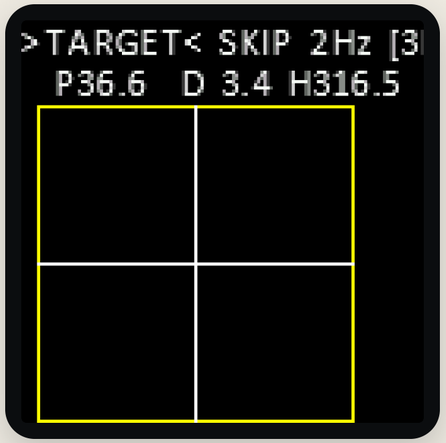


↑ TARGET to scan
or SKIP

SWEEP SLOLWLY

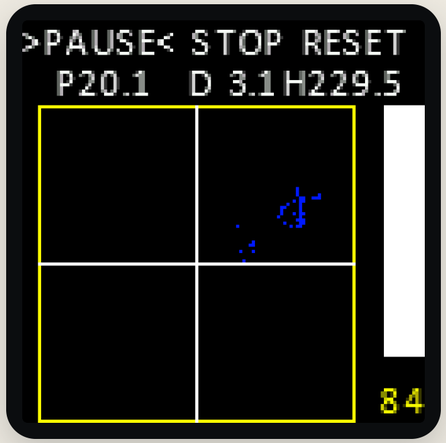


Points land
on the map

TOO FAST?

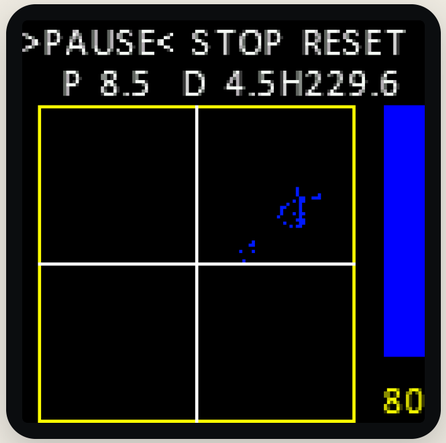

Blue bar:
slow down

STOP

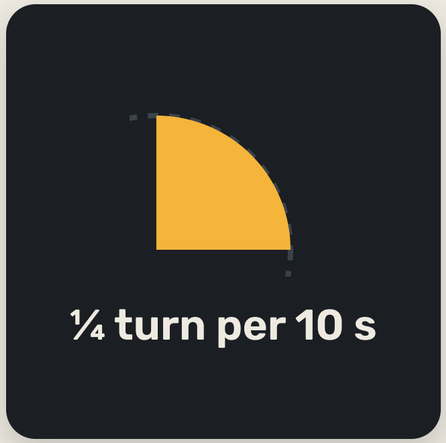

STOP saves
the scan

YOUR DATA

LOOK BACK ON THE DEVICE


OPTIONS › HISTORY

↑ PICK ONE




Your sections

TILT IT

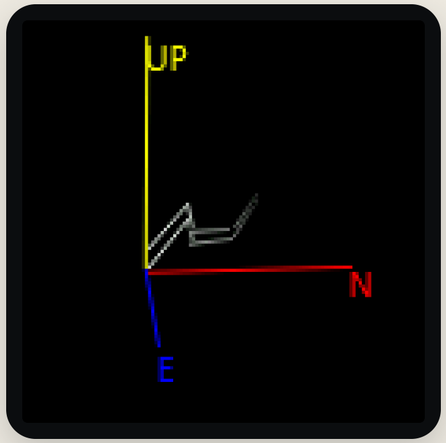

3D: turns with
the device

↑ PLAN

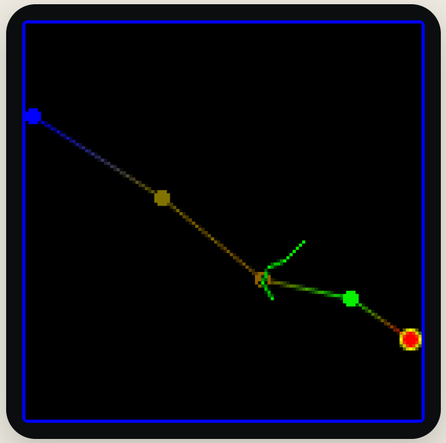

2D plan

↑ STATS



Stats
↑ again: back

YOUR DATA

DOWNLOAD OVER WIFI


OPTIONS › WIFI › WIFI_AP

1 · SCAN TO JOIN

the JedEye's own WiFi

2 · SCAN TO OPEN

or 192.168.4.1

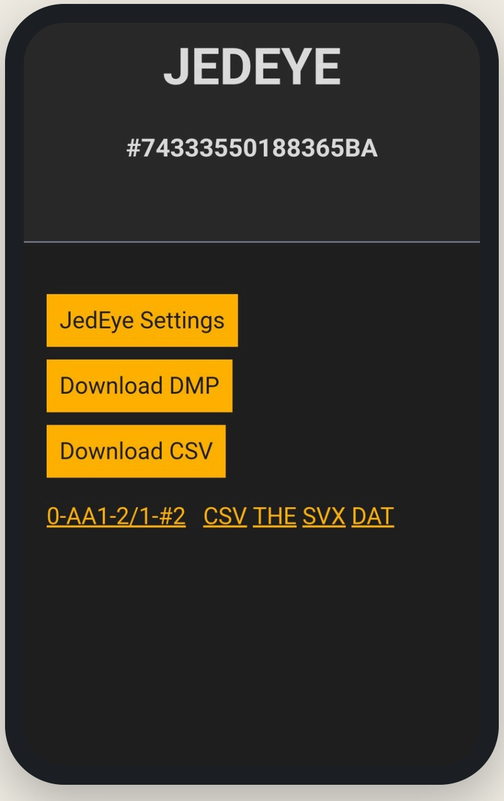

3 · DOWNLOAD

CSV THE SVX DAT DMP

also: 2D / 3D view, remote control

YOUR DATA

LIVE TO TOPODROID

SURVEY › DISTANCE METER

MEASURE



Bluetooth icon:
ready

ON THE PHONE



The shot lands
in the survey

ONCE TopoDroid › Device › BT Scan › pick the JedEye

LOOK AFTER IT

CHARGE AND CARE

CHARGE

USB 5 V
red LED until full

RINSE

laser window:
water only



STUCK?

a magnet on the back
switches it off

BACK UP

download after
each trip

THAT'S IT

READY.
GO SURVEY.

Everything else is in the full manual:
manuals.arianesline.com/jedeye

