



REQUIREMENTS

You will need:

- PC with reliable internet
- Blank 8+GB USB drive or dual layer DVD (if using a DVD burner)



You will need:

- A valid Windows license to activate after installing



HOW TO PREPARE A BOOTABLE PEN DRIVE FOR WINDOWS 11

Connect your blank USB drive or blank DVD



This drive will be reformatted, which will delete all the data on it.

Double-check that the drives are blank.



WINDOWS 11 INSTALLATION MEDIA CREATION

Step 1

Visit https://www.microsoft.com/software-download/windows11 to download Windows 11 installation media

Create Windows 11 Installation Media

If you want to perform a reinstall or clean install of Windows 11 on a new or used PC, use this option to download the media creation tool to make a bootable USB or DVD.



Before you begin

Download Now



PROCEDURE

Create Windows 11 Installation Media

If you want to perform a reinstall or clean install of Windows 11 on a new or used PC, use this option to download the media creation tool to make a bootable USB or DVD.


Before you begin


Download Now


- 1. Click on the Download Now
- 2. Download the application and install the same.



- 1. Read through the T&C and follow on screen instructions
- 2. Accept the T&C and install the application

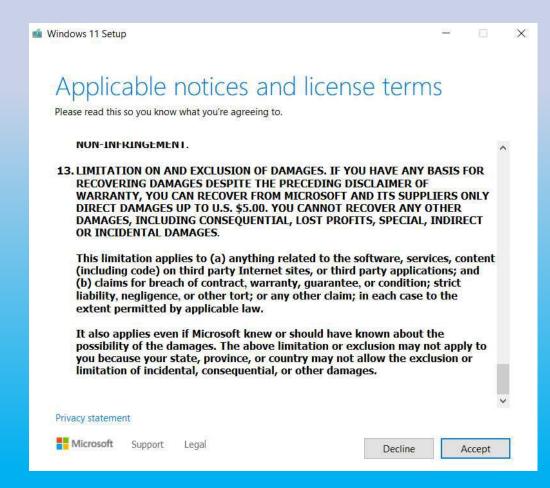

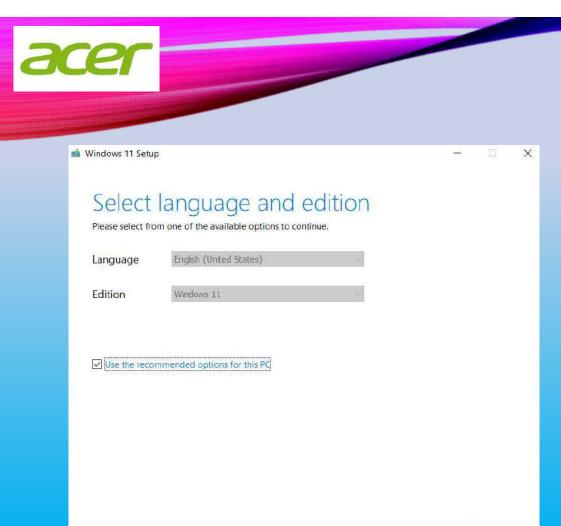

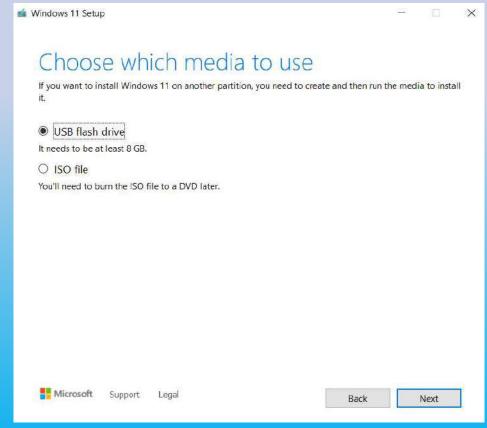

Step – 3 To download OS in Pendrive/USB Flash Drive select "USB Flash Drive"

Step - 2


Back

Next

Microsoft Support Legal



Step – 3 Select USB Flash drive/Pendrive

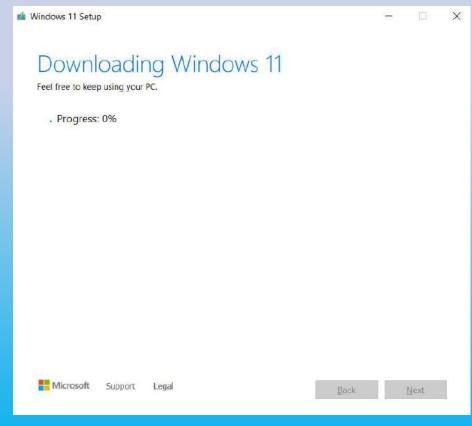

Step – 4 Wait until it completes 100% download Downloading the file can takes a while depending on your internet speed




HOW TO INSTALL

- After pendrive creation is completed, you can boot from pen drive.
- Select first boot device as pen drive so that it will boot from pen drive.
- Boot into BIOS by pressing F2 (Laptops) or Del (Desktops).
- Under Main/Advance tab select the option one time boot menu F12 and enable it.
- Under Security Tab set supervisor password. Set the password (Always remember the password) or set default password Ex: 12345
- Under Boot Tab menu disable the secure boot.
- Save and exit BIOS by pressing F10 or F4 or go to **save and exit tab** save the BIOS from save and exit tab.
- Restart the system and keep on tapping F12 and select the bootable device as Pen drive.
- Follow on screen instructions to complete Windows 10 installation.
- Customer may format entire partition or as per requirement and install the OS




HOW TO INSTALL

- After pendrive creation is completed, you can boot from pen drive.
- Boot into BIOS by pressing F2 (Laptops) or Del (Desktops).
- Under Main/Advance tab select the option F12 Boot Menu and Enable it.

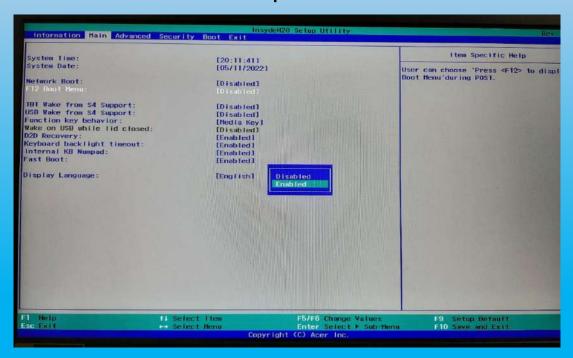




 Under Security Tab set supervisor password. Set the password (Always remember the password) or set default password Ex: 1234

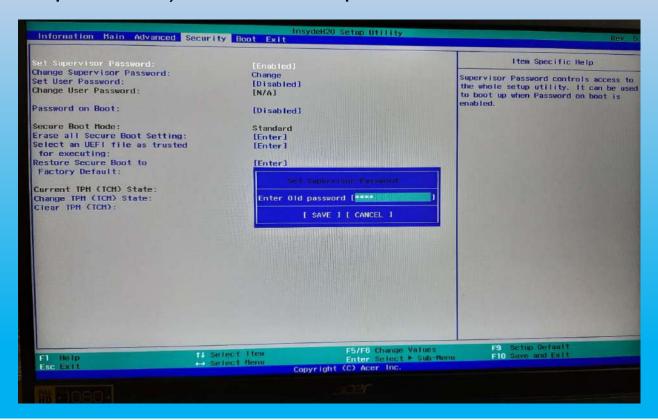



- Under **Boot Tab** menu **disable** the secure boot.
- Select first boot device as pen drive so that it will boot from pen drive.
- Save and exit BIOS by pressing F10 or F4 or go to Exit tab save the BIOS from Exit tab.
- Restart the system and keep on tapping F12 and select the bootable device as Pen drive.
- Follow on screen instructions to complete Windows 10 installation.
- Customer may format entire partition or as per requirement and install the OS

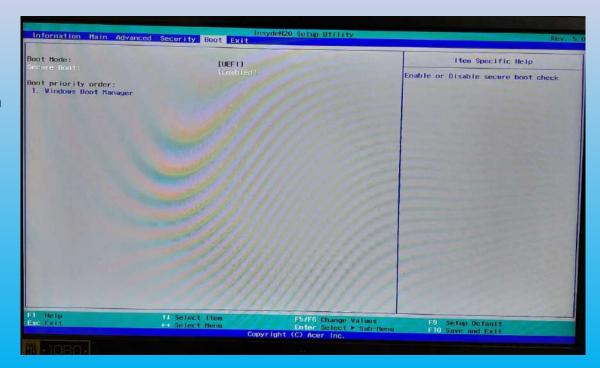



THANKS AND REGARDS

Acer Customer Support

Help Desk No:

Standalone Monitor, Commercial PC & Servers #1-800-11-4100 (Toll Free)

Notebook, Projector, Smart Phone & TAB products via toll free #1-800-11-6677(toll Free)

Chat: https://account.acer.com/sso/signin