




THIS DOCUMENT AND THE DATA DISCLOSED HEREIN OR HEREWITH IS THE PROPERTY OF ALTIUM LIMITED AND MAY BE FREELY DISTRIBUTED IN WHOLE. NO RIGHTS ARE RESERVED OR EXPRESS OR IMPLIED WARANTEE GIVEN.

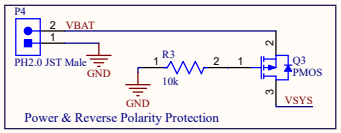


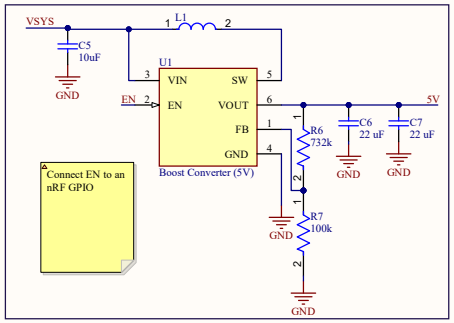


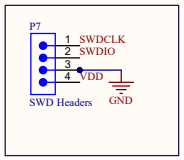


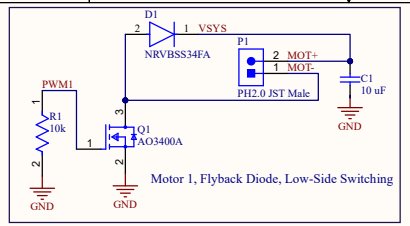


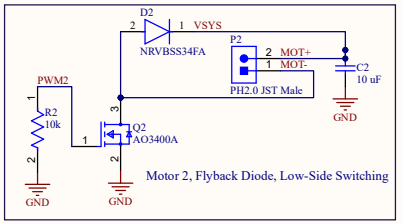


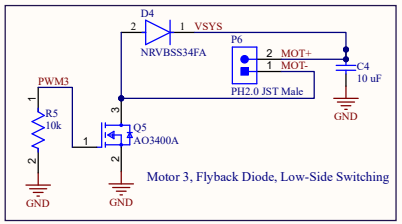


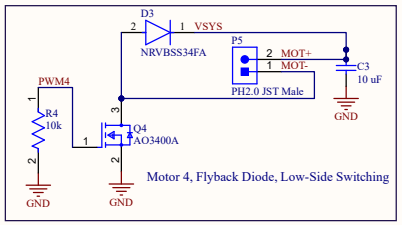

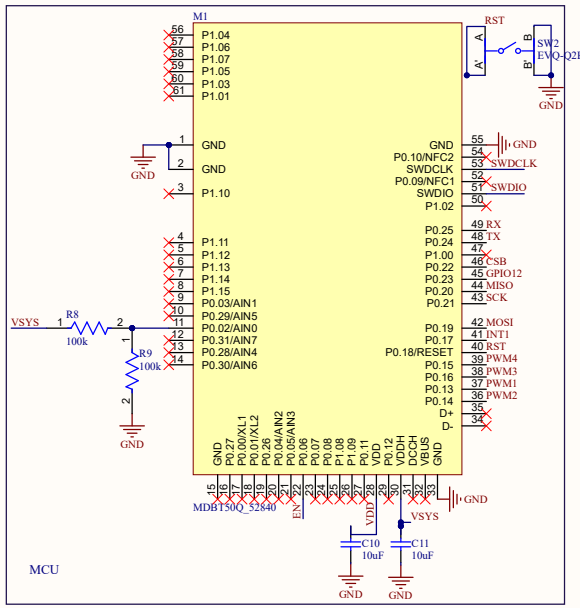

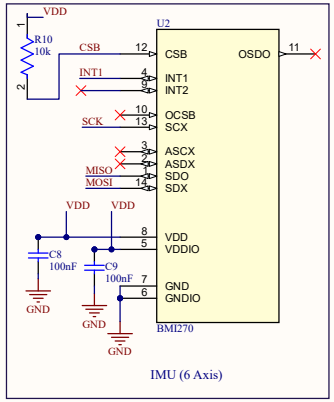

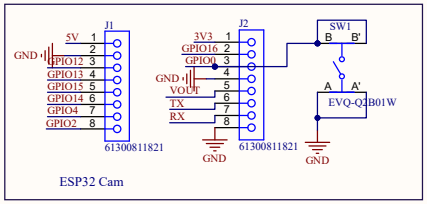

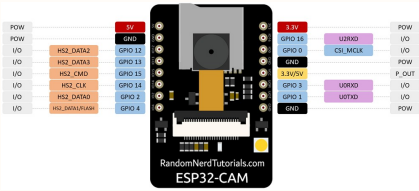

Will use external antenna

CRITICAL ASSEMBLY WARNING: 1.8V LOGIC TRAP ⚠□

DO NOT plug in the ESP32-CAM during initial board bring-up. Because the nRF is powered via VDDH (High Voltage Mode), its internal regulator defaults to 1.8V logic. The ESP32-CAM transmits at 3.3V. Connecting them immediately will overvoltage and permanently destroy the nRF RX pin.

Required Bring-Up Sequence:
Assemble board completely WITHOUT the ESP32-CAM attached.
Power up and connect the SWD programmer

2308



DigiKey Part Number	1528-2308-ND
Manufacturer	Adafruit Industries LLC
Manufacturer Product Number	2308
Description	RF ANT 2.4/5.4GHZ PCB TRACE CAB
Manufacturer Standard Lead Time	18 Weeks
Customer Reference	
Detailed Description	RF ANTENNA Wi-Fi PCB Trace U.FL (UMCC), I-PEX MHF1
Datasheet	Datasheet

Image shown is a representation only. Exact specifications should be obtained from the product data sheet.

REVISION	DESCRIPTION	DATE	APPROVED

APPROVALS	DATE
ENG: *	--/--/--
DSN: *	--/--/--
CHK: *	--/--/--

REFERENCE DOCUMENTS

BOM:	<BOM DOC NO>
ASSY DWG:	<ASSY DWG NO>
FAB DWG:	<FAB DWG NO>
PCB DWG:	<PCB DWG NO>

PROJECT: *

PROJECT REVISION: Not in version control | DOCUMENT REVISION: Not in version control | DESIGN ITEM:

TITLE: *

SIZE	CAGE CODE	DWG NO.	REV
B	?????	<SCH DWG NO>	

SCALE: | FILE NAME: Flight_Controller.SchDoc | SHEET 1 OF 1

<SCH DWG NO> DWG. NO. REV 1 SHT