





R13 must be 1.6 times R14 to achieve output voltage close to 3.3V.
Vfb = 1.257.
Vout = Vfb*(R13 + R14)/R14 = 3.268 V.
Setting R14 to 1 megaOhm and calculating R13 would result in marginally less current consumption.

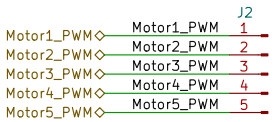






ACS712 Input Power for sensing can be connected either way.

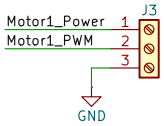


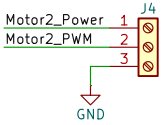


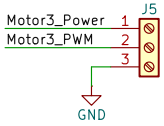


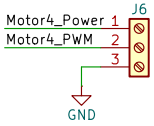


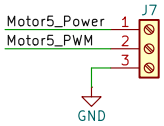


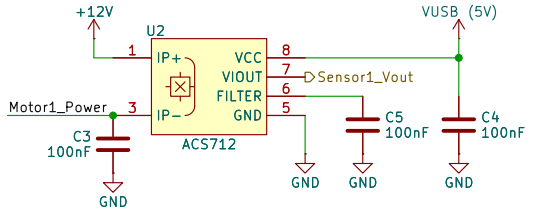

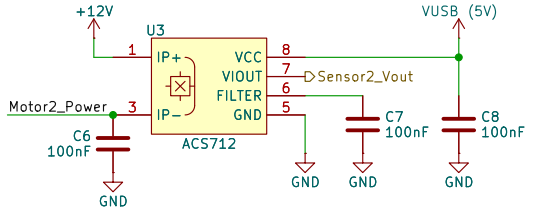

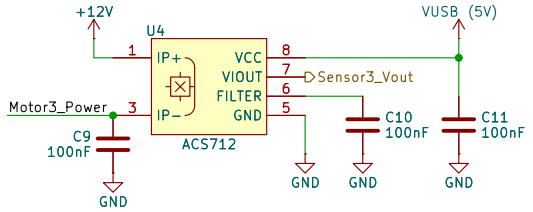

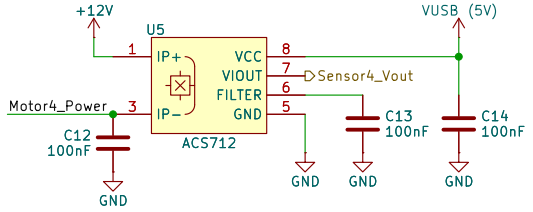

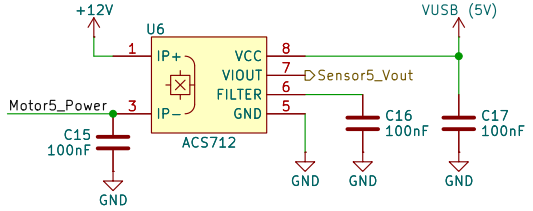

Sheet: /
File: signal-and-supply.kicad_sch

Title:

Size: A4	Date:	**Rev:**
KiCad E.D.A. 10.0.3		Id: 1/1