


LETO 11.5S


A Assemble diode with mounting plate:

48° option/ product sample:

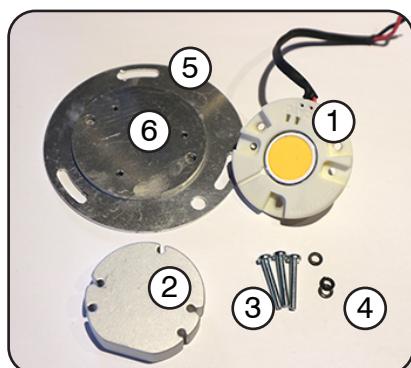


- 1) XTM module
- 2) XSA-271
- 3) 388-253
- 4) 664-C03-1A
- 5) 666-03-134-00
- 6) 666-03-064-00

28° option:

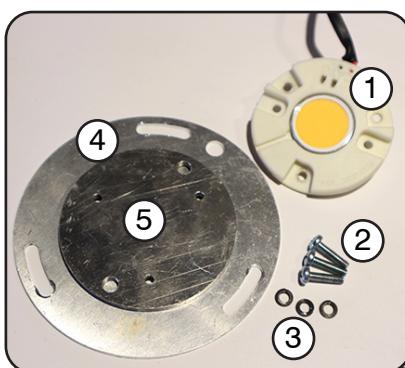


- 1) XTM module
- 2) 388-251
- 3) 664-C03-1A
- 4) 666-03-134-00
- 5) 666-03-064-00

Or

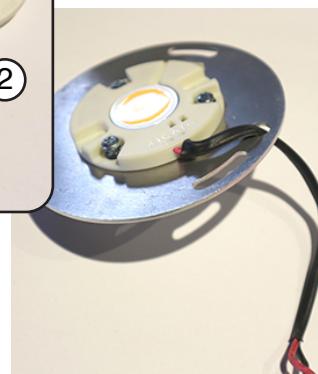


B Secure glass optic with mounting plate:

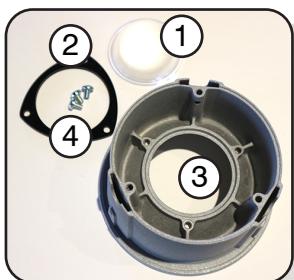

- 1) A.4609.5191LI
- 2) 666-06-050-02
- 3) 669-03-014-00
- 4) 388-022




C Mount LED assembly to cast insert

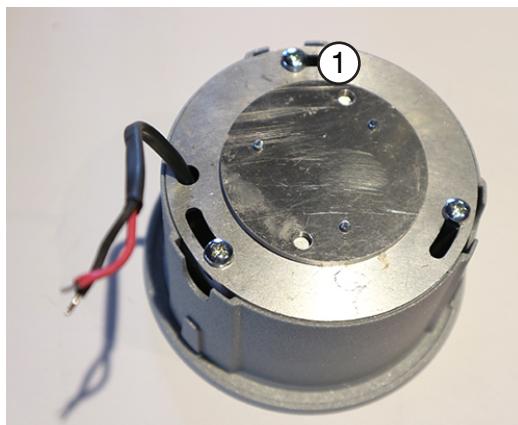

- 1) 388-022

D Secure spacers to trim ring, place shade over trim

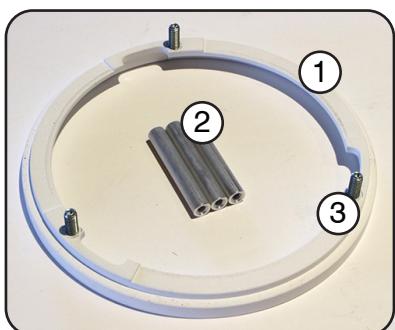


- 1) 666-03-189-XX
- 2) 608-120
- 3) 0135100



- 1) 666-03-105-00


LETO 11.5S

E Attach driver to mounting plate, add tether

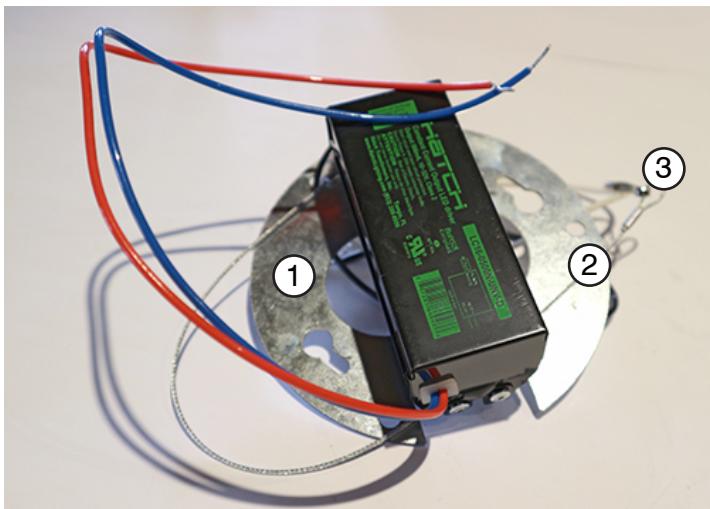


- 1) 666-02-176-00
- 2) 666-02-055-00
- 3) 7340
- 4) 777-720 (not shown)

F Attach wiring with Wago connectors

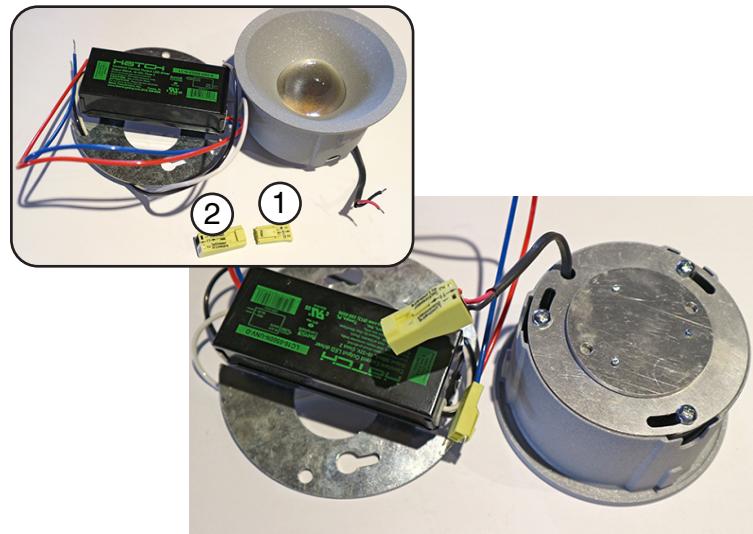

- WAGO
1) VE00-0500
2) 873-902

G Place driver and mounting plate on top, secure with 3" screw attach into spacer

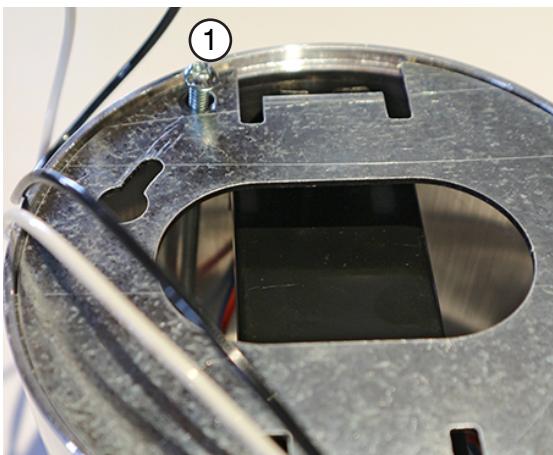

- 1) 395-040

H Ship fixture as shown

