



Install two screws** with nut first, add heat sink then secure the last screw*.



secure heat sink with two M3x12mm* screws through the bracket.

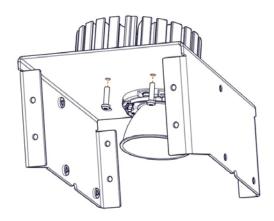

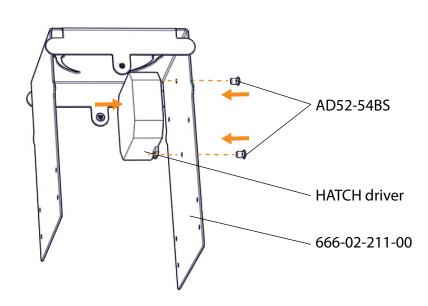



LETO 28

