1

Process Dynamics and Control

6. Multi-loop Systems

Kee-Youn Yoo

Department of Chemical & Biomolecular Engineering, SeoulTech

서울과학기술대학교

2

What are we up to?

Single-loop feedback (Ch 4–5) reacts only **after** the controlled variable has moved. This chapter adds structure around the loop.

Strategy	What it handles	Key idea
Cascade (6.1)	disturbances in the manipulated variable	a fast inner loop fixes them before they reach the process
Feedforward (6.2–6.3)	measured disturbances	act on the disturbance itself, with a model
Ratio (6.4)	streams that must stay in proportion	one flow follows another
Smith predictor (6.5)	large dead time	feed back a *prediction* of the output
MIMO, RGA, decoupling (6.6–6.7)	several interacting loops	choose the pairing, then cancel the interaction

Running example for 6.1–6.4: the **fired heater** — outlet temperature controlled with the fuel-gas flow.

서울과학기술대학교


3

6.1 Cascade Control

서울과학기술대학교

The fired-heater problem

4

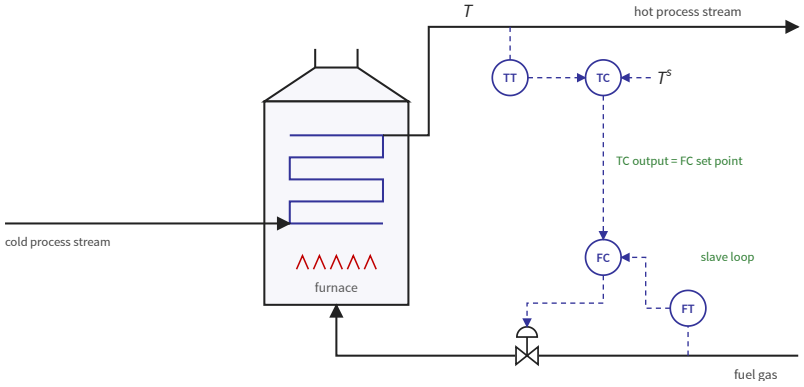

The temperature controller (TC) does **not** move the valve directly: its output is the **set point of a flow controller** (FC), which holds the fuel-gas flow against upstream pressure changes.

서울과학기술대학교

Master and slave loops

5

- **Master (primary) controller** TC: compares T with T^s and asks for a fuel-gas flow.
- **Slave (secondary) loop** FC + FT + valve: delivers that flow, correcting supply-pressure upsets **before** they change the temperature.

To be effective, the **slave loop must be much faster** (smaller time constant) than the outer loop.


Design rules

1. Tune the slave loop first, with the master in manual. Use as high a gain as feasible; P-only is usually enough.
2. Then tune the master loop on the closed slave loop. Integral action belongs here, because it removes the offset.

서울과학기술대학교

Block diagram

6

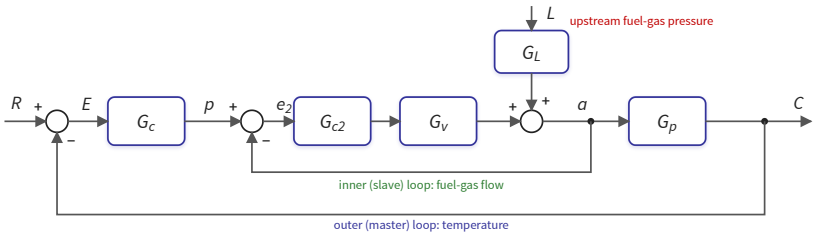


$$e_2 = p - a, \qquad a = G_{c2}G_v e_2 + G_L L$$

$$a = \underbrace{\frac{G_{c2}G_v}{1+G_{c2}G_v}}_{G_v^*} p + \underbrace{\frac{G_L}{1+G_{c2}G_v}}_{G_L^*} L$$

서울과학기술대학교

Reduced block diagram

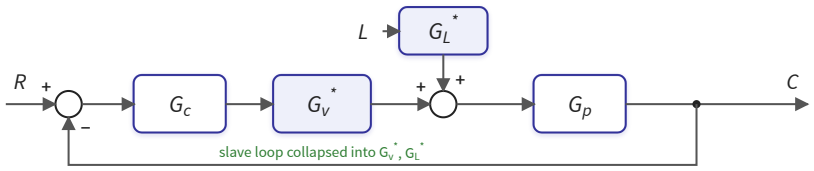

$$C = \frac{G_c G_v^* G_p}{1 + G_c G_v^* G_p} R + \frac{G_L^* G_p}{1 + G_c G_v^* G_p} L$$

The slave loop turns the valve G_v into a faster, more accurate actuator G_v^*, and it shrinks the load path to G_L^*.

Example 6.1 Choosing the slave gain K_{c2}

PI master, P slave: $G_p = \frac{0.8}{2s+1}$, $G_v = \frac{0.5}{s+1}$, $G_L = \frac{0.75}{s+1}$

$$G_v^* = \frac{K_{c2} K_v}{\tau_v s + 1 + K_{c2} K_v} = \frac{K_v^*}{\tau_v^* s + 1}$$

$$\tau_v^* = \frac{\tau_v}{1 + K_{c2} K_v}, \qquad K_v^* = \frac{K_{c2} K_v}{1 + K_{c2} K_v}$$

$$K_L^* = \frac{K_L}{1 + K_{c2} K_v}$$

K_{c2}	τ_v^*	K_v^*	K_L^*
0	1	—	0.75
2	0.50	0.50	0.375
5	0.29	0.71	0.21
18	**0.10**	**0.90**	**0.075**
50	0.04	0.96	0.029


As K_{c2} grows: $K_v^* \to 1$ (the valve does what it is told), $K_L^* \to 0$ (load rejected), $\tau_v^* \to 0$ (faster).

(b) For $\tau_v^* = 0.1\tau_v$: $1 + 0.5K_{c2} = 10 \Rightarrow K_{c2} = 18$, giving $K_v^* = 0.9$ (10 % offset in the slave loop).

(c) Why P-only in the slave? The master PI removes the steady-state error in C; the slave offset is harmless.

Example 6.1 (d): choosing the master τ_I

$$1 + K_c \frac{\tau_I s + 1}{\tau_I s} \frac{0.9}{0.1s+1} \frac{0.8}{2s+1} = 0$$

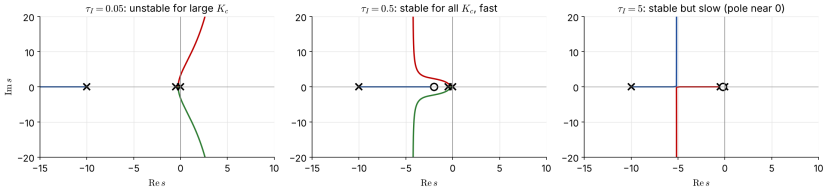

Poles $0, -0.5, -10$; PI zero at $-1/\tau_I$; $n - m = 2$, $\gamma = \frac{-10.5 + 1/\tau_I}{2}$

- $\tau_I = 0.05$: $\gamma = +4.75$ → unstable for $K_c > 1.54$
- $\tau_I = 0.5$: $\gamma = -4.25$, stable for all K_c, dominant poles far left
- $\tau_I = 5$: stable, but a closed-loop pole is trapped near the zero at -0.2 → slow

Choose $\tau_I = 0.5$: never unstable, and the fastest response.

10

Example 6.1 (e): without the cascade

$\tau_I = 0.5$, single loop:

$$1 + K_c \frac{0.5s+1}{0.5s} \frac{0.5}{s+1} \frac{0.8}{2s+1} = 0 \;\Rightarrow\; s^3 + 1.5s^2 + (0.5 + 0.2K_c)s + 0.4K_c = 0$$


Routh: $1.5\,(0.5 + 0.2K_c) > 0.4K_c \;\Rightarrow\; \mathbf{0 < K_c < 7.5}$

With the cascade the same master loop is stable for **every** $K_c > 0$. The slave loop removed the slow valve pole at -1 and replaced it with a fast one at -10.

서울과학기술대학교

11

Example 6.1: responses (replaces the Simulink runs)

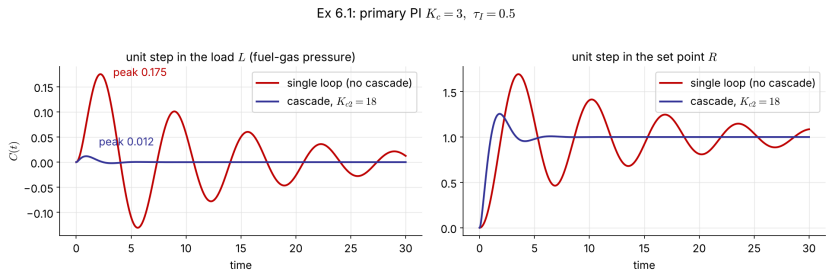

With the same master tuning ($K_c = 3,\ \tau_I = 0.5$), a fuel-gas pressure upset moves the temperature **15× less** with the cascade (peak 0.175 → 0.012). The set-point response is also much better damped.

서울과학기술대학교

12

Example 6.1 in code

Python

```python
import numpy as np, control as ct

Gp, Gv, GL = ct.tf(0.8, [2, 1]), ct.tf(0.5, [1, 1]), ct.tf(0.75, [1, 1])
Kc2 = 18
Gv_s = ct.feedback(Kc2*Gv, 1)                  # G_v*  = 9/(s+10)
GL_s = ct.minreal(GL/(1 + Kc2*Gv))             # G_L*  = 0.75/(s+10)

Kc, tI = 3, 0.5
Gc = ct.tf([Kc*tI, Kc], [tI, 0])
load_single  = ct.minreal(GL*Gp/(1 + Gc*Gv*Gp))
load_cascade = ct.minreal(GL_s*Gp/(1 + Gc*Gv_s*Gp))
t = np.linspace(0, 30, 3001)
for T in (load_single, load_cascade):
    print(ct.step_response(T, t).outputs.max())   # 0.175, 0.012
```

MATLAB

```matlab
Gp = tf(0.8,[2 1]);  Gv = tf(0.5,[1 1]);  GL = tf(0.75,[1 1]);
Kc2 = 18;
Gv_s = feedback(Kc2*Gv, 1);                % G_v*
GL_s = minreal(GL/(1 + Kc2*Gv));           % G_L*

Kc = 3;  tI = 0.5;  Gc = Kc*tf([tI 1],[tI 0]);
load_single  = minreal(GL*Gp/(1 + Gc*Gv*Gp));
load_cascade = minreal(GL_s*Gp/(1 + Gc*Gv_s*Gp));
step(load_single, load_cascade, 30), legend('single loop','cascade')
```

서울과학기술대학교

13

6.2 Feedforward Control

서울과학기술대학교


14

Act on the disturbance, not on the error

Measure the disturbance L and use a **process model** to move M **before** C is affected:

$$C = G_L L + G_p M \xrightarrow{C=R} M = \frac{1}{G_p} R - \frac{G_L}{G_p} L$$

- Set-point changes are normally left to the feedback loop; only the second term is implemented.
- The **feedforward controller** is the model-based rule $-G_L/G_p$.

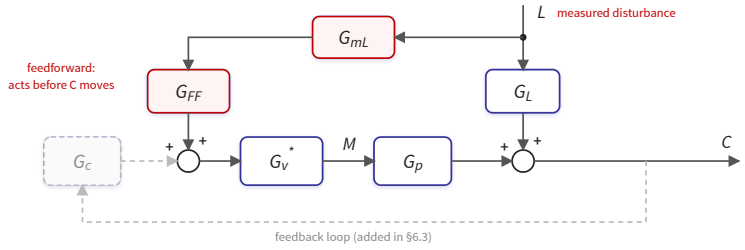

서울과학기술대학교

15

The feedforward controller

$$C = \left[G_L + G_{mL} G_{FF} G_v^* G_p\right] L \xrightarrow{C=0} G_{FF} = -\frac{G_L}{G_{mL} G_v^* G_p}$$

(the original wrote F_{FF} for G_{FF})

Pitfalls of the ideal G_{FF}:

- often **not realizable**: the numerator order exceeds the denominator order
- a dead time in G_p larger than in G_L gives $e^{+\theta s}$, which would need the future
- it is only as good as the model

Practical form: lead-lag × gain

$$G_{FF} = K_{FF} \frac{\tau_{ld} s + 1}{\tau_{lg} s + 1}$$

$$K_{FF} = -\frac{K_L}{K_{mL} K_v^* K_p}$$


- static part K_{FF}: steady-state compensator
- lead-lag: dynamic compensator

If the measurement is fast and τ_v^* is small (a cascade slave loop), the static gain alone may be enough — **but check** (Ex 6.7).

서울과학기술대학교

16

Example 6.7 Static or dynamic feedforward?

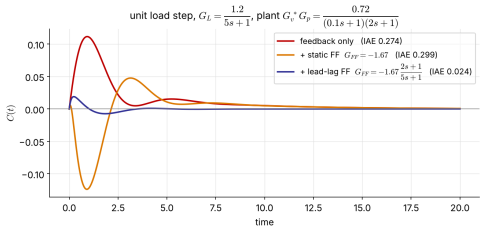

Cascade plant of Ex 6.1 with a load at the output:

$G_L = \frac{1.2}{5s+1}$, $G_{mL} = 1$, PI

$K_c = 3,\ \tau_I = 0.5$

$$G_{FF}^{\text{ideal}} = -1.67\,\frac{(0.1s+1)(2s+1)}{5s+1}$$

improper → drop the fast $(0.1s+1)$:

$$G_{FF} = -1.67\,\frac{2s+1}{5s+1}$$

The **static G_{FF}** acts too early (the load is slower than the process) and makes things **worse** than feedback alone. The **lead-lag** cuts IAE **11×**.

서울과학기술대학교


17

6.3 Feedforward–Feedback Control

서울과학기술대학교

18

Feedforward never works alone

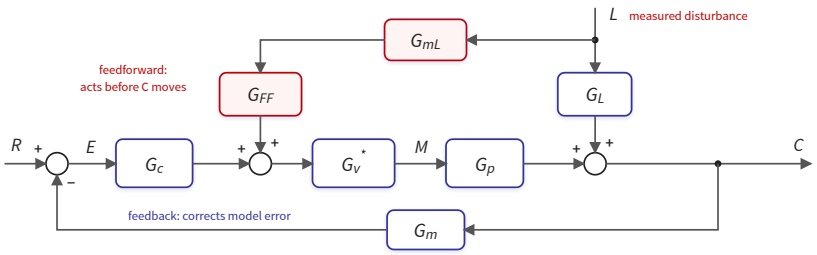

$$C = \frac{G_L + G_{mL}G_{FF}G_v^*G_p}{1 + G_mG_cG_v^*G_p}\,L + \frac{G_cG_v^*G_p}{1 + G_mG_cG_v^*G_p}\,R$$


Characteristic equation
$1 + G_mG_cG_v^*G_p = 0$: **G_{FF} does not affect stability.**

Feedforward does most of the work; feedback removes what the imperfect model leaves behind.

서울과학기술대학교

19

Example 6.2 Furnace with feedforward, feedback and cascade

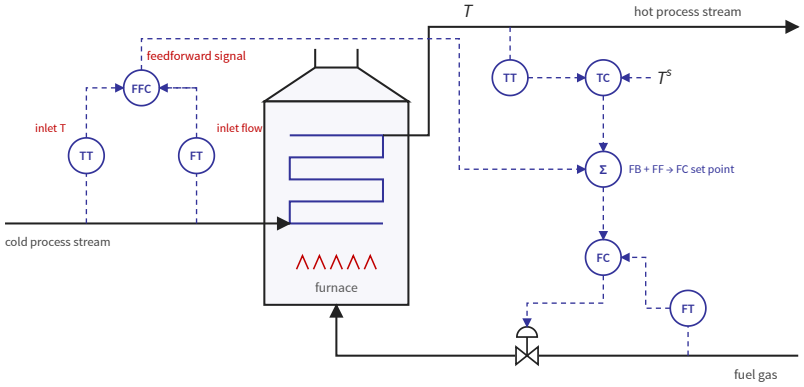

Inlet temperature and flow of the process stream (the main loads) feed the **FFC**; its signal is **added** (Σ) to the TC output. The sum is the set point of the fuel-gas **flow** controller, so cascade handles the fuel-supply upsets.

서울과학기술대학교

20


6.4 Ratio Control

서울과학기술대학교


21

Keeping air in proportion to fuel

(a) simple ratio control

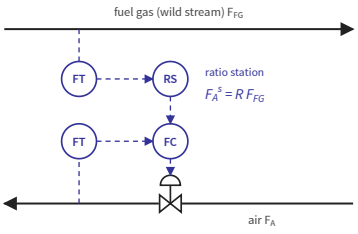

(b) full-metering ratio control

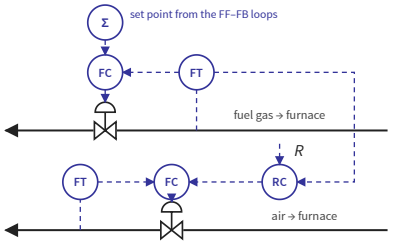

(a) Simple ratio: the fuel flow is "wild" (set elsewhere). The ratio station RS multiplies its measurement by $R = F_A/F_{FG}$ to give the air-flow set point.

(b) Full metering: both flows are controlled. The fuel set point comes from the FF–FB loops, and the ratio controller RC sets the air flow from the **measured** fuel flow.

Sufficient air means efficient combustion and lower emissions of CO and unburnt hydrocarbons.

서울과학기술대학교

22

6.5 The Smith Predictor

서울과학기술대학교

23

Dead time in the loop

$$1 + G_c(s)G(s)e^{-\theta s} = 0$$

- Dead time adds phase lag $-\omega\theta$, lowers the gain margin, and forces a small K_c (Ch 5).
- The root cause is that the measured output is **outdated** information.

If $G(s)$ and θ are known, **predict** the undelayed output and feed that back instead.


Notation: the original slides use t_d; here θ, as in Ch 4–5.

서울과학기술대학교

24


The Smith predictor

(a) feedback with dead time



$1 + G_cGe^{-\theta s} = 0$: delay in the loop

(b) Smith predictor (dead-time compensator)

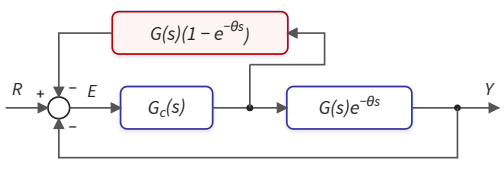

(c) equivalent loop



delay moved outside the loop
char. eq. $1 + G_cG = 0$

$$E = R - Y - G_cG\left(1 - e^{-\theta s}\right)E, \qquad Y = G_cGe^{-\theta s}E$$


$$\Rightarrow E = R - G_cGE, \qquad \frac{Y}{R} = \frac{G_cG}{1 + G_cG}e^{-\theta s}$$

The characteristic equation $1 + G_cG = 0$ has **no dead time**. Tune G_c as if the delay were absent; the response is the same, only shifted by θ.

서울과학기술대학교

25

Example 6.8 Smith predictor on the Ex 4.4 plant

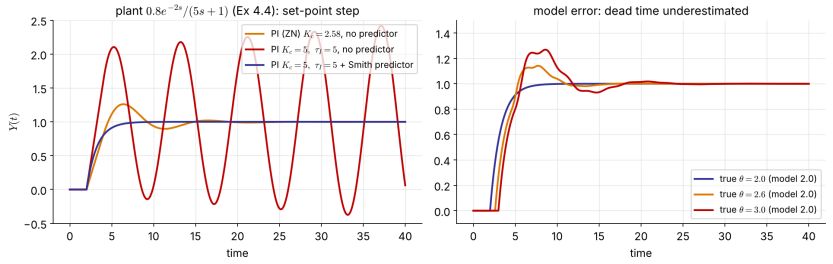

$G = \dfrac{0.8e^{-2s}}{5s+1}$, $K_{cu} = 5.73$ (Ch 4–5). PI with $\tau_I = 5$ cancels the lag, and $K_c = 5$ gives a first-order loop with $\tau_{cl} = 5/(0.8K_c) = 1.25$.

- without the predictor, $K_c = 5$ is **unstable**
- with it: no overshoot, $Y(t)$ is the ideal response delayed by 2

Caveats: it needs an accurate model; a 50 % dead-time error brings back overshoot. For **load** disturbances the delay is not removed; the predictor only speeds up the correction.

서울과학기술대학교

26

Smith predictor in code

Python

```python
from blocks import FOPDT, Delay, PI, DT     # exact dead time (no Pade); blocks.py in ch6/
import numpy as np

def smith(Kc, tI, theta_true=2.0, theta_model=2.0, tf=40):
    G  = FOPDT(0.8, 5, theta_true)          # plant  0.8 e^{-theta s}/(5s+1)
    M0 = FOPDT(0.8, 5, 0.0)                 # model without delay
    Md = Delay(theta_model)                 # model delay
    c  = PI(Kc, tI)
    y = ym0 = ymd = 0.0; out = []
    for k in range(int(tf/DT) + 1):
        u = c(1.0 - y - (ym0 - ymd))        # feed back y + G(1 - e^{-theta s}) u
        y, ym0 = G(u), M0(u); ymd = Md(ym0)
        out.append(y)
    return np.arange(len(out))*DT, np.array(out)

t, y = smith(5, 5)                          # Kc = 5 > Kcu: still stable
```

MATLAB

```matlab
s  = tf('s');
G0 = 0.8/(5*s + 1);                 % model without delay
Gd = G0*exp(-2*s);                  % plant with delay
Gc = 5*(1 + 1/(5*s));               % PI, Kc = 5, tauI = 5

C_smith = feedback(Gc, G0 - Gd);    % controller + dead-time compensator
T_smith = feedback(C_smith*Gd, 1);  % = Gc*G0/(1+Gc*G0) * exp(-2s)
T_plain = feedback(Gc*Gd, 1);       % unstable
step(T_smith, 40)
```

서울과학기술대학교


27

6.6 Multiple-Input Multiple-Output Control


서울과학기술대학교

A blending process

28

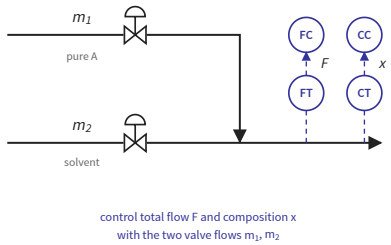

control total flow F and composition x
with the two valve flows m_1, m_2

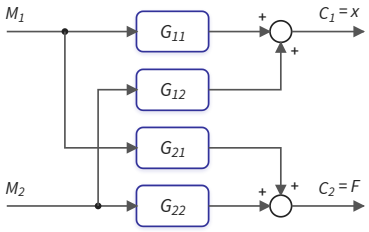


$$C_1 = G_{11}M_1 + G_{12}M_2, \qquad C_2 = G_{21}M_1 + G_{22}M_2$$

Every manipulated variable affects **both** outputs. The questions are: **which** M should control **which** C, and how strongly do the loops fight?

서울과학기술대학교

MIMO closed loop

29

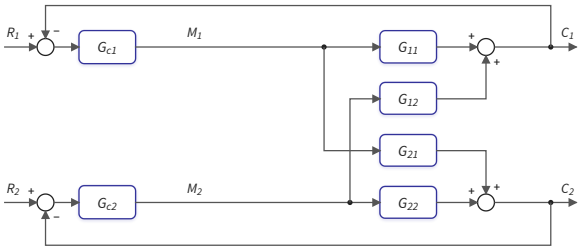

With $M_i = G_{ci}(R_i - C_i)$, the closed loop is

$$\begin{bmatrix} C_1 \\ C_2 \end{bmatrix} = \frac{1}{p(s)} \begin{bmatrix} G_{11}G_{c1} + g(s) & G_{12}G_{c2} \\ G_{21}G_{c1} & G_{22}G_{c2} + g(s) \end{bmatrix} \begin{bmatrix} R_1 \\ R_2 \end{bmatrix}, \qquad g = (G_{11}G_{22} - G_{12}G_{21})G_{c1}G_{c2}$$

$p(s) = (1 + G_{11}G_{c1})(1 + G_{22}G_{c2}) - G_{12}G_{21}G_{c1}G_{c2} = 0$: tuning one loop changes the stability of **both**.

서울과학기술대학교

Process gain matrix

30

Mass balances (m_1 pure A, m_2 solvent): $F = m_1 + m_2, \quad x = \dfrac{m_1}{m_1 + m_2}$

$$x \approx x_s + \underbrace{\left[\frac{m_2}{(m_1+m_2)^2}\right]_s}_{K_{11}}(m_1 - m_{1,s}) - \underbrace{\left[\frac{m_1}{(m_1+m_2)^2}\right]_s}_{K_{12}}(m_2 - m_{2,s})$$

$$\begin{bmatrix} X \\ F \end{bmatrix} = \underbrace{\begin{bmatrix} K_{11} & K_{12} \\ K_{21} & K_{22} \end{bmatrix}}_{\mathbf{K}} \begin{bmatrix} M_1 \\ M_2 \end{bmatrix}, \qquad K_{21} = K_{22} = 1$$

Example 6.3 $m_1 = 0.1$, $m_2 = 10$ g/s:

$$\mathbf{K} = \begin{bmatrix} 9.8 \times 10^{-2} & -9.8 \times 10^{-4} \\ 1 & 1 \end{bmatrix}$$

$|K_{11}| \gg |K_{12}|$: m_2 barely affects x, a nearly **one-way** interaction.

서울과학기술대학교

31

Relative gain array (RGA)

$$\lambda_{ij} = \frac{\left.\dfrac{\partial c_i}{\partial m_j}\right|_{m_k,\, k\neq j}}{\left.\dfrac{\partial c_i}{\partial m_j}\right|_{c_k,\, k\neq i}} = \frac{\text{gain with all other loops open}}{\text{gain with all other loops closed (perfect control)}}$$

For a 2×2 system, with $\kappa = \dfrac{K_{12}K_{21}}{K_{11}K_{22}}$:

$$\lambda_{11} = \frac{1}{1-\kappa}, \qquad \mathbf{\Lambda} = \begin{bmatrix} \lambda_{11} & 1-\lambda_{11} \\ 1-\lambda_{11} & \lambda_{11} \end{bmatrix}$$

Properties

- each **row and column sums to 1**
- independent of the units and scaling of the variables
- any size: $\mathbf{\Lambda} = \mathbf{K} \circ \left(\mathbf{K}^{-1}\right)^T$ (element-wise product)

서울과학기술대학교


32

Example 6.4 RGA of the blending process

$$\left.\frac{\partial x}{\partial m_1}\right|_{m_2} = \frac{m_2}{(m_1+m_2)^2}, \qquad \left.\frac{\partial x}{\partial m_1}\right|_{F} = \frac{1}{F} = \frac{1}{m_1+m_2} \Rightarrow \lambda_{x,m_1} = \frac{m_2}{m_1+m_2} = 1-x$$

$$\mathbf{\Lambda} = \begin{bmatrix} \lambda_{x,m_1} & \lambda_{x,m_2} \\ \lambda_{F,m_1} & \lambda_{F,m_2} \end{bmatrix} = \begin{bmatrix} 1-x & x \\ x & 1-x \end{bmatrix}$$

Same result from the gains:
$\kappa = K_{12}K_{21}/(K_{11}K_{22}) = -m_1/m_2$

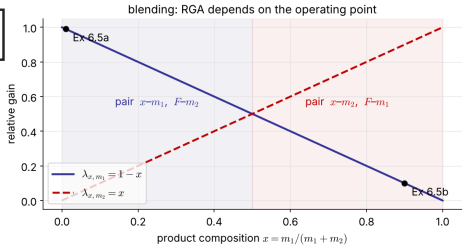

서울과학기술대학교

33

Reading the RGA: pairing rules

λ_{ij}	κ (2×2)	meaning	pair m_j–c_i?
1	0	no interaction from the other loop	**yes, ideal**
0.5–1	< 0	closing the other loop **raises** this loop's gain	yes
> 1	0–1	closing the other loop **lowers** the gain	yes; avoid $\lambda \gg 1$
0.5	-1	the other loop doubles the gain; both pairings bad	—
0	—	m_j has no effect on c_i	**no**
< 0	> 1	the gain **changes sign** when the other loop closes	**never**

Rule: pair on relative gains that are **positive and closest to 1**. The **sign of κ** decides the case, not the signs of the gains (Ex 6.6: mixed signs, $\lambda = 1.91$).

서울과학기술대학교

34

Example 6.5 Pairing depends on the operating point

(a) $m_1 = 0.1,\ m_2 = 10$ g/s ($x = 0.0099$)

$$\Lambda = \begin{bmatrix} \mathbf{0.9901} & 0.0099 \\ 0.0099 & \mathbf{0.9901} \end{bmatrix}$$



Control the composition with the **smaller** stream: it changes x more and F less.

pair x–m_1, F–m_2

(b) $m_1 = 9,\ m_2 = 1$ g/s ($x = 0.9$)

$$\Lambda = \begin{bmatrix} 0.1 & \mathbf{0.9} \\ \mathbf{0.9} & 0.1 \end{bmatrix}$$

pair x–m_2, F–m_1

서울과학기술대학교

35

RGA in code

Python

```python
import numpy as np

def rga(K):
    K = np.asarray(K, float)
    return K * np.linalg.inv(K).T           # Lambda = K o (K^-1)^T

m1, m2 = 0.1, 10.0; F = m1 + m2
K = [[m2/F**2, -m1/F**2],
     [1.0,      1.0    ]]
print(rga(K))                               # [[0.9901 0.0099] [0.0099 0.9901]]

K66 = [[0.07, -0.05], [0.1, -0.15]]         # distillation, Ex 6.6
print(rga(K66))                             # [[ 1.91 -0.91] [-0.91  1.91]]
```

MATLAB

```matlab
rga = @(K) K .* inv(K).';                   % Lambda = K o (K^-1)^T

m1 = 0.1;  m2 = 10;  F = m1 + m2;
K = [m2/F^2, -m1/F^2;
     1,       1     ];
rga(K)                                      % [0.9901 0.0099; 0.0099 0.9901]

K66 = [0.07 -0.05; 0.1 -0.15];              % distillation, Ex 6.6
rga(K66)                                    % [1.91 -0.91; -0.91 1.91]
```

서울과학기술대학교


36

6.7 Decoupling of Interacting Systems

서울과학기술대학교

Feedforward-like decouplers

37

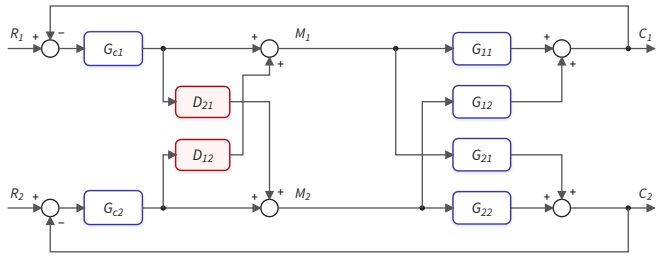

Cancel the effect of controller 2 on C_1:

$$G_{12} + G_{11}D_{12} = 0 \Rightarrow D_{12} = -\frac{G_{12}}{G_{11}}$$

Cancel the effect of controller 1 on C_2:

$$G_{21} + G_{22}D_{21} = 0 \Rightarrow D_{21} = -\frac{G_{21}}{G_{22}}$$

Implement them like feedforward controllers: lead-lag plus gain, dropping any $e^{+\theta s}$ term that would need the future.

Example 6.6 Distillation column

38

$$\begin{bmatrix} X_D \\ X_B \end{bmatrix} = \begin{bmatrix} \dfrac{0.07e^{-3s}}{12s+1} & \dfrac{-0.05e^{-s}}{15s+1} \\ \dfrac{0.1e^{-4s}}{11s+1} & \dfrac{-0.15e^{-2s}}{10s+1} \end{bmatrix} \begin{bmatrix} L \\ V \end{bmatrix} \qquad L:\ \text{reflux},\ V:\ \text{boil-up}$$

$$\mathbf{K} = \begin{bmatrix} 0.07 & -0.05 \\ 0.1 & -0.15 \end{bmatrix}$$

$$\mathbf{\Lambda} = \begin{bmatrix} 1.91 & -0.91 \\ -0.91 & 1.91 \end{bmatrix}$$

Pair x_D–L, x_B–V: $\lambda = 1.91$ is not 1 but it is positive, and the reflux enters next to the distillate.

Decouplers

$$D_{12} = -\frac{G_{12}}{G_{11}} = 0.714\,\frac{12s+1}{15s+1}\,e^{+2s} \approx 0.71$$

$$D_{21} = -\frac{G_{21}}{G_{22}} = 0.667\,\frac{10s+1}{11s+1}\,e^{-2s} \approx 0.67$$

D_{12} would need a prediction (e^{+2s}) → drop it; D_{21} is realizable as it stands.

Example 6.6: PI tuning (ITAE)

39

ITAE set-point correlations for FOPDT loops, applied to the diagonal elements:

$$K_c = \frac{0.586}{K}\left(\frac{\theta}{\tau}\right)^{-0.916}, \quad \tau_I = \frac{\tau}{1.03 - 0.165\,\theta/\tau}$$


$$K_{c1} = \frac{0.586}{0.07}\left(\frac{12}{3}\right)^{0.916} = 29.8 \qquad K_{c2} = -\frac{0.586}{0.15}\left(\frac{10}{2}\right)^{0.916} = -17.1$$

$$\tau_{I1} = \frac{12}{1.03 - 0.165(3/12)} = 12.1 \qquad \tau_{I2} = \frac{10}{1.03 - 0.165(2/10)} = 10.0$$

$K_{c2} < 0$ because $K_{22} < 0$: more boil-up lowers x_B.

40

Example 6.6: does decoupling help? (replaces the Simulink runs)

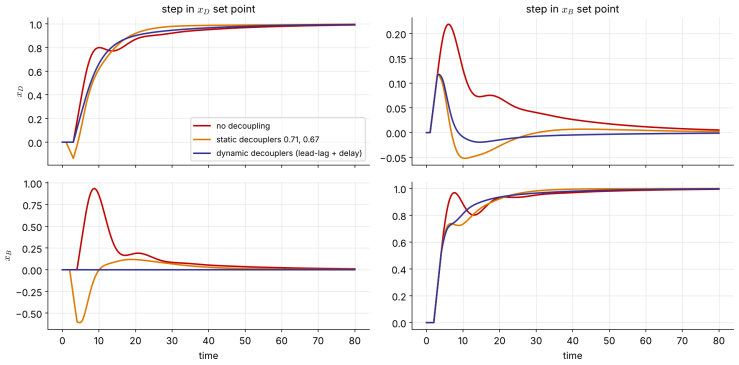

- **No decoupling:** an x_D set-point step drives x_B up to 0.94.
- **Static** decouplers: x_B now dips to -0.61. D_{21} acts at $t = 2$ through G_{22}, before G_{21} arrives at $t = 4$.
- **Dynamic** D_{21} (with its e^{-2s}): x_B stays at 0, exact decoupling.

A decoupler that ignores the **timing** can trade one interaction for another. Keep realizable delays and lags.

서울과학기술대학교

41

Decoupling in code

Python

```python
from blocks import simulate_2x2              # exact dead time; blocks.py in ch6/

G = [[(0.07, 12, 3), (-0.05, 15, 1)],        # (K, tau, theta) of each G_ij
     [(0.10, 11, 4), (-0.15, 10, 2)]]
Kc = (29.8, -17.1);  tI = (12.1, 10.0)

cases = {'none':    (None, None),
         'static':  (0.714, 0.667),
         'dynamic': ((0.714, 12, 15, 0), (0.667, 10, 11, 2))}   # (K, tau_lead, tau_lag, theta)
for name, (D12, D21) in cases.items():
    t, xD, xB, L, V = simulate_2x2(G, Kc, tI, D12, D21, r1=1, r2=0, tf=80)
    print(name, 'max |x_B| =', abs(xB).max().round(2))     # 0.93, 0.61, 0.00
```

MATLAB

```matlab
s = tf('s');
G = [0.07*exp(-3*s)/(12*s+1), -0.05*exp(-s)/(15*s+1);
     0.10*exp(-4*s)/(11*s+1), -0.15*exp(-2*s)/(10*s+1)];
C = blkdiag(29.8*(1 + 1/(12.1*s)), -17.1*(1 + 1/(10.0*s)));

D_static  = [1, 0.714; 0.667, 1];                       % M = D * u
D_dynamic = [1, 0.714*(12*s+1)/(15*s+1);
             0.667*(10*s+1)/(11*s+1)*exp(-2*s), 1];
for D = {eye(2), D_static, D_dynamic}
    T = feedback(G*D{1}*C, eye(2));
    step(T(:,1), 80), hold on                           % step in r1 (x_D)
end
```


서울과학기술대학교

42

Interactive: cascade vs. single loop

primary K_c = 3.0 τ_I 0.5 slave K_{c2} = 18 load step set-point step

single loop: stable · peak 0.175 cascade: stable · peak 0.012 · slave τ_v^* = 0.100, K_v^* = 0.900

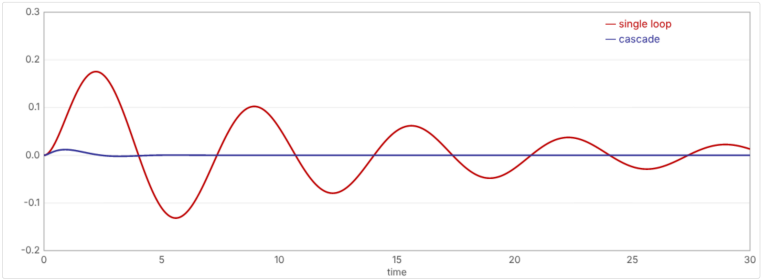

Interactive version: seoultechpse.github.io/ProCon/ch6/ch6_multiloop.html — change K_c, τ_I and K_{c2}, and switch between load and set-point steps.

서울과학기술대학교

43

Summary: which structure for which problem?

Symptom	Structure	Needs
upsets enter through the manipulated stream	**cascade**	a secondary measurement much faster than the primary
a large disturbance can be measured	**feedforward + feedback**	a model of G_L/G_p (lead-lag is usually enough)
two streams must stay proportional	**ratio**	flow measurements
dead time dominates	**Smith predictor**	an accurate model, especially of θ
several loops interact	**RGA pairing**, then **decoupling**	gain matrix (pairing); dynamic model (decoupling)

None of these replaces feedback: each one is built **around** a feedback loop.

서울과학기술대학교

44

Problem #3 (homework)

$$\mathbf{G}(s) = \begin{bmatrix} \dfrac{2e^{-s}}{10s+1} & \dfrac{1.5e^{-s}}{15s+1} \\ \dfrac{1.5e^{-s}}{15s+1} & \dfrac{2e^{-s}}{10s+1} \end{bmatrix}$$

a. Compute the RGA. Which pairing do you choose, and how strong is the interaction?

b. Design the two decouplers. Are they realizable? Compare the static and dynamic versions.

c. Tune two PI controllers with the ITAE correlations and simulate a step in R_1 with and without decoupling (use `simulate_2x2` from `blocks.py`).

Hint: $\kappa = \dfrac{K_{12}K_{21}}{K_{11}K_{22}}$.

서울과학기술대학교

45

Resources

- **Slides (interactive HTML):** seoultechpse.github.io/ProCon/ch6/ch6_multiloop.html
- **PDF:** slides · handout with note space
- **Python notebook:** Open in Colab — every calculation and figure of this chapter
- **Simulator with exact dead time:** `blocks.py`

Further reading:

- D. E. Seborg, T. F. Edgar, D. A. Mellichamp, *Process Dynamics and Control*
- P. C. Chau, *Process Control: A First Course with MATLAB*
- B. W. Bequette, *Process Control: Modeling, Design, and Simulation*
- C. D. Johnson, *Process Control Instrumentation Technology*
- S. Skogestad, I. Postlethwaite, *Multivariable Feedback Control: Analysis and Design*

서울과학기술대학교

46

A final word — Neal R. Amundson (University of Minnesota, circa 1970)

1. In an advanced course … when has any substance there will be **no text which contains all of the material presented**.
2. Teachers who know their subject well will always present material not in the prescribed text when one is prescribed.
3. If there were a text which presented all of the materials there would be no need for the lecturer.
4. In a course of any substance it will not be possible for the student to understand or follow all of the arguments instantaneously all of the time.
5. Assuming that 4 is true it is essential that **good notes be taken**. Usually this is not possible. Normally the notes will be very sketchy and if they are to be of any use later, they must be expanded upon by the student as soon after the lecture as possible.
6. Because of 5 notes in real courses must be recopied, filled out, corrected for teacher aberrations, misprints, errors, etc., so that **the student ends up with his own text**.
7. Notes which have not been so treated are normally almost useless for later reference.
8. In core subjects one must learn and memorize and in this way make deposits in the bank from which he can withdraw later. If nothing is ever put in the bank then one is intellectually bankrupt. All knowledge is what one knows. **If one cannot verbalize what he knows then he properly does not understand what he thinks he knows.**
9. First-year graduate students, in general, must change their ways of studying from their undergraduate habits since in respectable graduate programs the emphasis is on understanding rather than getting through the course. This necessary shift is why many first-year graduate students go into shock after about six weeks of graduate work.
10. If a student aims toward a Ph.D. degree he is expected not only to understand but be able to improve by generalization or better by innovations. Good graduate programs require the latter.
11. **10 is what research is all about.**

서울과학기술대학교