



CON1 can be connected to both the power stack and GPIO connectors. Jumpers J1-J5 are used to configure the DAC between the powerstack and GPIO pinouts.

Legend:
 ✓ Used
 ✗ Unused




CON1A			
1	✗	INV_PWM_1	✗
2	✗	INV_PWM_2	✗
3	✗	INV_PWM_3	✗
4	✗	INV_PWM_4	✗
5	✗	INV_PWM_5	✗
6	✗	INV_PWM_6	✗
7	✗	INV_GND_1	✗
8	✗	INV_STS_A	✓
9	✗	INV_STS_B	✓
10	✗	INV_STS_C	✓
11	✗	INV_STS_D	✗
12	✗	VPS	✗
13	✗	VDD	✓
14	✗	PSGND	✗
15	✗	INV_GND_2	✓
		GPIOX_IN1_P	✗
		GPIOX_IN1_N	✗
		GPIOX_IN2_P	✗
		GPIOX_IN2_N	✗
		GPIOX_IN3_P	✗
		GPIOX_IN3_N	✗
		GPIOX_OUT3_P	✓
		GPIOX_OUT3_N	✓
		GPIOX_OUT1_P	✓
		GPIOX_OUT1_N	✓
		GPIOX_OUT2_P	✓
		GPIOX_OUT2_N	✓

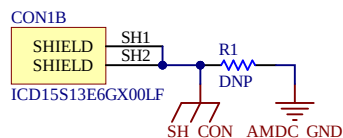

Connector Signal Diagram

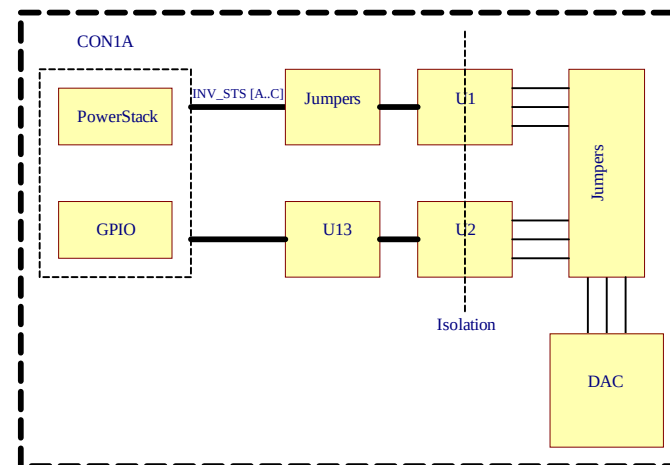

Jumpers J6-J8 are used to disable U1 when the power stack is not in use

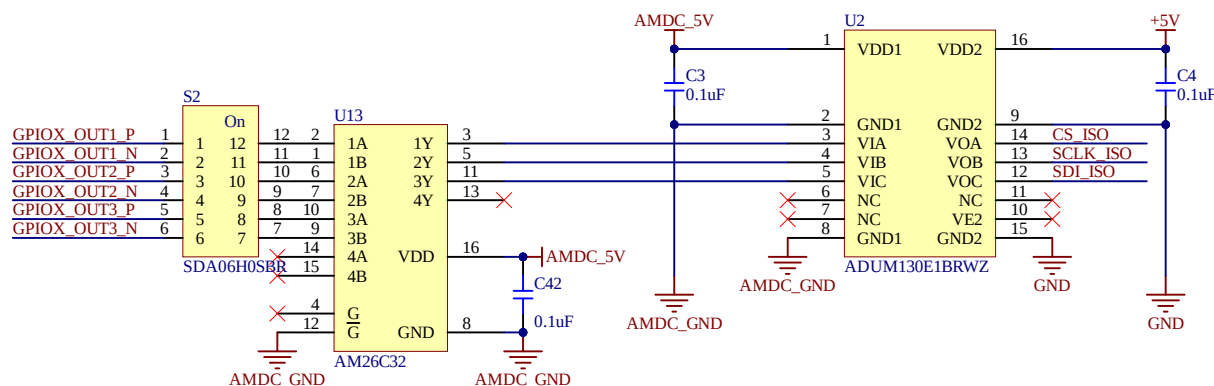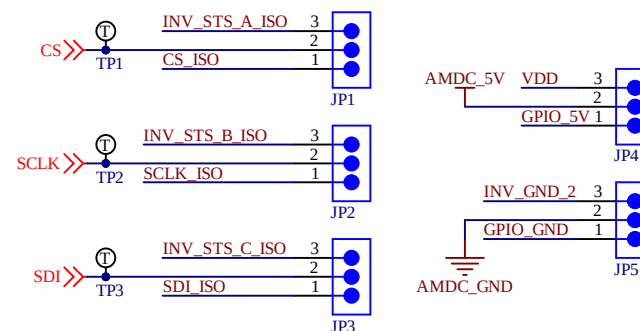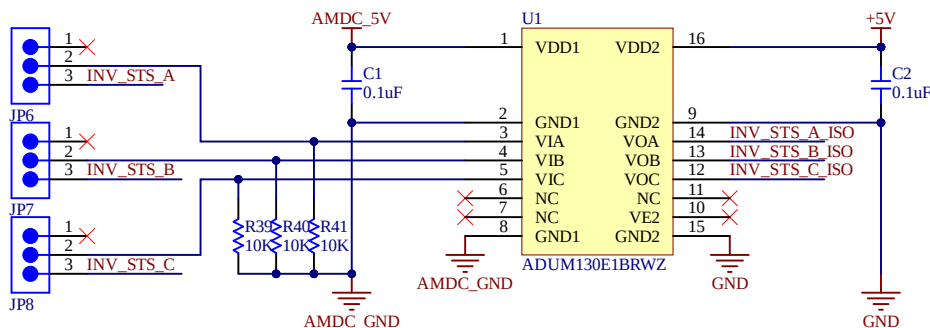Title: **Input Connector**


File: InputConnector.SchDoc

Sheet: 1 of 4






Revision: D

Time: 6:26:11 PM

Date: 7/30/2026

Severson Group
WEMPEC
UW-Madison

Engineer: Brandt Buchda & Patrick Nowako

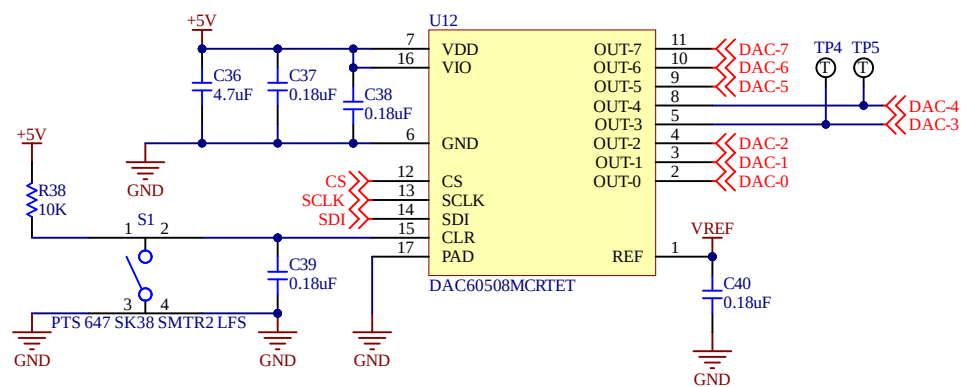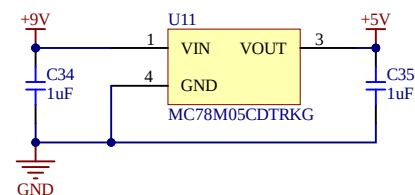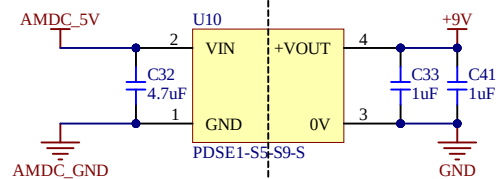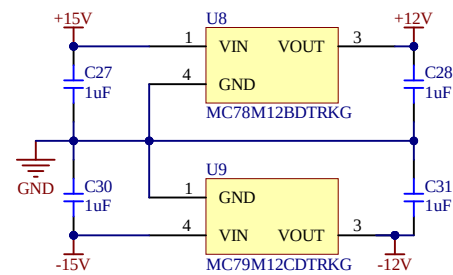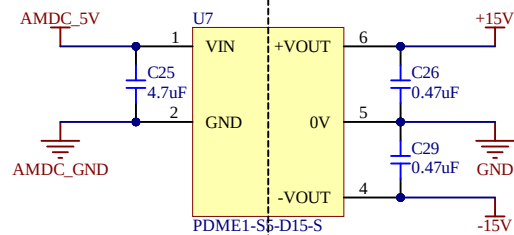Title: **DAC**

File: DAC.SchDoc

Revision: D


Time: 6:26:11 PM



Date: 7/30/2026

Sheet: 2 of 4


Severson Group
WEMPEC
UW-Madison

Engineer: Brandt Buchda




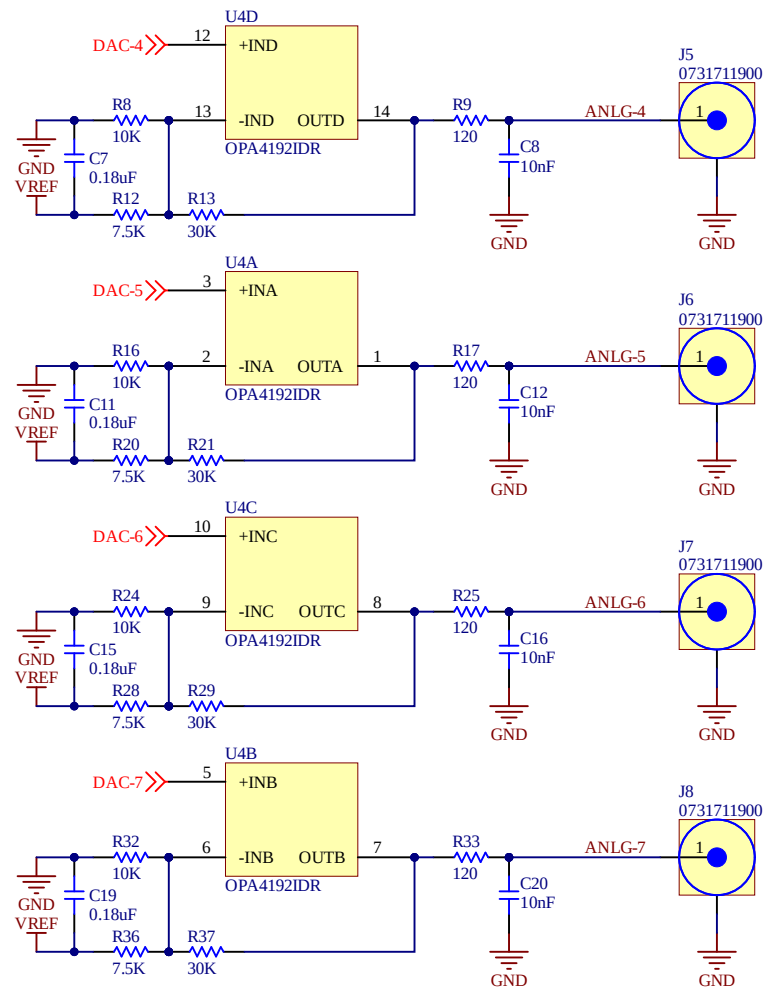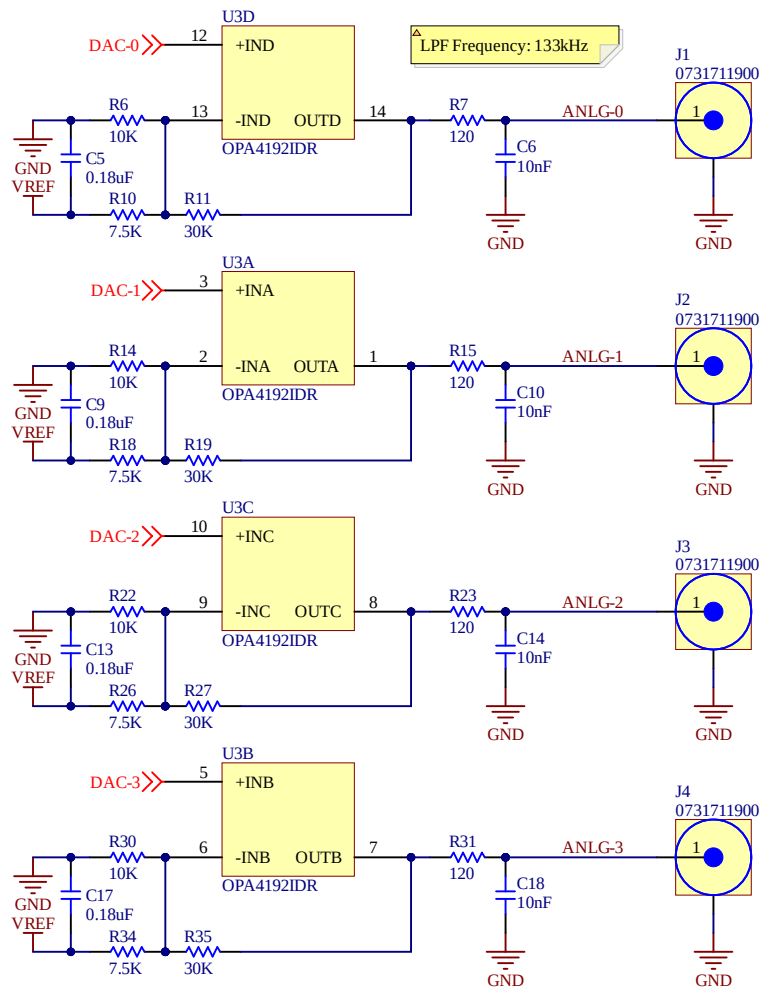


ESD Protection

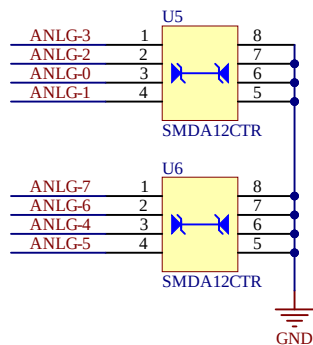

OP Amp Power Supply

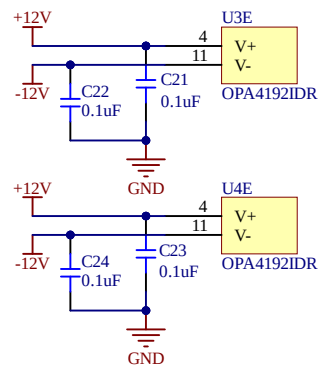

Screw Terminal Connectors

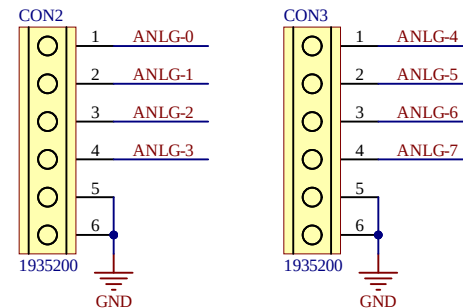

Title: **Output Connectors**

File: OutputConnectors.SchDoc

Revision: D


Time: 6:26:11 PM

Sheet: 3 of 4

Date: 7/30/2026

Severson Group
WEMPEC
UW-Madison

Engineer: Brandt Buchda & Patrick Nowakowski




4-40 Screws:



4-40 Standoffs:



Pinout Jumpers:
Silkscreen marked with default locations



Mounting Holes:

