
EE 330 Lecture 8

Technology Files

- Design Rules
- IC Fabrication Technology Part I

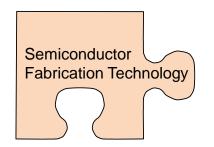

Review from Last Time

Technology Files

Fabrication CAD

Circuits Devices

- Provide Information About Process
 - Process Flow (Fabrication Technology)
 - Model Parameters
 - Design Rules
- Serve as Interface Between Design Engineer and Process Engineer
- Insist on getting information that is deemed important for a design
 - Limited information available in academia
 - Foundries often sensitive to who gets access to information
 - Customer success and satisfaction is critical to foundries

Technology Files

Design Rules

- Process Flow (Fabrication Technology) (will discuss next)
- Model Parameters (will discuss in substantially more detail after device operation and more advanced models are introduced)

First – A preview of what the technology files look like!

Typical Design Rules

TABLE 2B.2
Design rules for a typical p-well CMOS process
(See Table 2B.3 in color plates for graphical interpretation)

	Dimensions	
	Microns	Scalable
. p-well (CIF Brown, Mask #1a)		
1.1 Width	5	4λ
1.2 Spacing (different potential)	15	10λ
1.3 Spacing (same potential)	9	6λ
. Active (CIF Green, Mask #2)		
2.1 Width	4	2λ
2.2 Spacing	4	2λ
2.3 p+ active in n-subs to p-well edge	8	6λ
2.4 n+ active in n-subs to p-well edge	7	5λ
2.5 n ⁺ active in p-well to p-well edge	4	2λ
2.6 p ⁺ active in p-well to p-well edge	1	λ
. Poly (POLY I) (CIF Red, Mask #3)		
3.1 Width	3	2λ
3.2 Spacing	3	2λ
3.3 Field poly to active	2	λ
3.4 Poly overlap of active	3	2λ
3.5 Active overlap of poly	4	2λ
. p ⁺ select (CIF Orange, Mask #4)		
4.1 Overlap of active	2 2	λ
4.2 Space to n+ active	T.	λ
4.3 Overlap of channel ^b	3.5	2λ
4.4 Space to channel ^b	3.5	2λ
4.5 Space to p ⁺ select	3	2λ .
4.6 Width	3	2λ

Typical Design Rules (cont)


5 .	Contac	ct ^c (CIF Purple, Mask #6)		
	5.1	Square contact, exactly	3×3	$2\lambda \times 2\lambda$
	5.2	Rectangular contact, exactly	3×8	$2\lambda \times 6\lambda$
	5.3	Space to different contact	3	2λ
	5.4	Poly overlap of contact	2	λ .
	5.5	Poly overlap in direction of metal 1	2.5	2λ
	5.6	Space to channel	3	2λ
	5.7	Metal 1 overlap of contact	2	λ
	5.8	Active overlap of contact	2	λ
	5.9	p+ select overlap of contact	3	2λ
	5.10	Subs./well shorting contact, exactly	3 × 8	$2\lambda \times 6\lambda$
6.	Metal	1 ^d (CIF Blue, Mask #7)		
	6.1	Width	3	2λ
	6.2	Spacing	4	3λ
	6.3	Maximum current density	$0.8 \text{ mA/}\mu$	$0.8 \text{ mA/}\mu$

Typical Design Rules (cont)

-	35 - 6	(CIT: Downlos Hoteland, Monte #C1)		
7.		(CIF Purple Hatched, Mask #C1)	2 ~ 2	21 × 21
	7.1	Size, exactly	3 × 3	$2\lambda \times 2\lambda$
	7.2	Separation	3 4	2λ
	7.3	Space to poly edge	-	2λ
	7.4	Space to contact	3	2λ
	7.5	Overlap by metal 1	2	λ .
	7.6	Overlap by metal 2	2	λ
	7.7	Space to active edge	. 3	2λ
8.	Metal	2 (CIF Orange Hatched, Mask #C2)		
	8.1	Width	5	3λ
	8.2	Spacing	5	3λ
	8.3	Bonding pad size	100×100	$100 \ \mu \times 100 \ \mu$
	8.4	Probe pad size	75×75	$75 \mu \times 75 \mu$
	8.5	Bonding pad separation	50	50 μ
	8.6	Bonding to probe pad	30	30 μ
	8.7	Probe pad separation	30	30 μ
	8.8	Pad to circuitry	40	40 μ
	8.9	Maximum current density	$0.8 \text{ mA/}\mu$	$0.8 \text{ mA/}\mu$
9.	Passiv	vation (CIF Purple Dashed, Mask #8)		
,	9.1	Bonding pad opening	90 × 90	$90 \mu \times 90 \mu$
	9.2	Probe pad opening	65 × 65	$65 \mu \times 65 \mu$
			_	ου μ Α ου μ
10.		2 crossing coincident metal 1 and poly	8	
	10.1	Metal 1 to poly edge spacing	_	
		when crossing metal 2	2	λ
	10.2	Rule domain	2	λ
11.	Electr	rode (POLY II)h (CIF Purple Hatched, M	Mask #A1)	
	11.1	Width	3	2λ
	11.2	Spacing	3	2λ
	11.3	POLY I overlap of POLY II	2	λ
	11.4	Space to contact	3	2λ

Typical Design Rules (cont) SCMOS Layout Rules - Poly

Rule	Decoriation	Lambda SCMOS SUBM DE	Lambda	ambda	
	Description		DEEP		
3.1	Minimum width	2	2	2	
3.2	Minimum spacing over field	2	3	3	
3.2.a	Minimum spacing over active	2	3	4	
3.3	Minimum gate extension of active	2	2	2.5	
3.4	Minimum active extension of poly	3	3	4	
3.5	Minimum field poly to active	1	1	1	

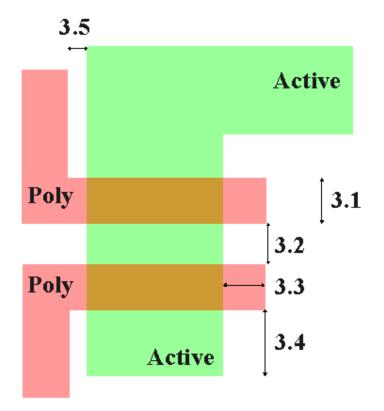

Typical Process Description

Process scenario of major process steps in typical p-well CMOS process^a

1.	Clean wafer	
2.	GROW THIN OXIDE	
3.	Apply photoresist	
4.	PATTERN P-WELL	(MASK #1)
5.	Develop photoresist	
6.	Deposit and diffuse p-type impurities	
7.	Strip photoresist	
8.	Strip thin oxide	
9.	Grow thin oxide	
10.	Apply layer of Si ₃ N ₄	
11.	Apply photoresist	
12.	PATTERN Si ₃ N ₄ (active area definition)	(MASK #2)
13.	Develop photoresist	
14.	Etch Si ₃ N ₄	
15.	Strip photoresist	
	Optional field threshold voltage adjust	
	A.1 Apply photoresist	
	A.2 PATTERN ANTIMOAT IN SUBSTRATE	(MASK #A1)
	A.3 Develop photoresist	
	A.4 FIELD IMPLANT (n-type)	
	A.5 Strip photoresist	•
16.	GROW FIELD OXIDE	
17.	Strip Si ₃ N ₄	
18.	Strip thin oxide	
19.	GROW GATE OXIDE	
20.	POLYSILICON DEPOSITION (POLY I)	
21.	Apply photoresist	
22.	PATTERN POLYSILICON	(MASK #3)
23.	Develop photoresist	
24.	ETCH POLYSILICON	

Typical Process Description (cont)

25.	Strip photoresist Optional steps for double polysilicon process B.1 Strip thin oxide B.2 GROW THIN OXIDE B.3 POLYSILICON DEPOSITION (POLY II) B.4 Apply photoresist B.5 PATTERN POLYSILICON B.6 Develop photoresist B.7 ETCH POLYSILICON B.8 Strip photoresist	(MASK #B1)
	B.9 Strip thin oxide	
26.	Apply photoresist	
27.	PATTERN P-CHANNEL DRAINS AND SOURCES AND	(MASK #4)
	P+ GUARD RINGS (p-well ohmic contacts)	(17211011 1/11)
28.	Develop photoresist	
29.	p ⁺ IMPLANT	
30.	Strip photoresist	
31.	Apply photoresist	
32.	PATTERN N-CHANNEL DRAINS AND SOURCES AND N+ GUARD RINGS (top ohmic contact to substrate)	(MASK #5)
33.	Develop photoresist	
34.	n+ IMPLANT	
35.	Strip photoresist	
36.	Strip thin oxide	
37.	Grow oxide	
38.	Apply photoresist	
39.	PATTERN CONTACT OPENINGS	(MASK #6)
40.	Develop photoresist	, , , , ,
41.	Etch oxide	
42.	Strip photoresist	
43.	APPLY METAL	
44.	Apply photoresist	
45.	PATTERN METAL	(MASK #7)
46.	Develop photoresist	
47.	Etch metal	

Typical Process Description (cont)

48.	Strip photoresist	
	Optional steps for double metal process	
	C.1 Strip thin oxide	
	C.2 DEPOSIT INTERMETAL OXIDE	
	C.3 Apply photoresist	
	C.4 PATTERN VIAS	(MASK #C1)
	C.5 Develop photoresist	
	C.6 Etch oxide	
	C.7 Strip photoresist	
	C.8 APPLY METAL (Metal 2)	
	C.9 Apply photoresist	
	C.10 PATTERN METAL	(MASK #C2)
	C.11 Develop photoresist	
	C.12 Etch metal	
	C.13 Strip photoresist	
49.		
50.		
51.	** * *	(MASK #8)
		(1.11.1011 // 0)
	* *	
1	- · · · · · · · · · · · · · · · · · · ·	
	• •	
	C.11 Develop photoresist	(MASK #8)

Typical Model Parameters

Process parameters for a typical a p-well CMOS process

• • • • • • • • • • • • • • • • • • •	Typical	Tolerance b	Units
Square law	model parameters		
V_{T0} (threshold voltage)			
n-channel (V _{TN0})	0.75	± 0.25	v
p-channel (V_{TP0})	-0.75	± 0.25	v
K'(conduction factor)			
n-channel	24	± 6	$\mu A/V^2$
p-channel	8	± 1.5	μΑ/V ² μΑ/V ²
γ(body effect)			
n-channel	0.8	± 0.4	$V^{1/2}$
p-channel	0.4	± 0.2	$V^{1/2}$
λ(channel length modulation)			
n-channel	0.01	± 50%	V^{-1}
p-channel	0.02	± 50%	V^{-1}
ϕ (surface potential)			
n- and p-channel	0.6	± 0.1	v
Proce	ss parameters		
μ (channel mobility)			
n-channel	710		$cm^2/(V \cdot s)$
p-channel	230		cm ² /(V·s
	Doping ^c		
n ⁺ active	5	±4	10 ¹⁸ /cm ³
p ⁺ active	5	±4	10 ¹⁷ /cm ³
p-well	5	±2	10 ¹⁶ /cm ³
n-substrate	1	±0.1	10 ¹⁶ /cm ³

Physical feature sizes

T _{OX} (gate oxide thickness)	500	± 100	Å
Total lateral diffusion			
n-channel	0.45	± 0.15	μ
p-channel	0.6	± 0.3	μ
Diffusion depth			
n+ diffusion	0.45	± 0.15	μ
p ⁺ diffusion	0.6	± 0.3	μ
p-well	3.0	± 30%	μ
Insulating layer s	eparation		
POLY I to POLY II	800	± 100	Å
Metal 1 to Substrate	1.55	± 0.15	μ
Metal 1 to Diffusion	0.925	± 0.25	μ
POLY I to Substrate (POLY I on field oxide)	0.75	± 0.1	μ
Metal 1 to POLY I	0.87	± 0.7	μ
Metal 2 to Substrate	2.7	± 0.25	μ
Metal 2 to Metal I	1.2	± 0.1	μ
Metal 2 to POLY I	2.0	± 0.07	μ

Capacitane	es ^d		
C _{OX} (gate oxide capacitance, n- and p-channel)	0.7	±0.1	fF/μ²
POLY I to substrate, poly in field	0.045	±0.01	fF/μ^2
POLY II to substrate, poly in field	0.045	±0.01	fF/μ^2
Metal 1 to substrate, metal in field	0.025	± 0.005	fF/μ^2
Metal 2 to substrate, metal in field	0.014	± 0.002	fF/μ^2
POLY I to POLY II	0.44	±0.05	fF/μ^2
POLY I to Metal 1	0.04	± 0.01	fF/μ^2
POLY I to Metal 2	0.039	± 0.003	fF/μ^2
Metal 1 to Metal 2	0.035	±0.01	fF/μ^2
Metal 1 to diffusion	0.04	± 0.01	fF/μ^2
Metal 2 to diffusion	0.02	± 0.005	fF/μ^2
n+ diffusion to p-well (junction, bottom)	0.33	±0.17	fF/μ^2
n ⁺ diffusion sidewall (junction, sidewall)	2.6	±0.6	fF/μ
p+ diffusion to substrate (junction, bottom)	0.38	±0.12	fF/μ^2
p+ diffusion sidewall (junction, sidewall)	3.5	±2.0	fF/μ
p-well to substrate (junction, bottom)	0.2	± 0.1	fF/μ^2
p-well sidewall (junction, sidewall)	1.6	±1.0	fF/μ
Resistance	es		
Substrate	25	±20%	Ω-cm
p-well	5000	±2500	Ω/\Box
n ⁺ diffusion	35	±25	Ω / \square
p ⁺ diffusion	80	±55	Ω / \square
Metal	0.003	±25%	Ω/\square
Poly	25	±25%	Ω/\square
Metal 1-Metal 2 via (3 $\mu \times 3 \mu$ contact)	< 0.1		Ω
Metal 1 contact to POLY I (3 $\mu \times 3 \mu$ contact)	<10		Ω
Metal 1 contact to n+ or p+ diffusion			
$(3 \mu \times 3 \mu \text{ contact})$	<5		Ω

Breakdown voltages, leakage currents, migration currents and operating conditions

Punchthrough voltages (Gate oxide, POLY I to POLY II)	>10	V
Diffusion reverse breakdown voltage	>10	v
p-well to substrate reverse breakdown voltage	>20	V
Metal 1 in field threshold voltage	>10	V
Metal 2 in field threshold voltage	>10	V
Poly-field threshold voltage	>10	v
Maximum operating voltage	7.0	v
n+ diffusion to p-well leakage current	0.25	fA/μ^2
p+ diffusion to substrate leakage current	0.25	fA/μ^2
p-well leakage current	0.25	fA/μ^2
Maximum metal current density	0.8	mA/μ width
Maximum device operating temperature	200	°C

SPICE MOSFET model parameters of a typical p-well CMOS process (MOSIS^a)

Parameter (Level 2 model)	n-channel	p-channel	Units
VTO	0.827	-0.895	v
KP	32.87	15.26	μ A/V ²
GAMMA	1.36	0.879	$V^{1/2}$
PHI	0.6	0.6	V
LAMBDA	1.605E-2	4.709E-2	V^{-1}
CGSO	5.2E-4	4.0E-4	fF/μ width
CGDO	5.2E-4	4.0E-4	fF/μ width
RSH	25	95	$\Omega /\!\Box$
CJ	3.2E-4	2.0E-4	ρ /1 F/μ ²
MJ	0.5	0.5	
CJSW	9.0E-4	4.5E-4	ρ AF/μ perimeter
MJSW	0.33	0.33	1
TOX	500	500	Å
NSUB	1.0E16	1.12E14	1/cm ³
NSS	0	0	1/cm ²
NFS	1.235E12	8.79E11	1/cm ²
TPG	1	-1	
XJ	0.4	0.4	μ
LD	0.28	0.28	μ
UO	200	100	$cm^2/(V \cdot s)$
UCRIT	9.99E5	1.64E4	V/cm
UEXP	1.001E-3	0.1534	
VMAX	1.0E5	1.0E5	m/s
NEFF	1.001E-2	1.001E-2	
DELTA	1.2405	1.938	

 	•							
		N NMOS (,			LEVEL	=	49
+VERSION	=	3.1	TNOM	=	27	TOX	=	1.4E-8
+XJ	=	1.5E-7	NCH	=	1.7E17	VTHO	=	0.6656437
+K1	=	0.875093	K2	=	-0.0943223	K3	=	25.0562441
+K3B	=	-8.5140476	WO	=	1.01582E-8	NLX	=	1E-9
+DVTOW	=	0	DVT1W	=	0	DVT2W	=	0
+DVTO	=	2.670658	DVT1	=	0.4282172	DVT2	=	-0.1373089
+00	=	452.3081836	UA	=	3.061716E-13	UB	=	1.515137E-18
+UC	=	1.166279E-11	VSAT	=	1.682414E5	AO	=	0.6297744
+AGS	=	0.1384489	во	=	2.579158E-6	B1	=	5E-6
+KETA	=	-3.615287E-3	A1	=	1.054571E-6	A2	=	0.3379035
+RDSW	=	1.380341E3	PRWG	=	0.0301426	PRWB	=	0.0106493
+WR	=	1	WINT	=	2.594349E-7	LINT	=	7.489566E-8
+XL	=	1E-7	XW	=	0	DWG	=	-9.471353E-9
+DWB	=	3.537786E-8	VOFF	=	0	NFACTOR	=	1.0754804
+CIT	=	0	CDSC	=	2.4E-4	CDSCD	=	0
+CDSCB	=	0	ETAO	=	2.332015E-3	ETAB	=	-1.531255E-4
+DSUB	=	0.076309	PCLM	=	2.6209353	PDIBLC1	=	1
+PDIBLC2	=	2.23243E-3	PDIBLCB	=	-0.0436947	DROUT	=	1.0300278
+PSCBE1	=	6.619472E8	PSCBE2	=	2.968801E-4	PVAG	=	9.970995E-3
+DELTA	=	0.01	RSH	=	80.9	MOBMOD	=	1
+PRT	=	0	UTE	=	-1.5	KT1	=	-0.11
+KT1L	=	0	KT2	=	0.022	UA1	=	4.31E-9
+UB1	=	-7.61E-18	UC1	=	-5.6E-11	AT	=	3.3E4
+WL	=	0	WLN	=	1	WW	=	0
+WWN	=	1	WWL	=	0	LL	=	0
+LLN	=	1	LW	=	0	LWN	=	1
+LWL	=	0	CAPMOD	=	2	XPART	=	0.5
+CGDO	=	2.34E-10	CGSO	=	2.34E-10	CGBO	=	1E-9
+CJ	=	4.240724E-4	PB	=	0.9148626	MJ	=	0.4416777
+CJSW	=	3.007134E-10	PBSW	=	0.8	MJSW	=	0.2025106
+CJSWG	=	1.64E-10	PBSWG	=	0.8	MJSWG	=	0.2025106
+CF	=	0	PVTHO	=	0.0526696	PRDSW	=	110.1539295
+PK2	=	-0.0283027	WKETA	=	-0.0191754	LKETA	=	8.469064E-4

98 parameters in this BSIM Model!

.MODEL C	MOSP PMOS (LEVEL	=	49
+VERSION	= 3.1	TNOM	=	27	TOX	=	1.4E-8
+XJ	= 1.5E-7	NCH	=	1.7E17	VTHO	=	-0.9633249
+K1	= 0.5600277	K2	=	9.302429E-3	КЗ	=	7.2192028
+K3B	= -1.0103515	WO	=	1.010628E-8	NLX	=	5.826683E-8
+DVTOW	= 0	DVT1W	=	0	DVT2W	=	0
+DVTO	= 2.2199372	DVT1	=	0.5378964	DVT2	=	-0.1158128
+00	= 220.5729225	UA	=	3.141811E-9	UB	=	1.085892E-21
+UC	= -5.76898E-11	VSAT	=	1.342779E5	AO	=	0.9333822
+AGS	= 0.157364	во	=	9.735259E-7	B1	=	5E-6
+KETA	= -2.42686E-3	A1	=	3.447019E-4	A2	=	0.3701317
+RDSW	= 3E3	PRWG	=	-0.0418484	PRWB	=	-0.0212357
+WR	= 1	WINT	=	3.097872E-7	LINT	=	1.040878E-7
+XL	= 1E-7	XW	=	0	DWG	=	-1.983686E-8
+DWB	= 1.629532E-8	VOFF	=	-0.0823738	NFACTOR	=	0.969384
+CIT	= 0	CDSC	=	2.4E-4	CDSCD	=	0
+CDSCB	= 0	ETAO	=	0.4985496	ETAB	=	-0.0653358
+DSUB	= 1	PCLM	=	2.1142057	PDIBLC1	=	0.0256688
+PDIBLC2	= 3.172604E-3	PDIBLCB	=	-0.0511673	DROUT	=	0.1695622
+PSCBE1	= 1.851867E10	PSCBE2	=	1.697939E-9	PVAG	=	0
+DELTA	= 0.01	RSH	=	103.6	MOBMOD	=	1
+PRT	= 0	UTE	=	-1.5	KT1	=	-0.11
+KT1L	= 0	KT2	=	0.022	UA1	=	4.31E-9
+UB1	= -7.61E - 18	UC1	=	-5.6E-11	AT	=	3.3E4
+WL	= 0	WLN	=	1	WW	=	0
+WWN	= 1	WWL	=	0	LL	=	0
+LLN	= 1	LW	=	0	LWN	=	1
+LWL	= 0	CAPMOD	=	2	XPART	=	0.5
+CGDO	= 3.09E-10	CGSO	=	3.09E-10	CGBO	=	1E-9
+CJ	= 7.410008E-4	PB	=	0.9665307	MJ	=	0.4978642
+CJSW	= 2.487127E-10	PBSW	=	0.99	MJSW	=	0.3877813
+CJSWG	= 6.4E-11	PBSWG	=	0.99	MJSWG	=	0.3877813
+CF	= 0	PVTHO	=	5.98016E-3	PRDSW	=	14.8598424
+PK2	= 3.73981E-3	WKETA	=	2.870507E-3	LKETA	=	-4.823171E-3
_							

Technology Files


Design Rules

- Process Flow (Fabrication Technology) (will discuss next)
- Model Parameters (will discuss in substantially more detail after device operation and more advanced models are introduced)

Design Rules


- Give minimum feature sizes, spacing, and other constraints that are acceptable in a process
- Very large number of devices can be reliably made with the design rules of a process
- Yield and performance unpredictable and often low if rules are violated
- Compatible with design rule checker in integrated toolsets

Design Rules and Layout - consider transistors

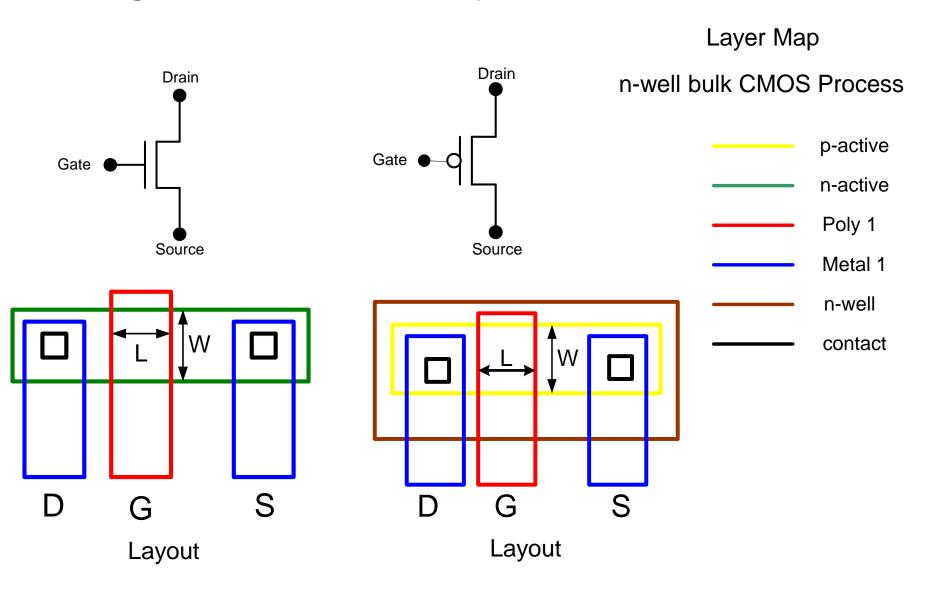


Layout always represented in a top view in two dimensions

Design Rules and Layout – consider transistors

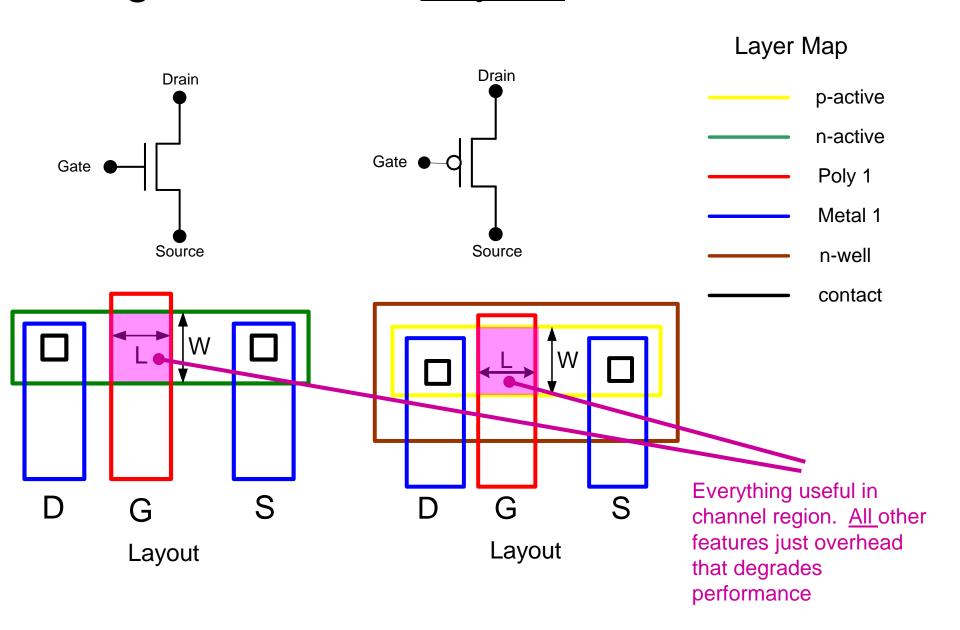

Design Rules

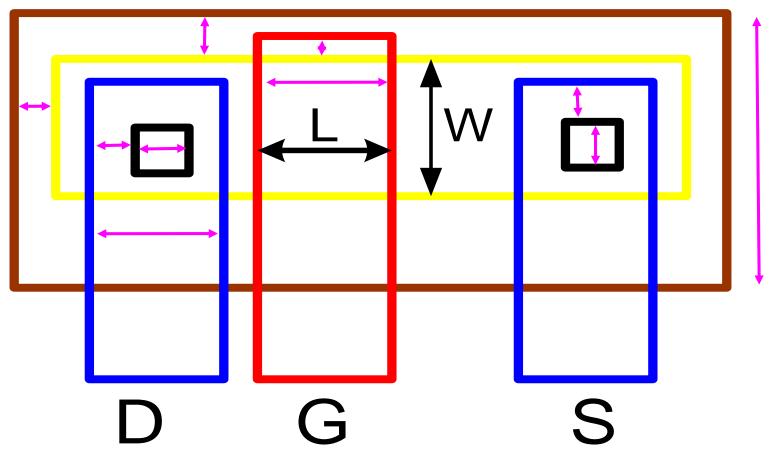


Design rules give minimum feature sizes and spacings


Designers generally do layouts to minimize size of circuit subject to design rule constraints (because yield, cost, and performance usually improve)

MOS Transistor

Qualitative Discussion of n-channel Operation

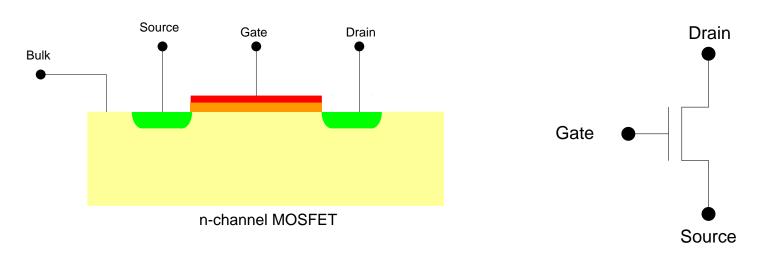

Equivalent Circuit for n-channel MOSFET

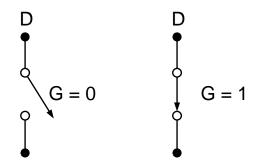



- Source assumed connected to (or close to) ground
- V_{GS}=0 denoted as Boolean gate voltage G=0
 V_{GS}=V_{DD} denoted as Boolean gate voltage G=1
 - Boolean G is relative to ground potential

This is the first model we have for the n-channel MOSFET!


Ideal switch-level model

MOS Transistor

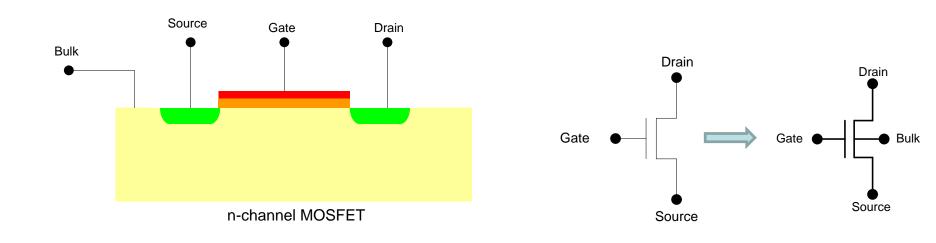


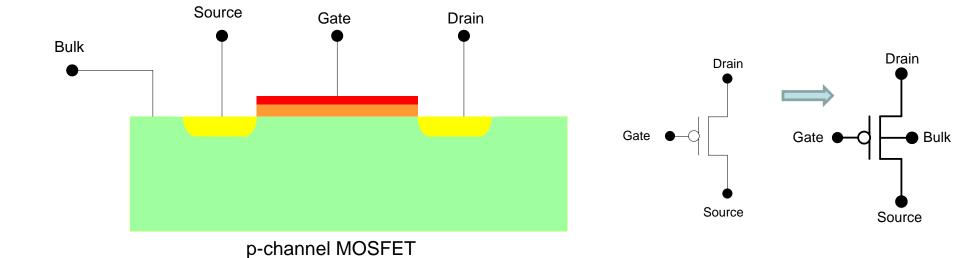

MOS Transistor in Bulk CMOS Process

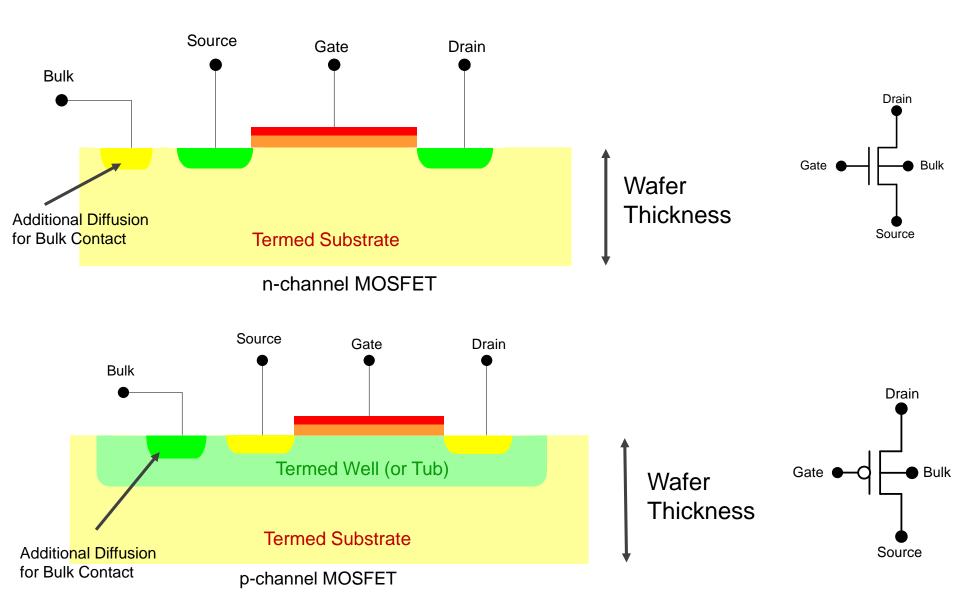


Design Rules and Layout – consider transistors

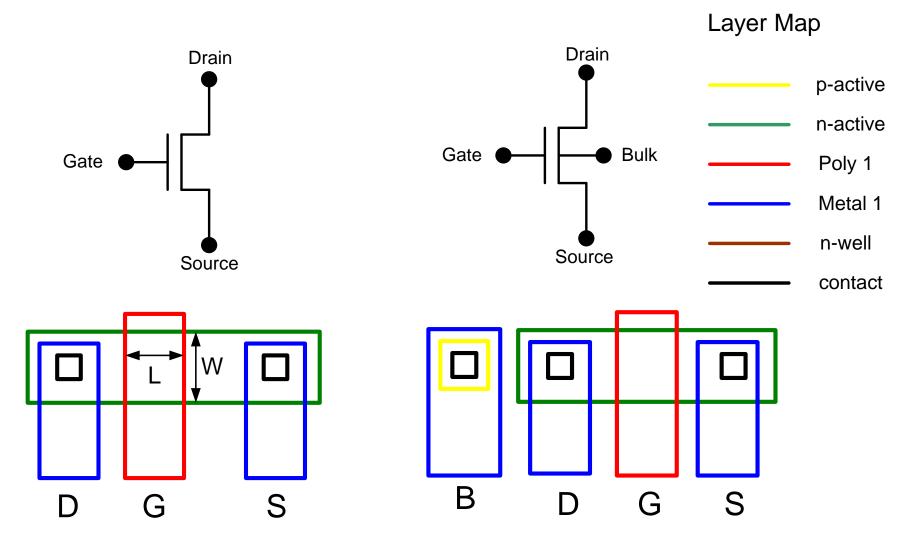


- Bulk connection needed
- Single bulk connection can often be used for several (many) transistors

Design Rules and Layout – consider transistors

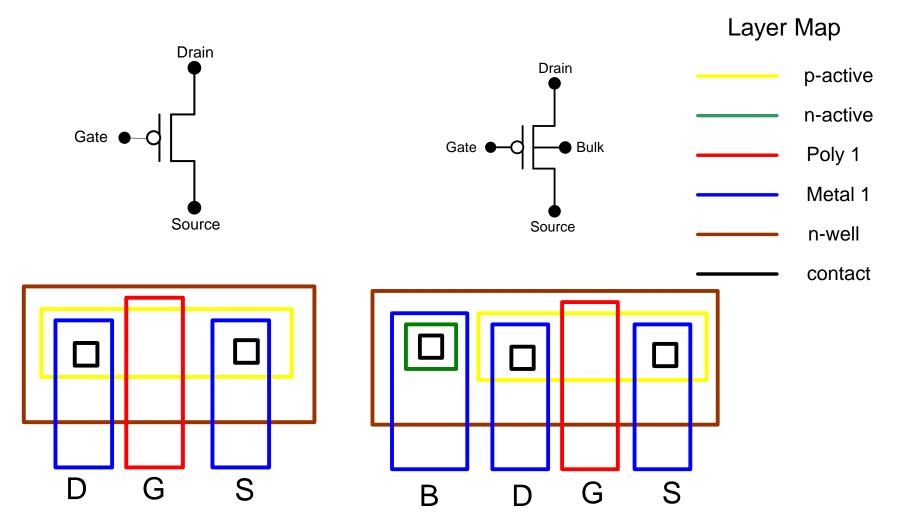



- Bulk connection needed
- Single bulk connection can often be used for several (many) transistors if they share the same well


Design Rules and Layout (example)

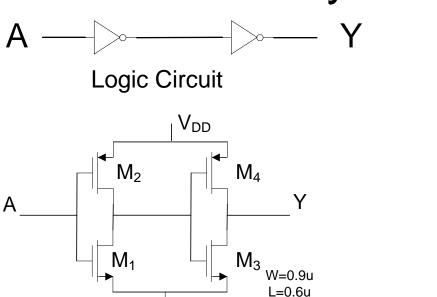


Circuit Schematic (Including Device Sizing)

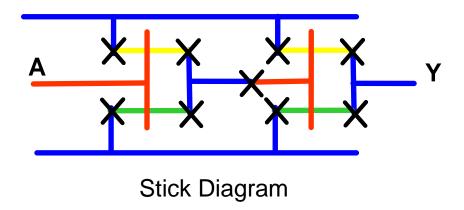


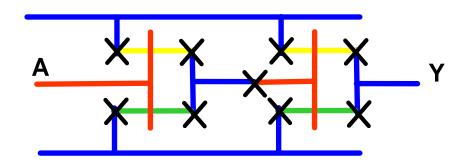

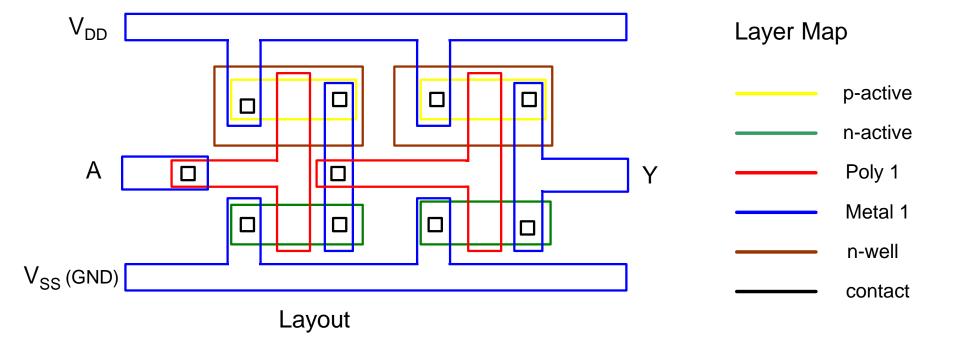


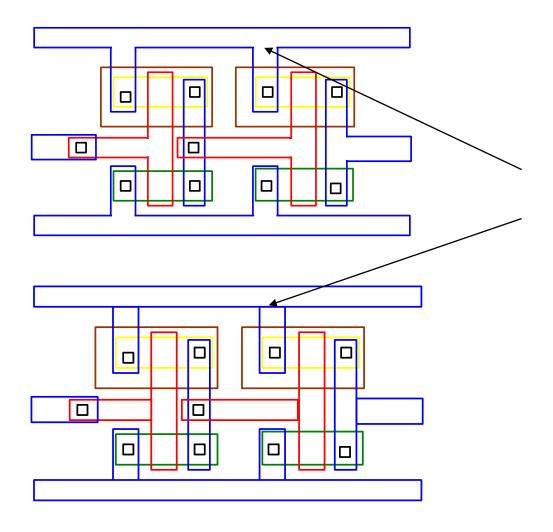


- Polygons merged in Geometric Description File (GDF)
- Separate rectangles generally more convenient to represent

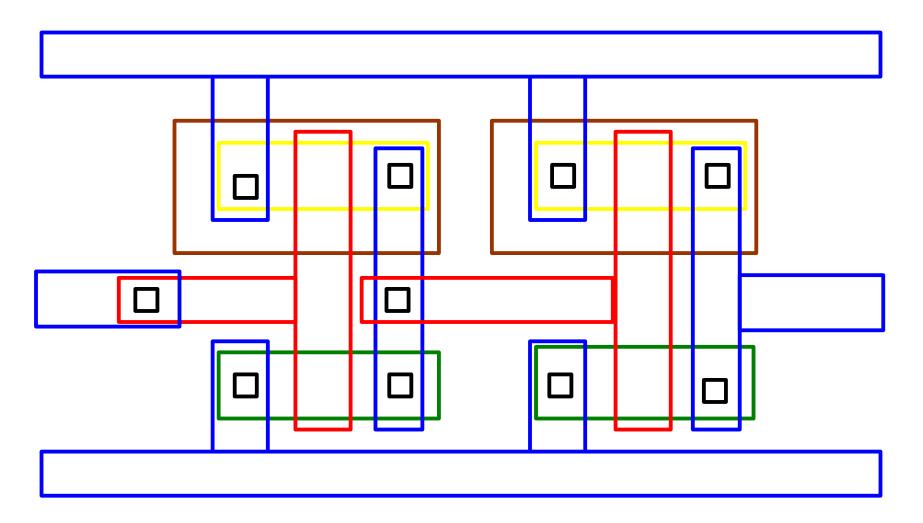



- Design rules must be satisfied throughout the design
- DRC runs incrementally during layout in most existing tools to flag most problems
- DRC can catch layout design rule errors but not circuit connection errors

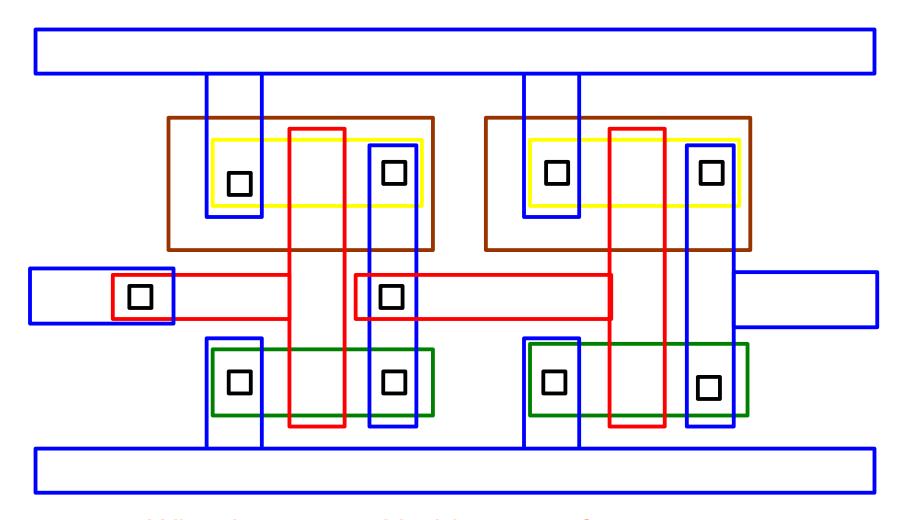

What is wrong with this layout?
Bulk connections missing!

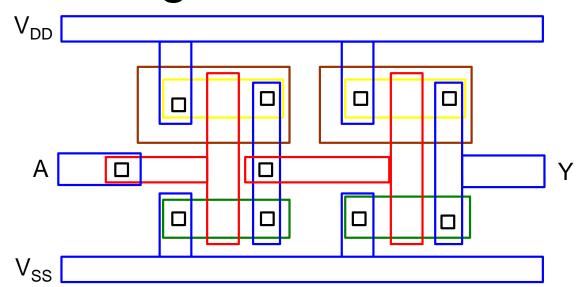


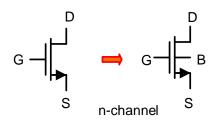


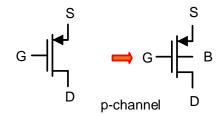


Actually 4-terminal device

- Note diffusions needed for bulk connections
- Note n-well connections increase area a significant amount
- Note n-wells are both connected to V_{DD} in this circuit

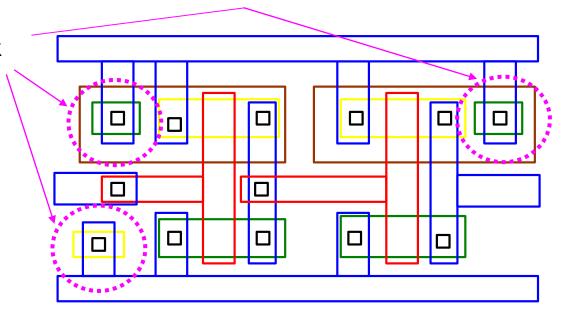

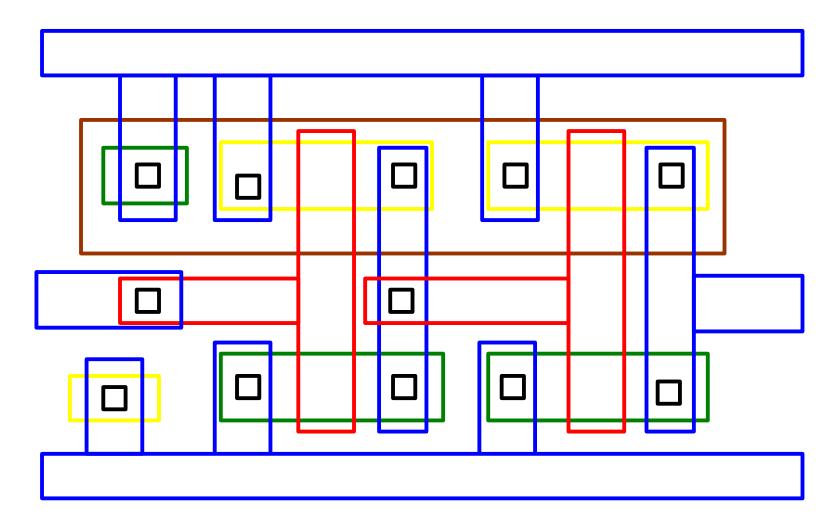

Layout with shared p-well reduces area

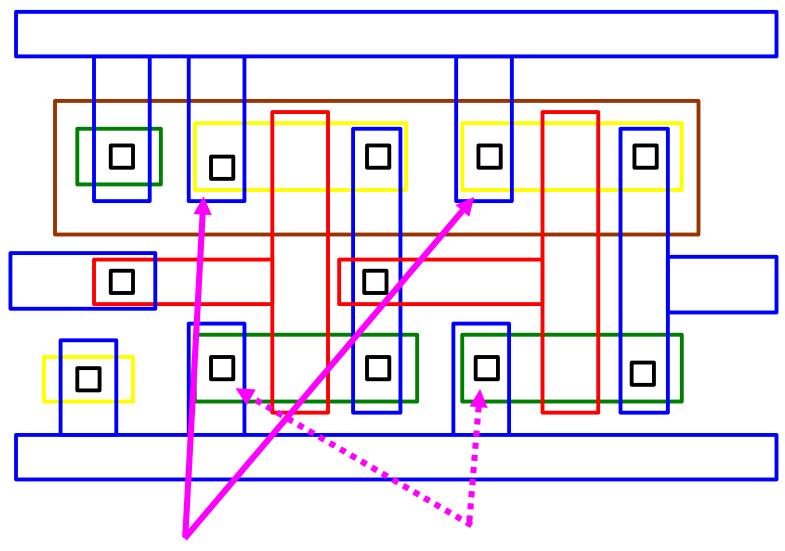

Shared p-active can be combined to reduce area

Shared n-active can be combined to reduce area

Design Rules


- Design rules can be given in absolute dimensions for every rule
- Design rules can be parameterized and given relative to a parameter
 - Makes movement from one process to another more convenient
 - Easier for designer to remember
 - Some penalty in area efficiency
 - Often termed λ-based design rules
 - Typically λ is ½ the minimum feature size in a process

Design Rules

See <u>www.MOSIS.com</u> for design rules

- Some of these files are on class WEB site
 - SCMOS Rules Updated Sept 2005.pdf
 - Mosis Rules Pictorial.pdf



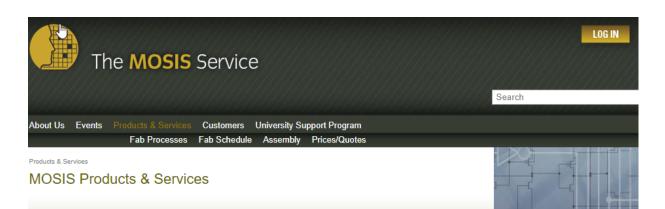

Behind MOSIS is a service infrastructure equipped to deliver a full range of products to today's ambitious IC designers – worldwide.

Through our trusted partnerships with top foundries, customers can access cutting-edge technologies and manufacturing solutions that span all parts of the production cycle.

Our technical experts make the process simple, efficient and less time-intensive. From small to large-quantity fabrication runs, to packaging and assembly, our portfolio is optimized for flexibility and tailored to meet the unique production needs of our diverse customers.

PRODUCTS

Multi-Project Wafer (MPW) Runs

This "shared mask' model combines on one mask set designs from multiple customers or diverse designs from a single company.

Dedicated Runs

Dedicated (COT, or Customer Owned Tooling) runs through MOSIS are also available. Dedicated runs can be scheduled to start at any time.

Prices and Quotes

Costs for fabrication, packaging and assembly services are available online.

FABRICATION PROCESSES

GlobalFoundries featured processes:

CMOS:12 nm, 22 FDX, 45 RFSOI, 55 nm, 9HP (90 nm), 9WG (90 nm), 8HP (0.13 μ m), 8XP (0.13 μ m), 7WL (0.18 μ m) and 7SW (0.18 μ m).

TSMC featured processes:

28 nm, 40 nm, 65 nm and 180 nm.

ON Semi featured CMOS processes

C5 (0.5 µm) CMOS

Events > Products & Services > Fab Processes > ON Semiconductor > ON Semi 0.50 Micron B5 Process

B5 Process

ON Semiconductor (formerly AMIS) 0.50 Micron

Process Family Description

This non-silicided CMOS process has 3 metal layers and 2 poly layers, and a high resistance layer. Stacked contacts are supported. The process is for 5 volt applications. MOSIS orders EPI wafers for this process. Non-EPI (bulk) is an additional cost option and not available for MEP submissions. For further information, see the ON Semiconductor Foundry Mixed-Signal Offerings web page.

B5N Process

PiP (poly2 over poly) capacitors (950 aF/µm²) and the HRP (High Resistance) option are available on multiproject

B5F Process

The B5F process offers the above layers of C5N plus Thick_Gate, N_Minus_Implant (Npblk), and P_Minus_Implant (Ppblk).

Design Rules

This process supports the following design rules:

Design Rules	Lambda ¹	Feature Size ¹	Availablility
ON Semi B5F/N Rules	n/a	0.60	MoSIS, ON Semiconductor
SCMOS_SUBM	0.30	0.60	MOSIS in PDF
SCMOS	0.35	0.60 (after sizing)	MOSIS in PDF
¹ Values in micrometers (µm)			

This will take you to a 54 page pdf file that can be downloaded

Examples in slides

Table 2a: MOSIS SCMOS-Compatible Mappings

Foundry	Process	Lambda (micro- meters)	Options
ON Semi	C5F/N (0.5 micron n-well)	0.35	SCN3M, SCN3ME
TSMC	0.35 micron 2P4M (4 Metal Polycided, 3.3 V/5 V)	0.25	SCN4ME
TSMC	0.35 micron 1P4M (4 Metal Silicided, 3.3 V/5 V)	0.25	SCN4M

Table 2b: MOSIS SCMOS_SUBM-Compatible Mappings

Foundry	Process	Lambda (micro- meters)	Options
ON Semi	C5F/N (0.5 micron n-well)	0.30	SCN3M SUBM, SCN3ME SUBM
TSMC	0.35 micron 2P4M (4 Metal Polycided, 3.3 V/5 V)	0.20	SCN4ME SUBM
TSMC	0.35 micron 1P4M (4 Metal Silicided, 3.3 V/5 V)	0.20	SCN4M SUBM
TSMC	0.25 micron 5 Metal 1 Poly (2.5 V/3.3 V)	0.15	SCN5M SUBM
TSMC 📐	0.18 micron 6 Metal 1 Poly (1.8 V/3.3 V)	0.10	SCN6M SUBM

Table 2c: MOSIS SCMOS_DEEP-Compatible Mappings

Foundi	Process	Lambda (micro- meters)	Options
TSMC	0.25 micron 5 Metal 1 Poly (2.5 V/3.3 V)	0.12	SCN5M DEEP
TSMC	0.18 micron 6 Metal 1 Poly (1.8 V/3.3 V)	0.09	SCN6M DEEP

Our labs and class projects

2.1. Well Type

The Scalable CMOS (SC) rules support both n-well and p-well processes. MOSIS recognizes three base technology codes that let the designer specify the well type of the process selected. SCN specifies an n-well process, SCP specifies a p-well process, and SCE indicates that the designer is willing to utilize a process of either n-well or p-well.

An SCE design must provide both a drawn n-well and a drawn p-well; MOSIS will use the well that corresponds to the selected process and ignore the other well. As a convenience, SCN and SCP designs may also include the other well (p-well in an SCN design or n-well in an SCP design), but it will always be ignored.

MOSIS currently offers only n-well processes or foundry-designated twin-well processes that from the design and process flow standpoints are equivalent to n-well processes. These twin-well processes may have options (deep n-well) that provide independently isolated p-wells. For all of these processes at this time use the technology code SCN. SCP is currently not supported, and SCE is treated exactly as SCN.

2.2. SCMOS Options

SCMOS options are used to designate projects that use additional layers beyond the standard single-poly, double metal CMOS. Each option is called out with a designator that is appended to the basic technology-code. Please note that not all possible combinations are available. The current list is shown in Table 1.

MOSIS has not issued SCMOS design rules for some vendor-supported options. For example, any designer using the SCMOS rules who wants the TSMC Thick_Top_Metal must draw the top metal to comply with the TSMC rules for that layer. Questions about other non-SCMOS layers should be directed to support@mosis.com.

Table 1: SCMOS Technology Options

Designation	Long Form	Description
E	Electrode	Adds a second polysilicon layer (poly2) that can serve either as the upper electrode of a poly capacitor or (1.5 micron only) as a gate for transistors
А	Analog	Adds electrode (as in E option), plus layers for vertical NPN transistor pbase
ЗМ	3 Metal	Adds second via (via2) and third metal (metal3) layers
4M	4 Metal	Adds 3M plus third via (via3) and fourth metal (metal4) layers
5M	5 Metal	Adds 4M plus fourth via (via4) and fifth metal (metal5) layers
6M 6 Metal Adds 5M plus fifth via (via5) and sixth metal (metal6) layers		Adds 5M plus fifth via (via5) and sixth metal (metal6) layers
LC	Linear Capacitor	Adds a cap_well layer for linear capacitors
PC	Poly Cap	Adds poly_cap, a different layer for linear capacitors
SUBM	Sub-Micron	Uses revised layout rules for better fit to sub-micron processes (<u>see section 2.4</u>)
DEEP	Deep	Uses revised layout rules for better fit to deep sub-micron processes (see section 2.4)

Table 5: Technology-code Map

Table 3. Technology code Map				
Technology code with link to layer map	Layers			
<u>SCNE</u>	<u>N_well, Active, N_select, P_select, Poly, Poly2, Contact, Metal1, Via, Metal2, Glass</u>			
<u>SCNA</u>	<u>N_well, Active, N_select, P_select, Poly, Poly2, Contact, Pbase, Metal1, Via, Metal2, Glass</u>			
<u>SCNPC</u>	<u>N_well, Active, N_select, P_select, Poly_cap, Poly,</u> <u>Contact, Metal1, Via, Metal2, Glass</u>			
<u>SCN3M</u>	N well, Active, N select, P select, Poly, Silicide block (Aqilent/HP only), Hi Res Implant, Contact, Metal1, Via, Metal2, Via2, Metal3, Glass			
SCN3ME	N_well, Active, N_select, P_select, Poly, Poly2, Hi_Res_Implant, Contact, Metal1, Via, Metal2, Via2, Metal3, Glass			
II .	I .			

Table 5: Technology-code Map


rable of rechinology code map				
Technology code with link to layer map	Layers			
<u>SCNE</u>	<u>N_well, Active, N_select, P_select, Poly, Poly2, Contact, Metal1, Via, Metal2, Glass</u>			
<u>SCNA</u>	<u>N_well, Active, N_select, P_select, Poly, Poly2, Contact, Pbase, Metal1, Via, Metal2, Glass</u>			
<u>SCNPC</u>	<u>N_well, Active, N_select, P_select, Poly_cap, Poly,</u> <u>Contact, Metal1, Via, Metal2, Glass</u>			
<u>SCN3M</u>	N_well, <u>Active</u> , <u>N_select</u> , <u>P_select</u> , <u>Poly</u> , <u>Silicide block</u> (<u>Aqilent/HP only</u>), <u>Hi_Res_Implant</u> , <u>Contact</u> , <u>Metal1</u> , <u>Via</u> , <u>Metal2</u> , <u>Via2</u> , <u>Metal3</u> , <u>Glass</u>			
SCN3ME (N_well, <u>Active, N_select, P_select, Poly, Poly2,</u> <u>Hi_Res_Implant, Contact, Metal1, Via, Metal2, Via2,</u> <u>Metal3, Glass</u>			

SCMOS Layout Rules - Well

Dulo	Rule Description	Lambda		
Kule		scmos	SUBM	DEEP
1.1	Minimum width	10	12	12
1.2	Minimum spacing between wells at different potential	9 ¹	18 ²	18
1.3	Minimum spacing between wells at same potential	6 ³	6 4	6
1.4	Minimum spacing between wells of different type (if both are drawn)	0	0	0

Exceptions for AMIS C30 0.35 micron process:

⁴ Use lambda=11 for rule 1.3 only when using SCN4M_SUBM or SCN4ME_SUBM

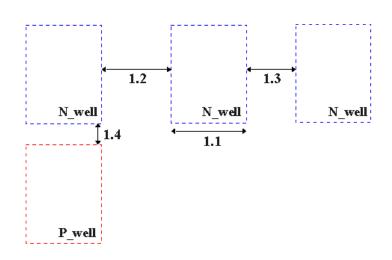

¹ Use lambda=16 for rule 1.2 only when using SCN4M or SCN4ME

 $^{^{2}}$ Use lambda=21 for rule 1.2 only when using SCN4M_SUBM or SCN4ME_SUBM

³ Use lambda=8 for rule 1.3 only when using SCN4M or SCN4ME

Table 5: Technology-code Map

	rable of recritiology code map				
	Technology code with link to layer map	Layers			
	<u>SCNE</u>	<u>N_well, Active, N_select, P_select, Poly, Poly2, Contact, Metal1, Via, Metal2, Glass</u>			
	<u>SCNA</u>	<u>N_well, Active, N_select, P_select, Polγ, Polγ2, Contact, Pbase, Metal1, Via, Metal2, Glass</u>			
	<u>SCNPC</u>	<u>N_well, Active, N_select, P_select, Poly_cap, Poly,</u> <u>Contact, Metal1, Via, Metal2, Glass</u>			
	<u>SCN3M</u>	<u>N_well, Active, N_select, P_select, Poly, Silicide block</u> (<u>Aqilent/HP only</u>), <u>Hi_Res_Implant, Contact, Metal1, <u>Via, Metal2, Via2, Metal3, Glass</u></u>			
>	<u>SCN3ME</u>	<u>N_well, Active, N_select</u> , <u>P_select</u> , <u>Polγ</u> , <u>Polγ2, Hi_Res_Implant</u> , <u>Contact</u> , <u>Metal1</u> , <u>Via</u> , <u>Metal2</u> , <u>Via2</u> , <u>Metal3</u> , <u>Glass</u>			

SCMOS Layout Rules - Active

Rule	Description	Lambda		
	Description		SUBM	DEEP
2.1	Minimum width	3 *	3 *	3
2.2	Minimum spacing	3	3	3
2.3	Source/drain active to well edge	5	6	6
2.4	Substrate/well contact active to well edge	3	3	3
2.5	Minimum spacing between non-abutting active of different implant. Abutting active ("split-active") is illustrated under <u>Select Layout Rules</u> .	4	4	4

* Note: For analog and critical digital designs, MOSIS recommends the following minimum MOS channel widths (active under poly) for AMIS designs. Narrower devices, down to design rule minimum, will be functional, but their electrical characteristics will not scale, and their performance is not predictable from MOSIS SPICE parameters.

Process	Design Technology	Design Lambda (micrometers)	Minimum Width (lambda)
AMI_ABN	SCNA, SCNE	0.80	5
AMI_C5F/N	SCN3M, SCN3ME	0.35	9
AMI_C5F/N	SCN3M_SUBM, SCN3ME_SUBM	0.30	10

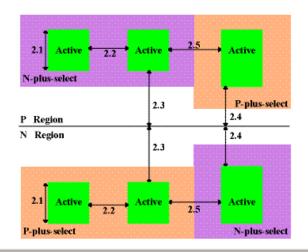


Table 5: Technology-code Map

rable of rechilology code map							
Technology code with link to layer map	Layers						
<u>SCNE</u>	<u>N_well, Active, N_select, P_select, Poly, Poly2, Contact, Metal1, Via, Metal2, Glass</u>						
<u>SCNA</u>	<u>N_well, Active, N_select, P_select, Poly, Poly2, Contact, Pbase, Metal1, Via, Metal2, Glass</u>						
<u>SCNPC</u>	<u>N_well, Active, N_select, P_select, Poly_cap, Poly,</u> <u>Contact, Metal1, Via, Metal2, Glass</u>						
<u>SCN3M</u>	N_well, <u>Active</u> , <u>N_select</u> , <u>P_select</u> , <u>Poly, Silicide block</u> (<u>Aqilent/HP only</u>), <u>Hi_Res_Implant</u> , <u>Contact</u> , <u>Metal1</u> , <u>Via, Metal2</u> , <u>Via2</u> , <u>Metal3</u> , <u>Glass</u>						
SCN3ME	N_well, <u>Active</u> , <u>N_select</u> , <u>P_select</u> , <u>Poly, Poly2</u> , <u>Hi_Res_Implant</u> , <u>Contact</u> , <u>Metal1</u> , <u>Via, Metal2</u> , <u>Via2</u> , <u>Metal3</u> , <u>Glass</u>						

SCMOS Layout Rules - Poly

Rule	D	Lambda			
	Description	SCMOS	SUBM	DEEP	
3.1	Minimum width	2	2	2	
3.2	Minimum spacing over field	2	3	3	
3.2.a	Minimum spacing over active	2	3	4	
3.3	Minimum gate extension of active	2	2	2.5	
3.4	Minimum active extension of poly	3	3	4	
3.5	Minimum field poly to active	1	1	1	


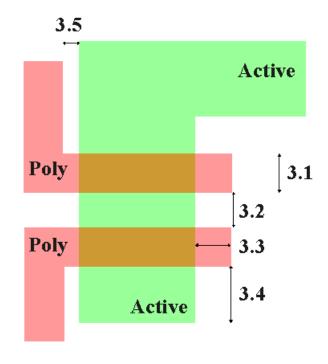


Table 5: Technology-code Map

	Table 3: Technology code Map							
	Technology code with link to layer map	Layers						
	<u>SCNE</u>	<u>N_well, Active, N_select, P_select, Polγ, Polγ2, Contact, Metal1, Via, Metal2, Glass</u>						
	<u>SCNA</u>	<u>N_well, Active, N_select, P_select, Poly, Poly2, Contact, Pbase, Metal1, Via, Metal2, Glass</u>						
	<u>SCNPC</u>	<u>N_well, Active, N_select, P_select, Poly_cap, Poly,</u> <u>Contact, Metal1, Via, Metal2, Glass</u>						
	<u>SCN3M</u>	N_well, <u>Active</u> , <u>N_select</u> , <u>P_select</u> , <u>Poly</u> , <u>Silicide block</u> (<u>Aqilent/HP only</u>), <u>Hi_Res_Implant</u> , <u>Contact</u> , <u>Metal1,</u> <u>Via, Metal2, Via2, Metal3, Glass</u>						
•	<u>SCN3ME</u>	<u>N_well, Active, N_select, P_select, Poly, Poly2,</u> <u>Hi_Res_Implant, Contact, Metal1, Via, Metal2, Via2,</u> <u>Metal3, Glass</u>						

SCMOS Layout Rules - Select

Rule	Do conintian	Lambda		
	Description		SUBM	DEEP
4.1	Minimum select spacing to channel of transistor to ensure adequate source/drain width	3	3	3
	Minimum select overlap of active		2	2
4.3	Minimum select overlap of contact	1	1	1.5
4.4	Minimum select width and spacing (Note: P-select and N-select may be coincident, but must <i>not</i> overlap) (not illustrated)	2	2	4

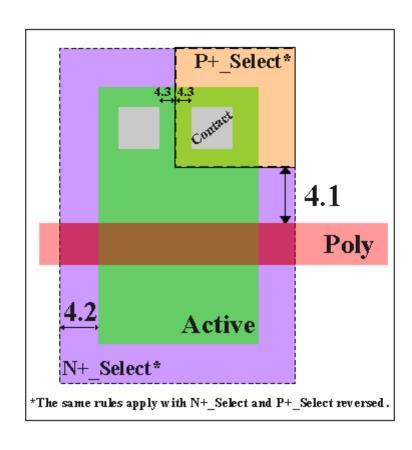

Technology Files

Design Rules


Process Flow (Fabrication Technology)

 Model Parameters (will discuss in substantially more detail after device operation and more advanced models are introduced)

IC Fabrication Technology


See Chapter 3 and a little of Chapter 1 of WH or Chapter 2 GAS for details


Generic Process Flow

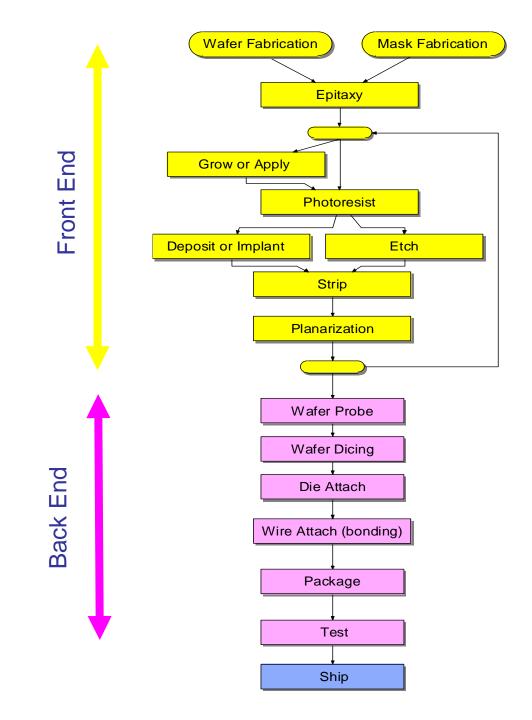


IC Fabrication Technology

- Crystal Preparation
- Masking
- Photolithographic Process
- Deposition
- Etching
- implantation
- Diffusion
- Oxidation
- Epitaxy
- Polysilicon
- Contacts, Interconnect and Metalization
- Planarization

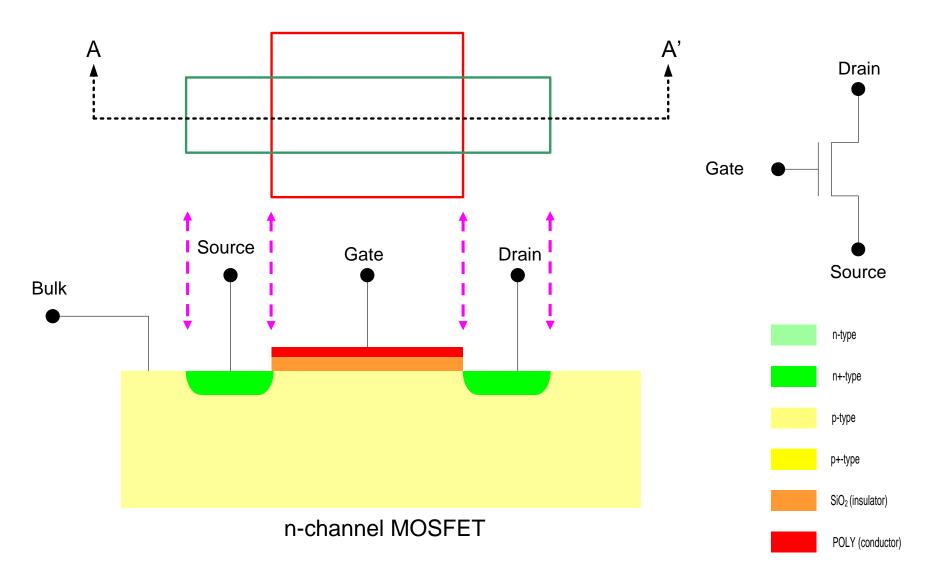


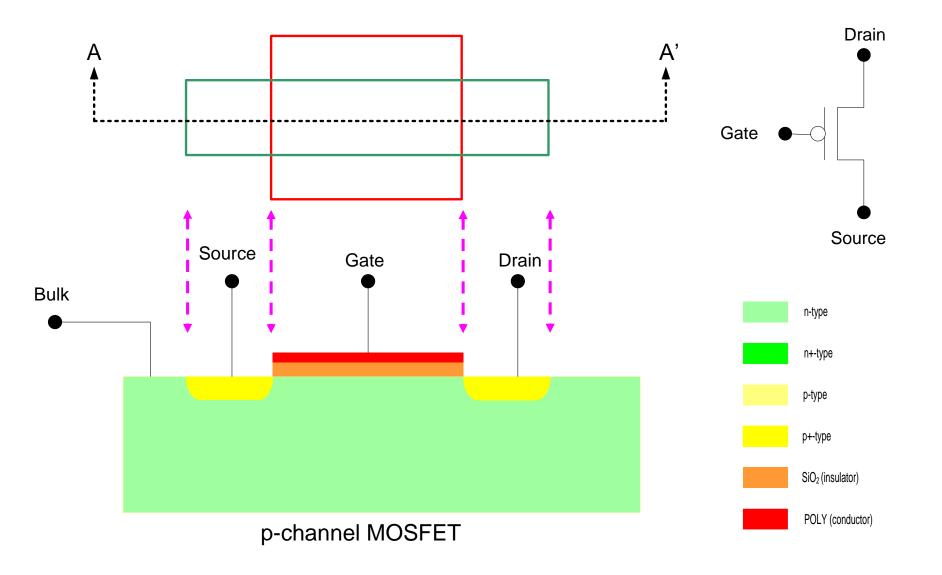


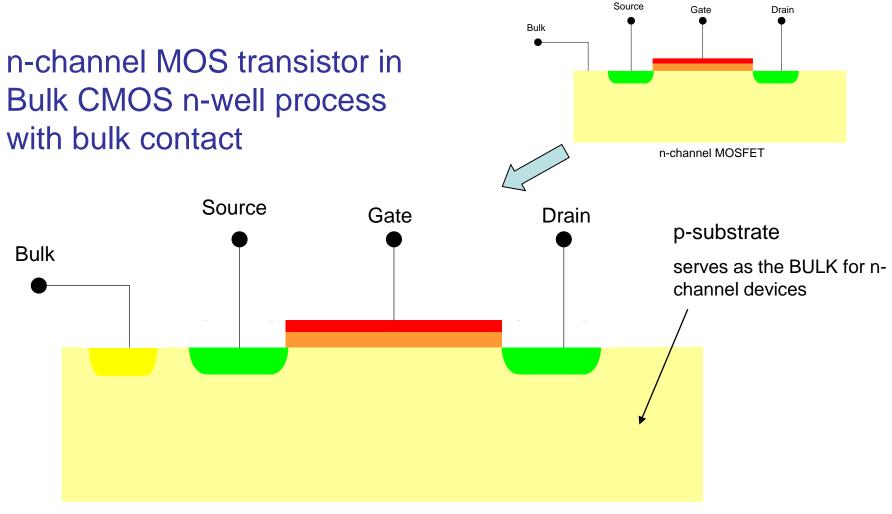


n-channel MOSFET

p-channel MOS transistor in Bulk CMOS n-well process with bulk contact and well (tub)

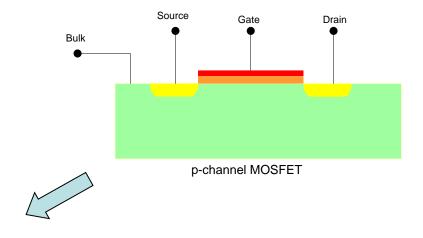


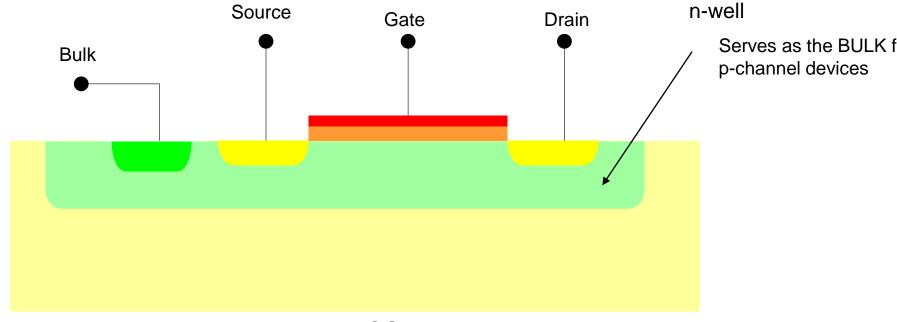


p-channel MOSFET

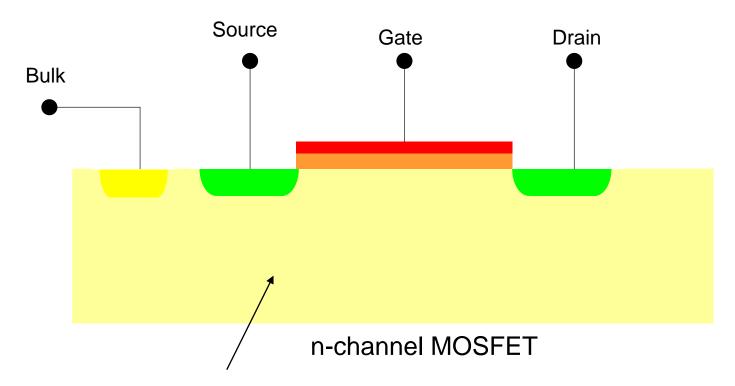

- Single-crystalline silicon
 - Serves as physical support member
 - Lightly doped
 - Vertical dimensions are not linearly depicted
 - Often termed the Bulk

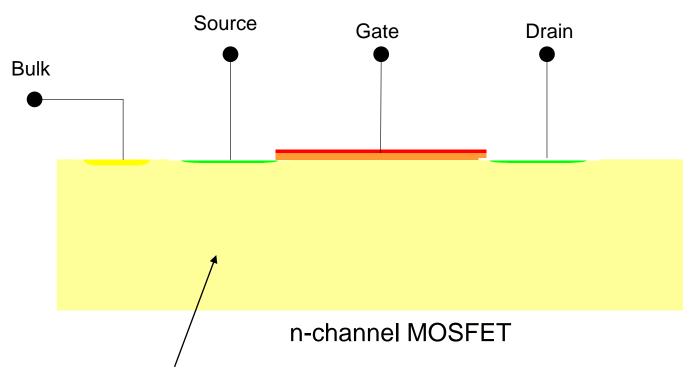


- Single-crystalline silicon
 - Serves as physical support member
 - Lightly doped
 - Vertical dimensions are not linearly depicted
 - Often termed the BULK

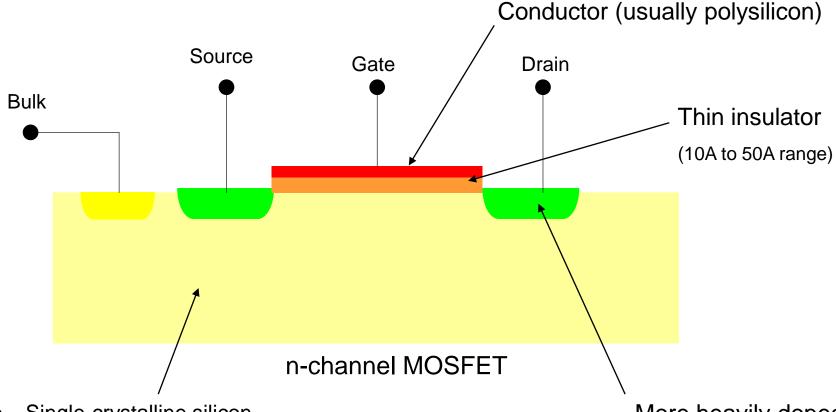


- Single-crystalline silicon
 - Serves as physical support member
 - Lightly doped (p-doping in the 10¹⁵/cm³ range, silicon in the 2.2x10²²/cm³ range)
 - Vertical dimensions are not linearly depicted
 - Often termed the BULK

More heavily doped (10¹⁷/cm³ range)

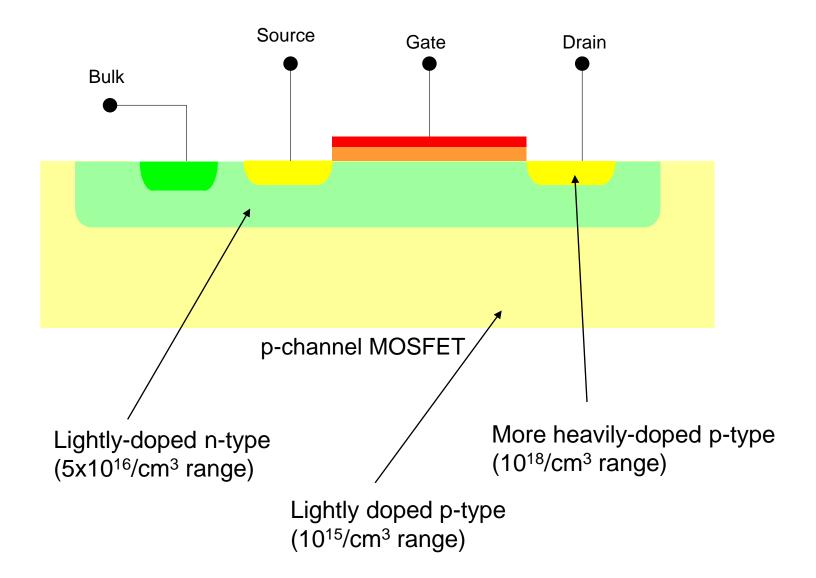

- Large crystal is grown (pulled)
 - 12 inches (300mm) in diameter and 1 to 2 m long
 - Sliced to 250µm to 500µm thick
 - Prefer to be much thinner but thickness needed for mechanical integrity
 - 4 to 8 cm/hr pull rate
 - T=1430 °C
- Crystal is sliced to form wafers
- Cost for 12" wafer around \$200
- 5 companies provide 90% of worlds wafers
- Somewhere around 400,000 12in wafers/month

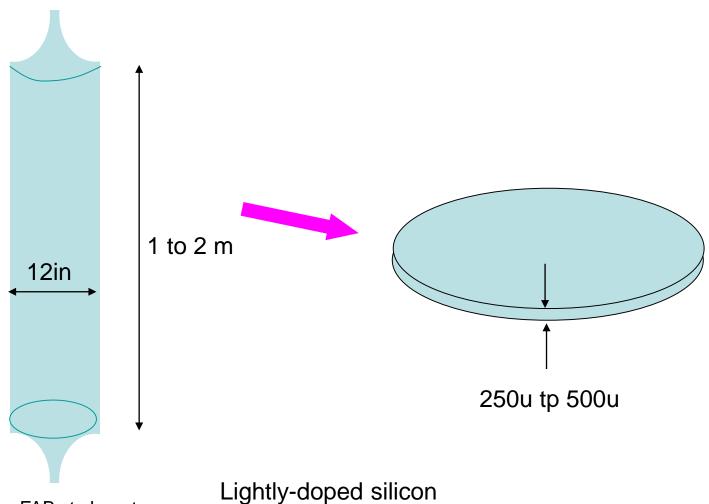

Some predict newer FABs to be at 450mm (18in) by 2020 but uncertain whether it will happen


Lightly-doped silicon

Excellent crystalline structure



From www.infras.com



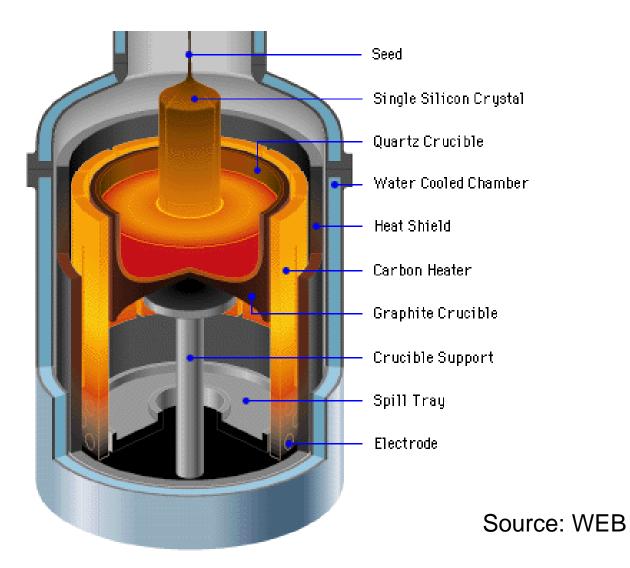





A section of 300mm ingot is loaded into a wiresaw



End of Lecture 8