



Sampling mother calibration gas with a gas-tight syringe


A Wrong — do not do this

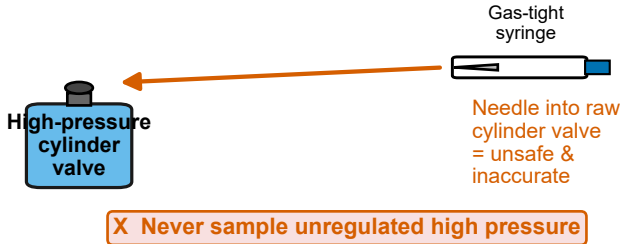

B Method A — sample after regulator (septum / T-piece)

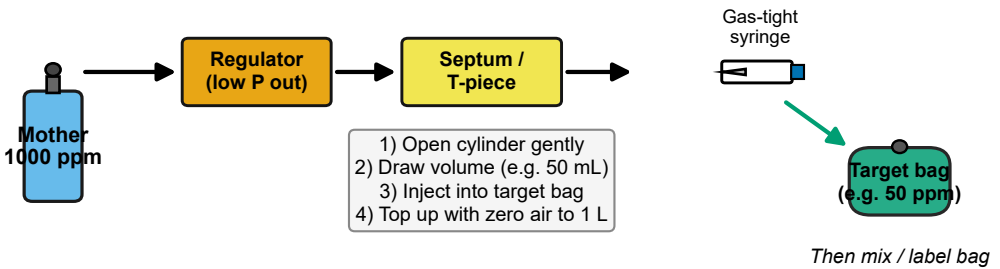

C Method B — easier: fill buffer bag, then syringe from bag

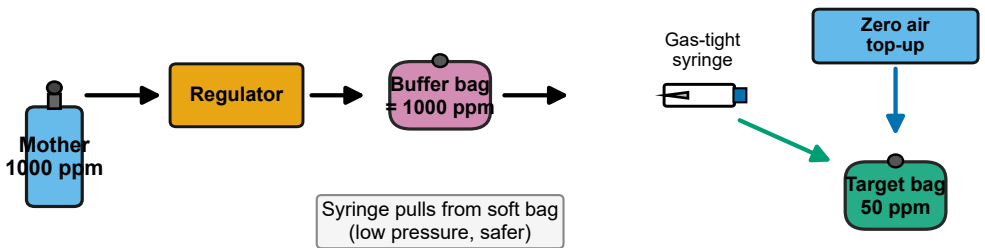

Recommended starting setup for this project (budget / beginner-friendly)