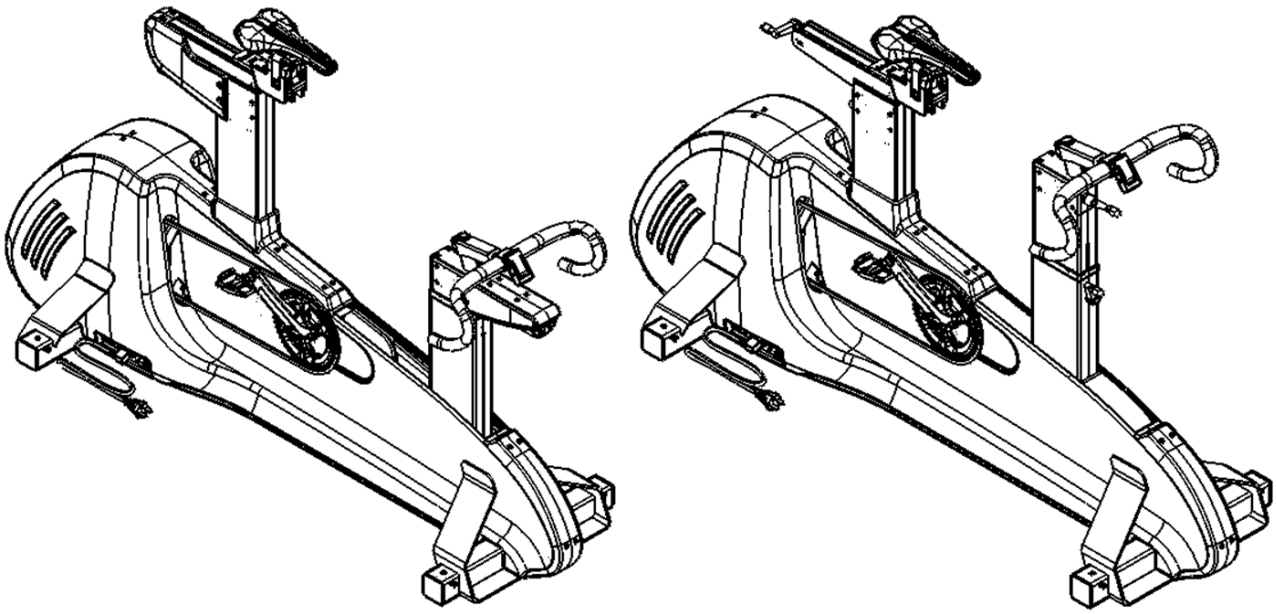


FIT BIKE

BFFITBIKEMOT01 & BFFITBIKE01

USER MANUAL

BIKEFITTING.com

SHIMANO EUROPE B.V
Bikefitting.com
High Tech Campus 92
5656 AG Eindhoven
The Netherlands
product.safety@shimano-eu.com

CONTENT

IMPORTANT NOTICE 5
SAFETY INSTRUCTIONS 5
General Safety Instructions 6
TECHNICAL SPECIFICATIONS 8
Power & Connectivity 8
Product Dimensions 8
Version 9
Resistance unit 9
TRANSPORTATION AND PACKAGING 10
Fit Bike package and accessories 11
Add-on 1: XY position tool 12
Add-on 2: Extension module 12
FIT BIKE INSTALLATION PROCESS 13
Required tools 13
Cautions on the installation place 13
Fit Bike installation 14
Installing the stem 15
INSTALLING BICYCLE PARTS 16
Installing the handlebar 16
Installing the saddle 17
Adjusting the saddle angle 18
Installing the pedals 18
ADJUSTMENT 19
Adjusting the height and horizontal position 19
Adjusting the crank length 21
FIT BIKE FEEDBACK 21
Plug entry panel 21
LED behavior 22
START UP FLOW 23
MAINTENANCE 24

List of Shimano spares parts 24
Update of the controller firmware 25
SAFETY STANDARDS 25
Electrical Safety testing: 25
EMC and RF: 25
Taiwan NCC statement: 25
內含發射器 NCC ID: 25
Singapore: 25
RELEASE NOTES: 26

IMPORTANT NOTICE

- Read all manuals that are included with the product before using the product.
- All manuals are available on our website: www.bikefitting.com
- Before using the product, read all the safety instructions.
- Operate the product in line with the safety notices.
- Operate the product in line with all the rules and regulations that apply in the country, state or region in which you conduct your business.
- Operate the product according to instructions.
- If any instruction is unclear to you, consult your local bikefitting.com distributor for support.
- If any part on the product is malfunctioning or damaged, please contact your local bikefitting.com distributor for repair.
  Stop using the product until repaired and approved for use by the distributor.
- Handle waste according to your local regulations.

SAFETY INSTRUCTIONS

This manual contains safety notices at relevant places in the document.
The safety notices contain a warning sign, a risk level and an instruction of correct product use. They are classified according to the degree of user injury or of product damage which may occur if the product is not used according to the instructions.

FOR YOUR SAFETY AND THE SAFETY OF OTHERS
PLEASE READ THE SAFETY INSTRUCTIONS IN THIS MANUAL CAREFULLY
AND USE THE PRODUCT ACCORDINGLY

⚠ DANGER

Failure to follow the instruction can result in death or serious injury.

⚠ CAUTION

Failure to follow the instruction could result in death or serious injury.

⚠ WARNING

Failure to follow the instruction could cause personal injury
or could cause physical damage to equipment and surroundings

These safety instructions in the manual **must be always observed when using the product.**

General Safety Instructions

⚠ CAUTION

Failure to follow the following instructions could result in death or serious injury.

- The product has been designed to be used for:
    - Conducting bike fittings for customers by a bikefitting.com trained bike fitter.
    - Testing of certified bicycling products according to use instructions by customers.

  Do not use the product for other than its intended use.
- This product is not a medical instrument.
  You cannot use the product for medical diagnosis, treatment or prevention.
  Use the measurement result as a reference only.
- Do not allow children aged under 12 and pets to go near, touch or stand by the product.
- Ensure the product is placed on a stable, flat and non-slippery surface.
- Ensure no mechanical and electrical connections are loose before using the product.
- Before using the product, be sure that the handlebar, saddle, and pedals are accordingly fixed.
- Do not replace the handlebar, saddle, and/or pedal if someone is sitting on The Fit Bike.
- Do not disassemble or modify the product unless this is instructed in the manual. Uninstructed disassembly or modification may cause the product to malfunction.
- Do not use The Fit Bike when any of its covers are removed or damaged

Inform each user of The Fit Bike about the information below:

- This product has a weight limit.
  Do not mount, sit on, or ride The Fit Bike if you weigh more than 140kg.
- Do not touch the driving train or rotating sections when the product is operating.
- Do not insert your fingers in any cover opening.
- Do not wear clothes with laces or long/wide hems or laces when using the product.
- Do not step on The Fit Bike on the side where add-ons are mounted to the Fit Bike frame.
    - These add-ons include the XY-tool and the extension module

⚠ WARNING

Failure to follow these instructions could cause personal injury or physical damage to equipment and surroundings

- Keep body parts away from the teeth of the chainrings.
- Before the cyclist mounts The Fit Bike,
  ensure that The Fit Bike is calibrated and has the correct starting position.
- Ask riders on The Fit Bike always to keep their hands on the handlebar while riding.
- Inform riders of any intended changes of the saddle and handlebar positions and the pedaling resistance settings prior to implementing these changes on The Fit Bike.
- Do not subject the product to strong electric shocks or magnetic fields.
- Do not subject the product to strong physical shocks.
- Do not place heavy objects on the product.
- Do not expose the product to fluids or highly humid environments.
- Do not use the product outdoors or in an environment open to the outside.
- Do not drag the product over the floor to change its location.
  Move the location of the product by lifting the product up.
  Lift the product according to the safety instructions in this manual.
  Move it to the right location and then place it down.
- This equipment shall be connected to the protective earthing system of the installation by means of the power supply cord connected to a socket-outlet with a protective earthing connection. The equipment shall not be operated without a protective earth connection.
- Unplug the AC cable from the power grid only during installation, maintenance and cleaning.
- Contact your local bikefitting.com distributor if you have questions on how to assemble, to adjust or repair the product.
- The product warranty does not cover deterioration from normal use and aging.
- Observe local legislation and ordinances when disposing of the product.
- When installing add-ons to the product by means of screws,
  ensure the threads are clean and tightened with the prescribed torque values.


TECHNICAL SPECIFICATIONS

Power & Connectivity


Power Supply	100-240 VA**C** | 50-60 Hz | 318 W
Connectivity	Wi-Fi (2.4 & 5 GHz)
	BLE (Bluetooth LE) 5.0

Product Dimensions

Length

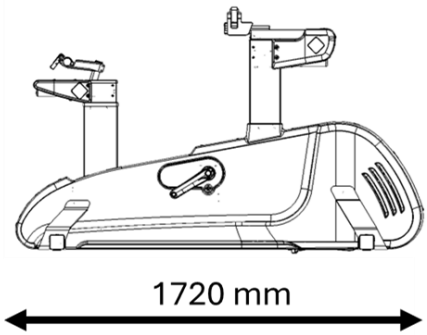

Width

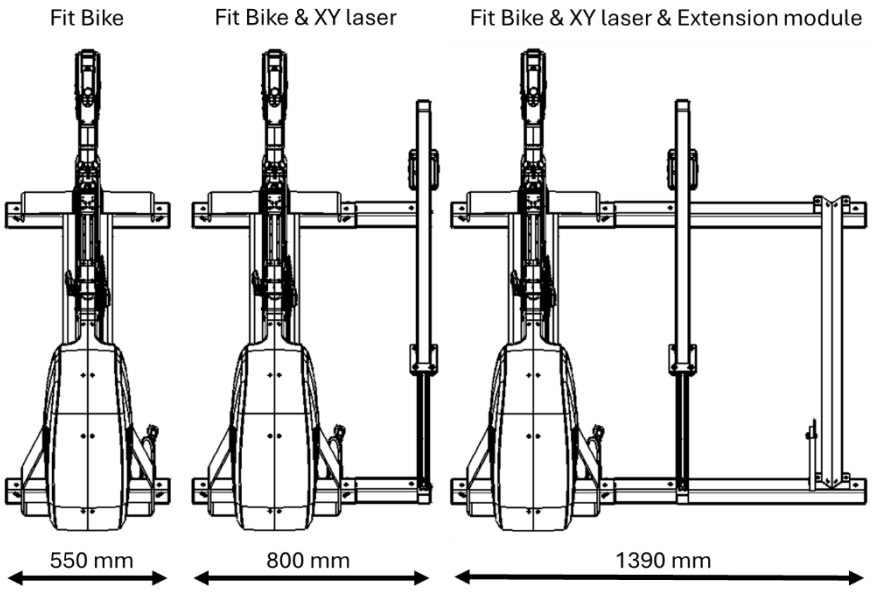


Height	795mm (minimum)	1285mm (maximum)
Weight	65 kg	
Load	140 kg (maximum)	


Version

The Fit Bike is delivered out of the box in one of two versions.

- **The manual version** comes installed with rotating dials. On both the saddle and handlebar column, two rotating dials are installed. You can change the position of the saddle and the handlebar by rotating the dials. Turning one of the dials handles changes the height of the top of the column. Turning the other dial changes the latitude of the column.

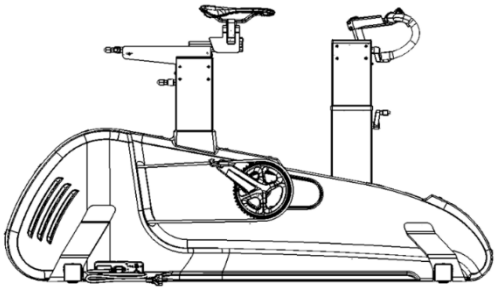

- **The motorized version** comes installed with positioning motors. On both the saddle and handlebar column, two positioning motors are installed. One motor change the height of the top of the column. The other motor changes the latitude of the column. The motors can be controlled by pushing a four-directional button on the column, or by means of the controls in The Fit Bike web application.

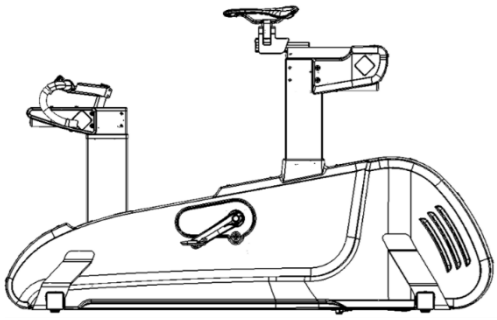


Resistance unit

The Fit Bike comes equipped with an ELITE Justo resistance unit. The unit is integrated in The Fit Bike. The unit can be used in combination with The Fit Bike web application and other compatible apps. For more information, please consult the user guide of the ELITE Justo unit on our website: www.bikefitting.com.

TRANSPORTATION AND PACKAGING

The product must be transported and handled with care.
The packaging is designed to protect the products from shocks and weather.

The Fit Bike is shipped as a completely assembled and integral product in one package.
The add-ons are shipped separately from The Fit Bike.
These add-ons have specifically been designed to be mounted and used on The Fit Bike only.
Do not use them in a different way that for its intended use.

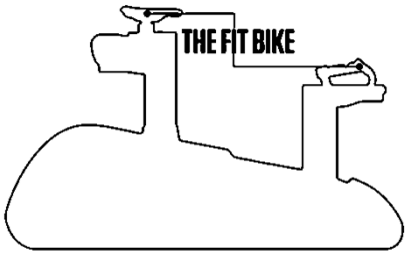

bikefitting.com


The orientation of The Fit Bike in the package is indicated with the print on the package.
The heaviest part of the product is located at the back of The Fit Bike.
Work in groups of two or more people when unpacking or transporting the product.

Upon arrival of the product, check the packaging for any damage. If you notice damage to the package, contact your distributor before carrying on and opening the package.


Open the package and perform a general check of the product.
Ensure that all listed components are included in the package.
Inspect the components for any damage.

Handle with care. Improper handling and use of the packaging elements can lead to injury. The packaging elements must be properly removed and discarded. Keep the packaging elements away from people (e.g., children) that are unable to handle them safely.




Fit Bike package and accessories

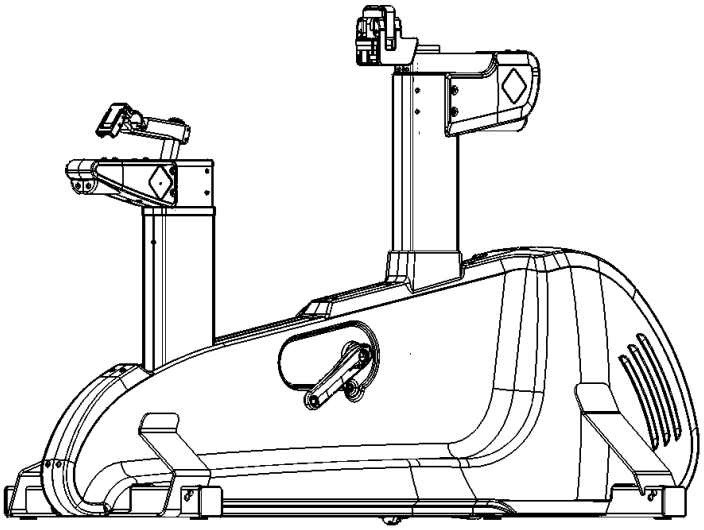


Motorized version

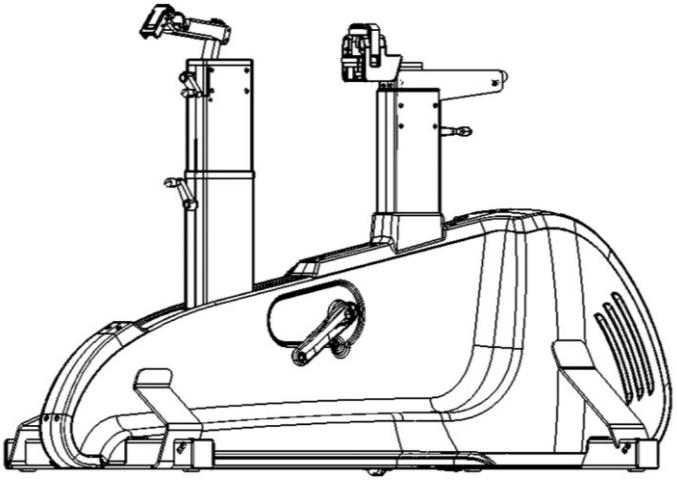

Manual version


Accessories		
Shape	Part name	Quantity
	Pedal removal tool	1
	5m EU Power cable	1
	Saddle center tool	1
	31.8 mm Handlebar center tool	1
	35 mm Handlebar center tool	1
	31.8 mm Handlebar clamp	1
	End caps	4
	Closing plugs	20
	Instruction book	1

Add-on 1: XY position tool

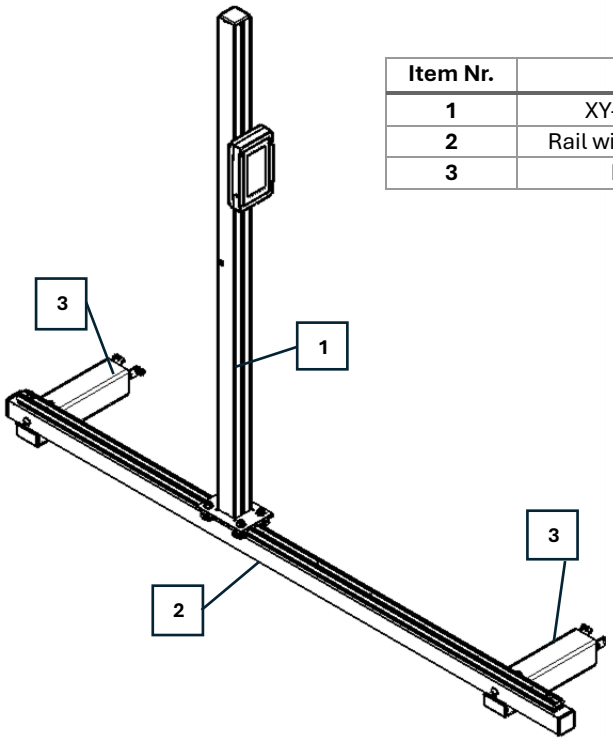

Item Nr.	Part name	Quantity
1	XY- Position tool	1
2	Rail with magnetic strip	1
3	Base beam	2

Add-on 2: Extension module

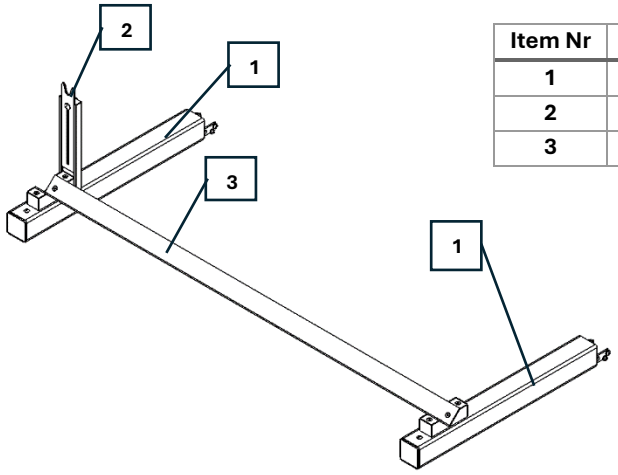

Item Nr	Part name	Quantity
1	Base beam	2
2	Bike holder	1
3	V profile	1

FIT BIKE INSTALLATION PROCESS

Required tools

Torque wrench with a range from 5 to 55 Nm
5,6 and 8mm Hex bit
4mm HEX Key
bikefitting.com pedal removal tool

Cautions on the installation place

- Be sure not to place the product in a place where it may fall, or children may touch it.
- This product is for indoor use only. Do not use it outdoors.
- Install the product in a dry and not slippery room, the recommended temperature range is 0 to 40°C.
- The product needs electricity and an internet connection, make sure this is available. If you use an Ethernet cable, make sure to use a shielded version.
- The equipment shall be connected only to a mains socket-outlet with a protective earthing connection and the cable routing has to be performed to prevent any trip hazard.
- Install the product in an area with sufficient space so that you can use the product comfortably.
- Moving the Fit Bike on sensitive floors could damage the floor surface, please be careful.


⚠ CAUTION

Be sure to work in groups of two or more when unpacking or assembling the product.

Keep attention on Lift signs on the frame.





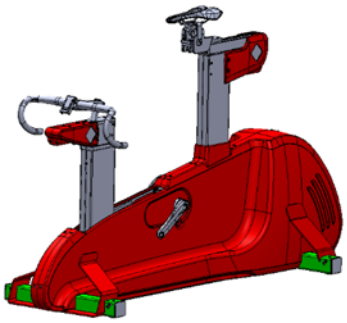

Do not lift the product with the help of the covers or the wings, use only the base frame.


Be careful not to get your fingers caught between the parts.

Fit Bike installation


1) Place the box with the product near the location you would like to install the bike. On the package, you will find the indication for the front and back of the product. The power plug is located on the rear right side of the product.
2) Unboxing the product.
3) Lift the product on the indicated **LIFT HERE** locations and place it on the location of choice.



4) The bike needs to be installed stable and parallel to the ground. Level out the Fit Bike with the help of the 4 level feet. Adjust the height with a Hex key of 4 mm. Once the Fit Bike is leveled correctly, cover the open hole with the delivered plugs.

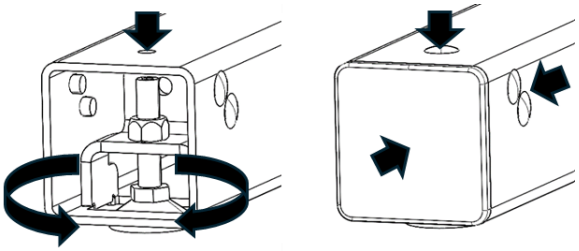

5) Plug the power connector first into the Fit Bike panel and secondly it to the grid. Ensure that the power cable is safely routed so that nobody can get stuck into it.

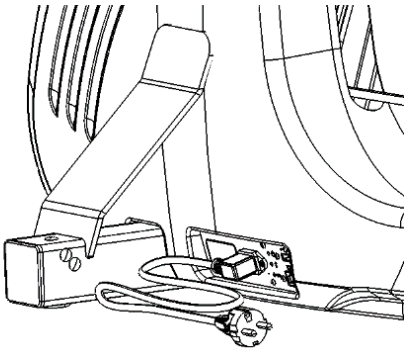

The startup can take a bit of time. The LED lights on the side panel will start to get illuminated. Refer to the manual “THE FIT BIKE APP” to know how to set-up you Fit Bike with the APP on our website: www.bikefitting.com.


Installing the stem

Install the stem to the main unit.

Install the stem so that it is parallel to the frame when viewed from above and fix it with two bolts.

⚠ WARNING

Install the stem below the upper end of the support. If it is installed above the upper end of the support, it may cause the stem to be insufficient fixed and lead to unexpected accidents. The stem is designed to be only used for fitting purposes.

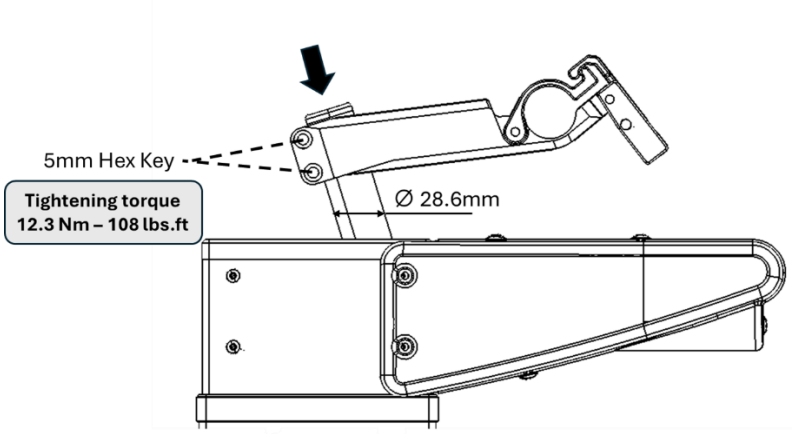


INSTALLING BICYCLE PARTS

⚠ WARNING

Before using the product, follow the procedures below to check that the parts are properly installed.
Check that all the parts are firmly fixed as well. If they are not fixed sufficiently firmly, it can lead to unexpected accidents.


Installing the handlebar

1) Operate the lever to open the clamp and set the handlebar.
   Supported handlebar diameter: Ø 31.8mm

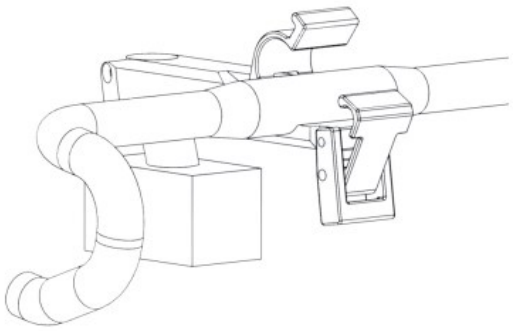

Note:
The stem included in the Fit Bike package is only for Bike fitting system.
Do not use it for bicycles.

2) Close the clamp and hook the lever on top.
   Then, lower the clamp´s lever and fix the handlebar.

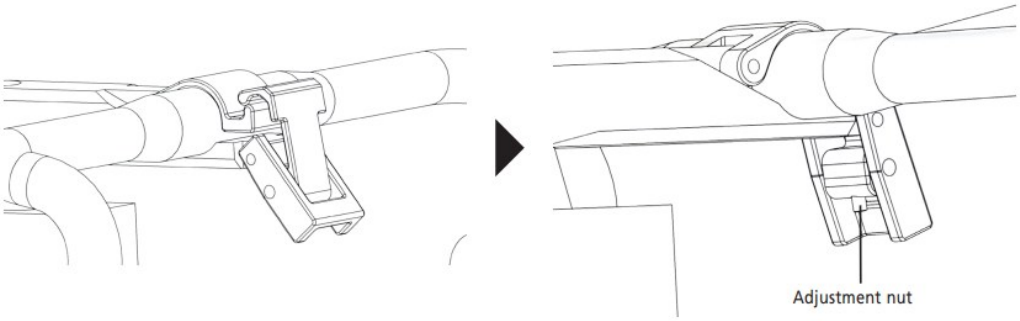


3) If the lever can be easily set to CLOSE position, it means that the handlebar is not fixed sufficiently firmly. Return the lever to OPEN position and turn the adjustment bolt at the bottom of the lever to adjust the tightness.


   *When removing the handlebar, reverse the procedure.

Installing the saddle


Supported saddles: 43 mm between the rails and compatible with 7mm round rails and oval rails of 7 mm x 9 mm

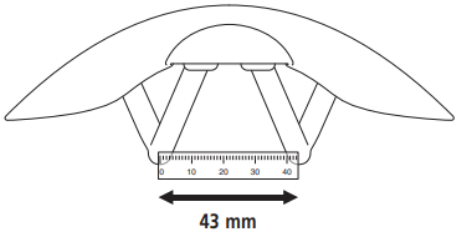


1) Set the saddle so that the saddle rails are aligned with the grooves in the saddle rail mount.
   Hook the ends of the fixing levers on the saddle rails and adjust the angle and horizontal position of the saddle.

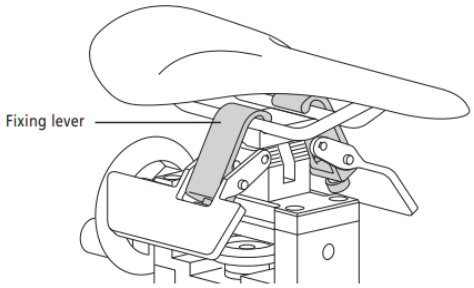

2) After determining the saddle position, tighten the clamp to fix the saddle.

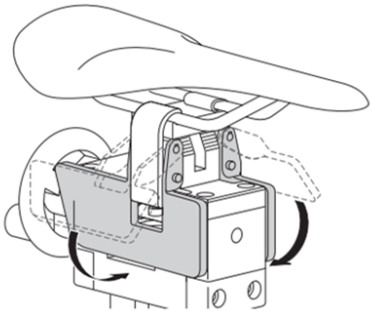


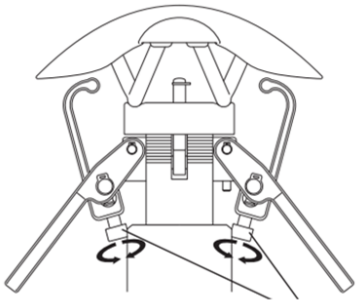

The clamp may be tightened too easily or excessively depending on the shape of the saddle rail. If this is the case, open the clamp and turn the adjustment screw at the bottom of the fixing lever to adjust the tightness.


Adjusting the saddle angle

Release the clamps to get the saddle slightly loose, by tightening or untightening the tensor on the rear of the saddle you can adjust the saddle tilt in a continuous range.

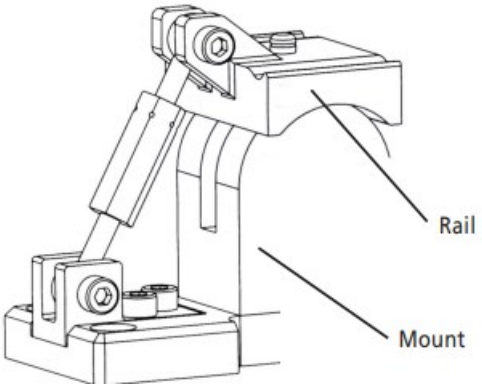

Please note that the angle of the saddle bridge is not necessarily the effective angle of the saddle, and never adjust the angle with the clamp tightened, as this may damage the tensor thread.

Installing the pedals

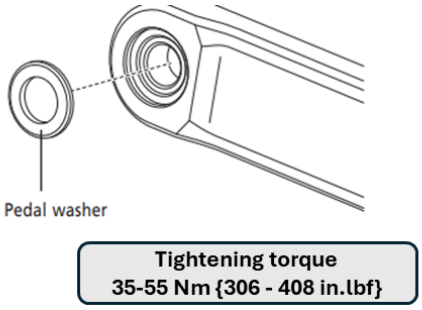

The pedals can be installed and removed with the bikefitting.com pedal removal tool.

To ensure the right tension use a torque wrench.

ADJUSTMENT

Adjusting the height and horizontal position

⚠ WARNING

Before the cyclist can take position on the Fit Bike, please make sure that the Fit Bike is already on the right starting position.

Make sure that the cyclist goes off the Fit Bike during a current outage.

Make always sure during position adjustments in the fitting process that the cyclist is holding the handlebar.

⚠ CAUTION


If you feel any uncommon resistance while adjusting the position, please stop moving.

Check that nothing is obstructing the different moving parts, or a too heavy load is on the saddle/ handlebar.


For the manual version:

Turn the handles to adjust the position of the handlebar and saddle.

Handlebar adjustments

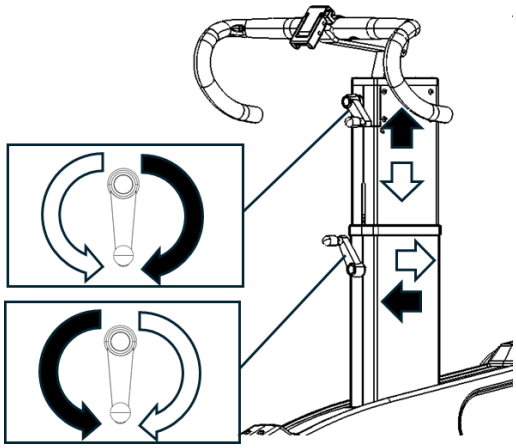

Saddle adjustments

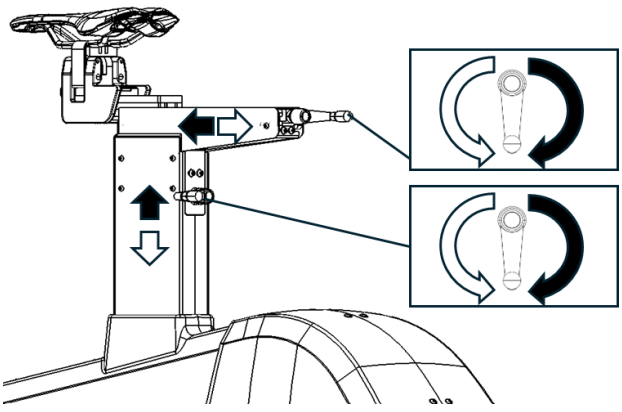


For the Motorized version:


> **WARNING**
>
> Don´t place your hands between the saddle motor covers and the main covers during any adjustments of the saddle position.

You have 2 possibilities; you can use the touch panel on the covers below the handlebar and saddle, or you can use the web application.

Location handlebar and saddle adjustment:

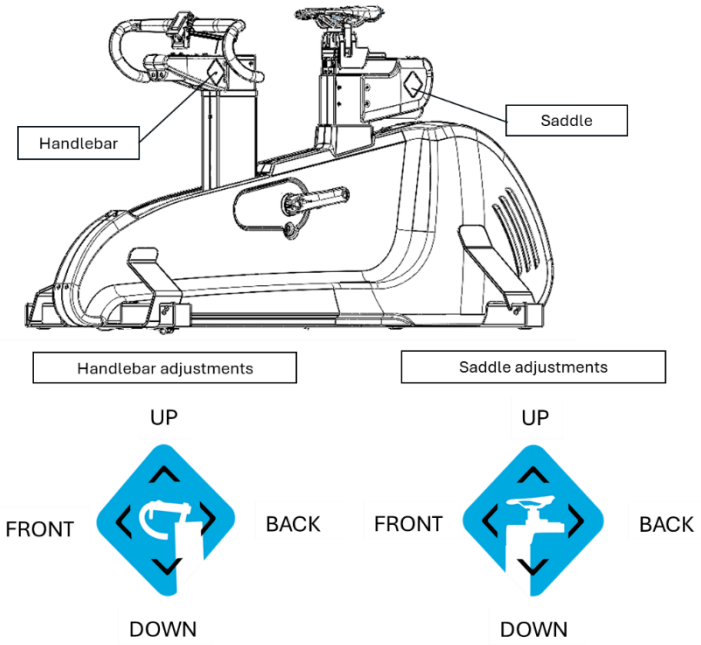

Adjusting the crank length

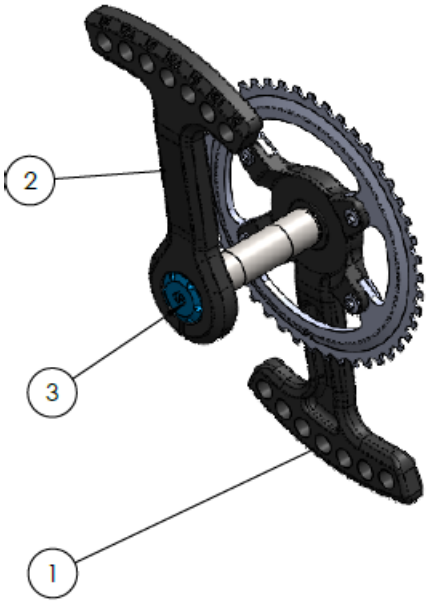

Item Nr.	Part name	Quantity
1	Crank right	1
2	Crank left	1
3	Fixation plug	1

Note:

The adjustable crank is specifically designed to be exclusively used on the Fit Bike.

Do not use it for bicycles and outdoor use.

The range of the crank is from 160 to 175 mm and can be adjusted by screwing the pedal to the defined size.


Be careful to screw the pedal on the same value on both sides and to respect the torque requirements of 35-55 Nm, for this use a torque wrench.

The pedals can be attached and removed with the bikefitting.com pedal removal tool.

Detailed installation procedure is available on www.bikefitting.com

FIT BIKE FEEDBACK

Plug entry panel

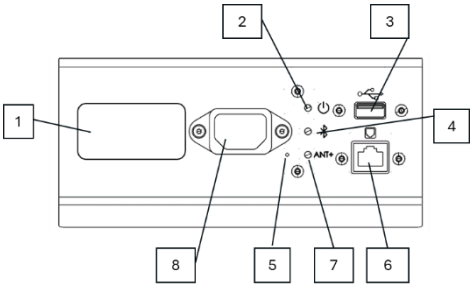

Item Nr.	Part name
1	Serial Number + MAC address
2	Power / Wi-Fi status LED
3	USB port
4	Bluetooth status LED
5	Reset button
6	Ethernet port
7	ANT+ status LED
8	AC plug

Don´t remove the serial number sticker, except someone instructed you to do so.

The USB port can be used to replace a broken dongle inside the Fit Bike controller.

The Ethernet port can be used in case no wireless connection is available or the wireless device from the Fit Bike is broken.

The Ethernet port can also be used in case an update of the controller has to be performed manually.


The POWER/WIFI, Bluetooth and ANT+ lamp can have different colors (green,red,blue) and can be bright or flickering depending on the specific situation in which the Fit Bike is.

LED behavior


	Color / Behavior						Meaning	User action
	None	Green	Red	Blue	White	Flickering		
Power / Wi-fi	X						No Electricity	Check that the power cord is connected, and electricity is available
		X					Connected with network	None
			X				Error state	Check message in the Fit Bike App
				X			Broadcast Fit bike network	Check / Set up network connection in the Fit Bike App
					X	X	Start up	Wait until boot is finished, can take longer as usual after update
		X	X	X		X	Press on Reset Button is successful; Fit bike will reboot or start factory reset	Wait until finish
Bluetooth	X						No Bluetooth available at start-up of the Fit Bike	Restart the Fit Bike and check Bluetooth adapter
		X					Available at boot	-
ANT+	X						No ANT+ available at start-up of the Fit Bike	Check ANT+ adapter and restart the Fit Bike
		X					Adapter available at boot	None

START UP FLOW


First start up:

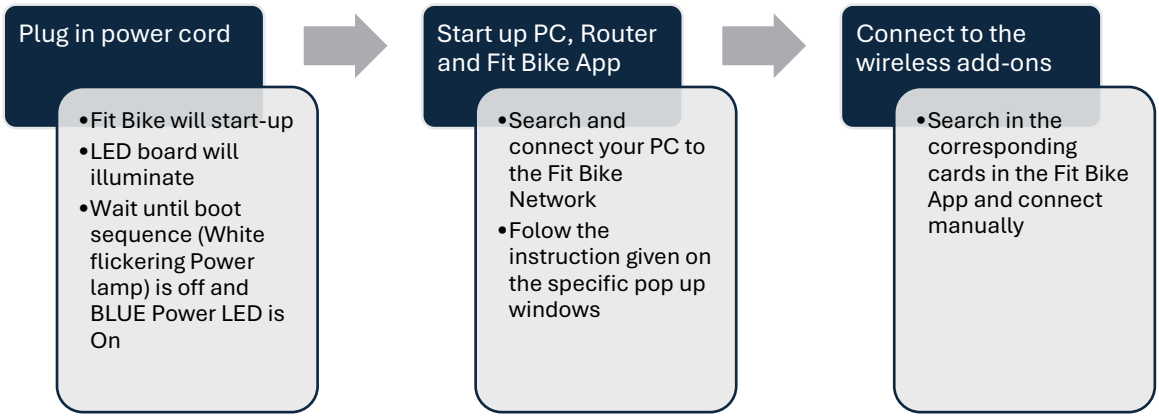

Start up after reset:

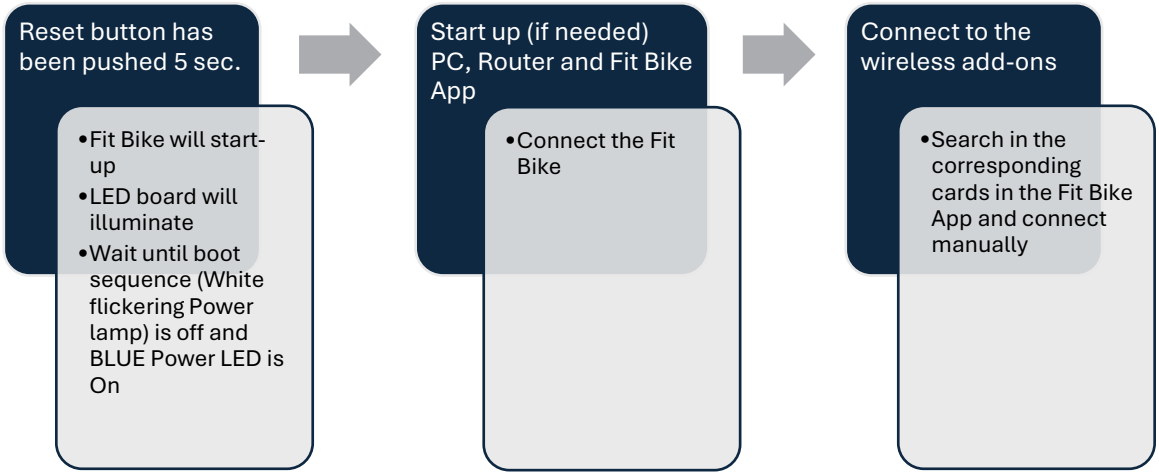

Start up after factory reset:

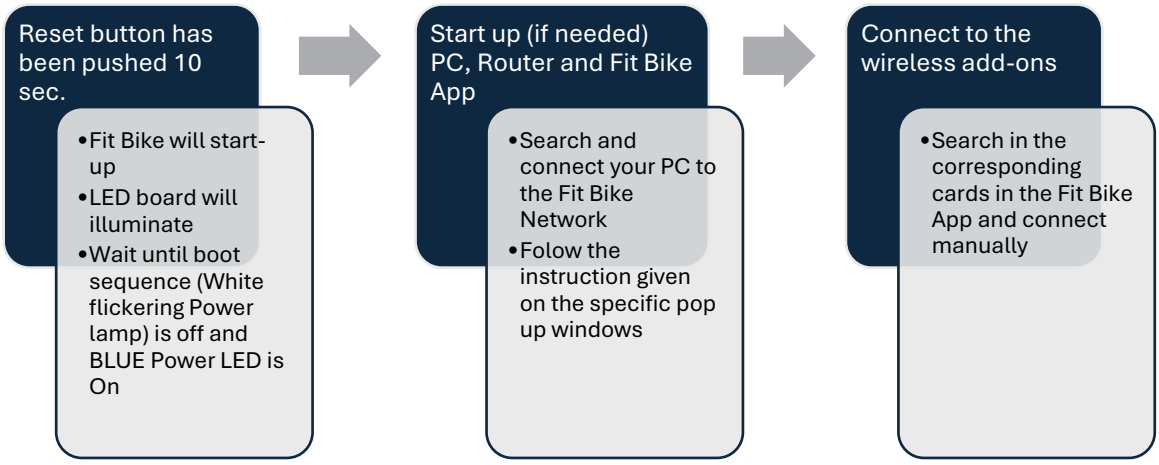

MAINTENANCE

> ⚠ WARNING
>
> Unplug the AC cable from the grid during maintenance and cleaning.

After using the product, wipe it with a damp cloth, with the water well wrung out.

Wipe sweat, etc. off the product after use.

Do not lubricate the crank or belt. When lubricating the chain, make sure the oil does not get on or splash on to other parts.

You should periodically wash the chainring in a neutral detergent. In addition, cleaning the chain with neutral detergent and lubricating it can be an effective way of extending the useful life of the chainring and the chain.

For maximum performance we highly recommend Shimano lubricants and maintenance products.

You should periodically check the chain tension.

Verify that all covers all in good shape and well fixated.

Check that the that the power socket is well plugged in and has no damage.

Check periodically that the crankset, the saddle and handlebar mast don´t have any unexpected play.

List of Shimano spares parts

Description	Part Number
Bottom Bracket Press Fit 86.5mm	SM-BB72 Road
Chain 126 Links	CN-M6100 12-Speed
Sprocket Wheel 19T	Y1RK19000
Lock Ring & Washer	Y0MV98010
Chain tensioner	CT—S500

Reference to Shimano installation guides https://si.shimano.com/

Update of the controller firmware

The controller of the Fit Bike can be Update via an Over the Air technology,

For this it is recommended to avoid unplugging the Fit Bike on a daily base from the power grid.

Prior to the installation of the new Firmware version, you will get a notification.

After an update, the Fit Bike will perform a reboot which can take a bit longer as a standard start up procedure.

SAFETY STANDARDS

Electrical Safety testing:

Electrical safety testing according to IEC 62368-1:2018

EMC and RF:

EMC and RF services under RED Directive 2014/53/EU (art. 3)

Taiwan NCC statement:

根據NCC低功率射頻器材技術規範3.8.2規定:

-取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

-低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規定作業之無線電通信。

-低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。」

內含發射器 NCC ID:

CCAJ23Y10130T0

CCAF20LP1570T7

CCAO18LP0240T9

Singapore:

Complies with
IMDA Standards
DA105949

More details about the different tests can be found on our website www.bikefitting.com.

RELEASE NOTES:

Revision: 09/2026

Please note specifications are subject to change for improvement without notice.

SHIMANO

SHIMANO NORTH AMERICA BICYCLE INC.
One Holland, Irvine, California 92618. U.S.A. Phone: +1-949-951-5003

SHIMANO EUROPE B.V
High Tech Campus92, 5656 AG Eindhoven, The Netherlands Phone: +31-40-261-2222

SHIMANO INC.
3-77-Oimatsu-cho, Sakai-shi, Osaka 590-8577, Japan

MADISON
Roebuck Way, Knowlhill, Milton Keynes, MK5 8HL, UK

Please note specifications are subject to change for improvement without notice.

© September 2026 by Bikefitting.com