
# Installation on the console

## Step 1

First, put the wall bracket on the metal console in the right place. This action allows you to have enough room to change the bags while you mount the canister on the bracket.

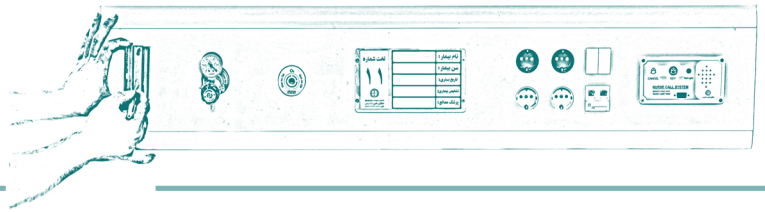


## Step 2

After finding the right place for the wall bracket, mark the holes inside the brackets with a marker. Use a 15mm drill bit to drill holes in the metal console, which is often made of aluminum. With this action, if the copper fluid pipes behind the console are passed from an inappropriate place, the possibility of perforation and leakage will be eliminated.



## Step 3

After installing the bracket, if you plan to install a 2- and 3-liter canister, then mount the T-connector and the connection on the canister.

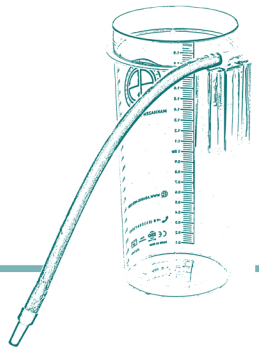

## Step 4

Next, slide the canisters onto the bracket from the top.



## Step 5

First, put the wall bracket on the metal console in the right place. This action allows you to have enough room to change the bags while you mount the canister on the bracket.

