
Computer Architecture Review

Operating Systems



ENIAC (1946)

- Electronic NumericalIntegrator and Calculator
 - Considered by most to be the first electronic computer
 - Vacuum tubes, punchcards
 - 50,000+ times slower than my laptop
 - □ 100ft long
 - each register: 20ft
 - Programming with wires

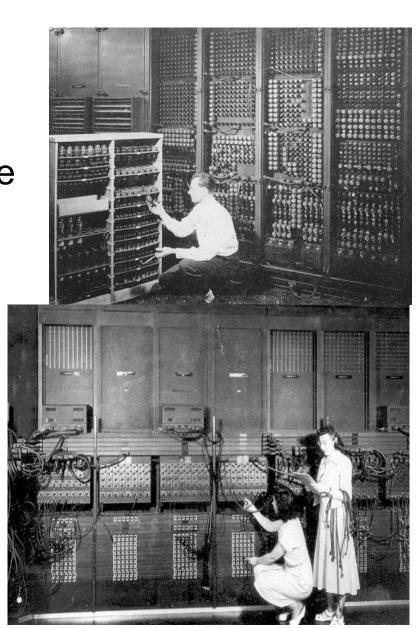




Von-Neumann


- In 1944, John von Neumann joined ENIAC
- He wrote a memo about computer architecture, formalizing ENIAC ideas
 - Eckert and Mauchly have pretty much been forgotten (they were in the trenches)
- These ideas became the Von Neumann architecture model
 - A processor that performs operations and controls all that happens
 - A memory that contains code and data
 - □ I/O of some kind



Von-Neumann Model

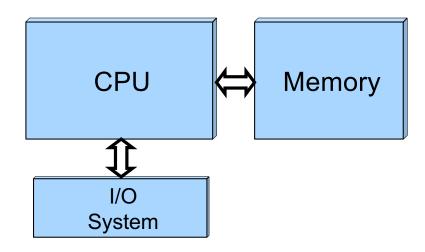


- Amazingly, it's still possible to think of the computer this way at a conceptual level (model from ~70 years ago!!!)
- A computer today has some differences

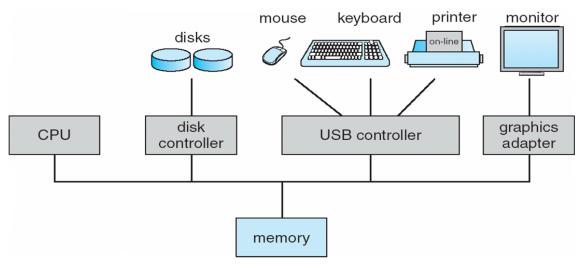




Von-Neumann Model

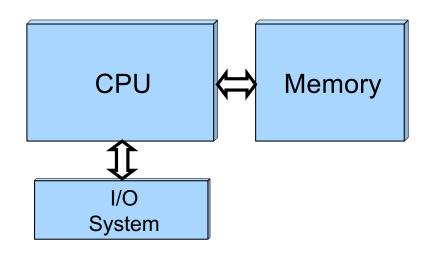

Amazingly, it's still possible to think of the computer this way at a conceptual level (model from ~70 years ago!!!)

A computer today has some differences

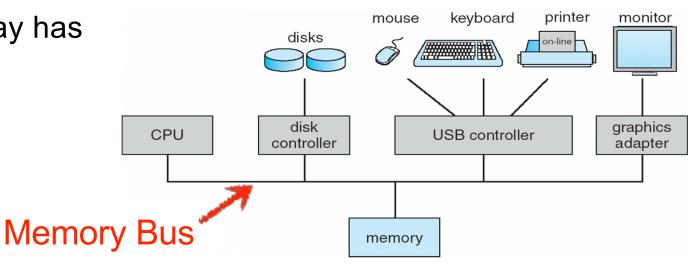

100

Data Stored in Memory

- All "information" in the computer is in binary form
 - Since Claude Shannon's M.S. thesis in the 30's
 - □ 0: zero voltage, 1: positive voltage (e.g., 5V)
 - □ bit: the smallest unit of information (0 or 1)
- The basic unit of memory is a byte
 - □ 1 Byte = 8 bits, e.g., "0101 1101"
- Each byte in memory is labeled by a unique address
- All addresses in the machine have the same number of bits
 - □ e.g., 64-bit addresses on ARM64
- The processor has instructions that say "Read the byte at address X and give me its value" and "Write some value into the byte at address X"



Conceptual View of Memory

address			content	
0000	0000	0000	0000	0110 1110
0000	0000	0000	0001	1111 0100
0000	0000	0000	0010	0000 0000
0000	0000	0000	0011	0000 0000
0000	0000	0000	0100	0101 1110
0000	0000	0000	0101	1010 1101
0000	0000	0000	0110	0000 0001
0000	0000	0000	0111	0100 0000
0000	0000	0000	1000	1111 0101

...



Conceptual View of Memory

address			content		
0000	0000	0000	0000	0110	1110
0000	0000	0000	0001	1111	0100
0000	0000	0000	0010	0000	0000
0000	0000	0000	0011	0000	0000
0000	0000	0000	0100	0101	1110
0000	At add	dress	0000	0000 0000	0010
0000				is 0000 00	
0000	0000	0000	UIII	0100	0000
0000	0000	0000	1000	1111	0101

...



Conceptual View of Memory

address			content	
0000	0000	0000	0000	0110 1110
0000	0000	0000	0001	1111 0100
0000	0000	0000	0010	0000 0000
0000	0000	0000	0011	0000 0000
0000	0000	0000	0100	0101 1110

At address 0000 0000 0000 0100 the content is 0101 1110

0000 0000 0000 1000 1111 0101

•••




Both Code and Data in Memory

Code

Data

- Once a program is loaded in memory, its address space contains both code and data
- To the CPU those are not really different, but the programmer knows which bytes are data an which are code
 - Always conveniently hidden from you if you've never written assembly
 - But we'll have to keep code/data straight in these lecture notes

Example Address Space

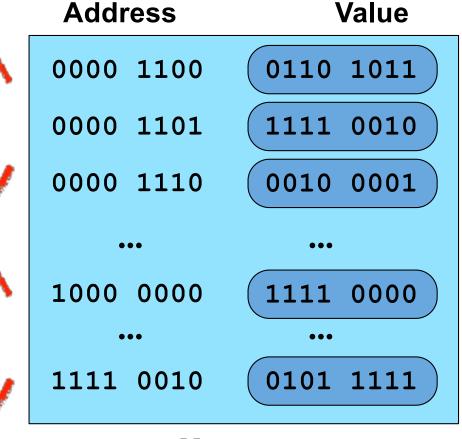





We need a CPU

- So now we have a memory in which we can store/retrieve bytes at precise location
- These bytes presumably have some useful meaning to us
 - e.g., integers, ASCII codes of characters, floating points numbers, RGB values
 - e.g., instructions that specify what to do with the data; when you buy a processor, the vendor defines the instruction set (e.g., instruction "0010 1101" means "increment some useful counter")
- The CPU is the piece of hardware that modifies the content of memory
 - In fact, one can really think of the CPU as a device that takes use from one memory state (i.e, all the stored content) to another memory state (some new, desired stored content)




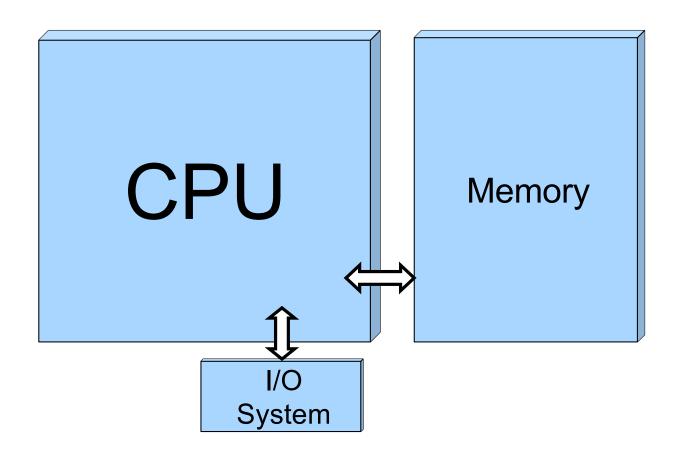



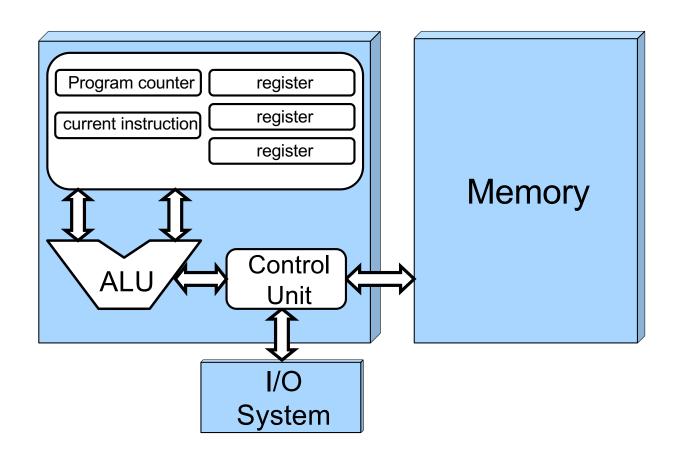




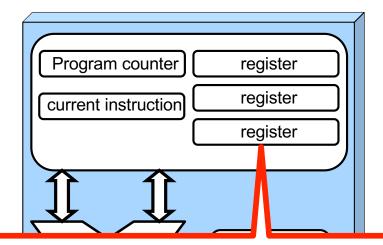

Registers: the "variables" that hardware instructions work with

Data can be loaded from memory into a register
Data can be stored from a register back into memory
Operands and results of computations are in registers
Accessing a register is really fast
There is a limited number of registers



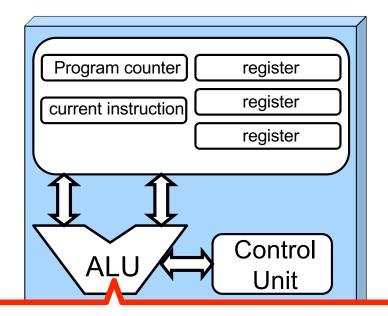


Arithmetic and Logic Unit: what you do computation with

Used to compute a value based on current register values and store the result back into a register

+, *, /, -, OR, AND, XOR, etc.



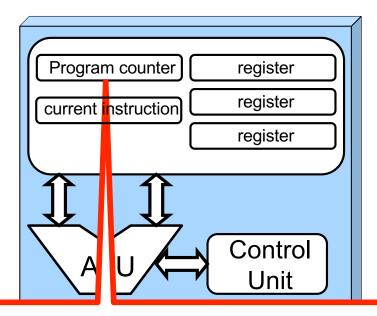


Program Counter: Points to the next instruction

Special register that contains the address in memory of the next instruction that should be executed


(gets incremented after each instruction, or can be set to whatever value whenever there is a change of control flow)



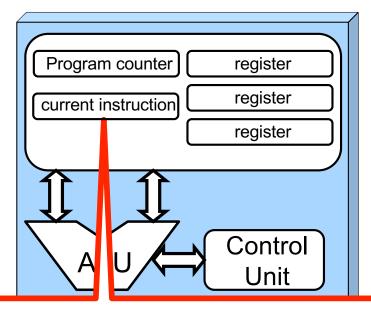

Current Instruction: Holds the instruction that's currently being executed




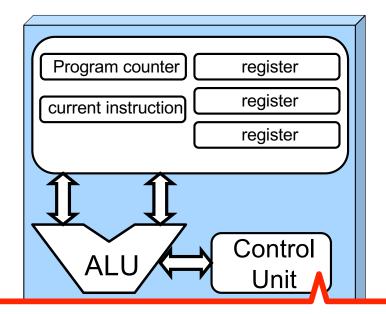


Control Unit: Decodes instructions and make them happen

Logic hardware that decodes instructions (i.e., based on their bits) and sends the appropriate (electrical) signals to hardware components in the CPU

The CPU in its "Glory"

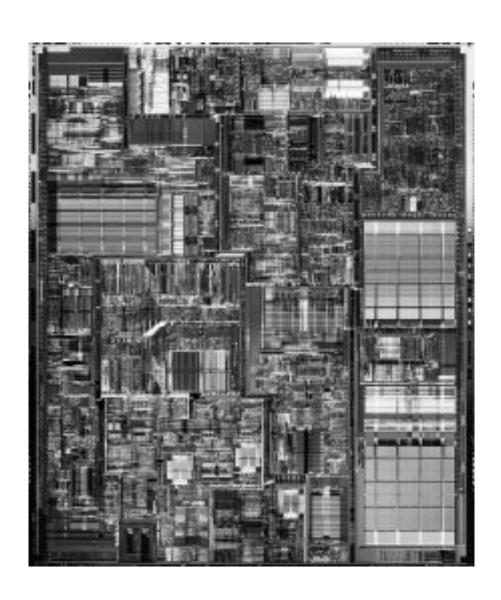

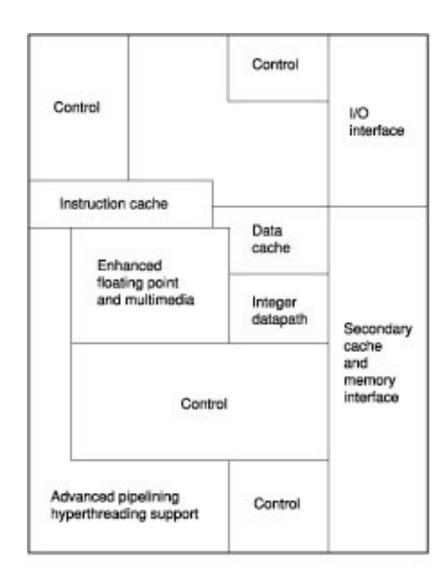


100


Fetch-Decode-Execute Cycle

- The Fetch-Decode-Execute cycle
 - □ The control unit fetches the next program instruction from memory
 - Using the program counter to figure out where that instruction is located in the memory
 - The instruction is decoded and signals are send to hardware components
 - e.g., is the instruction loading something from memory? is it adding two register values together?
 - Operands are fetched from memory and put in registers, if needed
 - The ALU executes computation, if any, and store results in the registers
 - Register values are stored back to memory, if needed
 - □ Repeat
- Computers today implement MANY variations on this model
- But one can still program with the above model in mind
 - □ but certainly without (fully) understanding performance issues



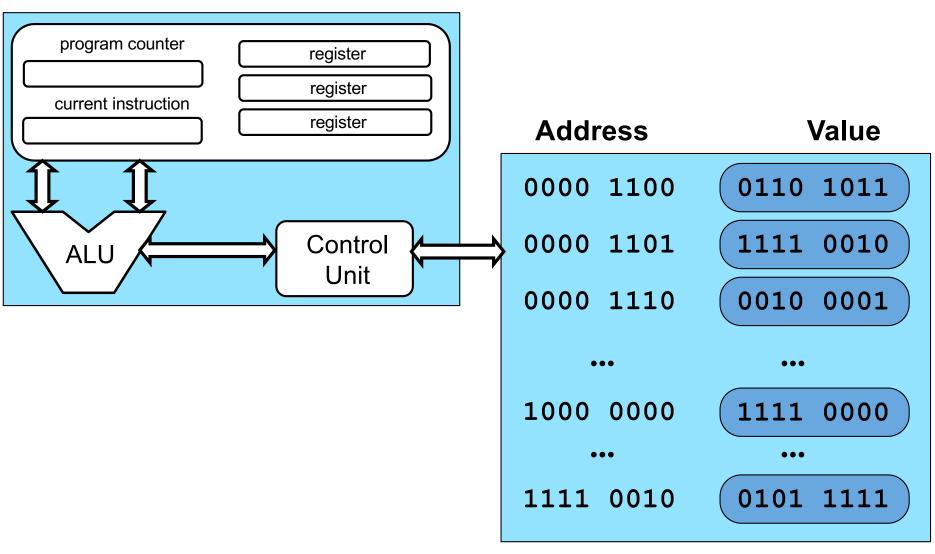




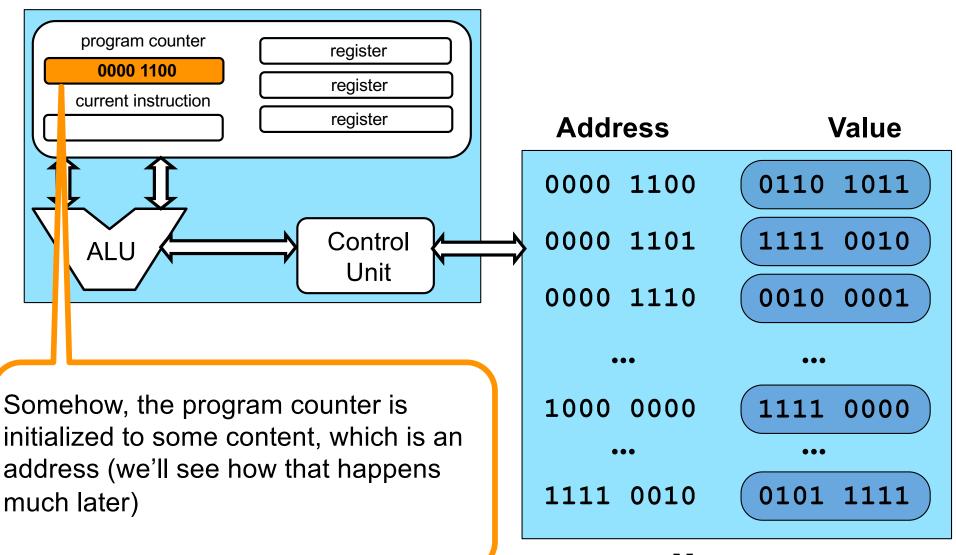


MA.


Fetch-Decode-Execute

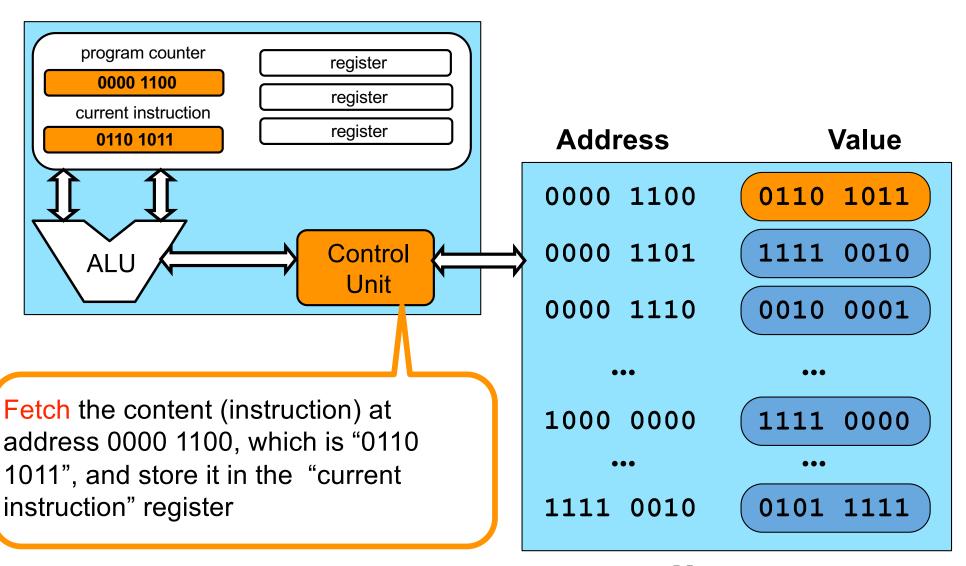




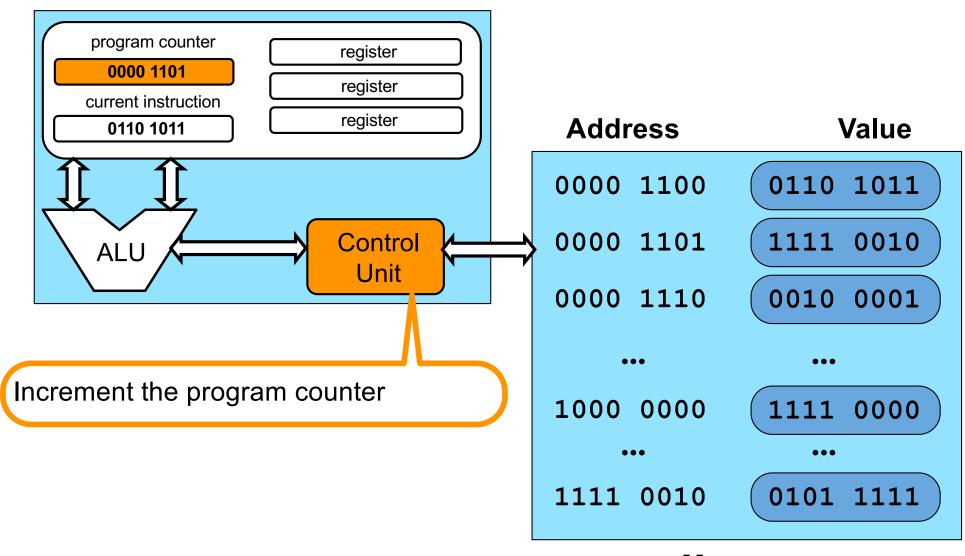




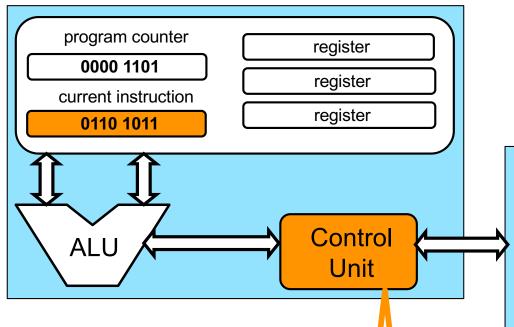


Decode instruction "0110 1011". Say it means: "Load the value at address 1000 0000 and store it in the second register"

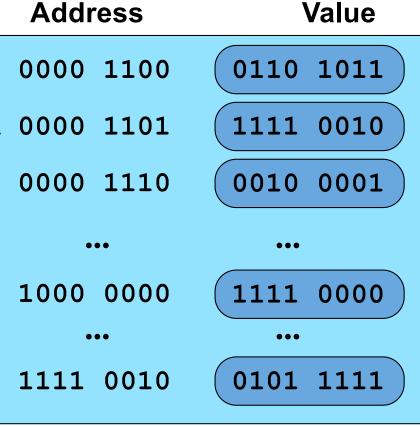




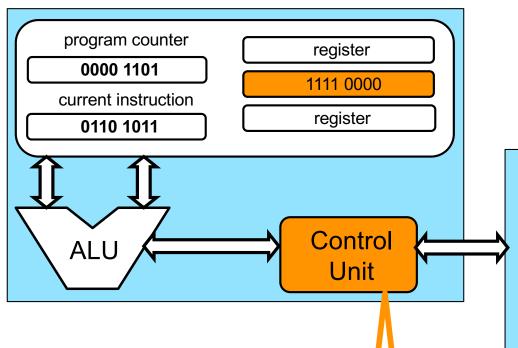

Send signals to all hardware components to execute the instruction: load the value at address 1000 0000, which is "1111 0000" and store it in the second register

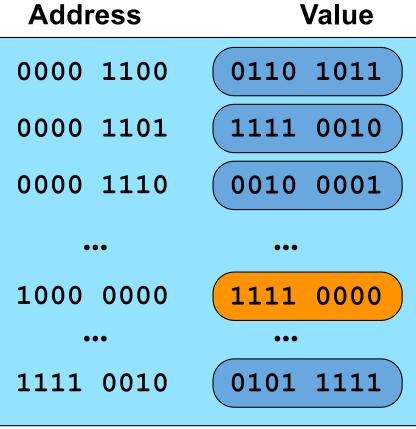




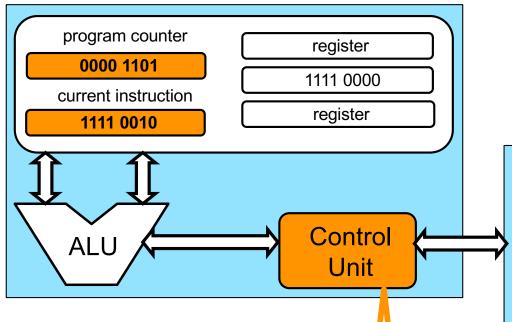


Fetch the content (instruction) at address 0000 1101, which is "1111 0010", and store it in the "current instruction" register



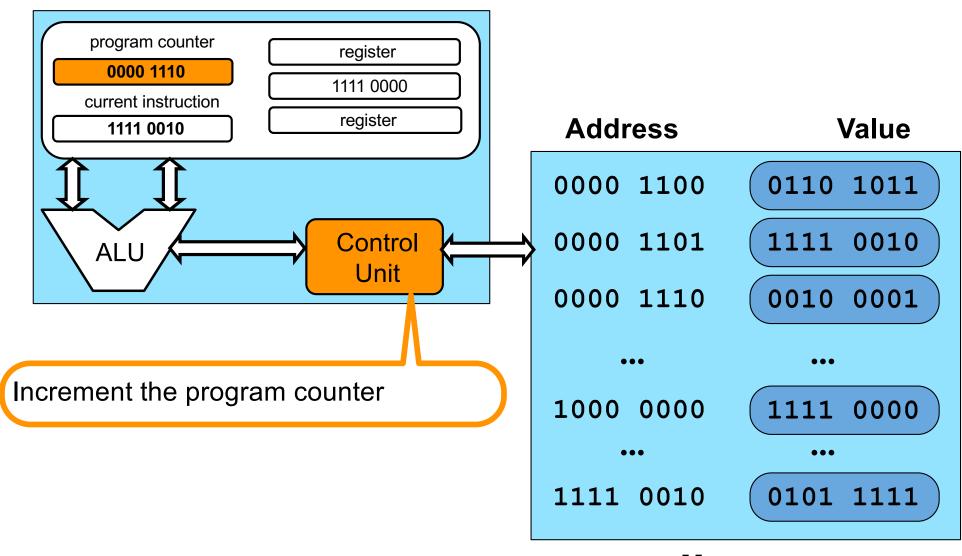




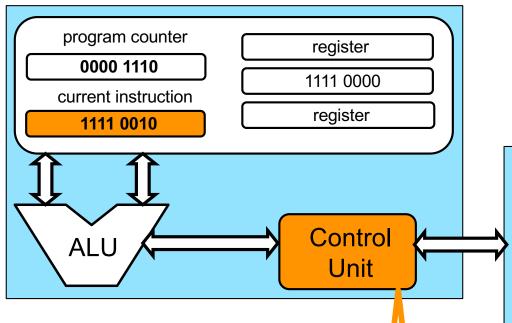


Decode instruction "1111 0010". Say it means: "Do a logical NOT on the second register"

	Addr	ess	Value		
	0000	1100	0110 1011		
>	0000	1101	1111 0010		
	0000	1110	0010 0001		
	•	••	•••		
	1000	0000	1111 0000		
	•	••	•••		
	1111	0010	0101 1111		




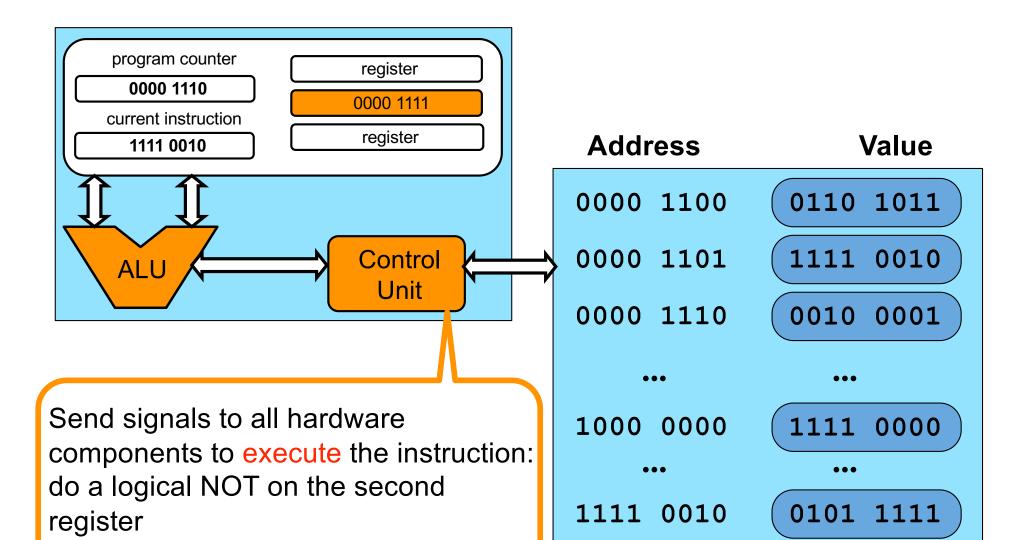




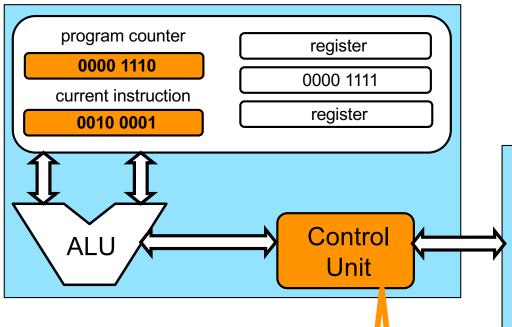


Fetch the content (instruction) at address 0000 1110, which is "0010 0001", and store it in the "current instruction" register

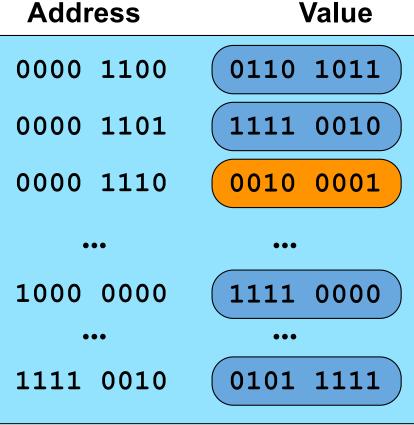




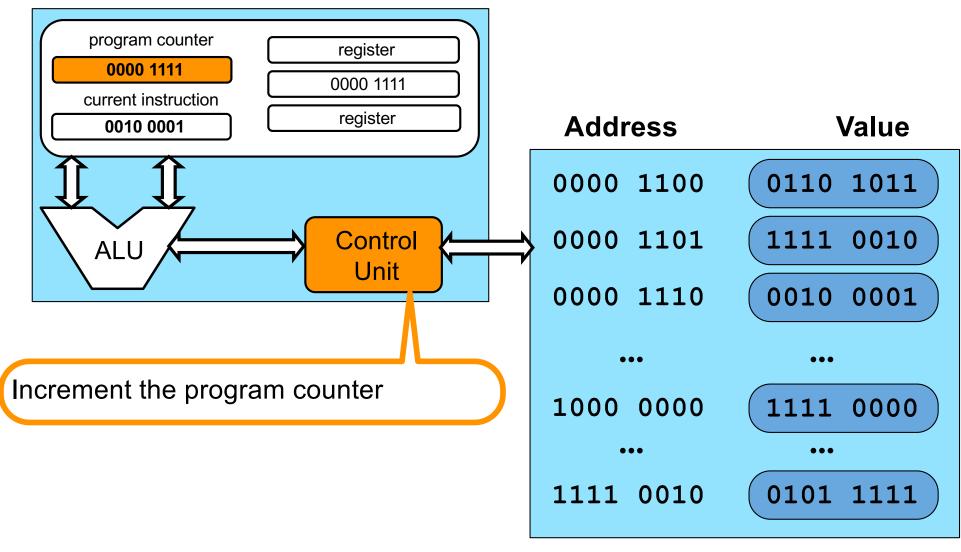




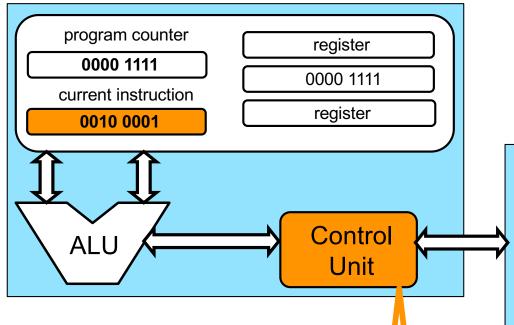


Decode instruction "0010 0001". Say it means: "Store the value in the second register to memory at address 1111 0010"

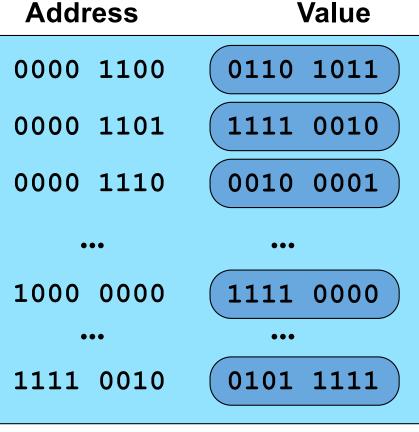



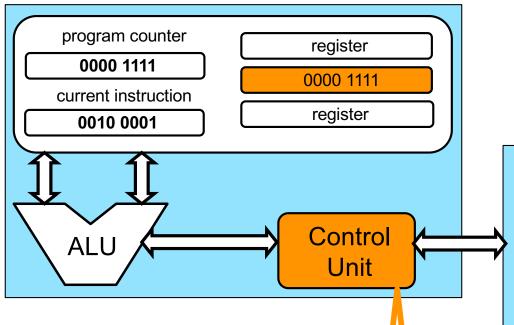

Send signals to all hardware components to execute the instruction: store the value in the second register, which is 0000 1111, to memory at address 1111 0010

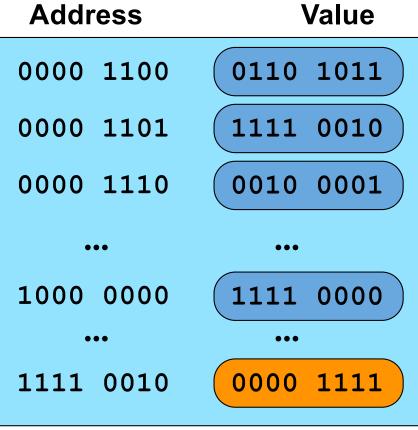

70

Fetch-Decode-Execute


- This is only a simplified view of the way things work
- The "control unit" is not a single thing
 - Control and data paths are implemented by several complex hardware components
- There are multiple ALUs, there are caches, there are multiple CPUs in fact ("cores")
- Execution is pipelined: e.g., while one instruction is fetched, another is executed
- Decades of computer architecture research have gone into improving performance, thus often leading to staggering hardware complexity
 - Doing smart things in hardware requires more logic gates and wires, thus increasing processor cost
- But conceptually, fetch-decode-execute is it



In-Class Exercise

With the following (totally made up and strange, but small) instruction set definition and with this machine state, what is the new memory state after execution completes?


code	operation	
1111 0000	Increment the register	
1111 0010	Decrement the register	
0101 1111	Save register to address NOT(register)	

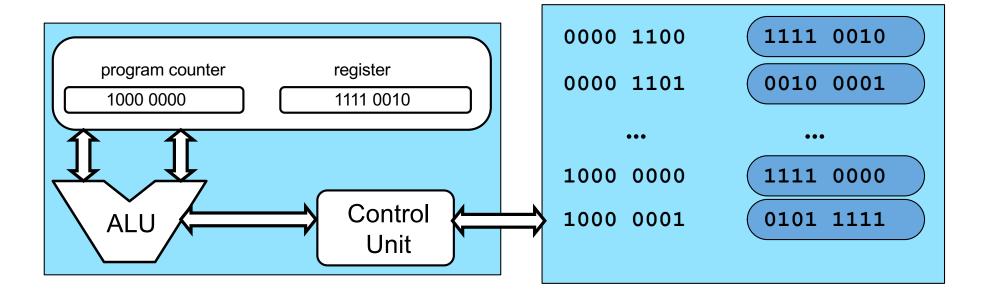



■ Fetch the instruction: "1111 0000"


code	operation		
1111 0000	ncrement the register		
1111 0010	Decrement the register		
0101 1111	Save register to address NOT(register)		

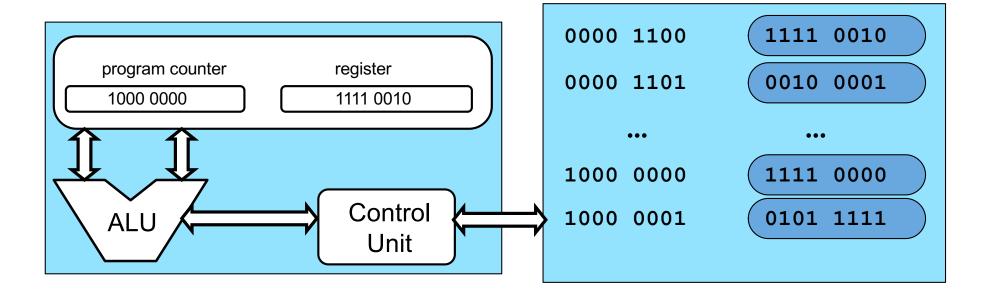



- Fetch the instruction: "1111 0000"
- Execute it: increment register to value "1111 0011"


code	operation		
1111 0000	ncrement the register		
1111 0010	Decrement the register		
0101 1111	Save register to address NOT(register)		

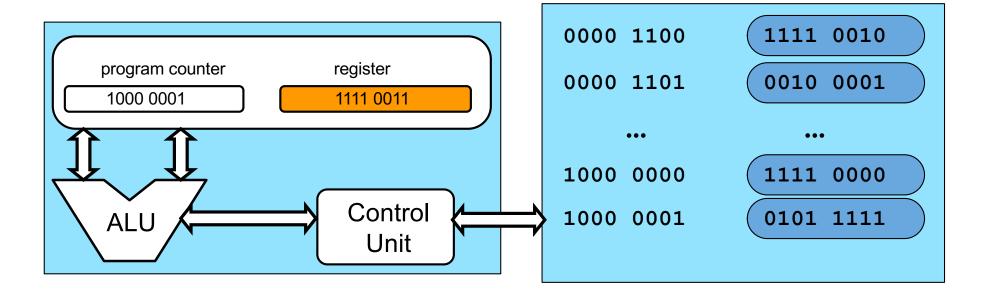



- Fetch the instruction: "1111 0000"
- Execute it: increment register to value "1111 0011"
- Fetch the next instruction: "0101 1111"


code	operation		
1111 0000	Increment the register		
1111 0010	Decrement the register		
0101 1111	Save register to address NOT(register)		

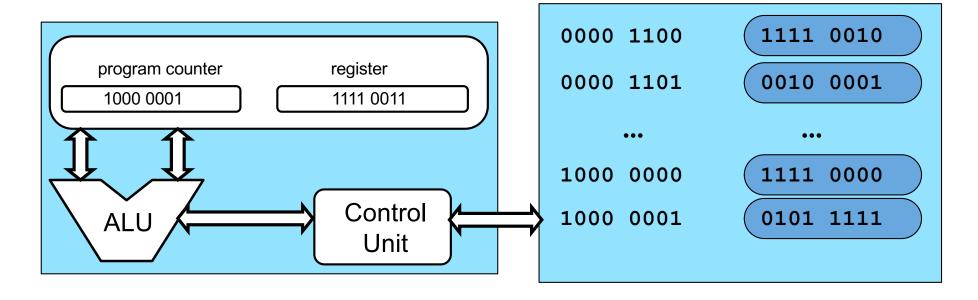



- Fetch the instruction: "1111 0000"
- Execute it: increment register to value "1111 0011"
- Fetch the next instruction: "0101 1111"
- Execute it: save value "1111 0011" to address "0000 1100"

code	operation		
1111 0000	Increment the register		
1111 0010	Decrement the register		
0101 1111	Save register to address NOT(register)		

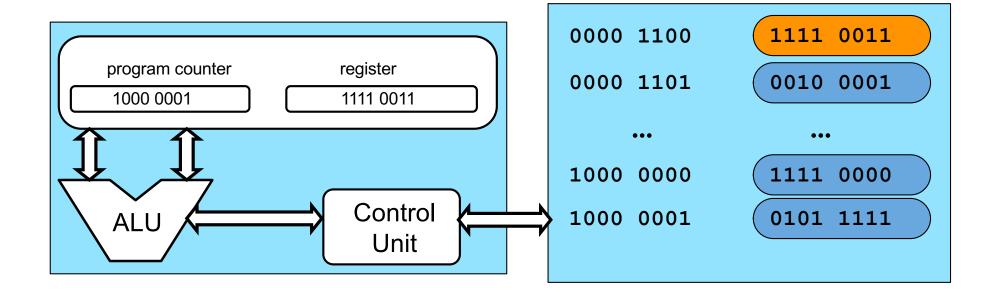

70

Direct Memory Access

- DMA is used in all modern computers
- It's a way for the CPU to let memory-I/O operations (data transfers) occur independently
- Say you want to write 1GiB from memory to some external device like a disk, network card, graphics card, etc.
- The CPU would be busy during this slow transfer
 - □ Load from memory into registers, write from registers to disk, continuously
- Instead, a convenient piece of hardware called the DMA controller can make data transfer operations independently of the CPU
- The CPU simply "tells" the DMA controller to initiate a transfer
 - □ Which is done by writing to some registers of the DMA controller
- When the transfer completes, the DMA controller tells the CPU "it's done" (by generating an interrupt)
 - More on interrupts later
- In the meantime, the CPU can do useful work, e.g., run programs



DMA is not completely free

- To perform data transfers the DMA controller uses the memory bus
- In the meantime, the code executed by the CPU likely also uses the memory bus
- Therefore, the two can interfere
- There are several modes in which this interference can be managed
 - DMA has priority
 - CPU has priority
- But in general, using DMA leads to much better performance anyway




Coping with Slow RAM

- Everybody would like to have a computer with a very large and very fast memory
- Unfortunately, technology (affordably) allows for either slow and large or fast and small
- We need large main memories for large programs and data
- Therefore, from the CPU's perspective, main memory is slooooooow
- What we do: we play a trick to provide the illusion of a fast memory
- This trick is called the memory hierarchy

Ŋ4

The Memory Hierarchy

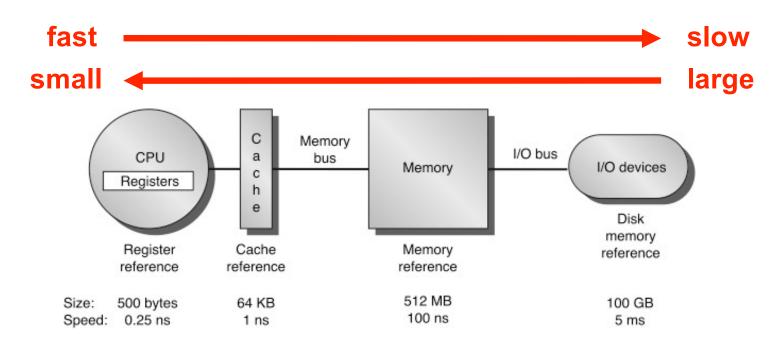

- Real-world has multiple levels of caches (L1, L2, L3)
- Chunks of data are brought in from far-away memory and are copied and kept around in nearby memory
 - Yes, the same data exists in multiple levels of memory at once
- Miss: when a data item is not found in a level (e.g., L1 cache miss)
- Hit: when a data item is found in a level (e.g., L2 cache hit)



Caching

- Whenever your program accesses a byte of memory what happens is:
 - That byte's value is brought from slooooow memory into the fast cache
 - byte values around the byte you accesses are also brought from sloooow memory into the fast cache

Analogy:

- You need a book from the library
- □ You go there and find the book on the many shelves of the library
- You bring back home all books on that shelf and put them on your own bookshelf in your house
- Next time you need that book or one of the books "around it", it will take you no time at all to get it
 - Presumably all books on a shelf at the library are about the same topic, so you'll need the books around the book you wanted in the first place



Why Does it Work?

- Temporal Locality: a program tends to reference addresses it has recently referenced
 - The first access, you pay the cost of going to faraway/slow memory to fetch the counter's content
 - Subsequent accesses are fast
 - This is the "I need that book again" analogy
- Spatial Locality: a program tends to reference addresses next to addresses it has recently referenced
 - The first access of array element i may be costly
 - But the first access of array element i+1 is fast (in the chunk)
 - This is the "I need another book on that same shelf" analogy

v

Memory Tech. and Management


Level	1	2	3	4
Name	registers	cache	main memory	disk storage
Typical size	< 1 KB	> 16 MB	> 16 GB	> 100 GB
Implementation technology	custom memory with multiple ports, CMOS	on-chip or off-chip CMO SRAM	CMO DRAM	magnetic disk and others
Access time (ns)	0.25 - 0.5	0.5 – 25	80 – 250	5,000.000
Bandwidth (MB/sec)	20,000 - 100,000	5000 – 10,000	1000 – 5000	20 – 150
Managed by	compiler	hardware	operating system	operating system
Backed by	cache	main memory	disk	CD or tape

- Main memory and disk are managed by the OS
- When dealing with a "slow" level, it pays off more to try being "clever" (i.e., spending more time trying to make good decisions)
 - Part of why OSes are doing complicated things, as opposed to hardware which tries to do simple things fast



SMP Systems

Symmetric multi processors

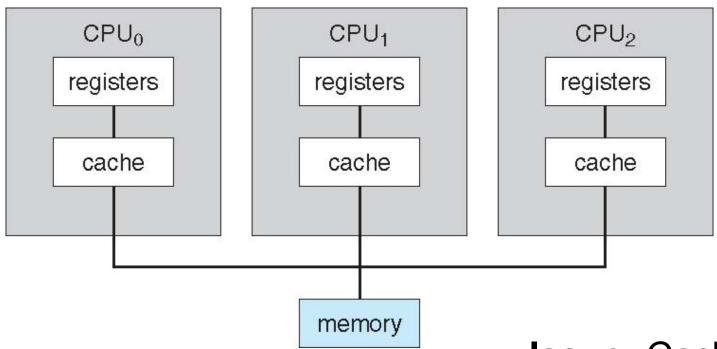


Issue: Cache coherency (see textbook)



Moore's Law

- In 1965, Gordon Moore (co-founder of Intel) predicted that transistor density of semiconductor chips would double roughly every 24 months (often "misquoted" as 18 months)
- He was right
- But, the law was often wrongly interpreted as:
 "Computers get twice as fast every 2 years"
- This wrong interpretation was true for a while, but no longer...

Moore's Law

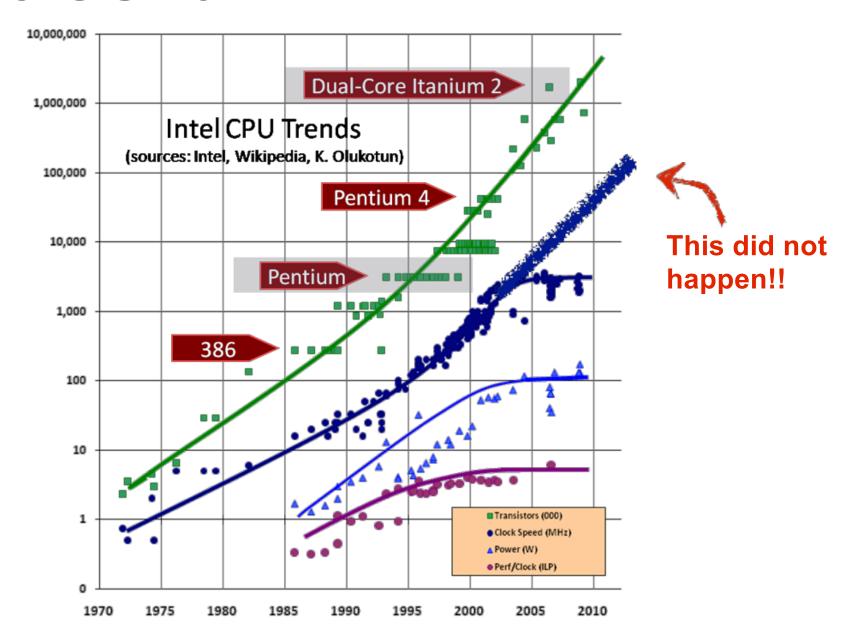




Multi-core Chips

- Constructors cannot increase clock rate further
 - Power/heat issues
- They bring you multi-core processors
 - Multiple "low" clock rate processors on a chip
- It's really a solution to a problem, not a cool new advance
 - Even though there are many cool/interesting things about multicore processors
- Most users/programmers would rather have a 100GHz core than 50 2GHz cores



Multi-Core Systems

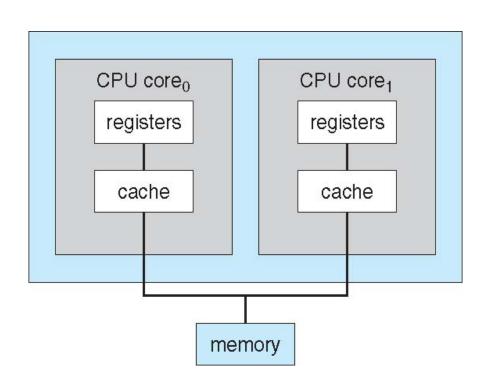


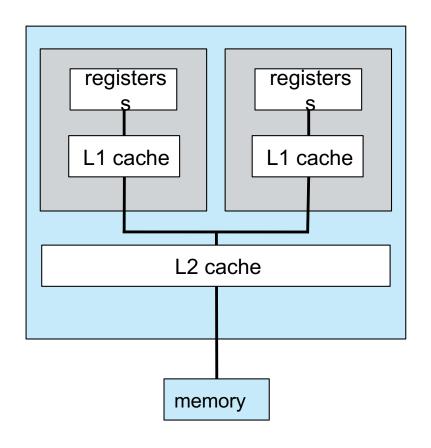


Figure 1.7 from the book

More realistic picture




Multi-Proc Multi-Core Systems

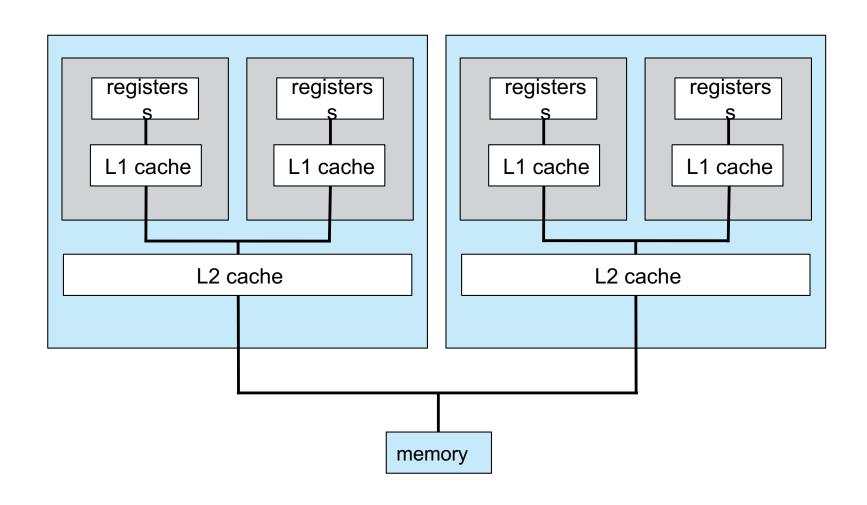



Takeaway

- Each byte in memory is labeled by a unique address
- CPU architecture
- The Fetch-Decode-Execute cycle

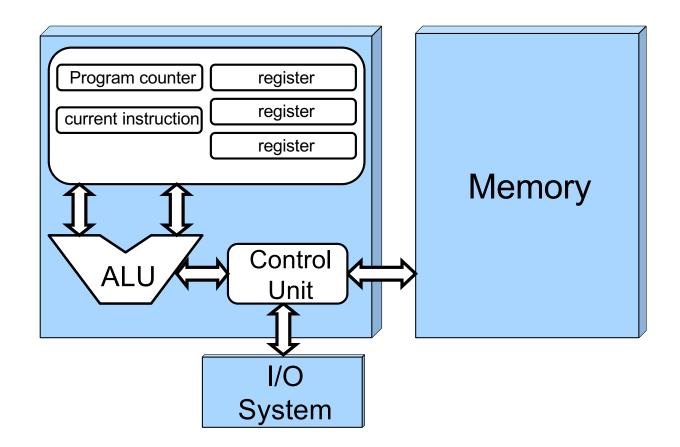



Conclusion

- If you want to know more
 - Take a computer architecture course
 - Classic Textbook by Patterson and Hennessy
- Reading assignment: Sections 1.2 and 1.3

