


SC2 Sport & Pro R2 Antenna connector replacement guide

Version	Date	Changelog
V1	22.1.2021	First version
V2	25.2.2021	Added images and Simucube logo

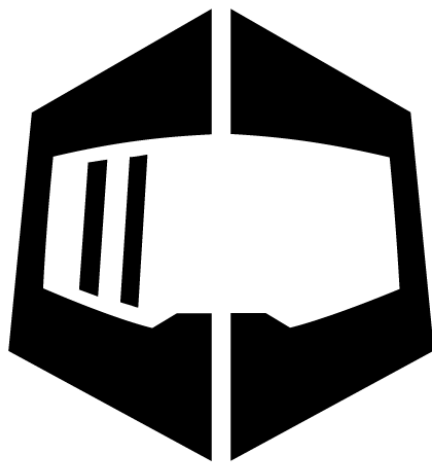

SIMUCUBE

Step 1: Disconnect all wires from the unit.

Power the unit off, disconnect all wires. Leave unit without any powered wires (DC and USB connector) for 10 minutes.

Step 2: Unscrew the back plate / Electronics Assembly.

Place the motor on a clean table surface. Avoid scratching the unit.

Unscrew the two torx screws marked by **RED** circles.


Locate the **antenna connector**



NOTE: Do not let the back plate and electronics assembly to hang so that it is only supported by internal wires!

NOTE: Make sure not to squeeze any cables between parts and damaging them when reassembling this step.

Step 3: Open the backplate

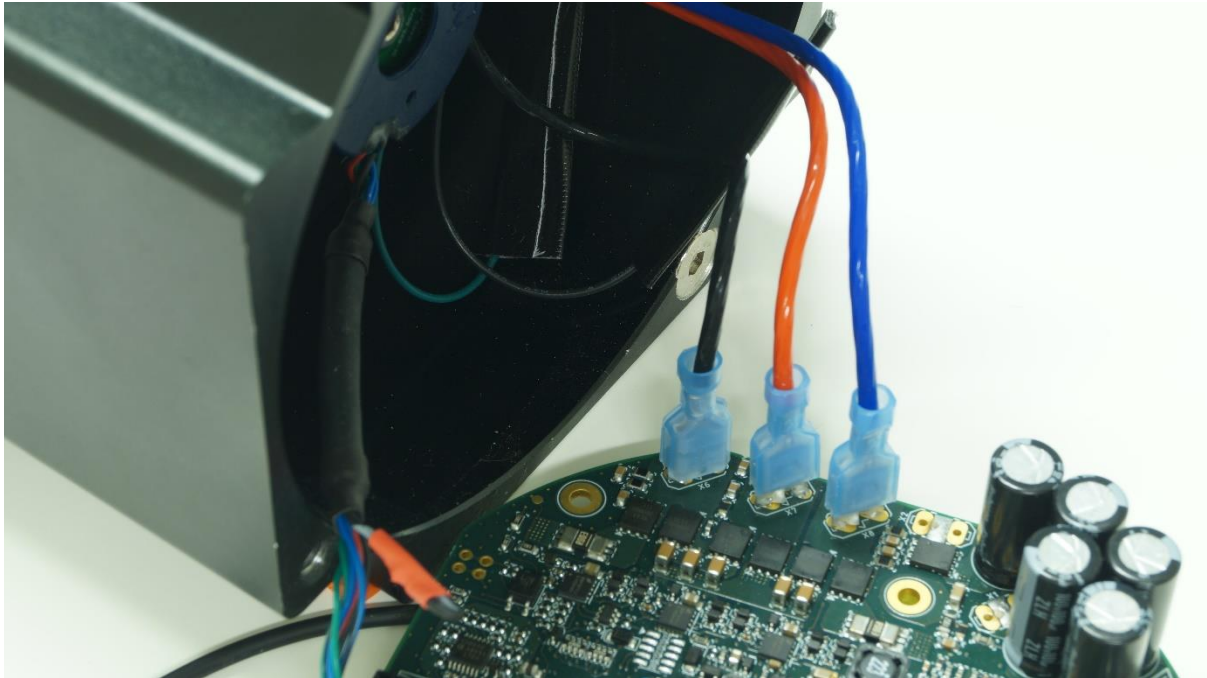


NOTE: Do not let the back plate and electronics assembly to hang so that it is only supported by internal wires!

NOTE: Make sure not to squeeze any cables between parts and damaging them when reassembling this step.


Step 4: Unscrew connector

Unscrew the antenna connector using two 8mm wrenches. Note the arraignment of the washers.

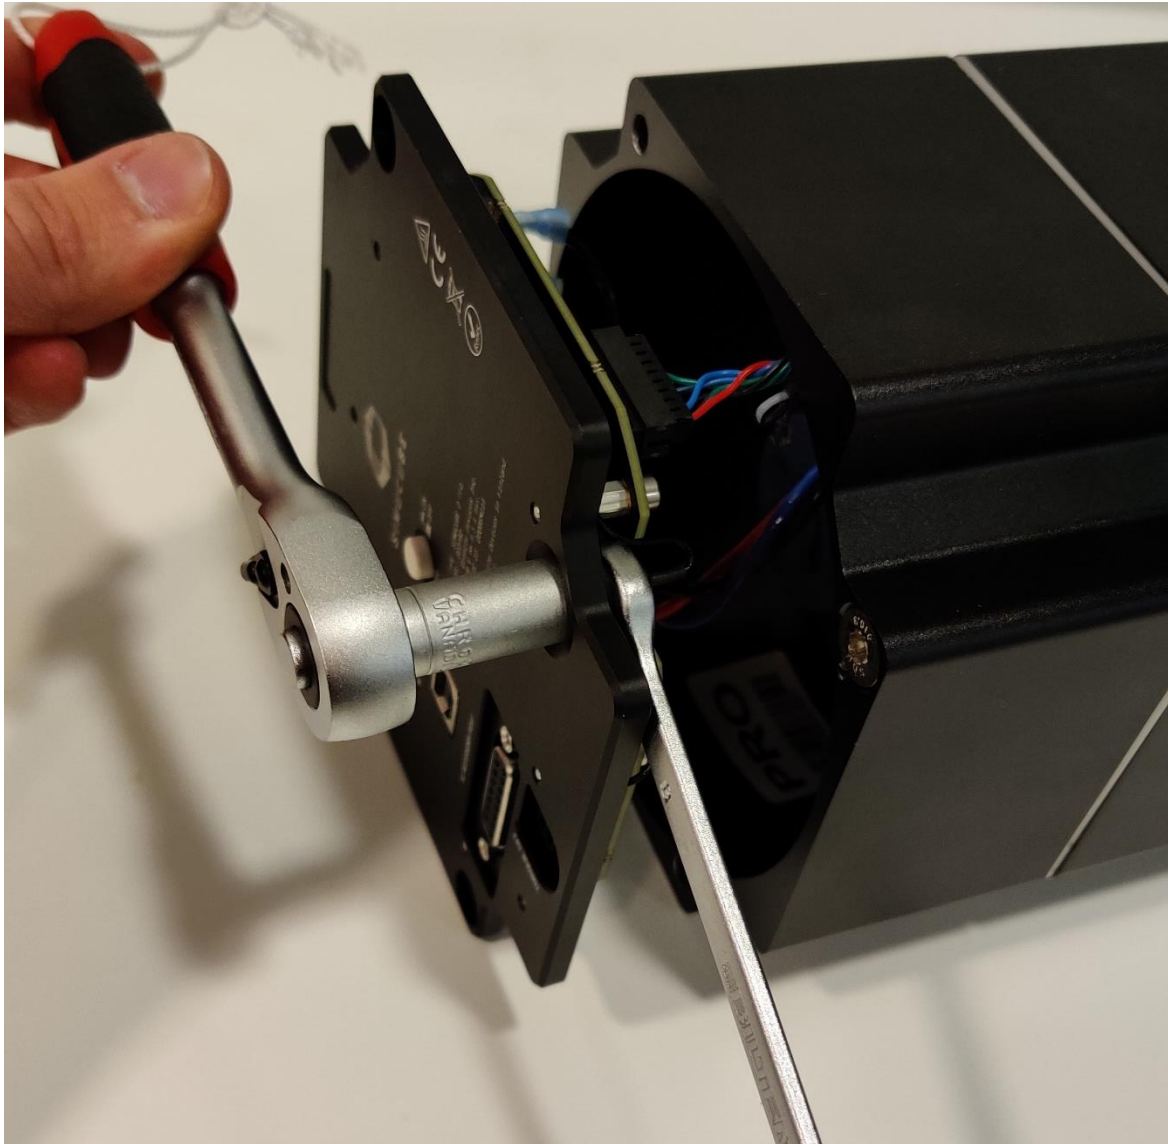


Step 5: Wireless module

Locate the wireless module and disconnect the antenna from the u.FL connector by pulling the connector away from the PCB.

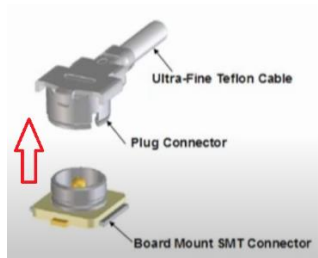

Orientate the cable according to the picture when reassembling.

NOTE: Do not pull using the cable it might cause damage to the connector.

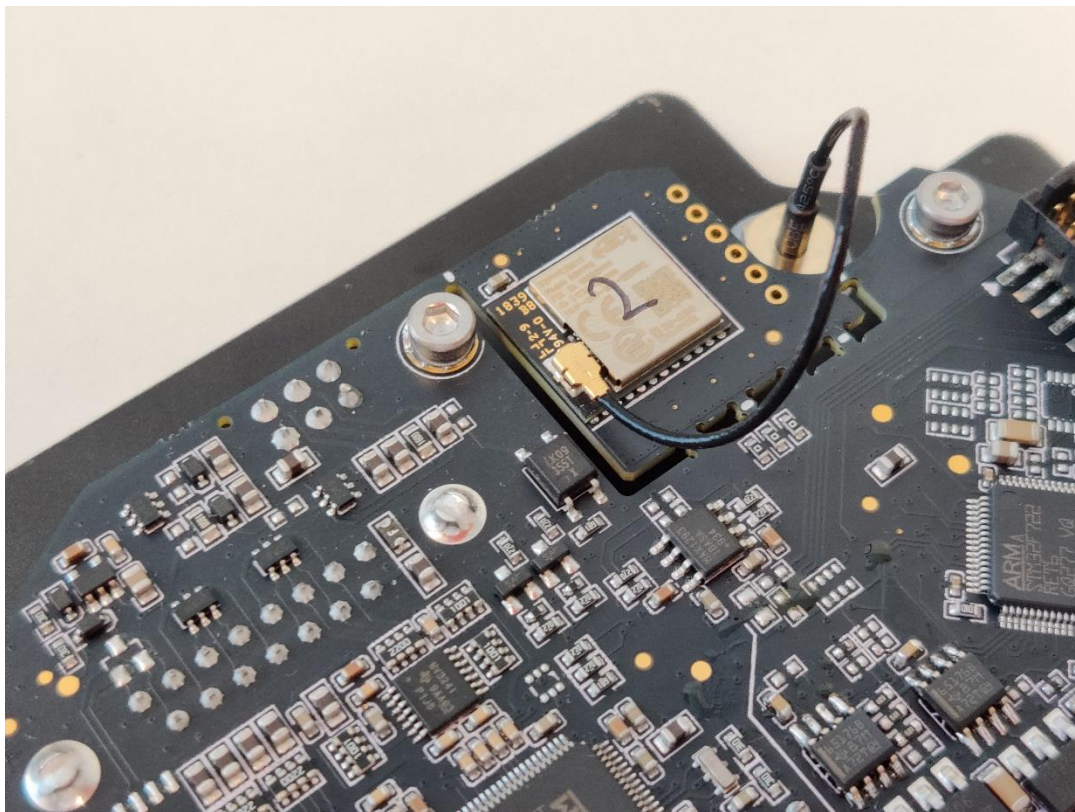


Step 6: Cable replacement

Install the new antenna connector with its washers. Tighten the nut so the connector will not rotate when installing the antenna.

NOTE: Overtightening might damage the connector.

Gently push the u.FL connector all the way down. Try to prevent turning or bending the cable after installation as the connector is not very strong.

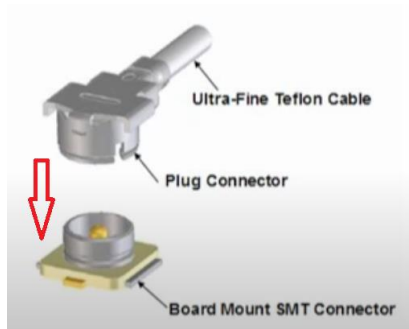

Step 9: Reassembly

Reverse steps 2-4 to reassemble the device.