
# Hard Folding Installation Manual

## 1 Accessories Inventory




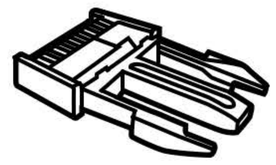

☐ Buckle X2




☐ Front clamps X2

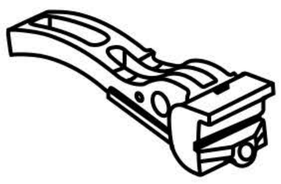

☐ Rear clamps X4




☐ Triangle screw X2

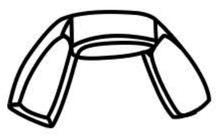


☐ Fastening nut X2




☐ T-bar X1

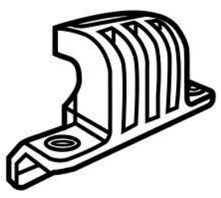

☐ Buckle Base X1

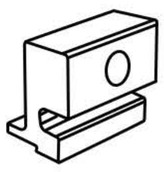


☐ Fixed block X8

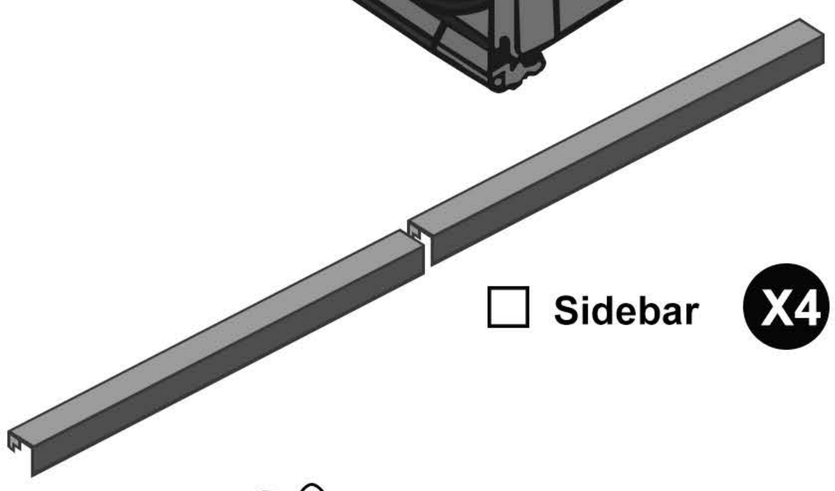


☐ Sidebar X4



☐ Hex Key 4mm X1

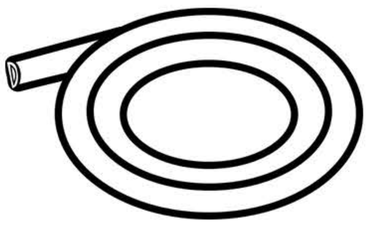


☐ 140" D-shaped rubber strip X1

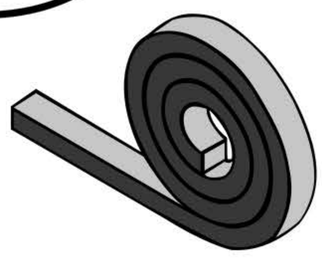


☐ 70" Square rubber strip X1



☐ Fixing block screw X8

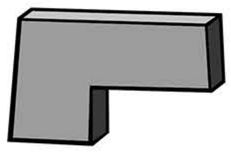

☐ Sealing block X4

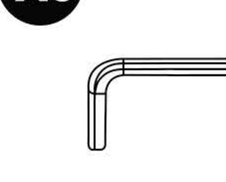

☐ Caulking Strips X1



☐ Bolts X2

## 2 Product Advantages


Our Tonneau Cover Is Made of Several Durable Materials,
Such as FRP Clip Mesh, Aircraft-grade alloy aluminum and High Performance


We Offer Matched Tonneau Cover For Dozens Of Car Models, Fit For The Truck Bed Perfectly.


# 3 Installation

**CAUTION**


- CLEAN THE BULKHEAD WITH SOAP AND WATER TO REMOVE IMPURITIES AND GREASE, ALLOWING THE MOISTURE TO EVAPORATE TO ENSURE A DRY SURFACE.

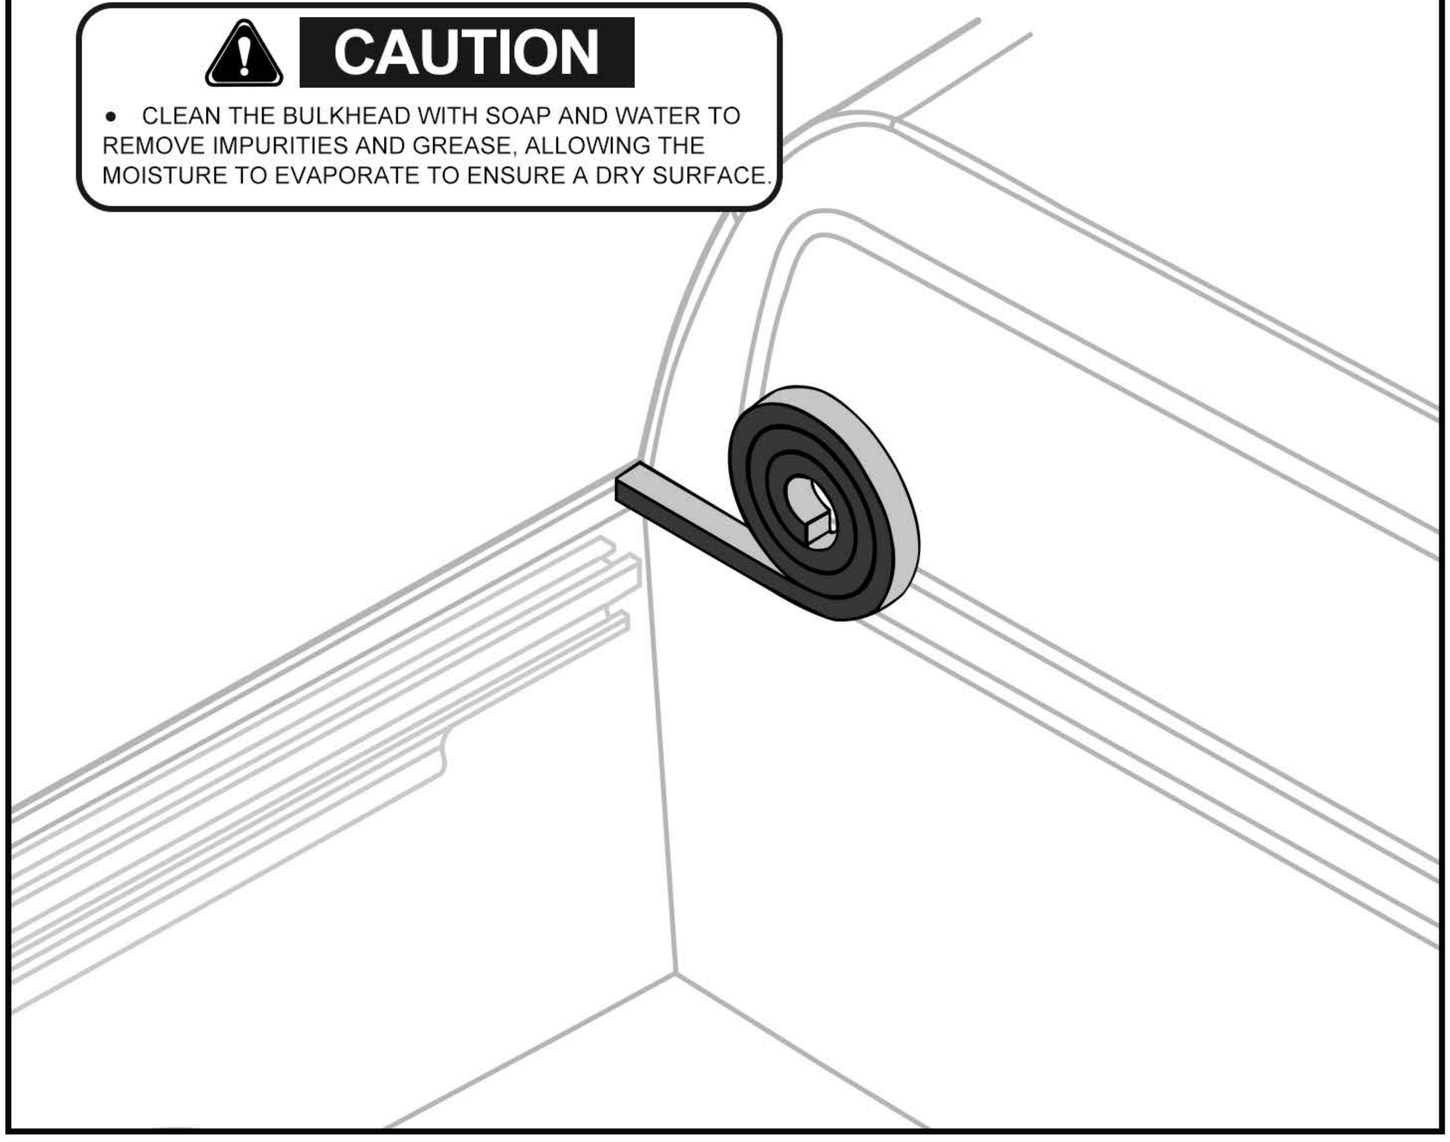

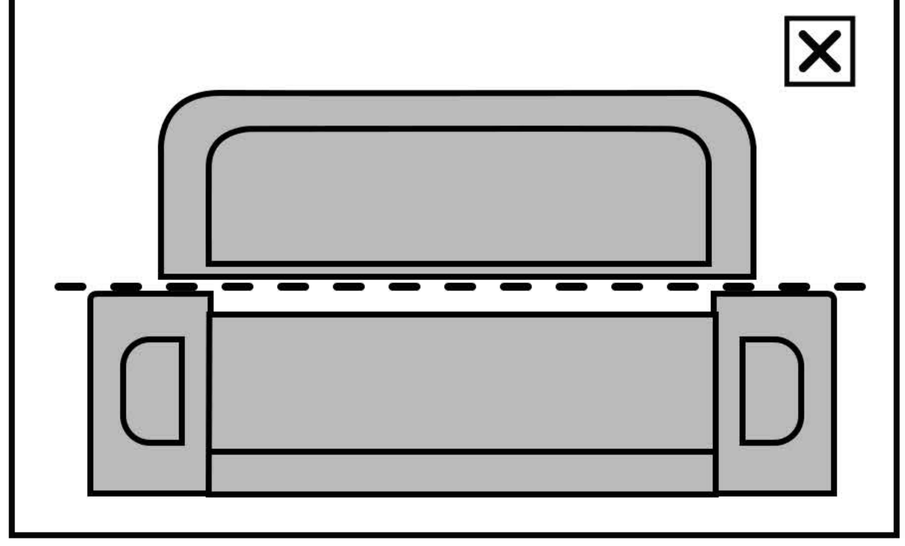


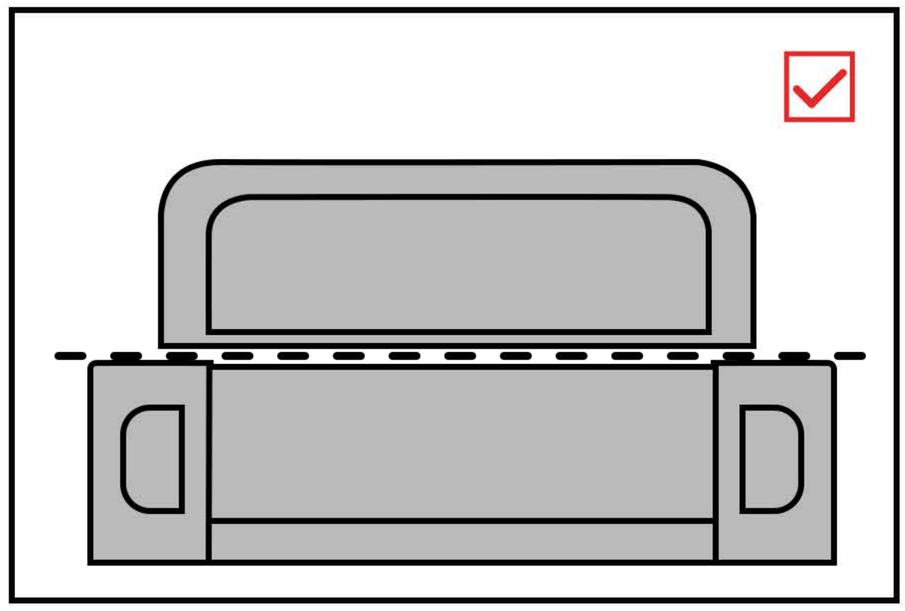


Peel off the backing and stick the Square rubber strip from one edge to the other edge. Use scissors or a utility knife to remove any excess. Apply even pressure along the entire Square rubber strip to ensure good adhesion. If the truck has a Plastic bed liner the Square rubber strip is not necessary

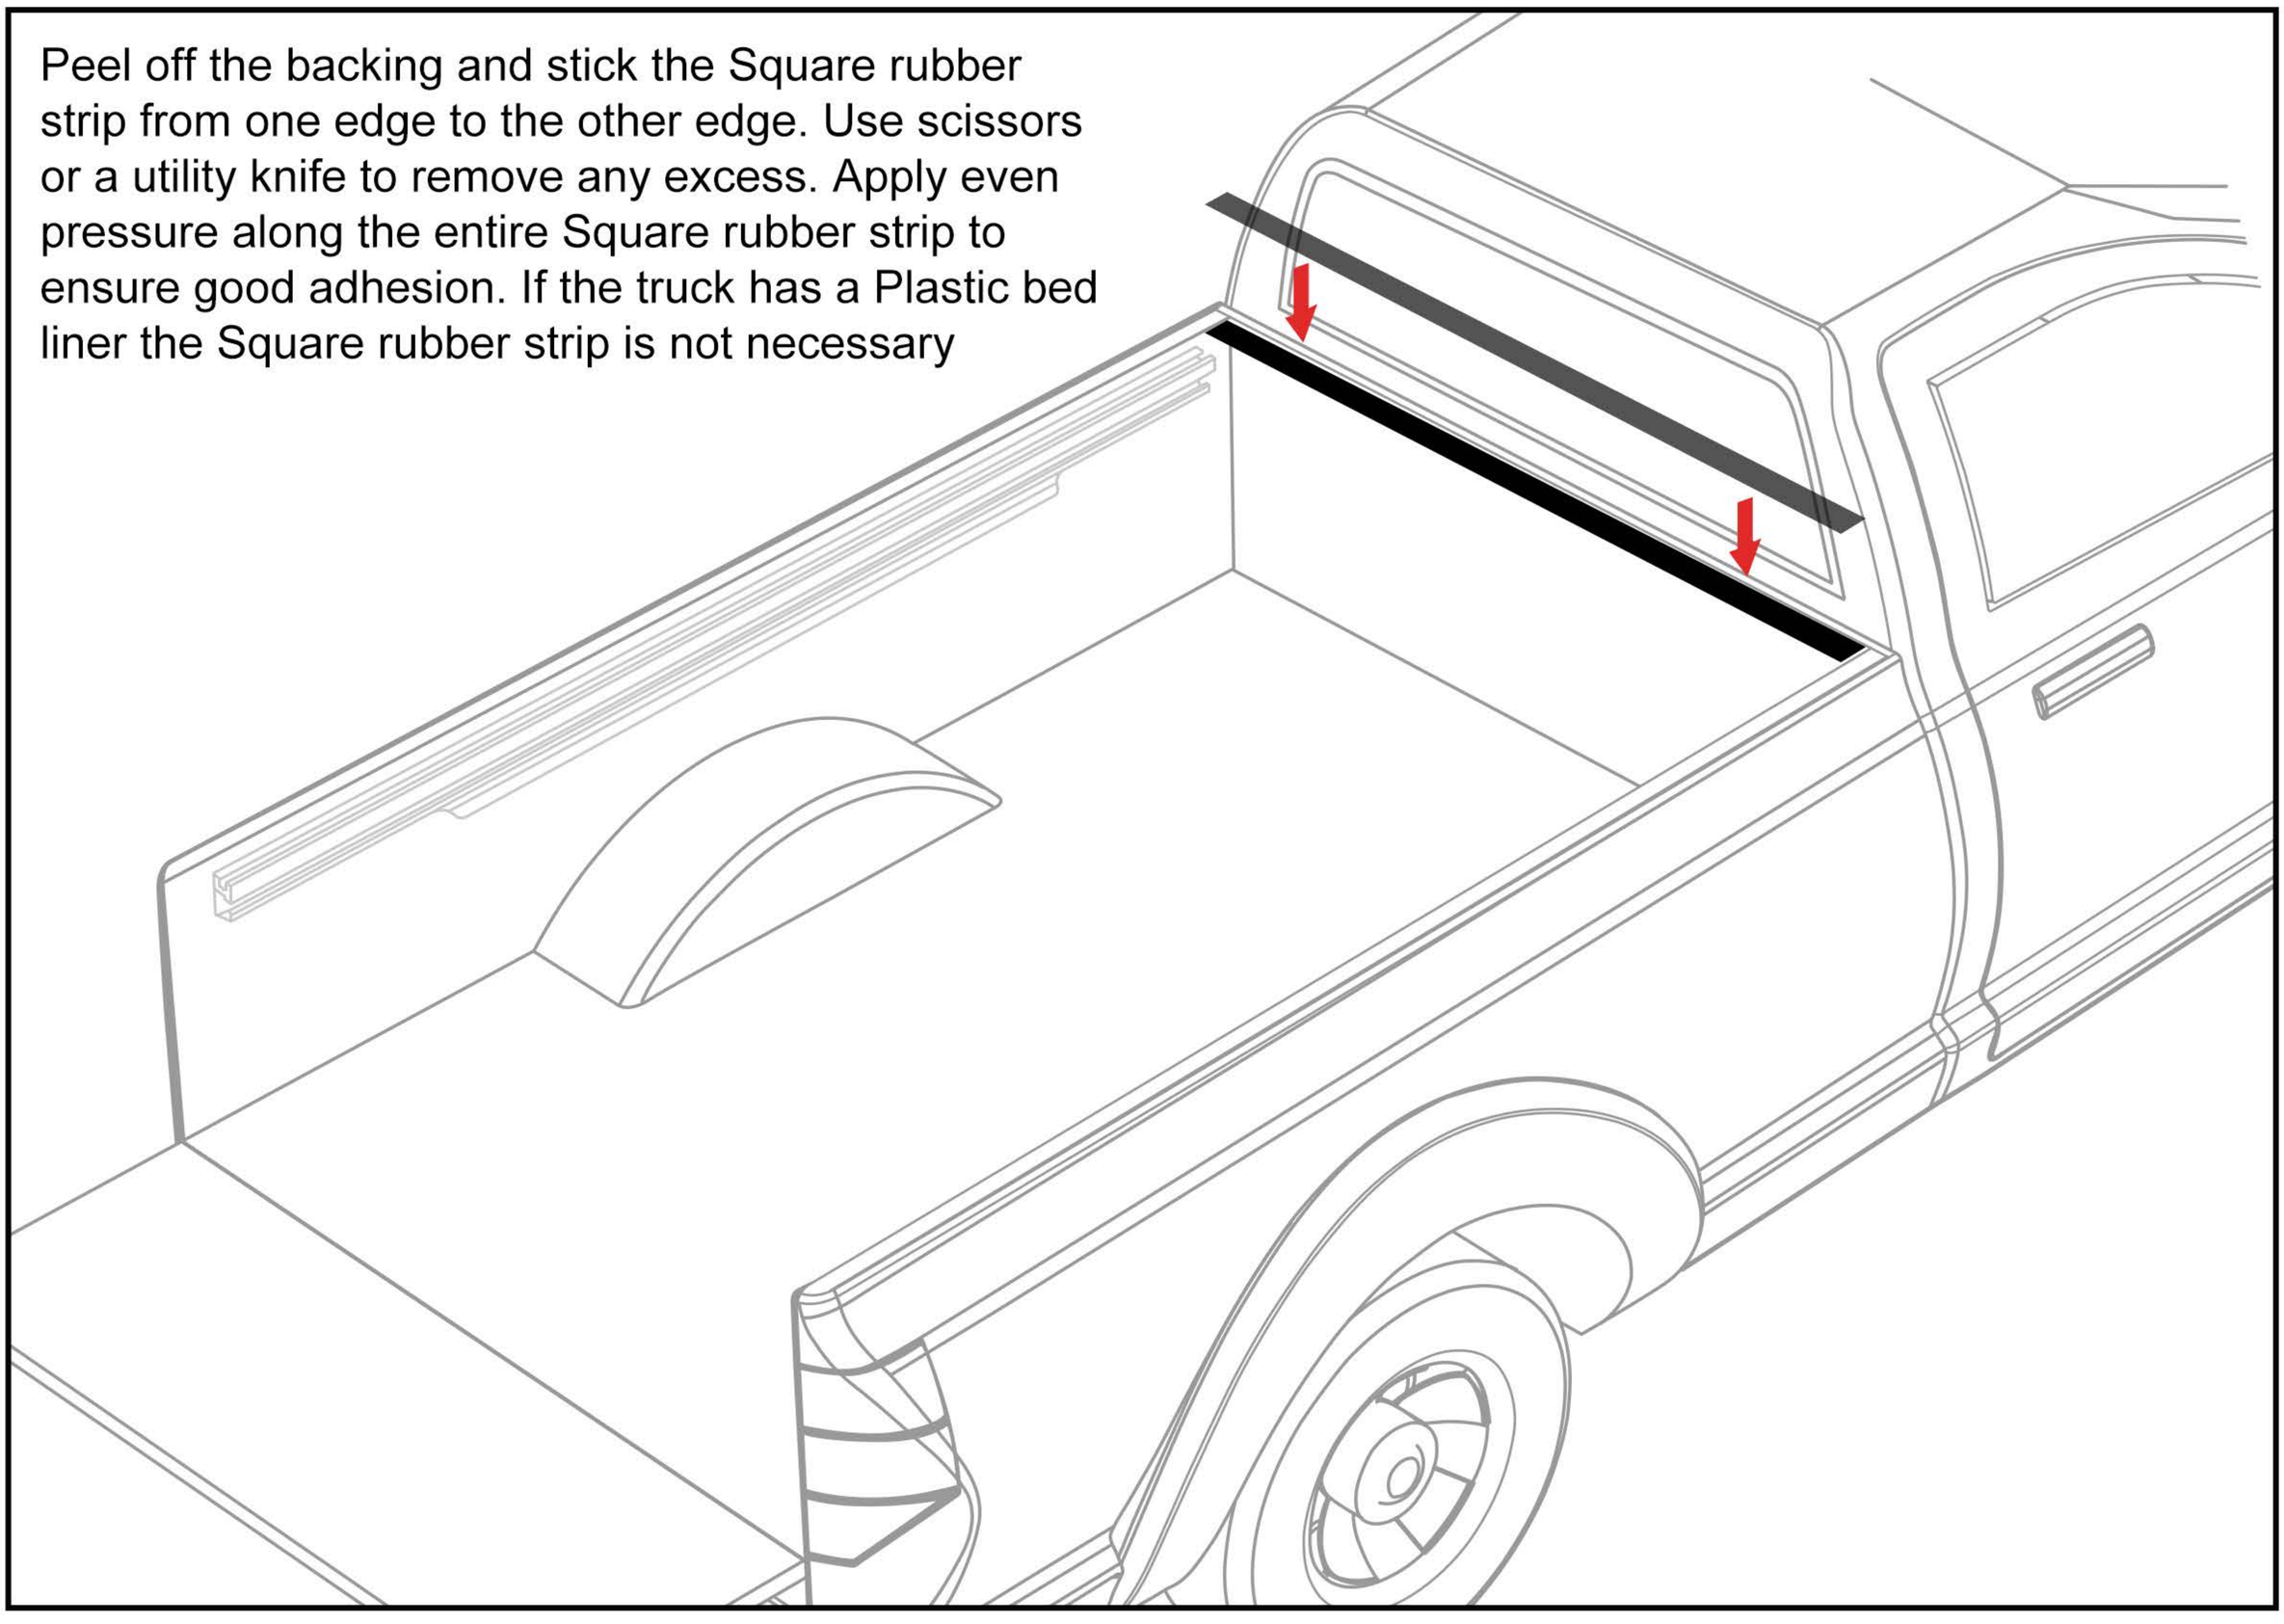


Remove the factory accessory rails.

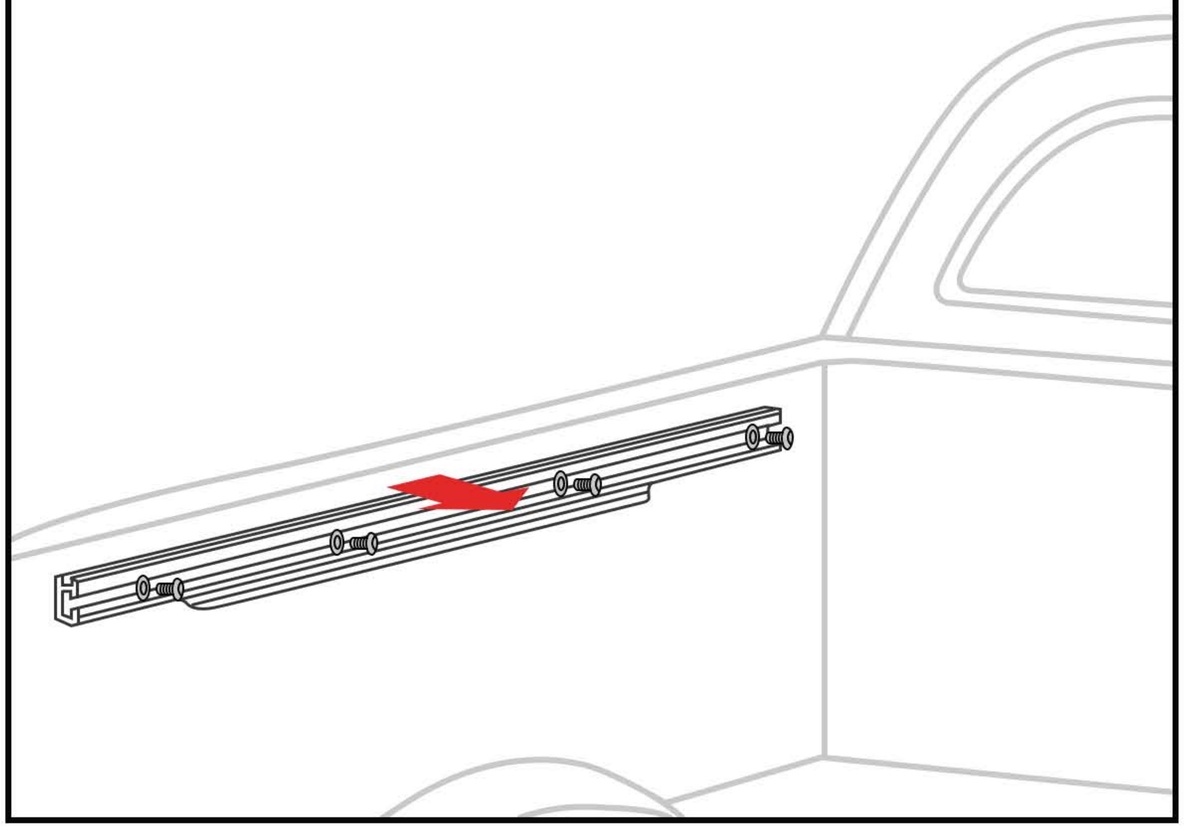


Apply the roll of D-shaped rubber strip along the bed.Make sure the seal extends beyond the ends of the accessory rail,from the bulkhead through to the back corner trim cap. Do this for both driver and passenger sides.

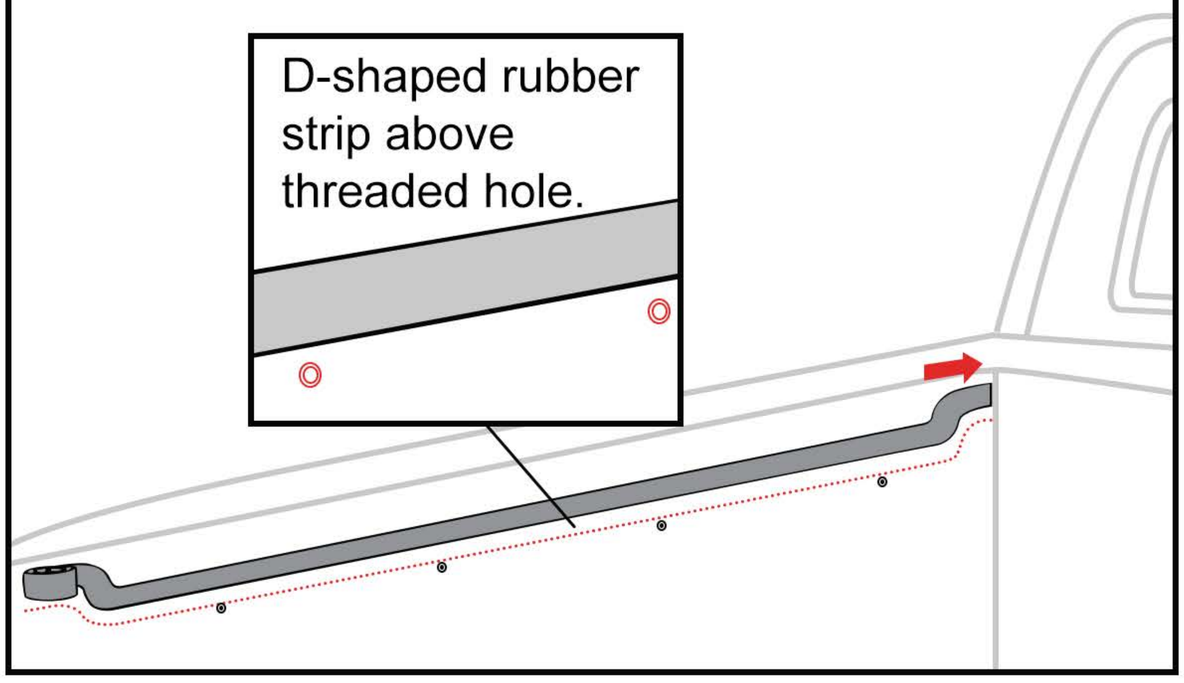



Place the D-shaped rubber strip to continue through the rear end cap.

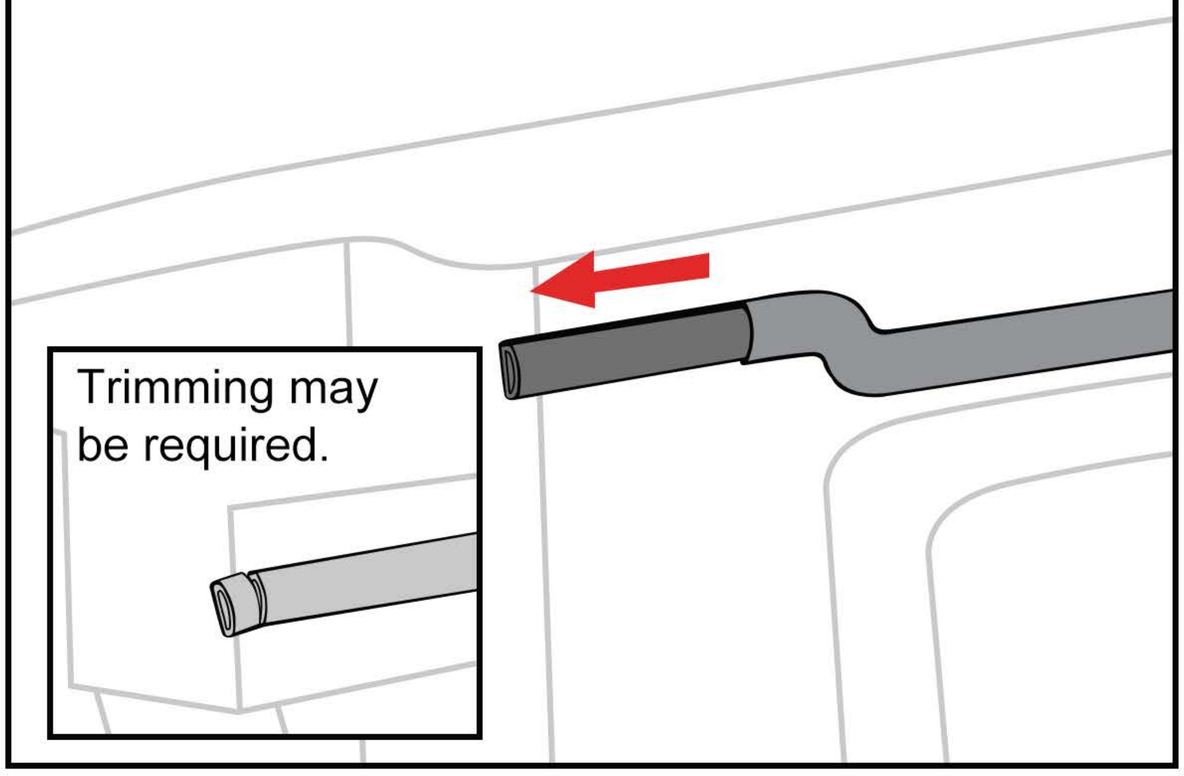



With the D-shaped rubber strip in place on both sides, reinstall the factory accessory rails.

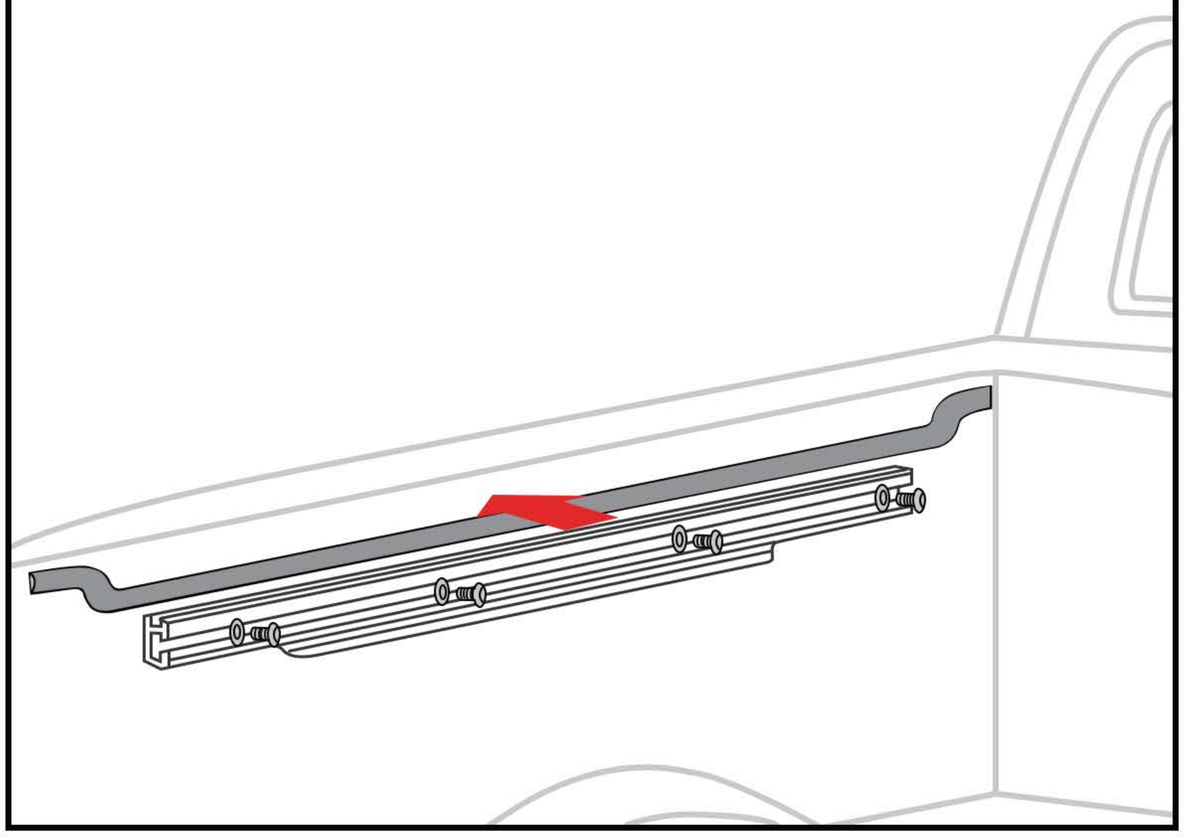


Remove the factory accessory rail end caps.

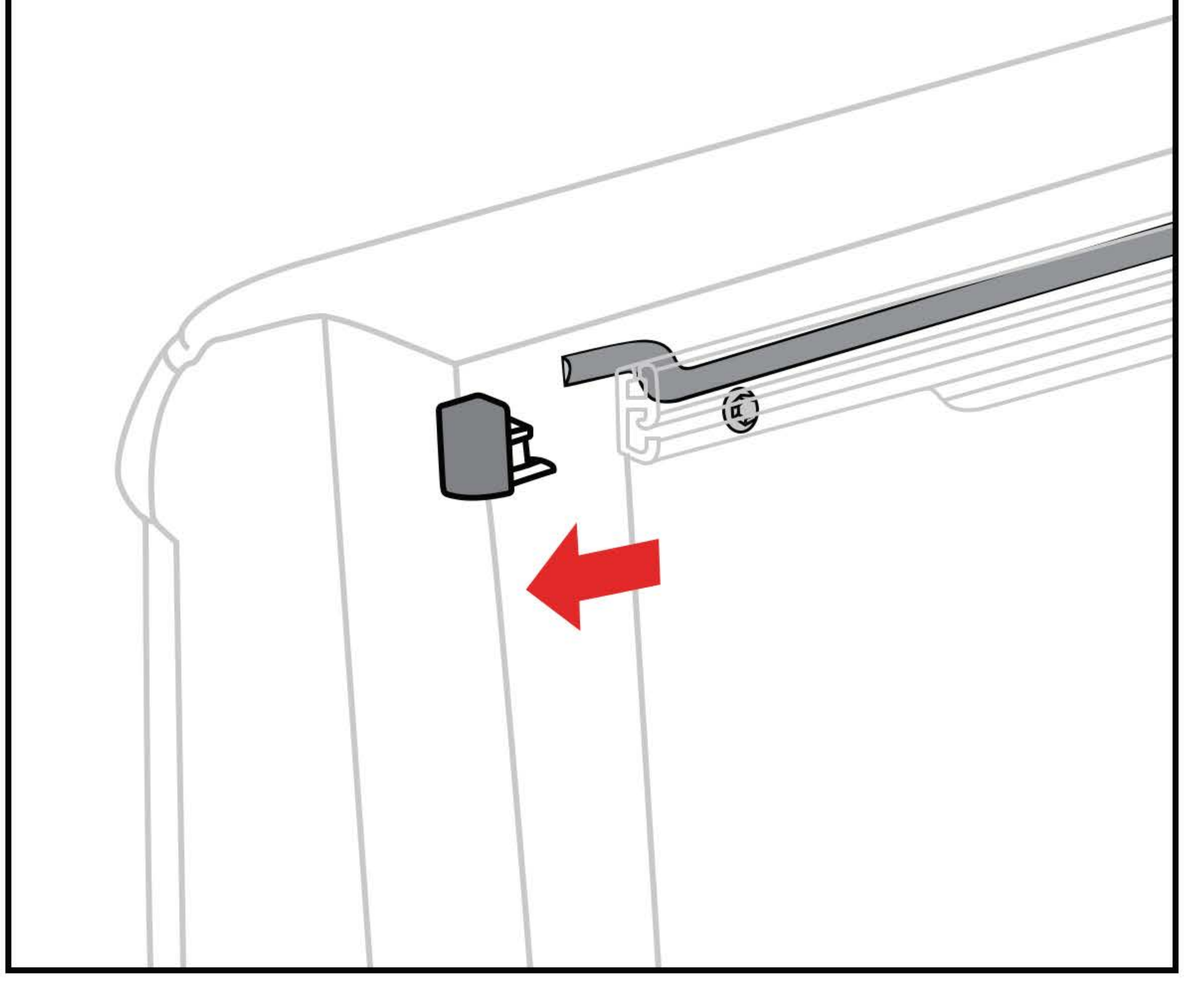


Splice two sidebars.Place the sidebar into the top of the factory accessory rail and slide it toward the cab.

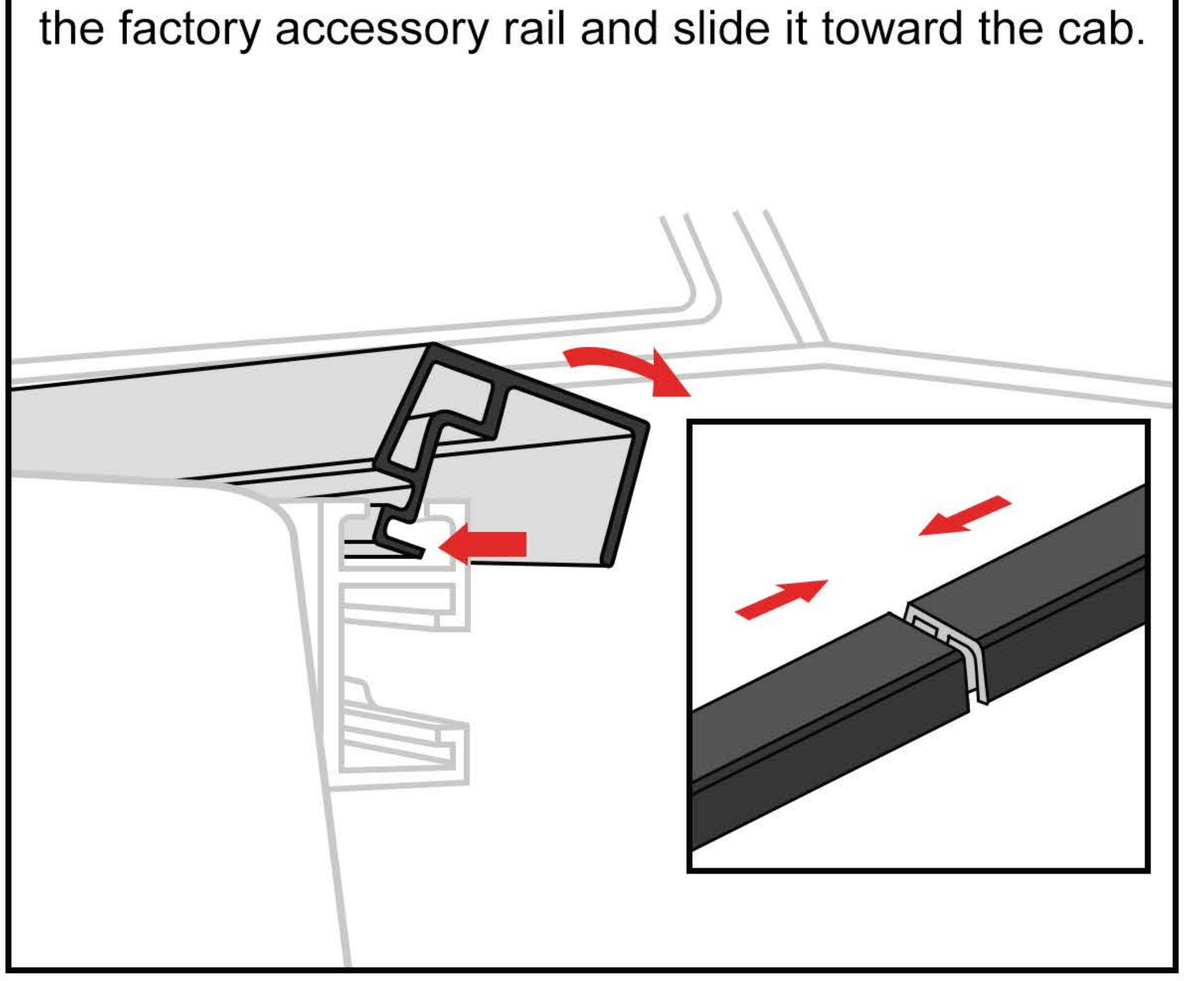


Before the sidebar is slid  completely to the bulkhead,remove the backing and attach a rail end sealing block. Do this for both sides.

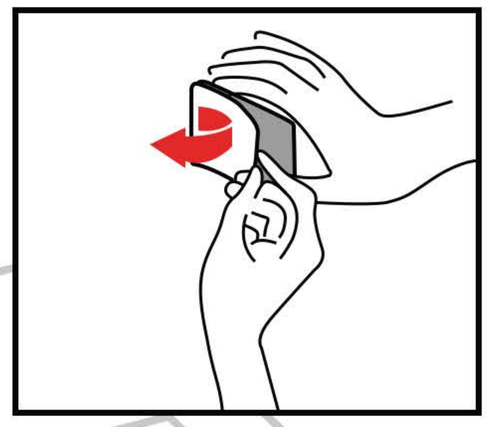

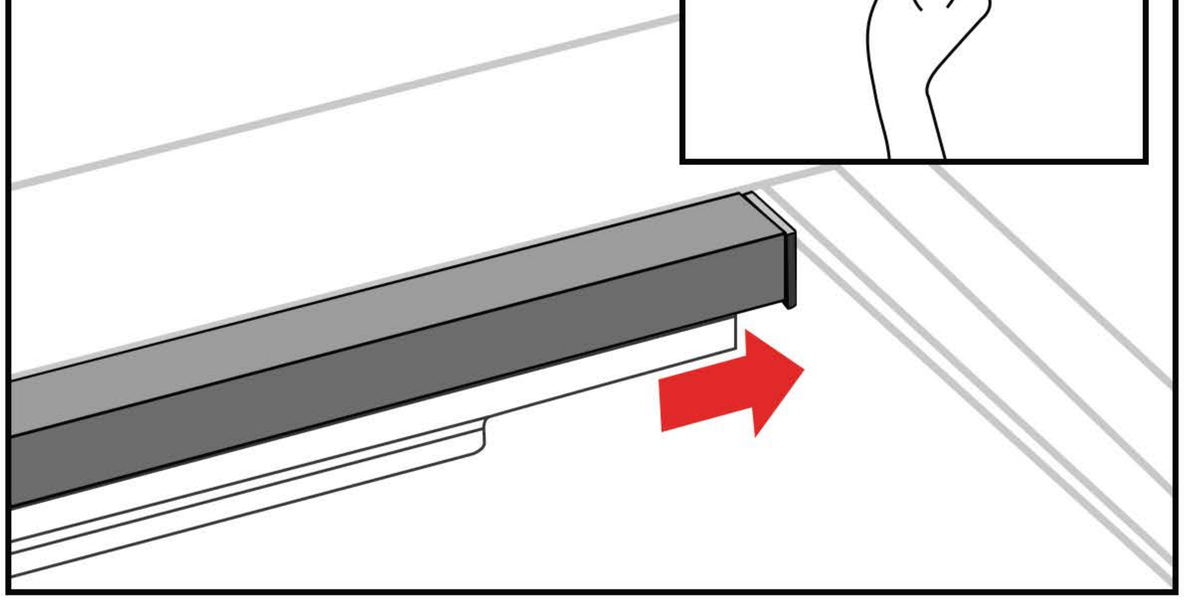



Thread the 8 Fixed block screws  into each Fixed block.

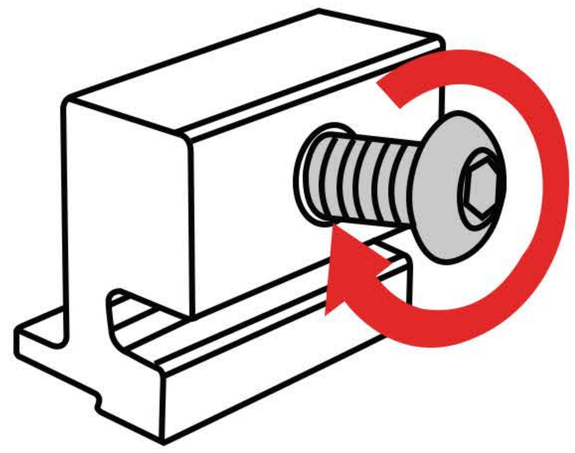

**NOTE:** Keep the screws loose, they will be tightened after they are inserted into the rail.


Slide 4 Fixed block into each  sidebar and the top of the accessory rail.

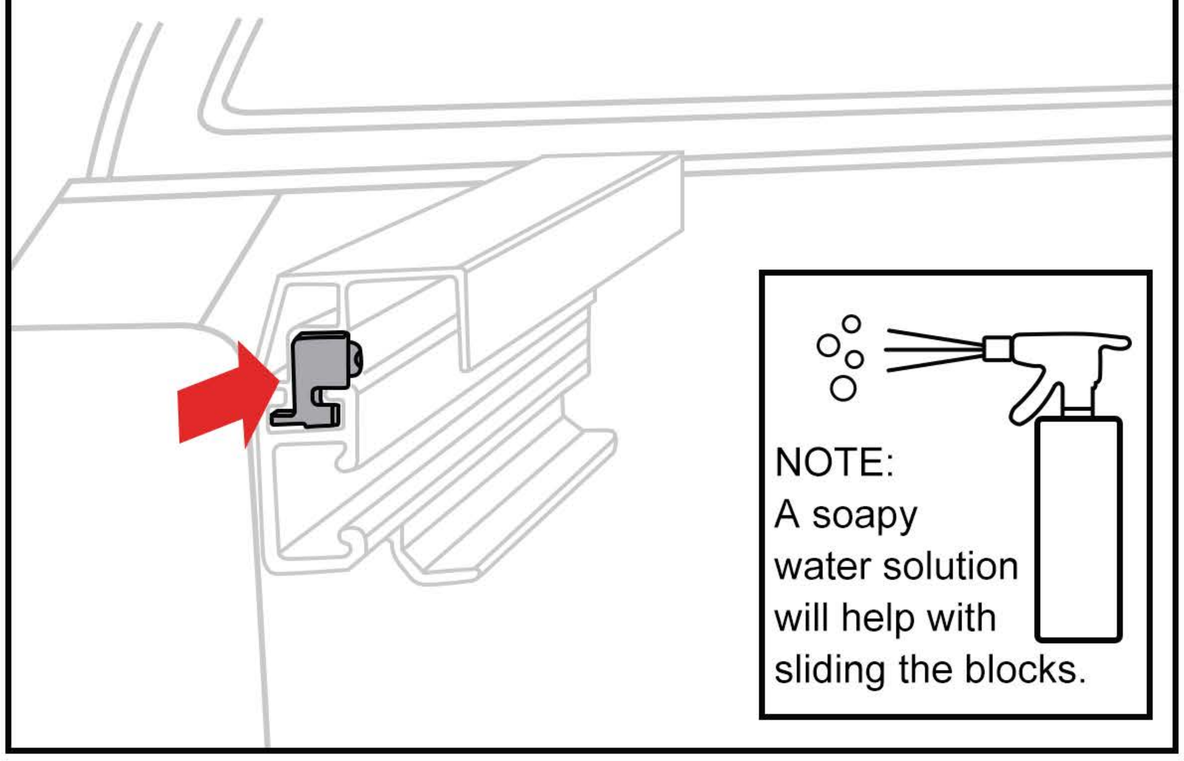

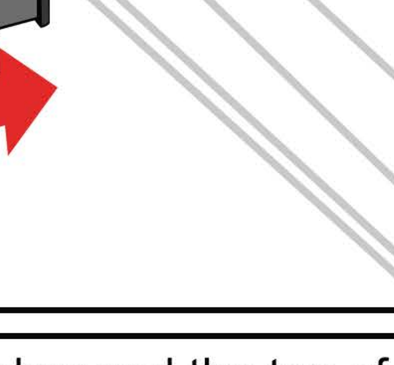


NOTE:
A soapy water solution will help with sliding the blocks.


With the sidebar firmly pressed up to the bulkhead,tighten each Fixed block screws.

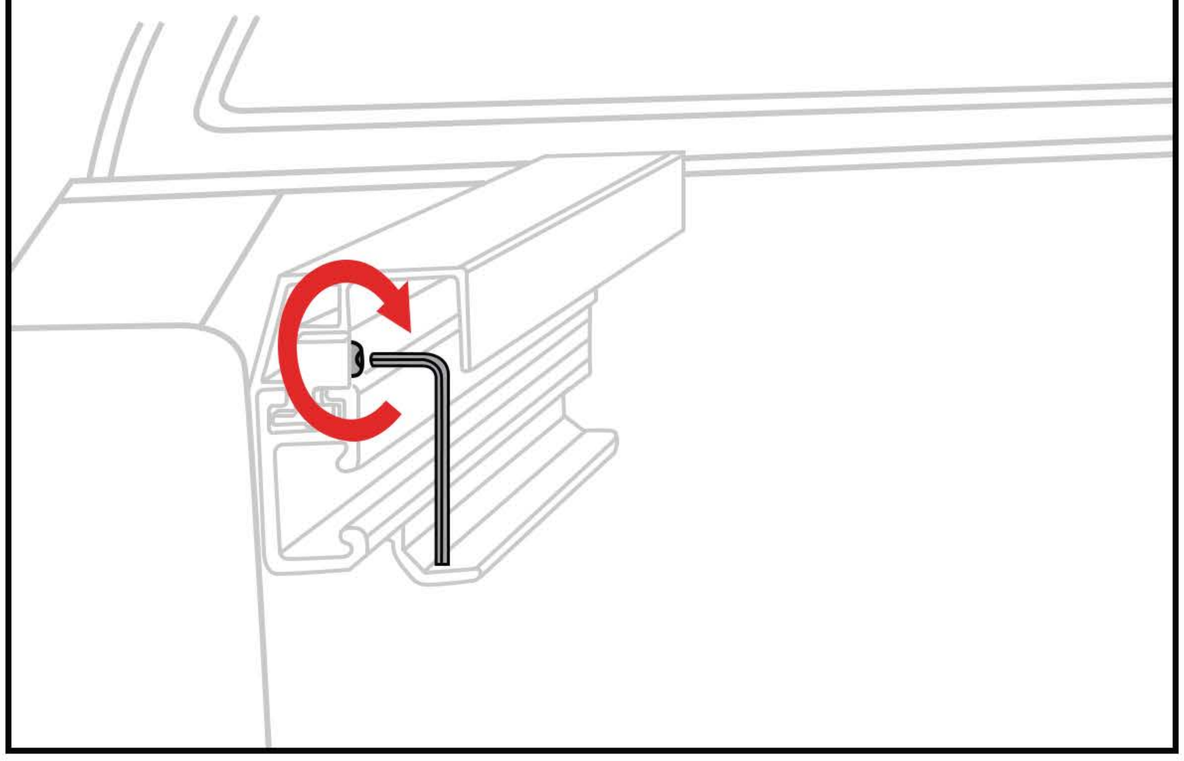


The fixed blocks are evenly distributed in the four positions of the sidebar.Cut the caulking strips into the right shape and fill in the seams.

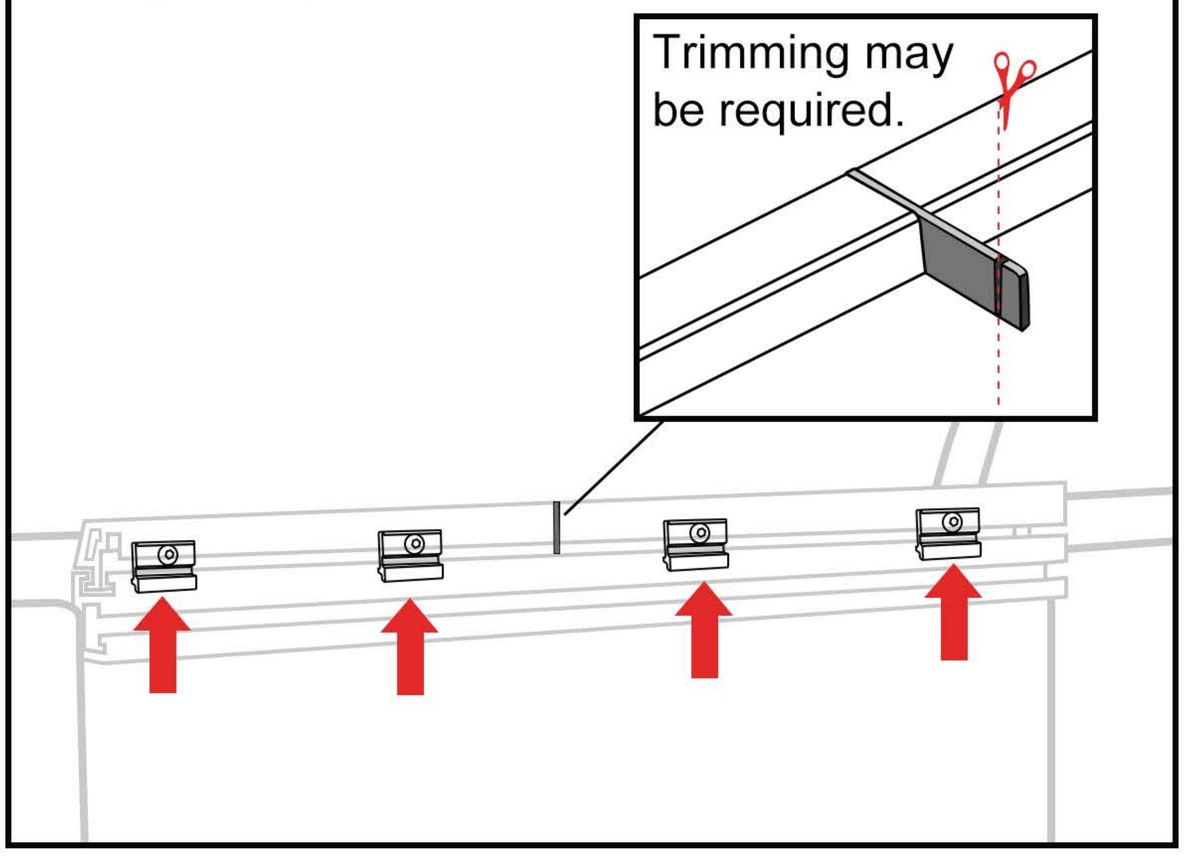



Adhere the D-shaped rubber strip in the end cap corner to span the sidebar end cap and rear trim panel. Add one to each side. Trimming the seal may be required.

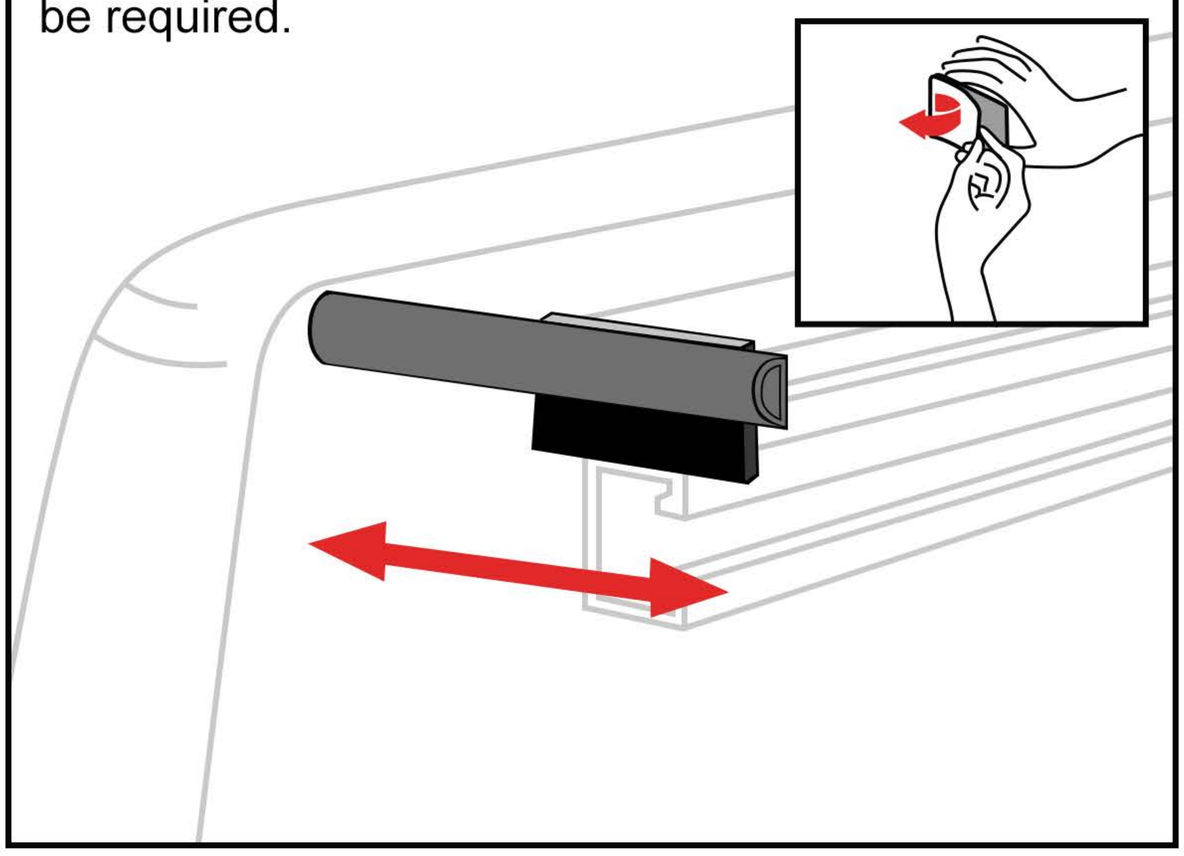


Place the cover that has been assembled on the bulkhead, positioning it against the cab.

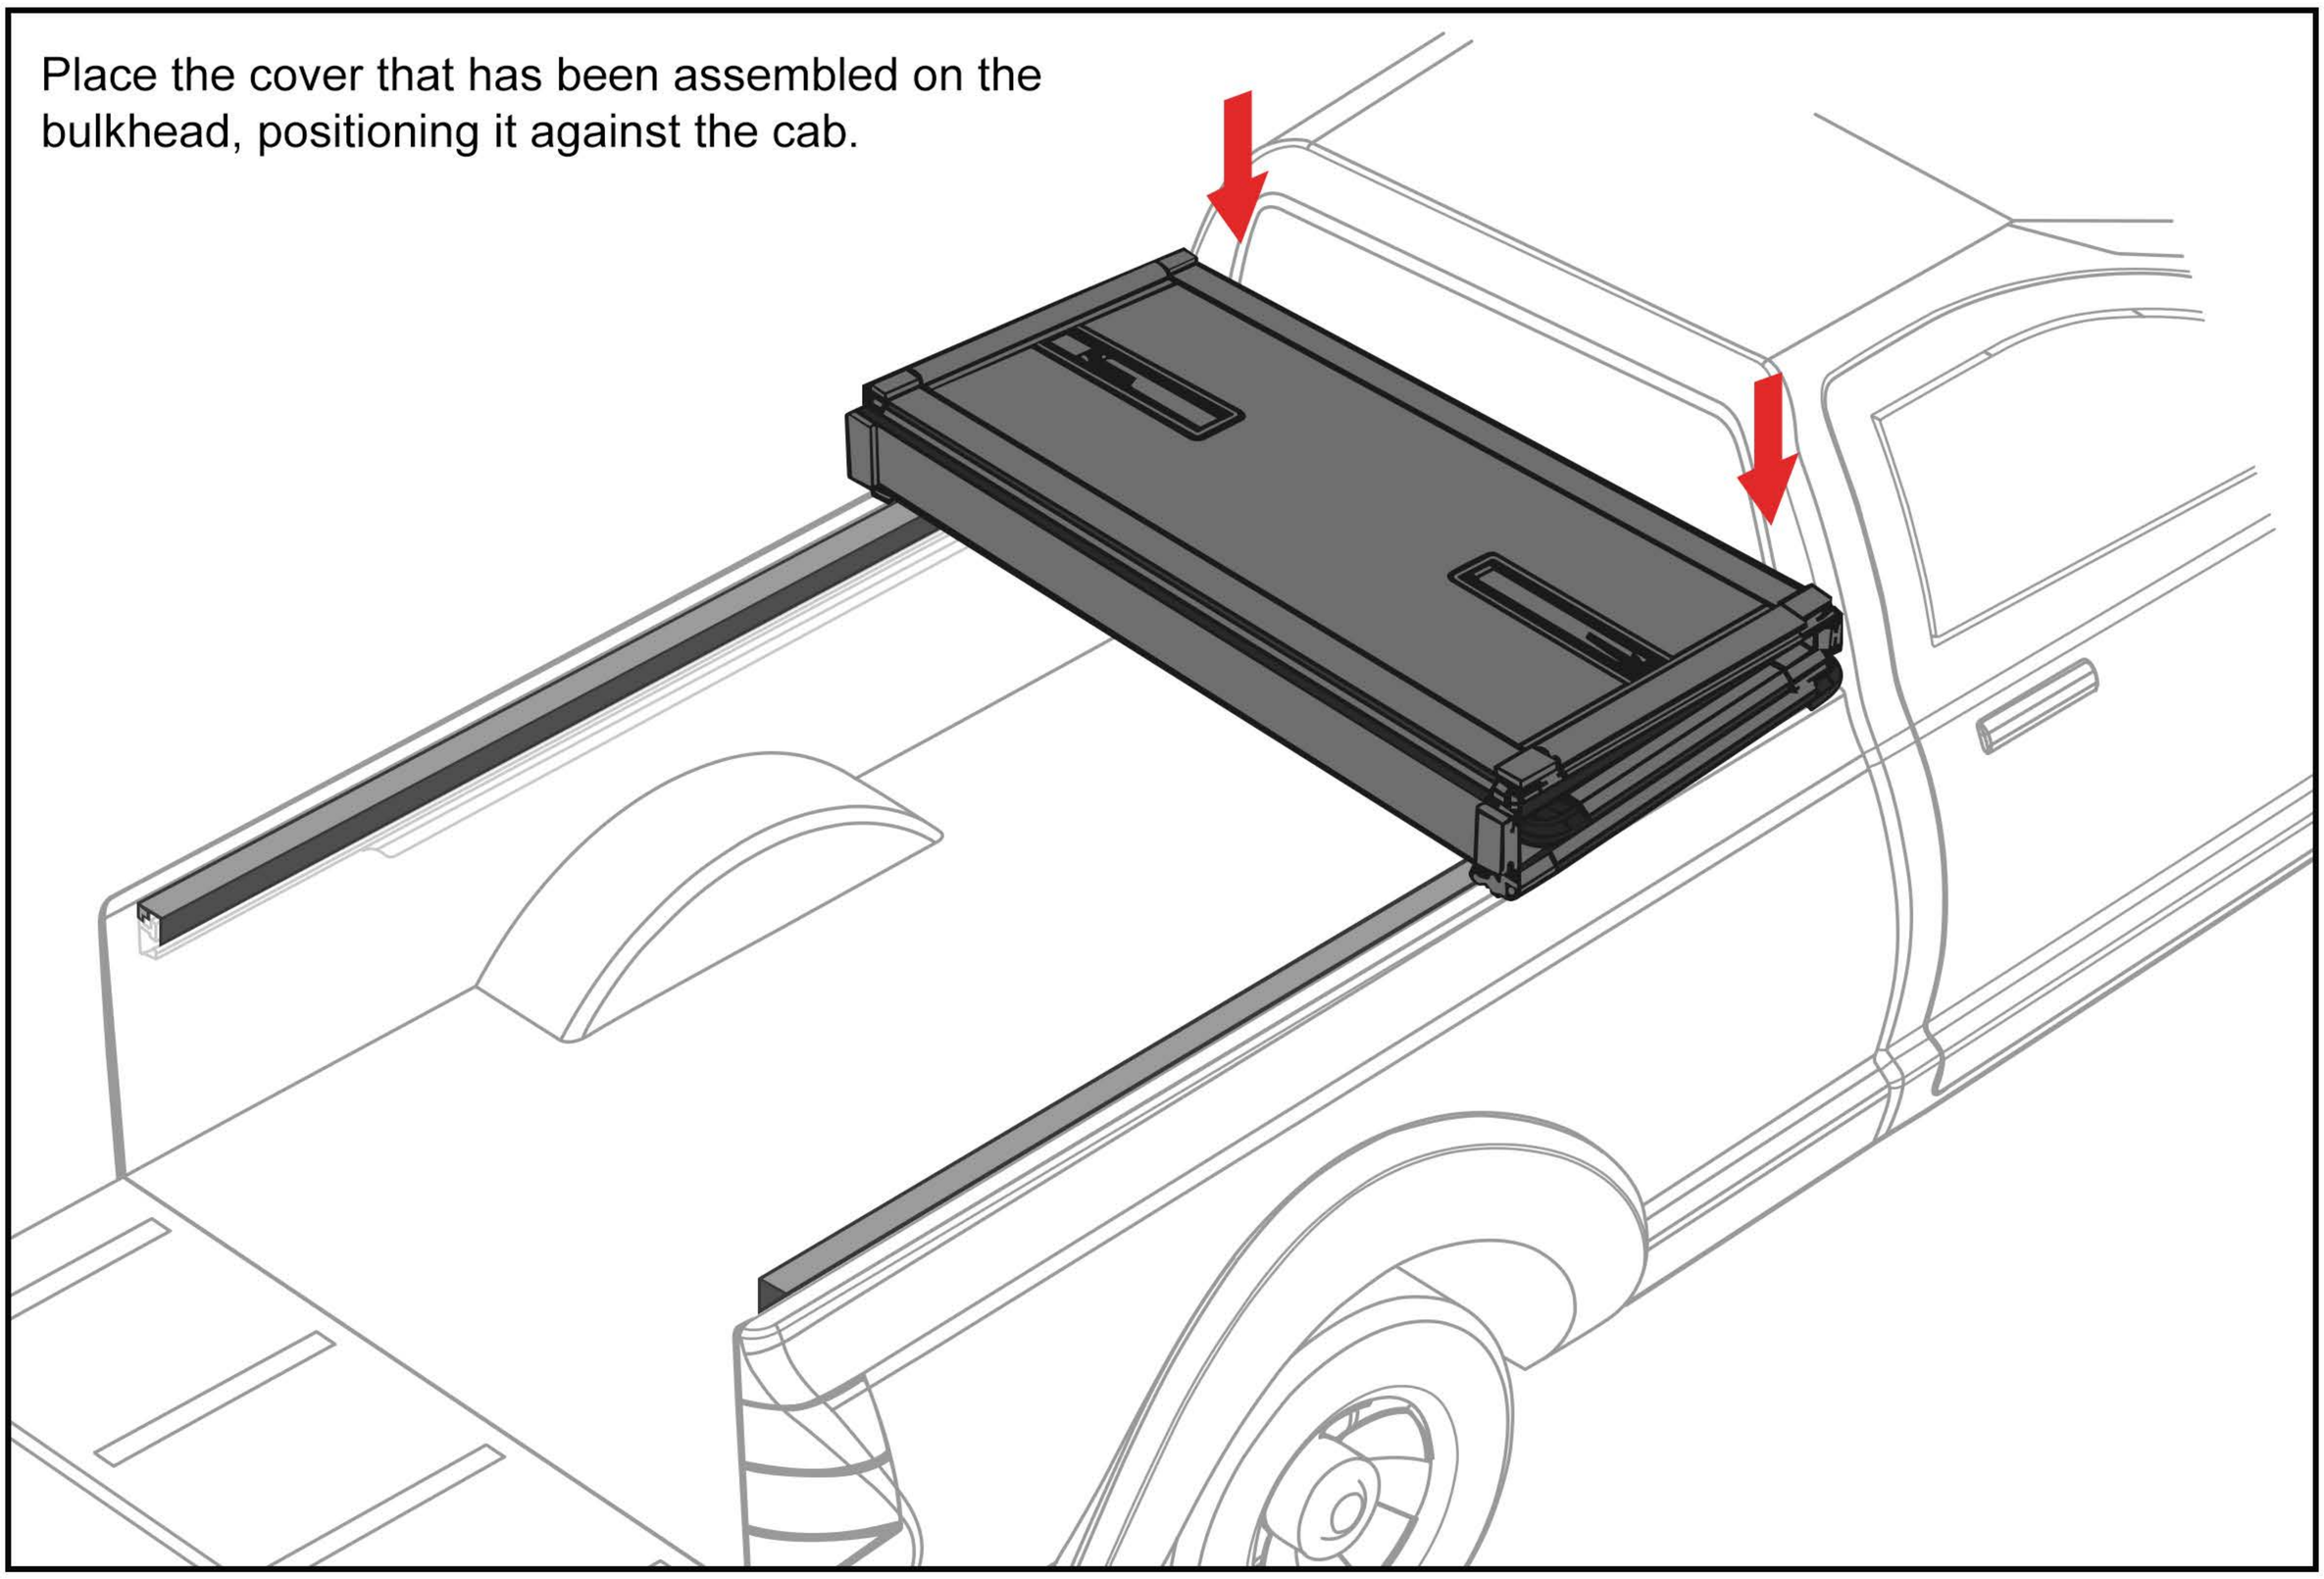


Fully unfold the cover towards the tailgate and ensure cover aligns on all sides.

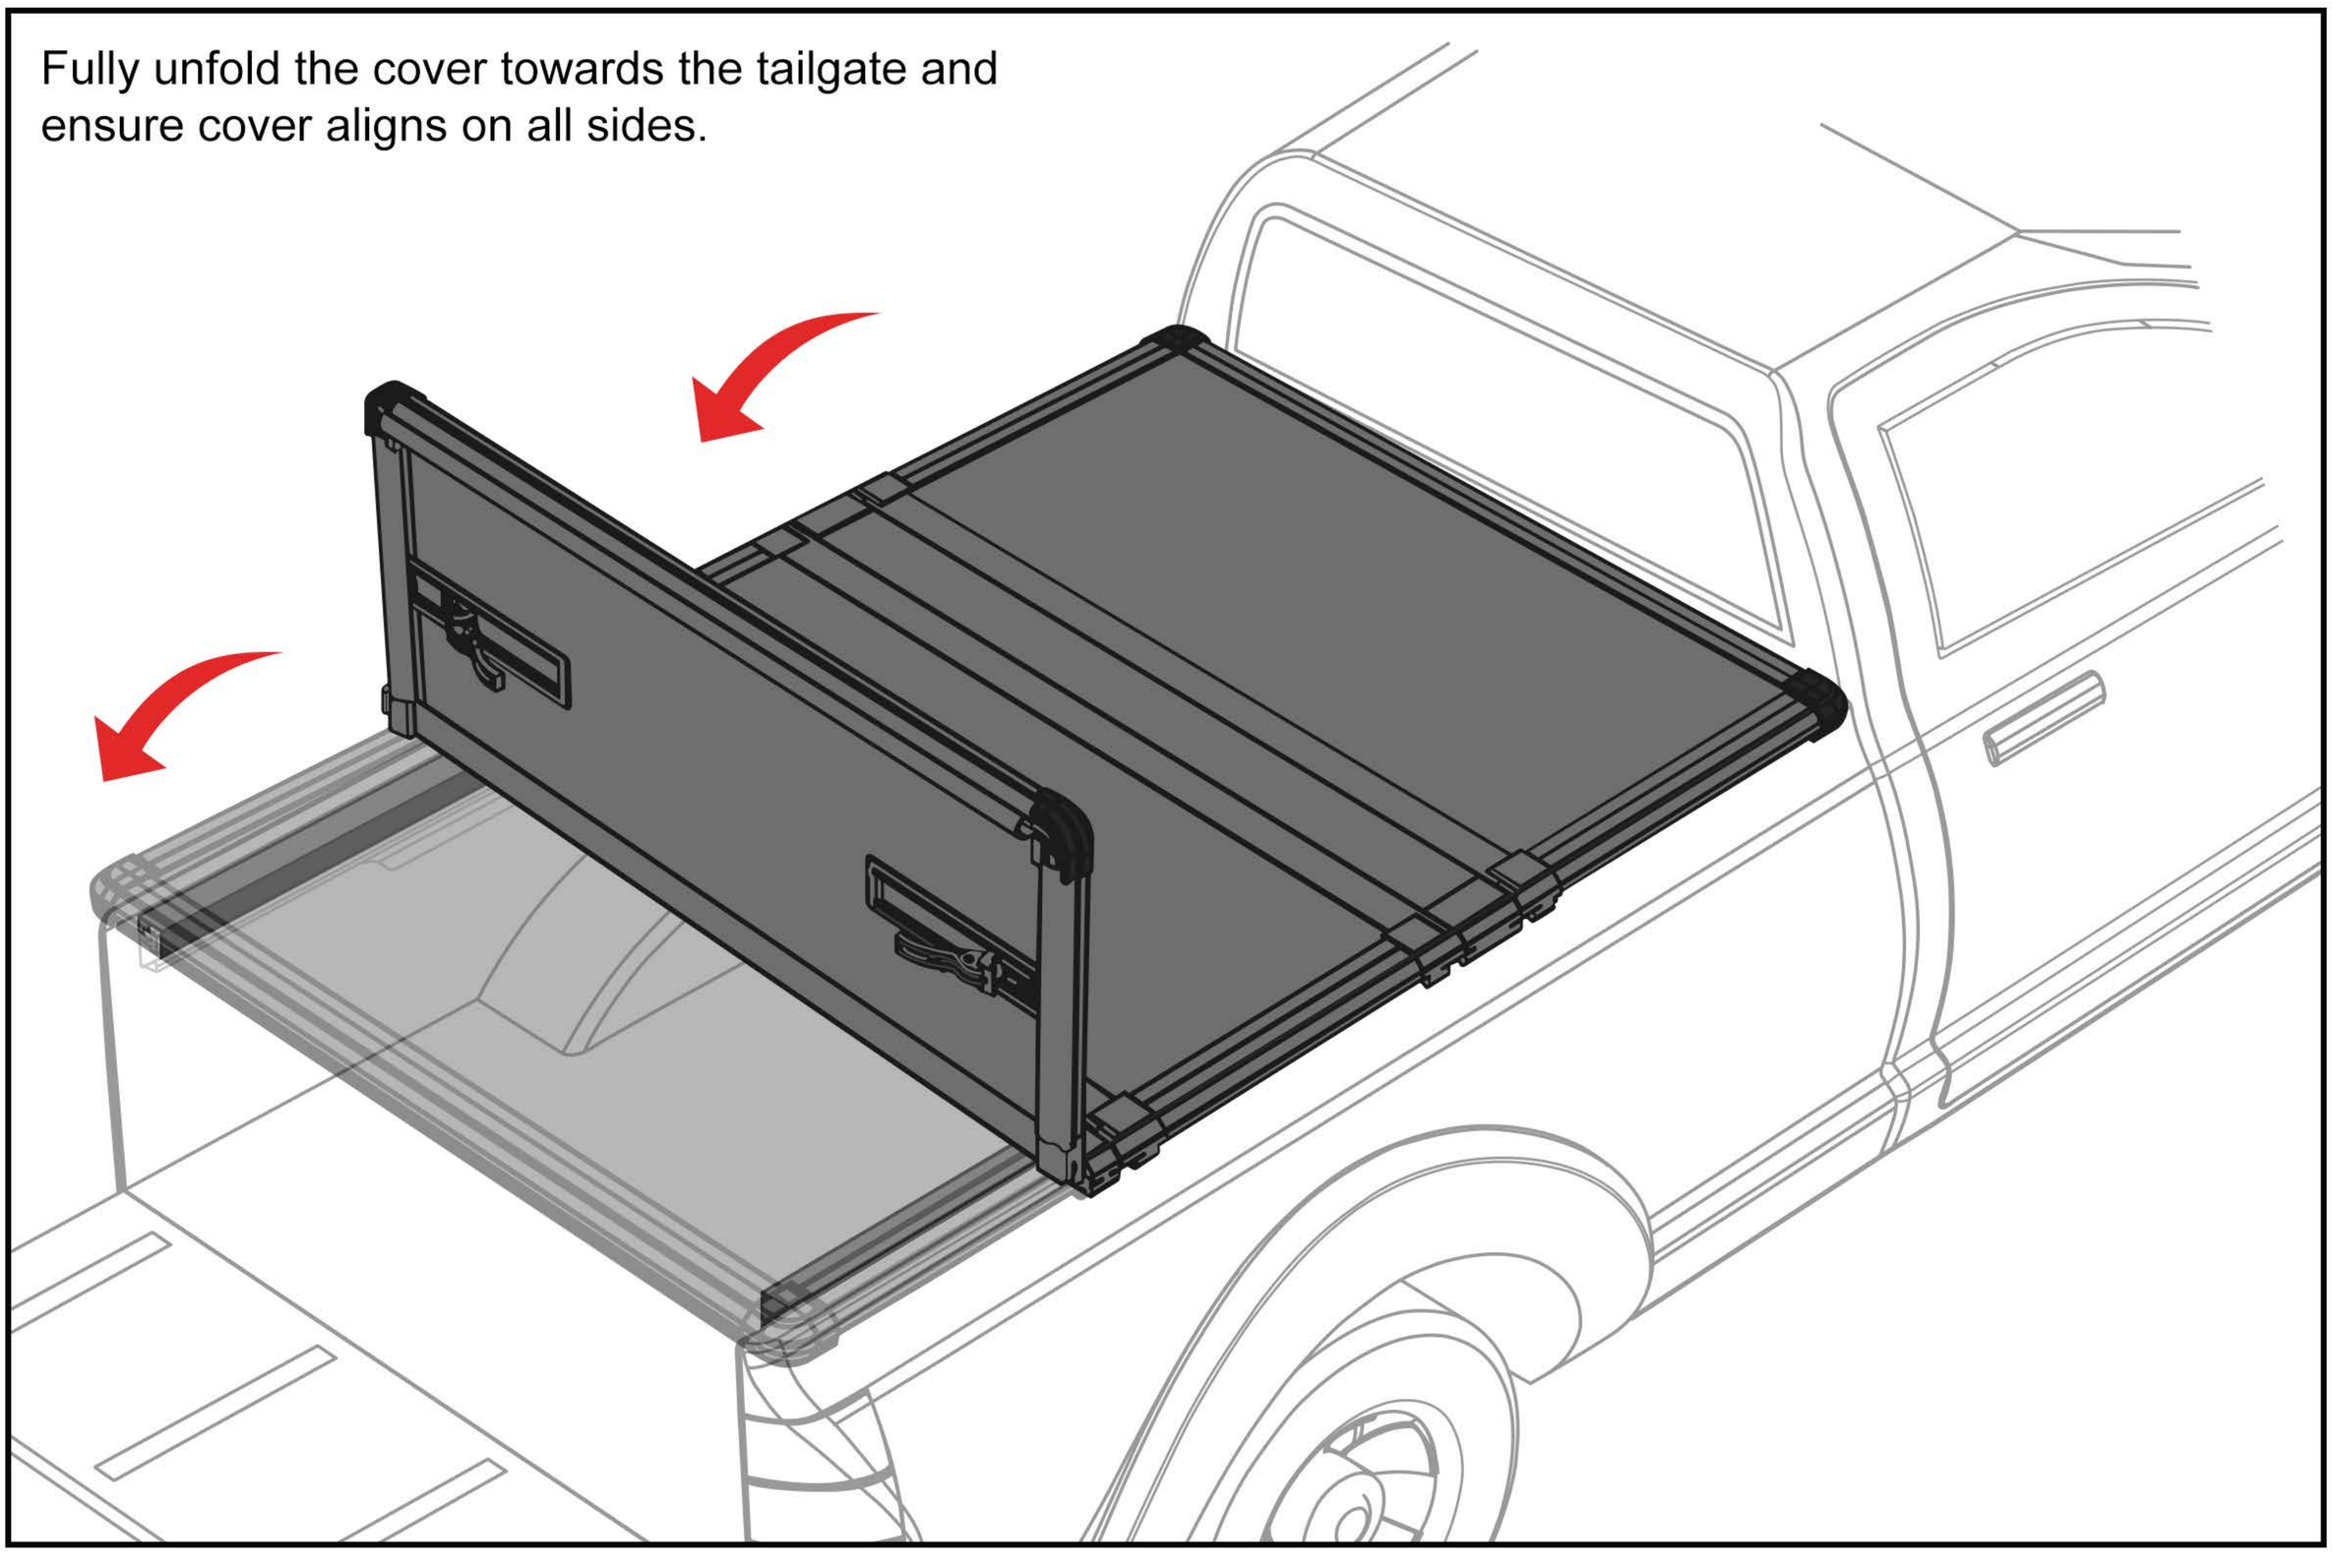


Move the front clamp to the best spot, lock it under the metal bed rail, and twist the Triangle screw into the metal rod to secure the clamp. Lastly, tighten the Fastening nut to keep it from getting loose.

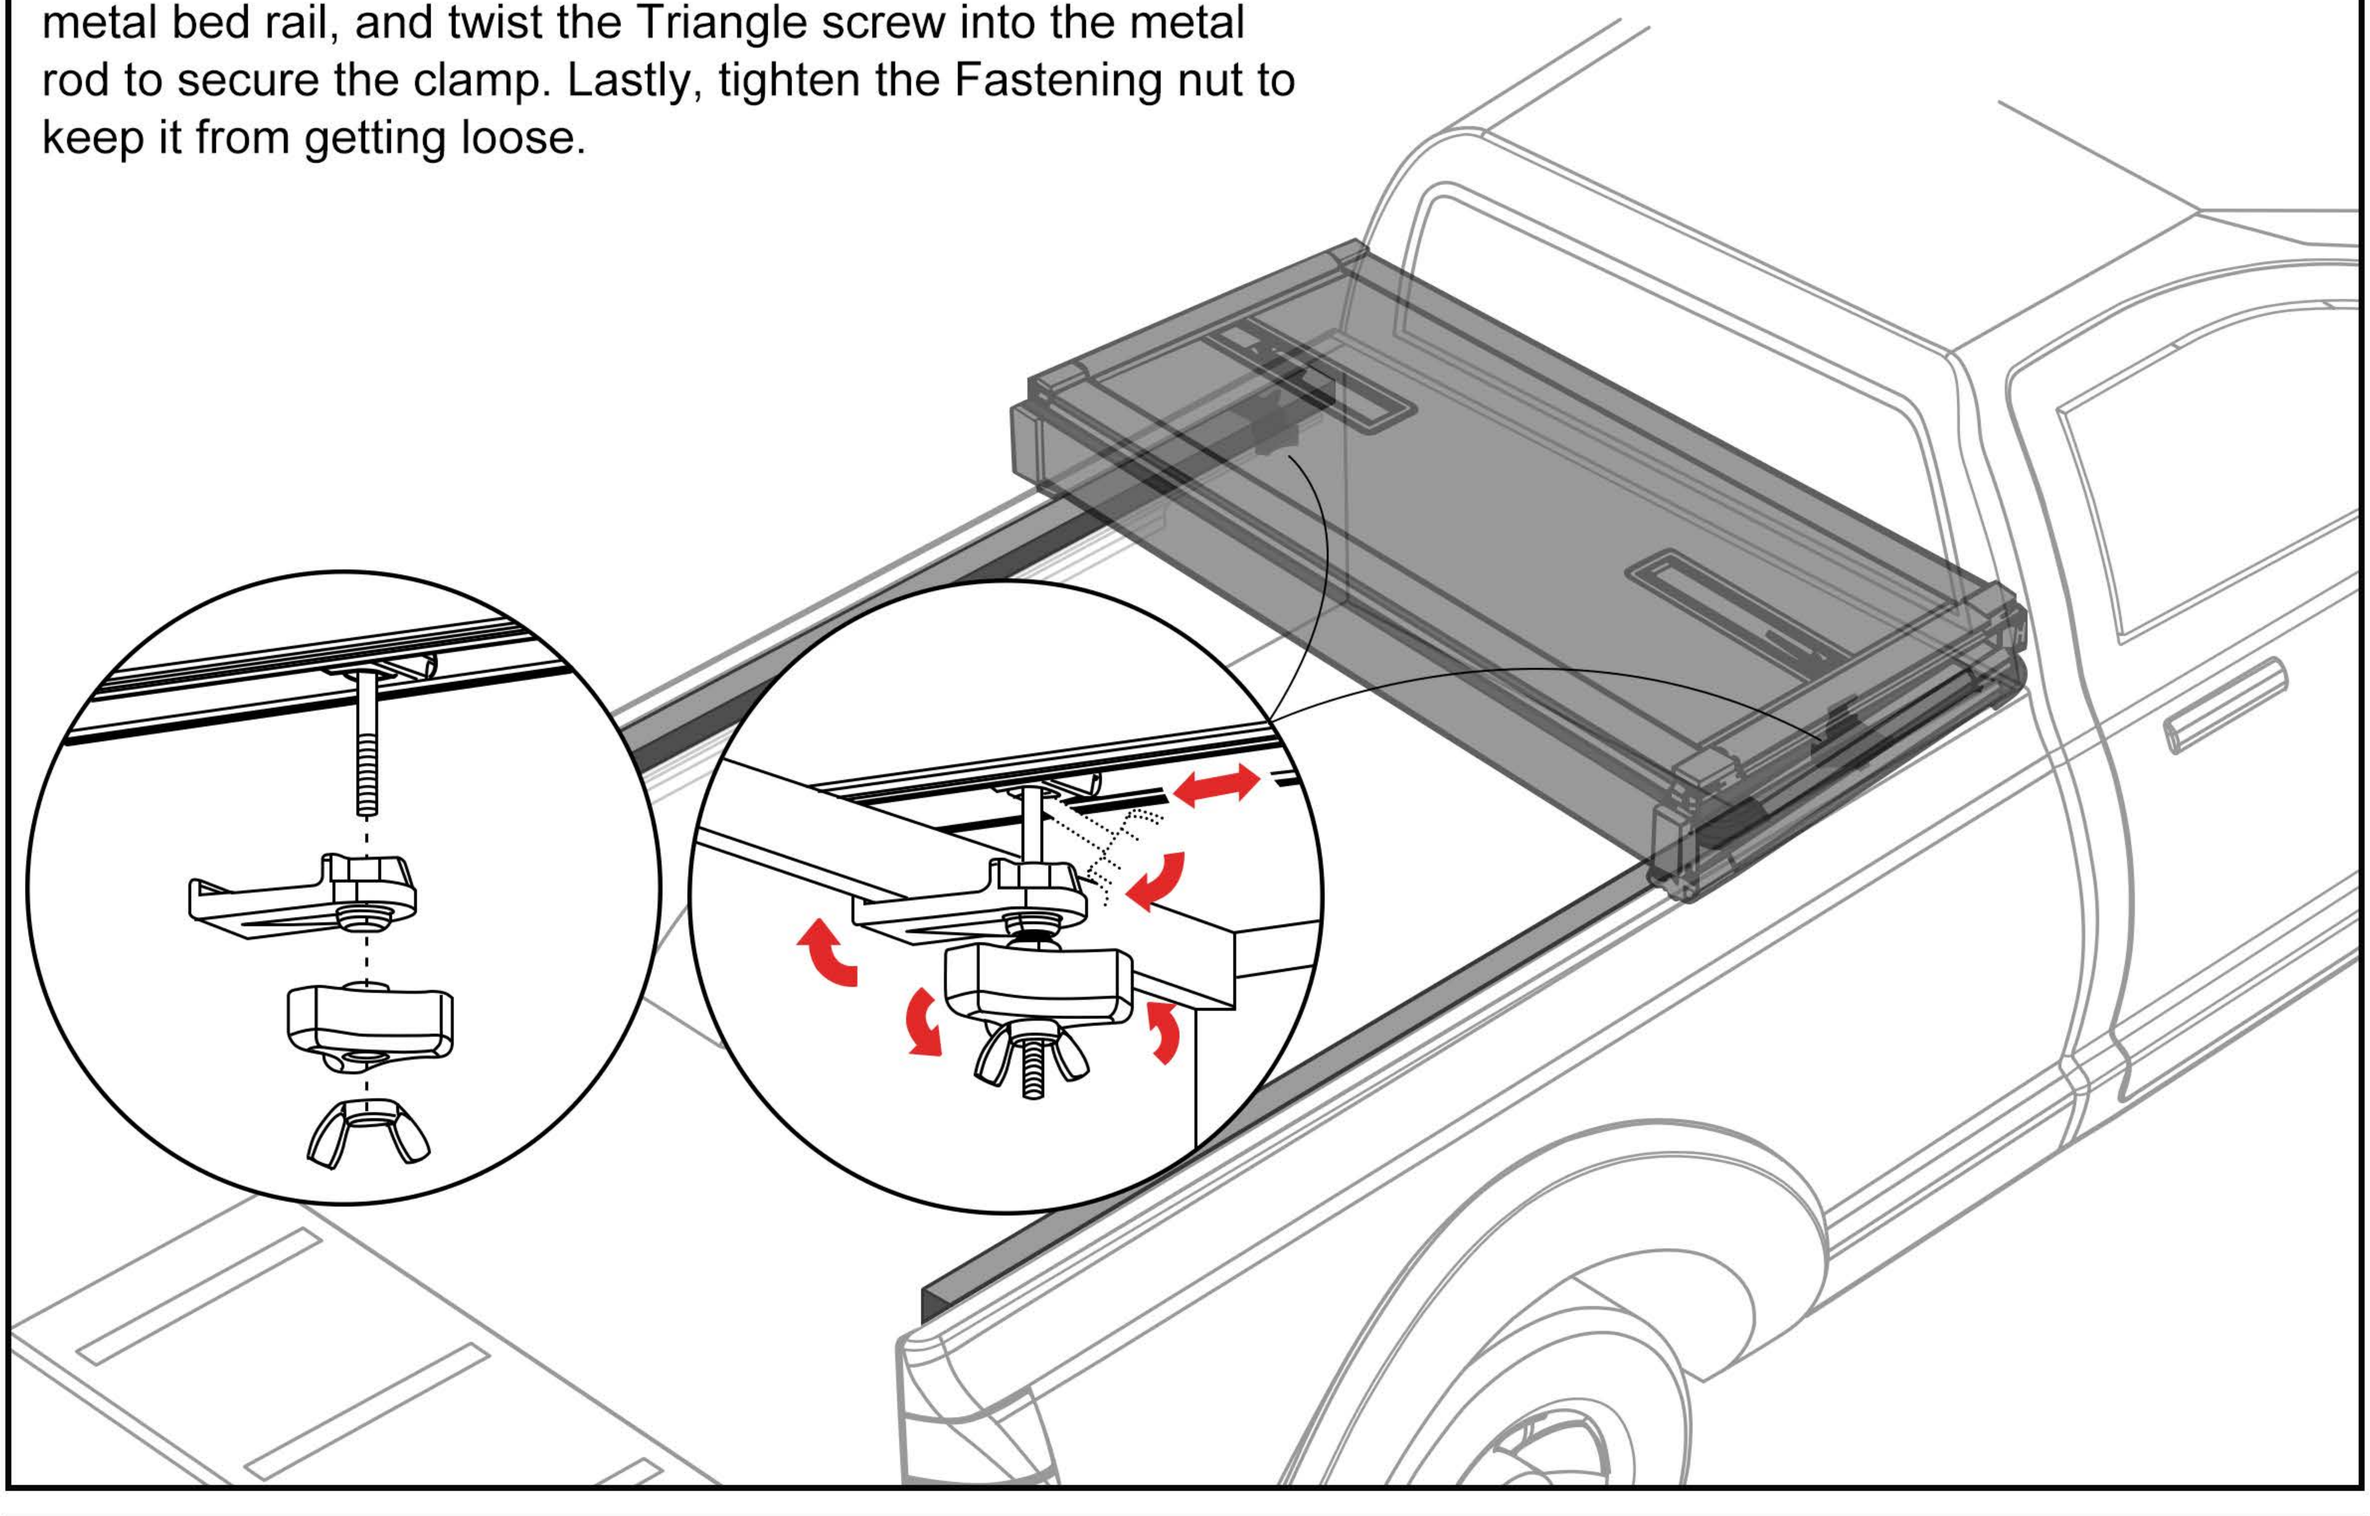


Connect the provided Rear clamps to the T-bar on the cover as shown in the figure

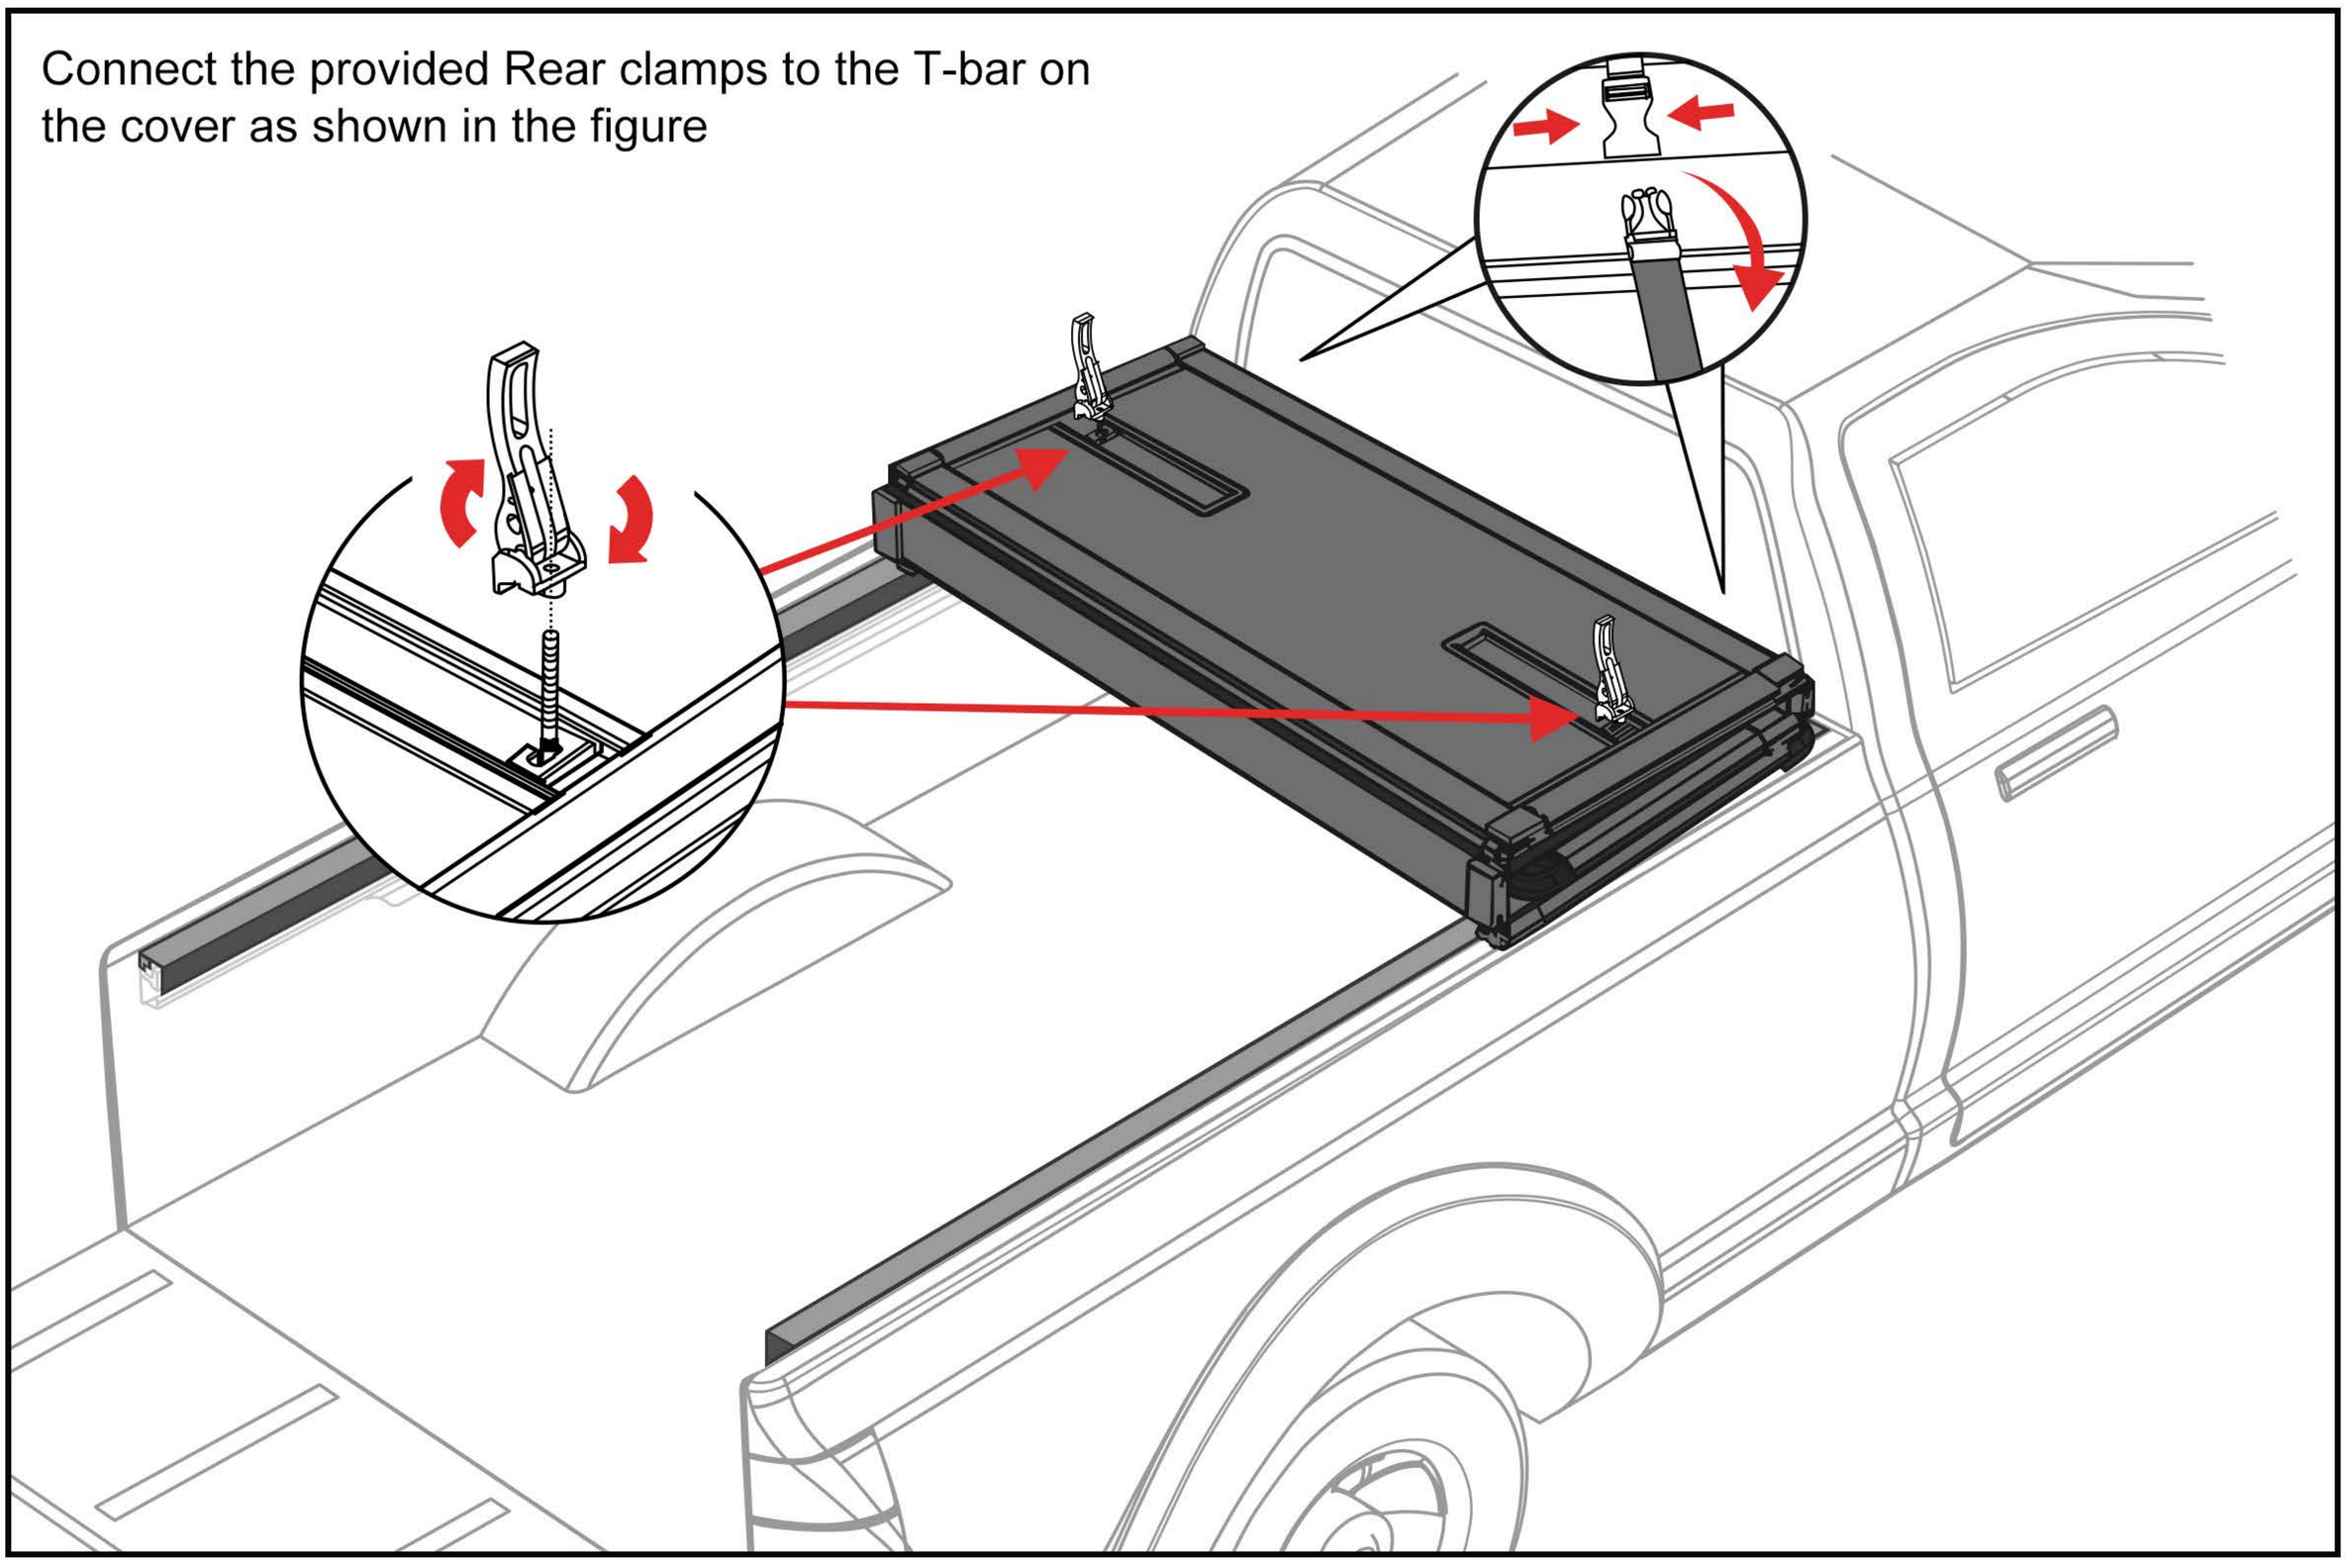


Fix the rear clamp on the third cover as shown in the second cover.

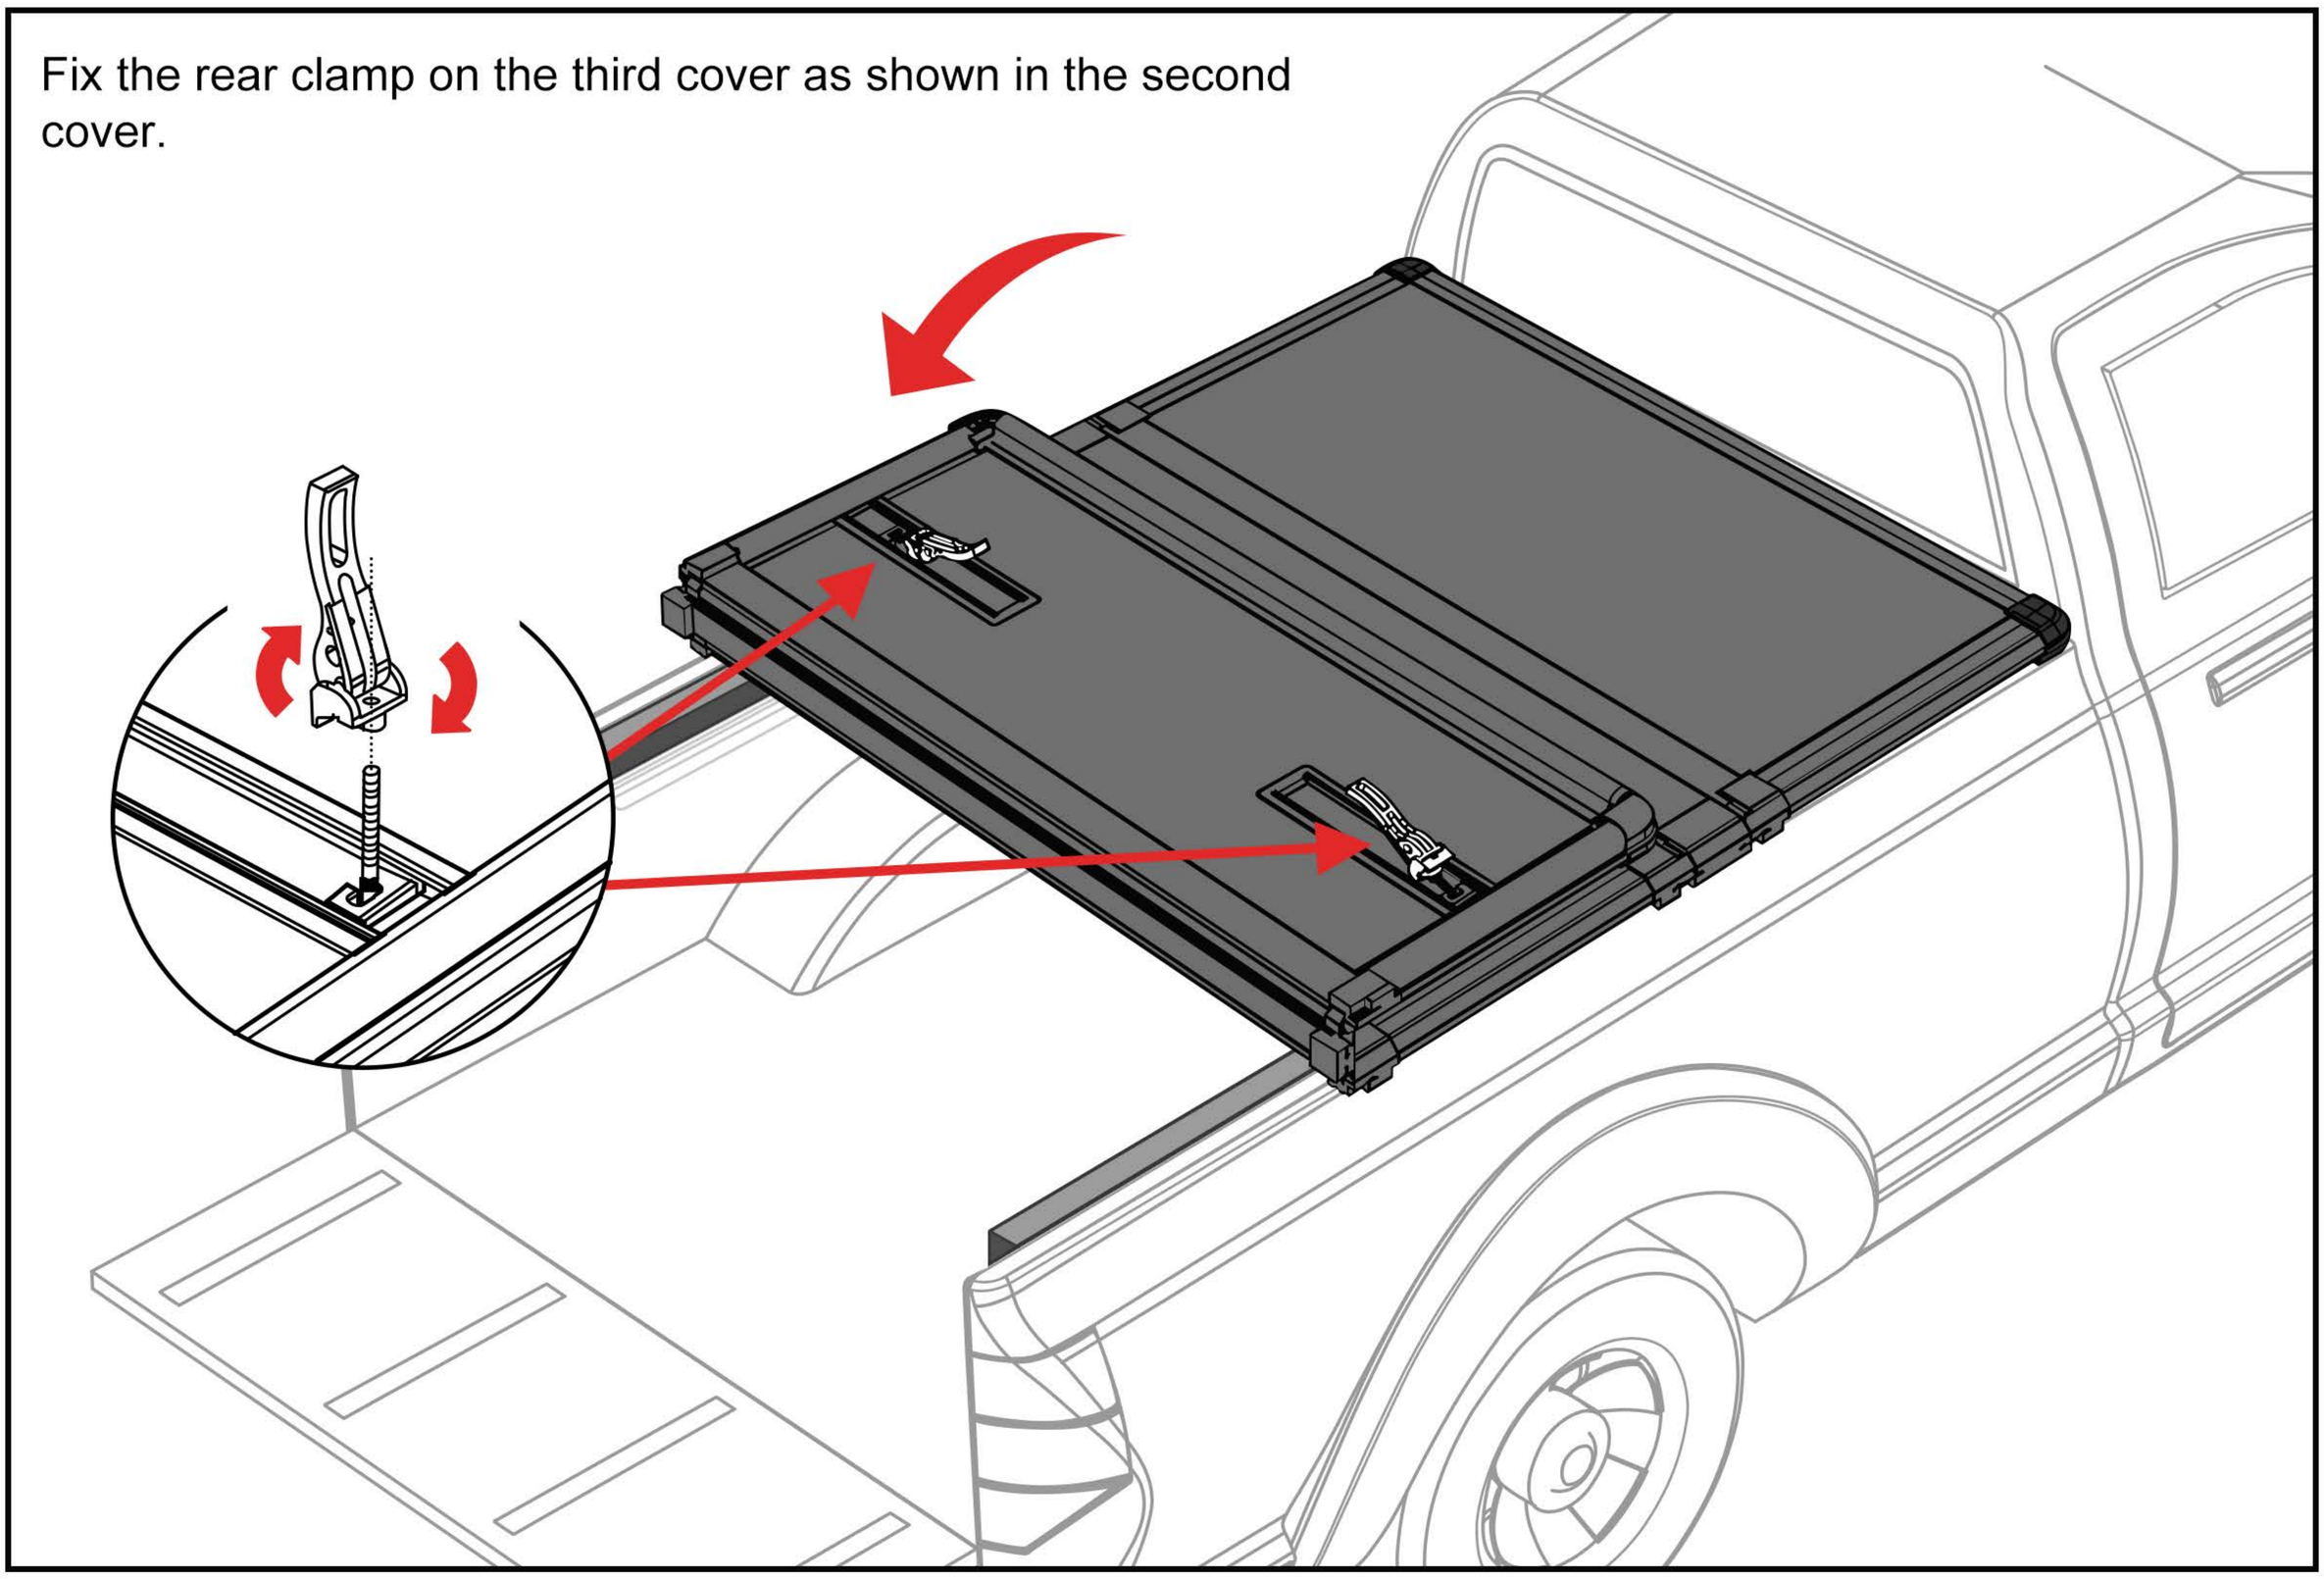


Adjust the connection position of the rear clamp and T-bar as needed.Securely fix the rear clamp to the bed rails by pushing it vertically.

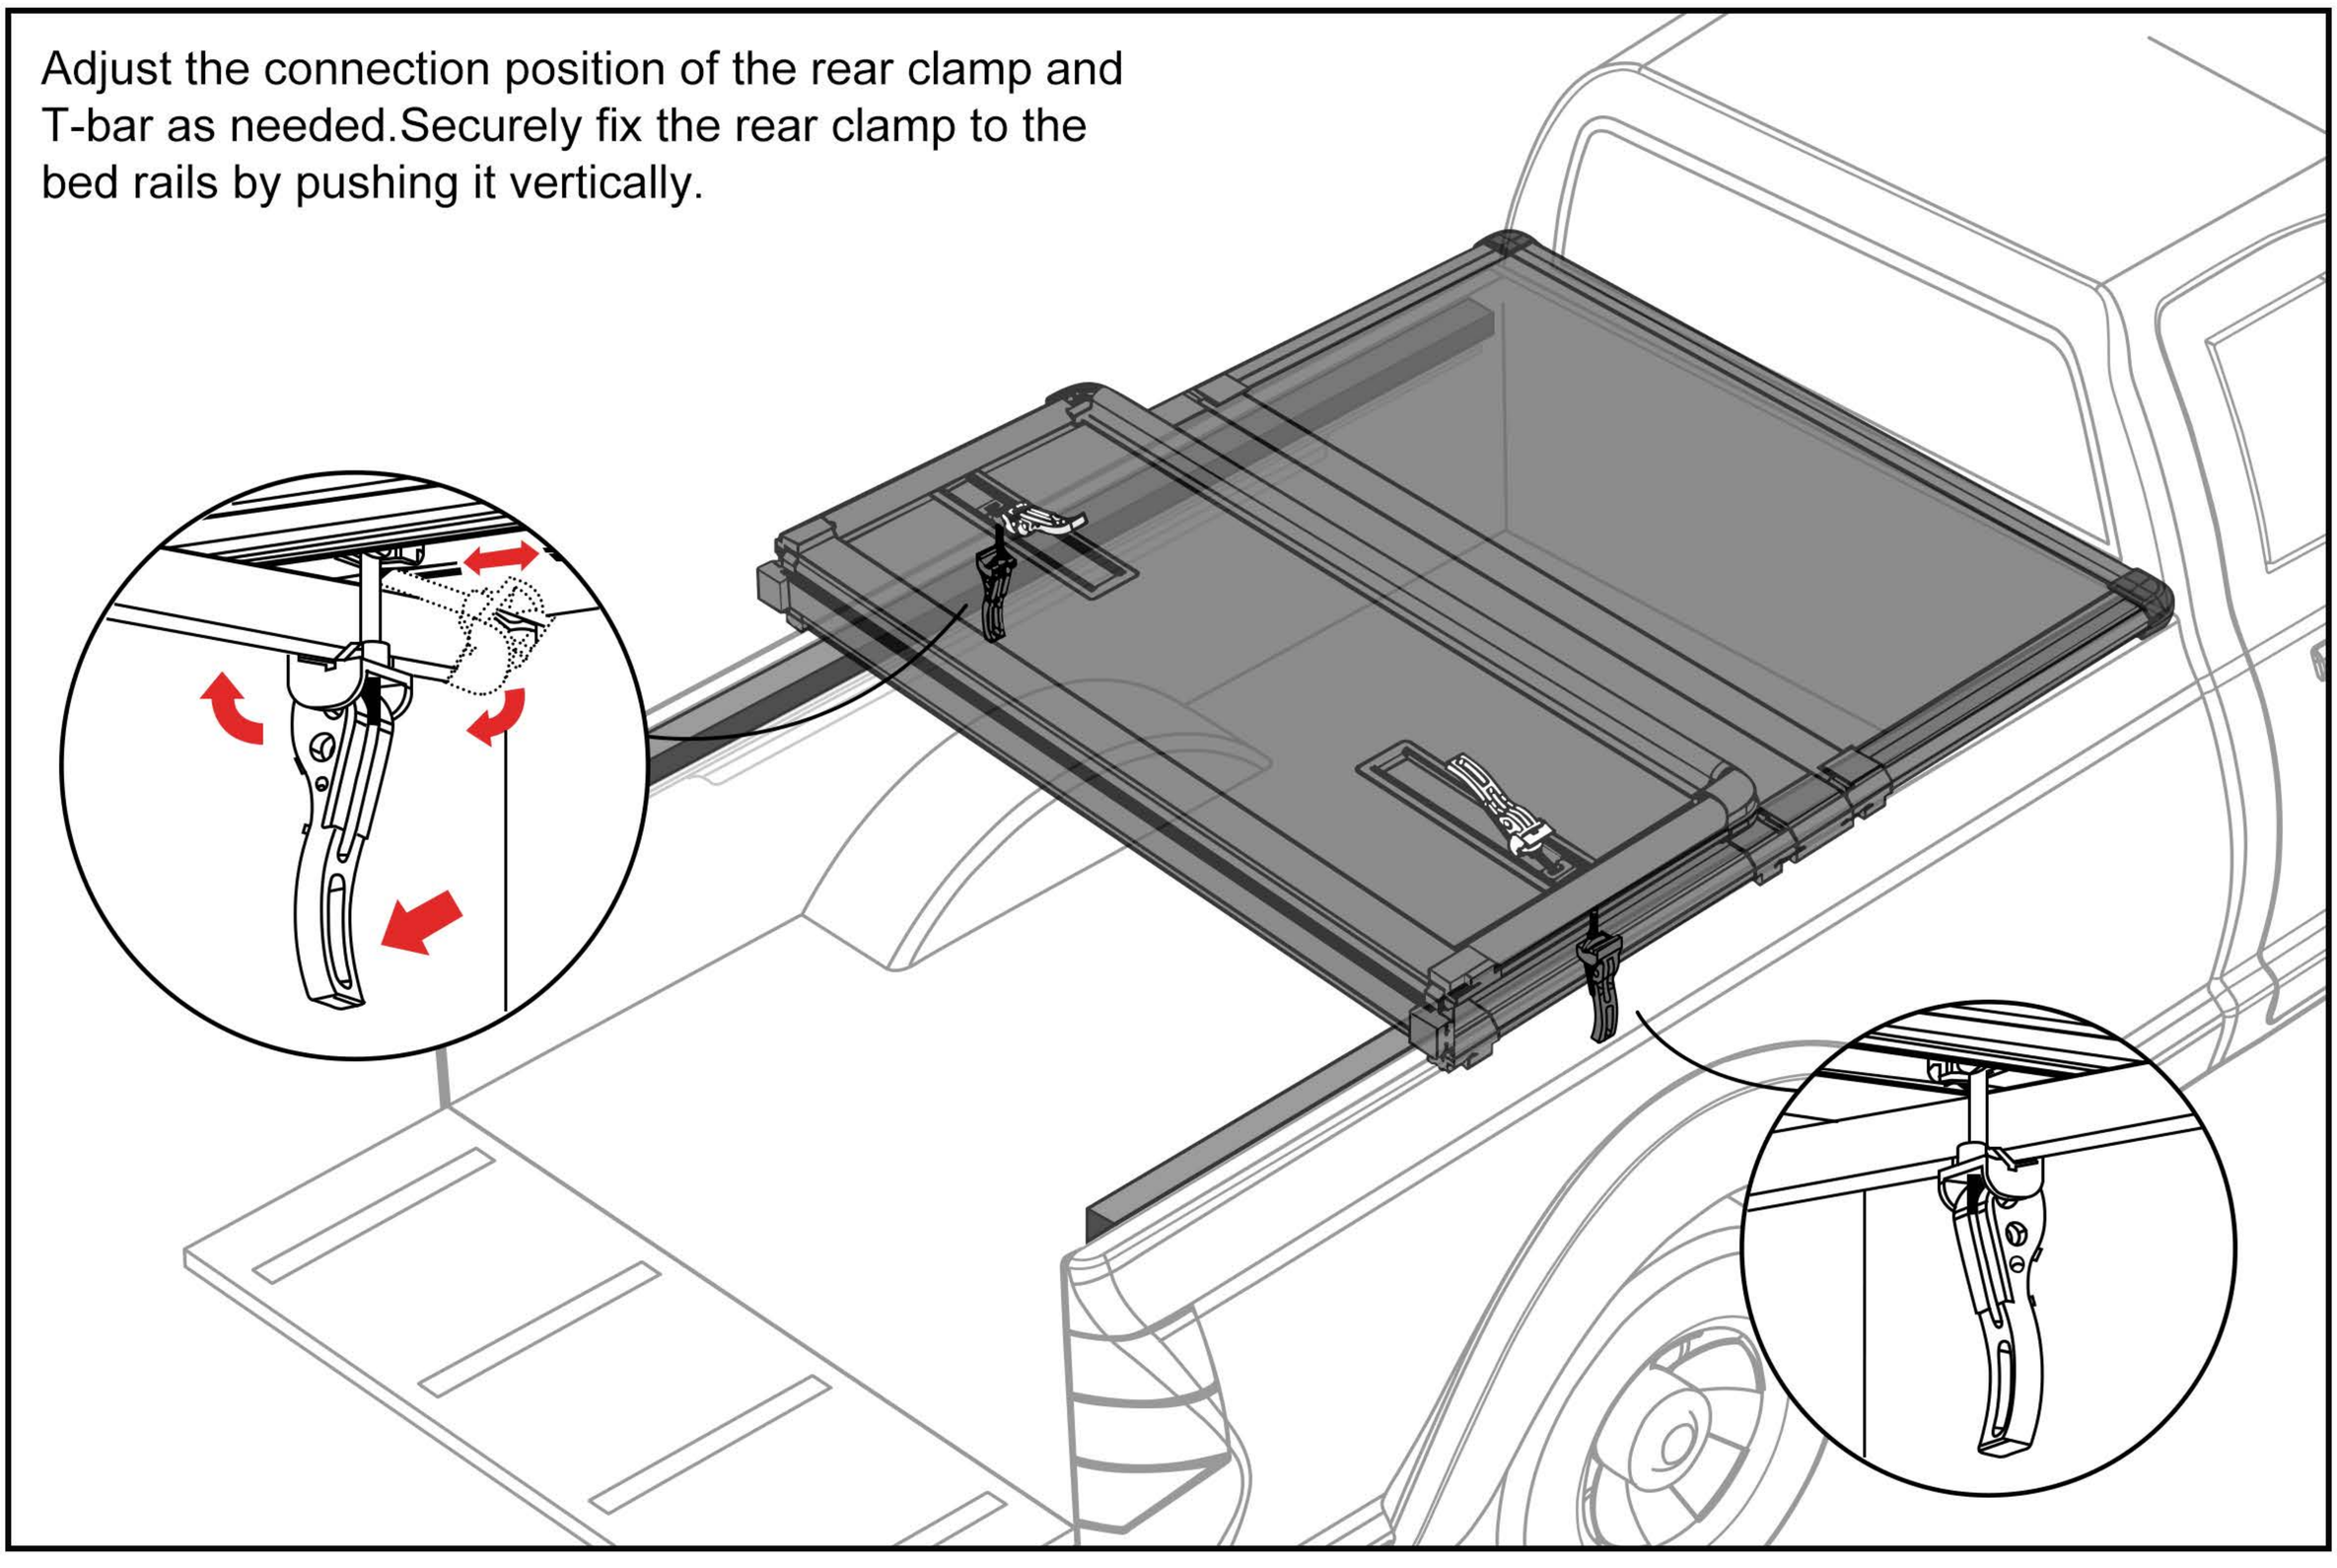


All clamps must be firmly in contact with the lip of the metal bed rail to ensure a firm cover, and finally move the rear clamp parallel to the left and snap it into the groove to prevent loosening.

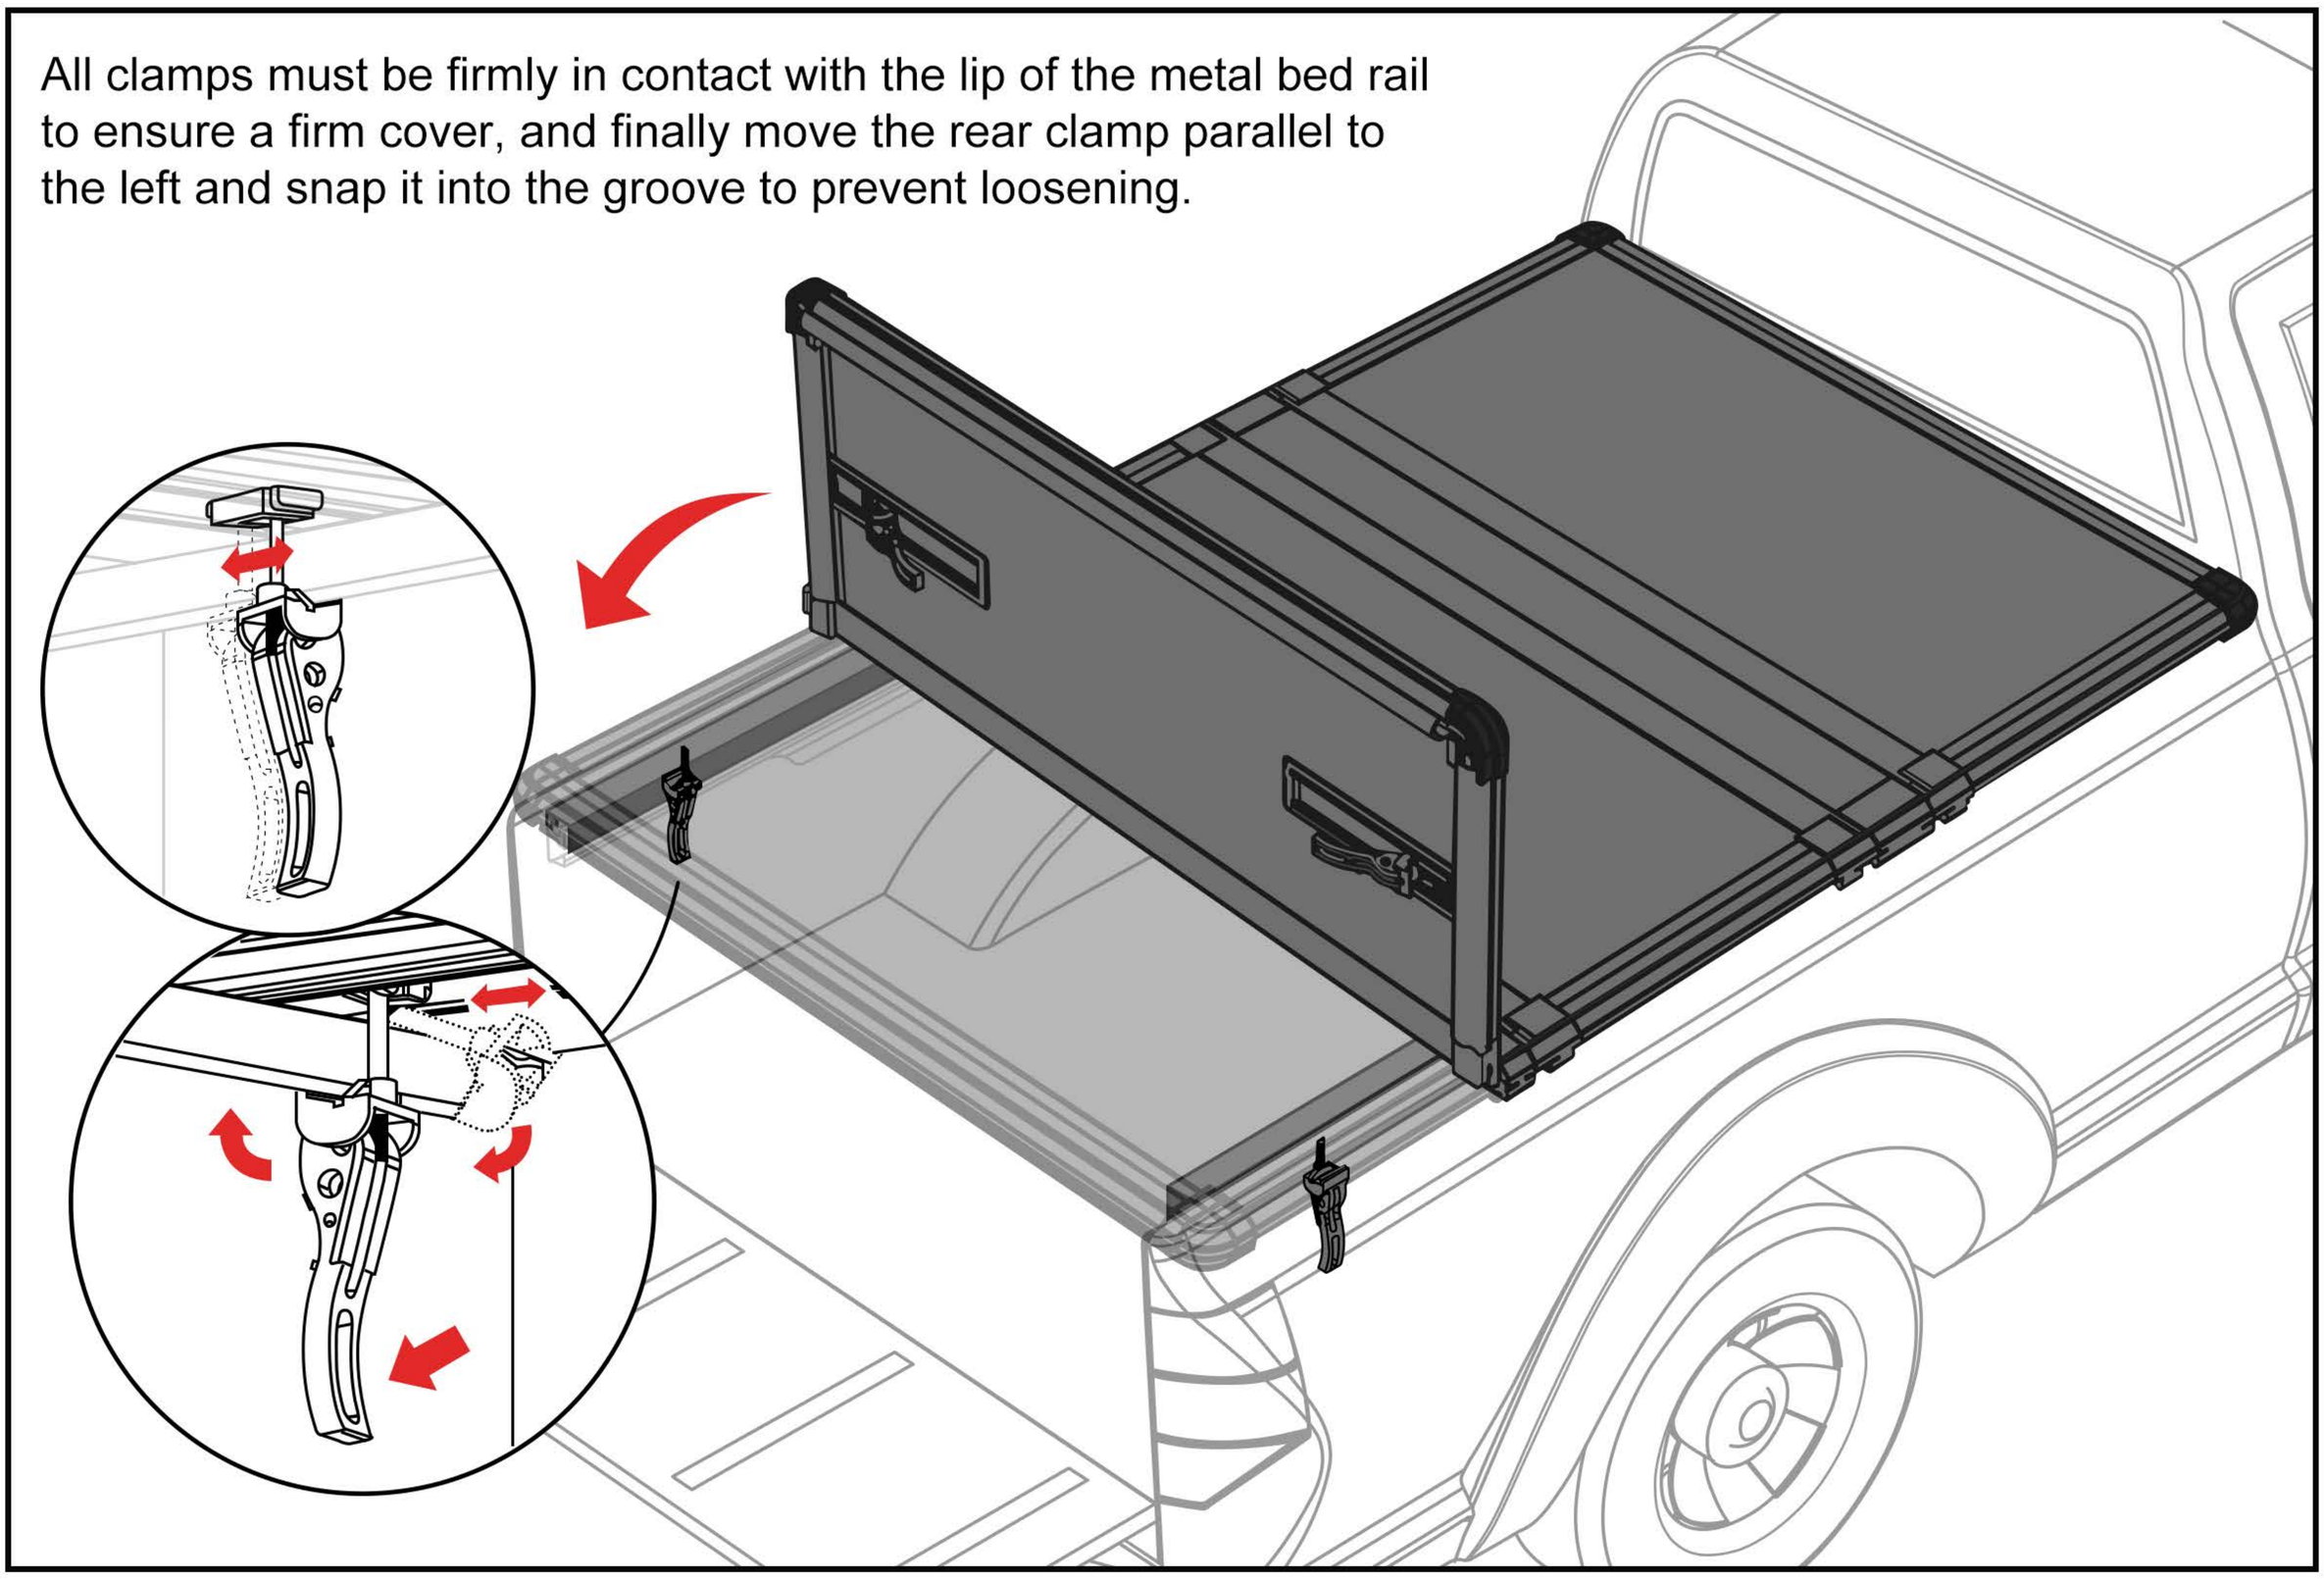


Close the tailgate and the installation is complete.

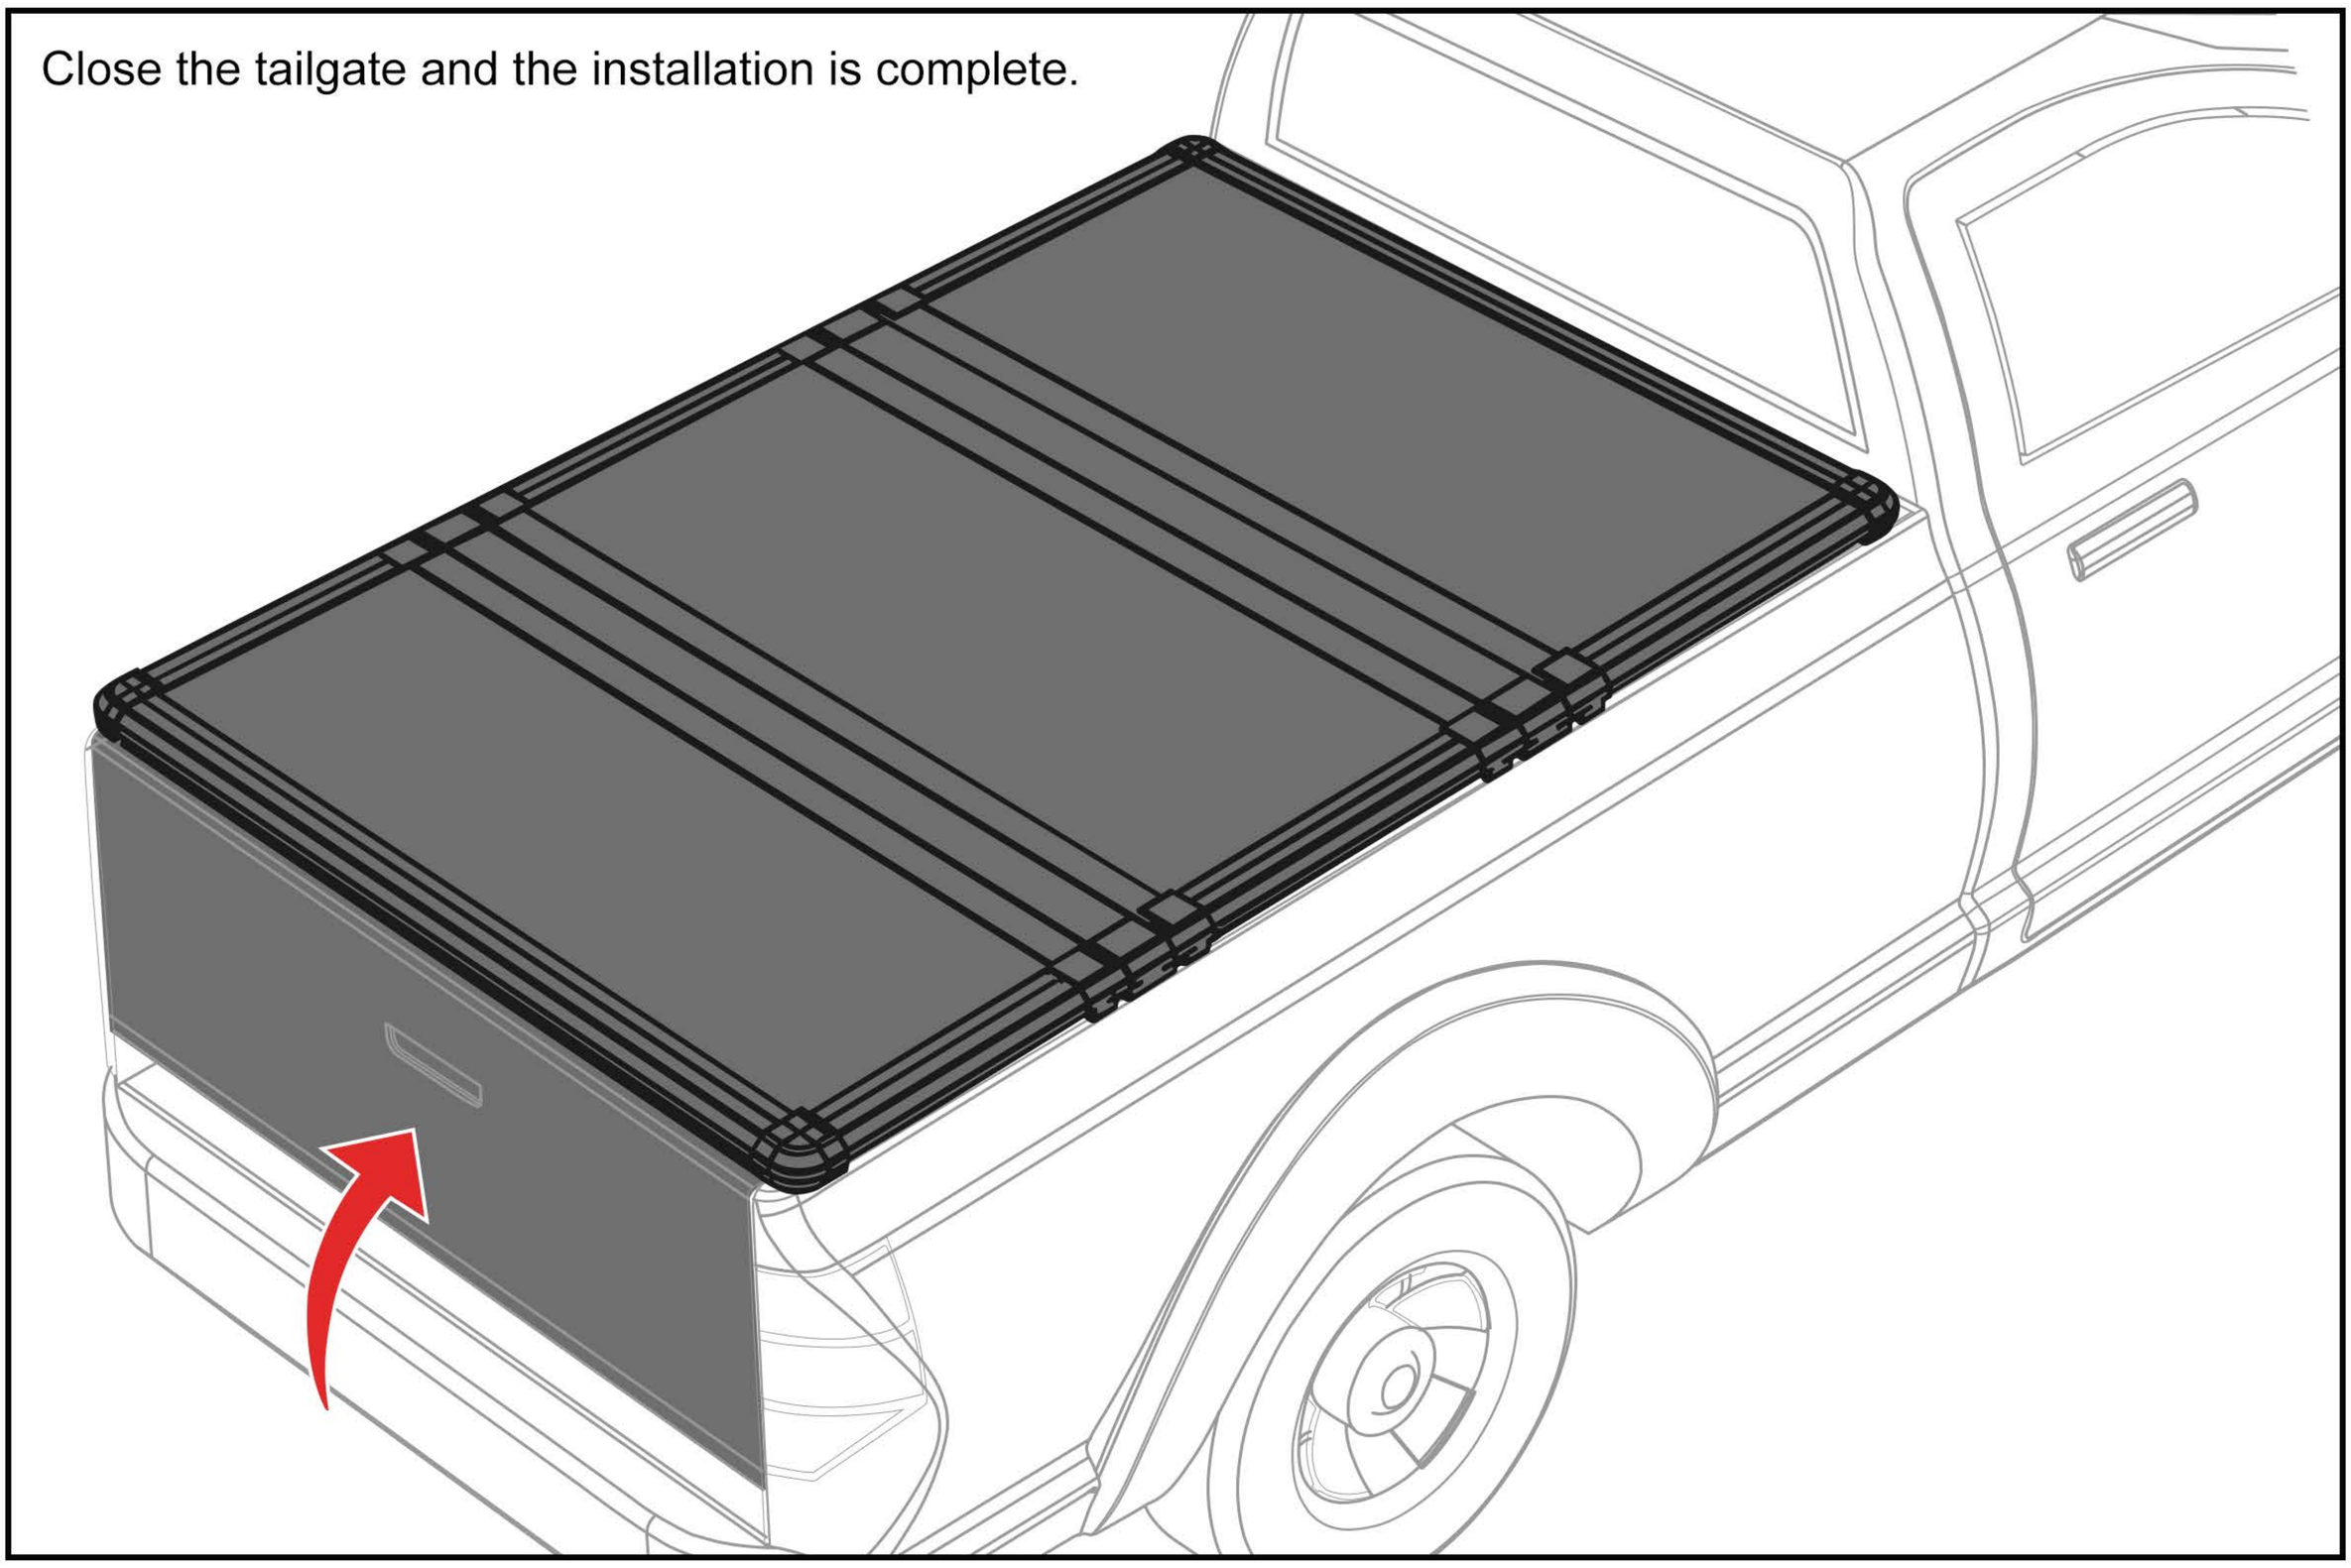

When it is necessary to completely fold the cover,place the rear clamps correctly clamping rubber block,and then fold it.

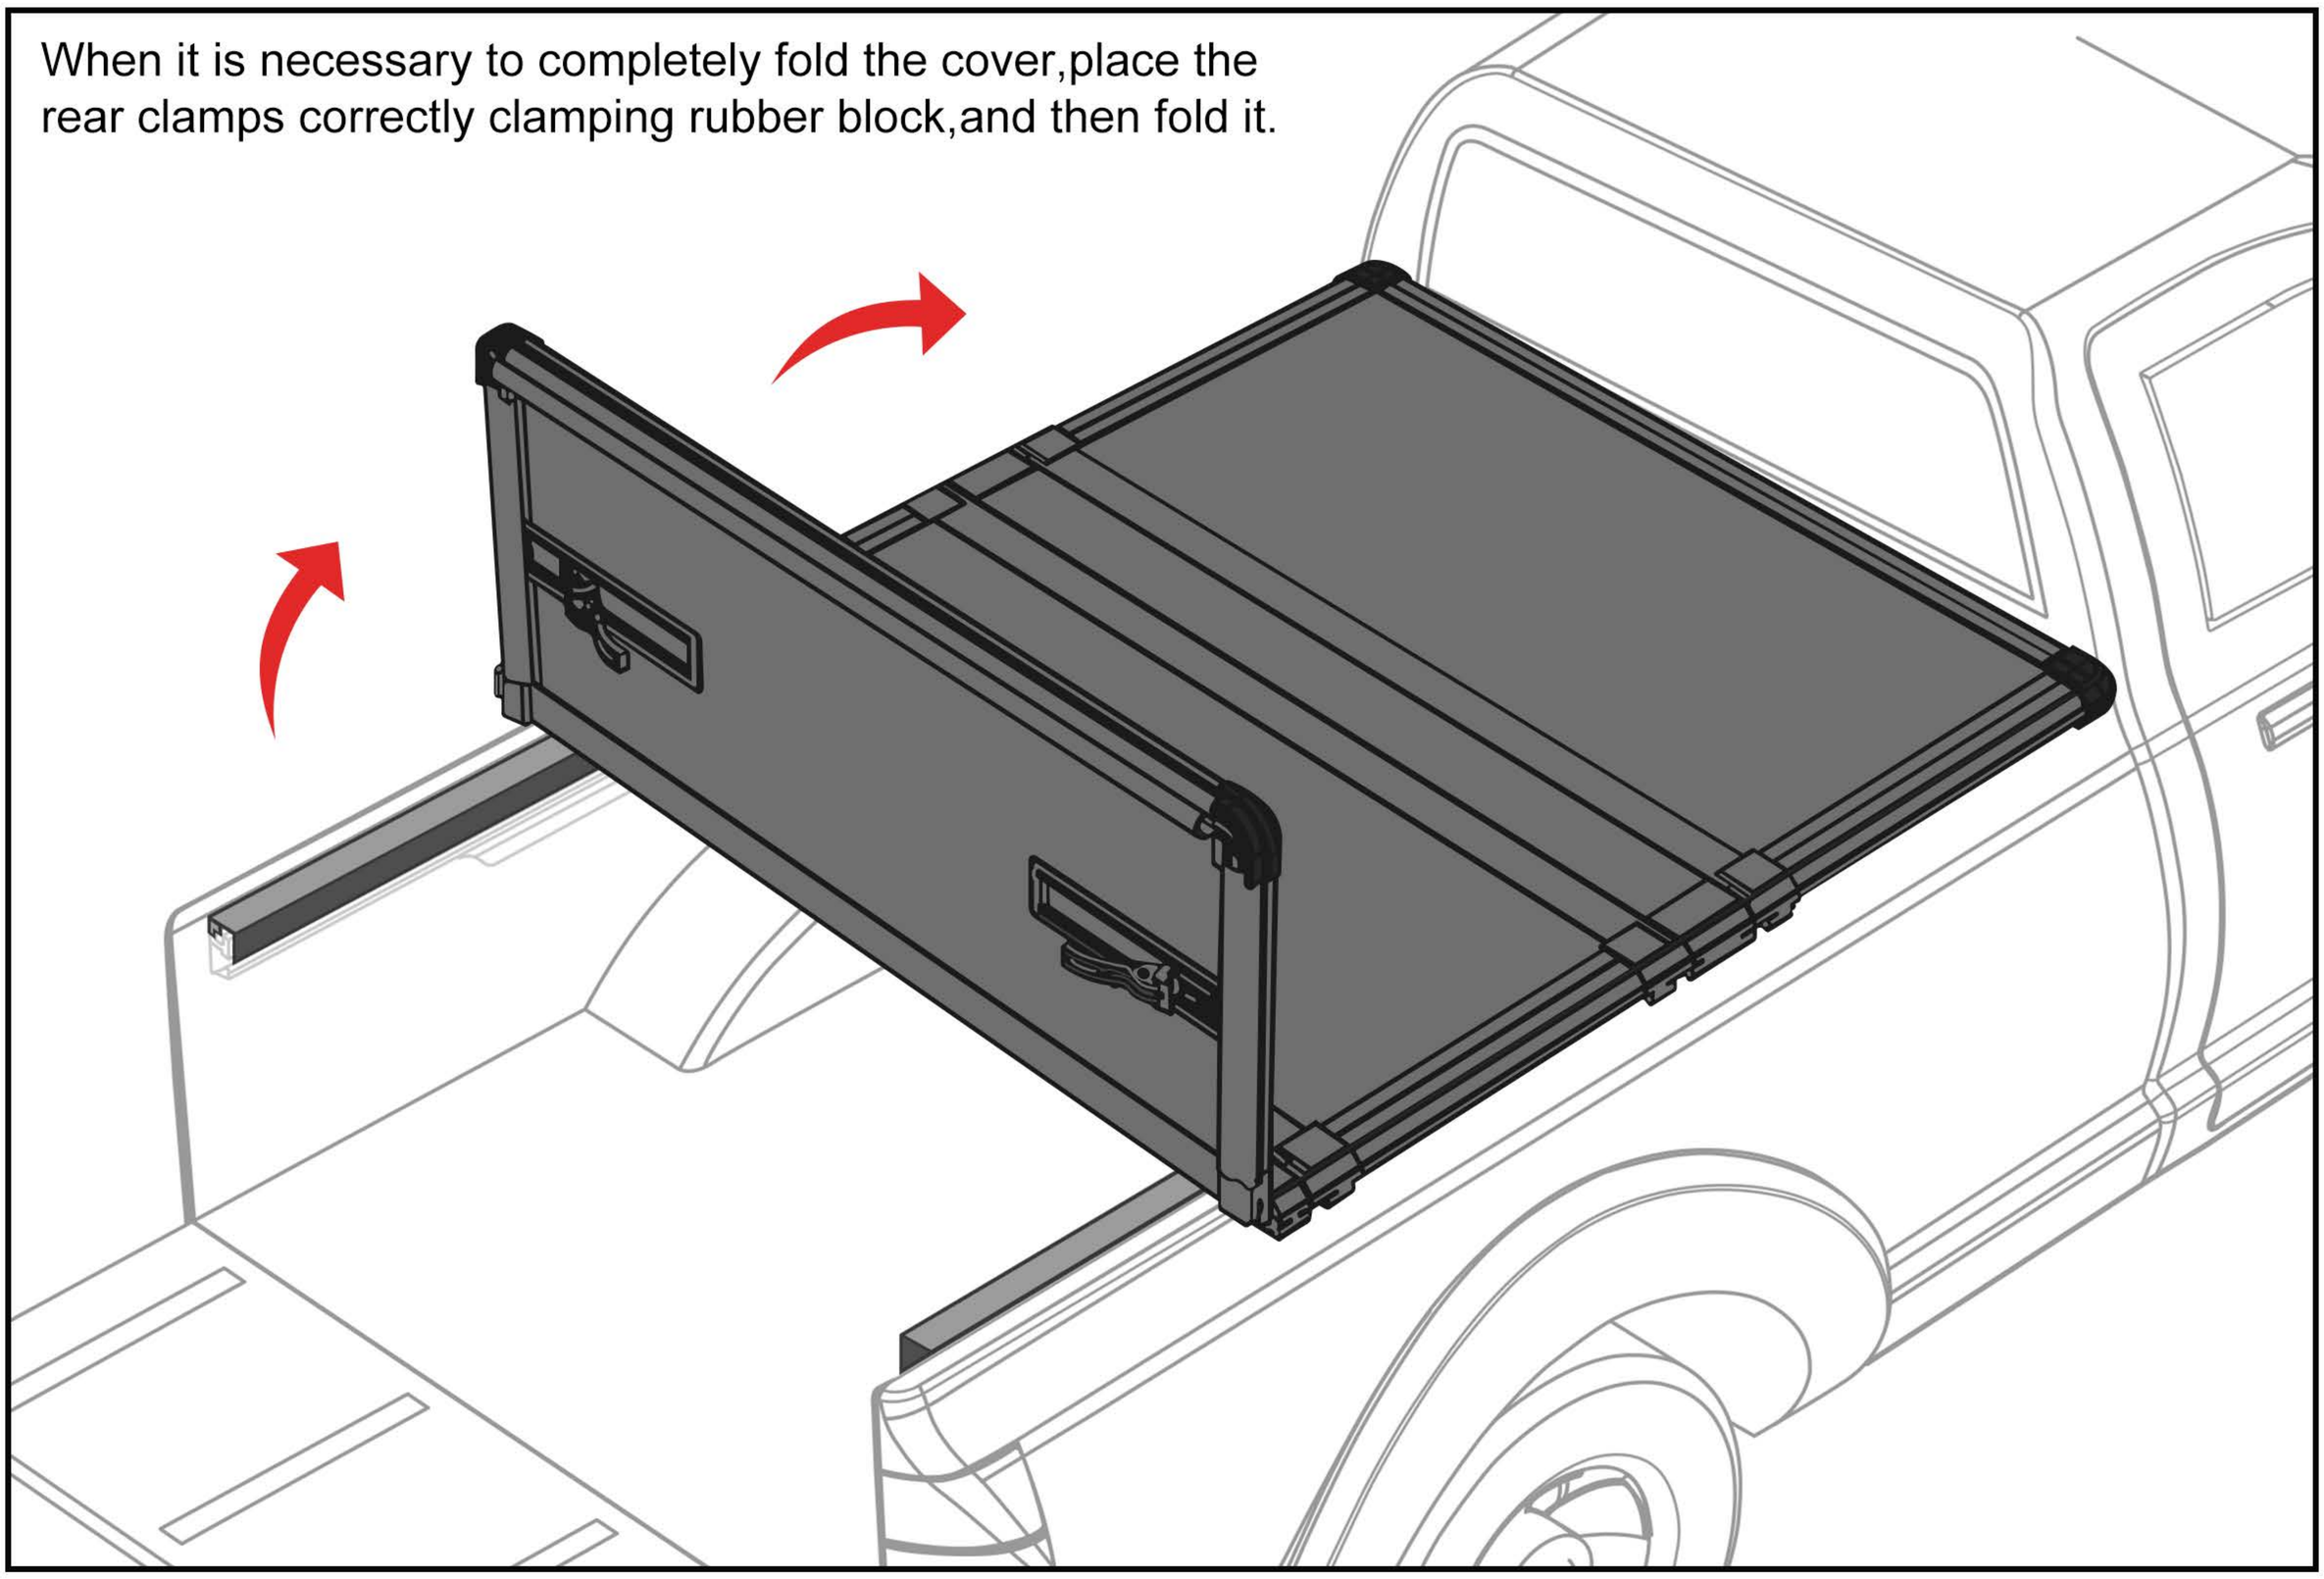


Fasten the buckle and tighten the braid to reduce noise during driving with the cover open.

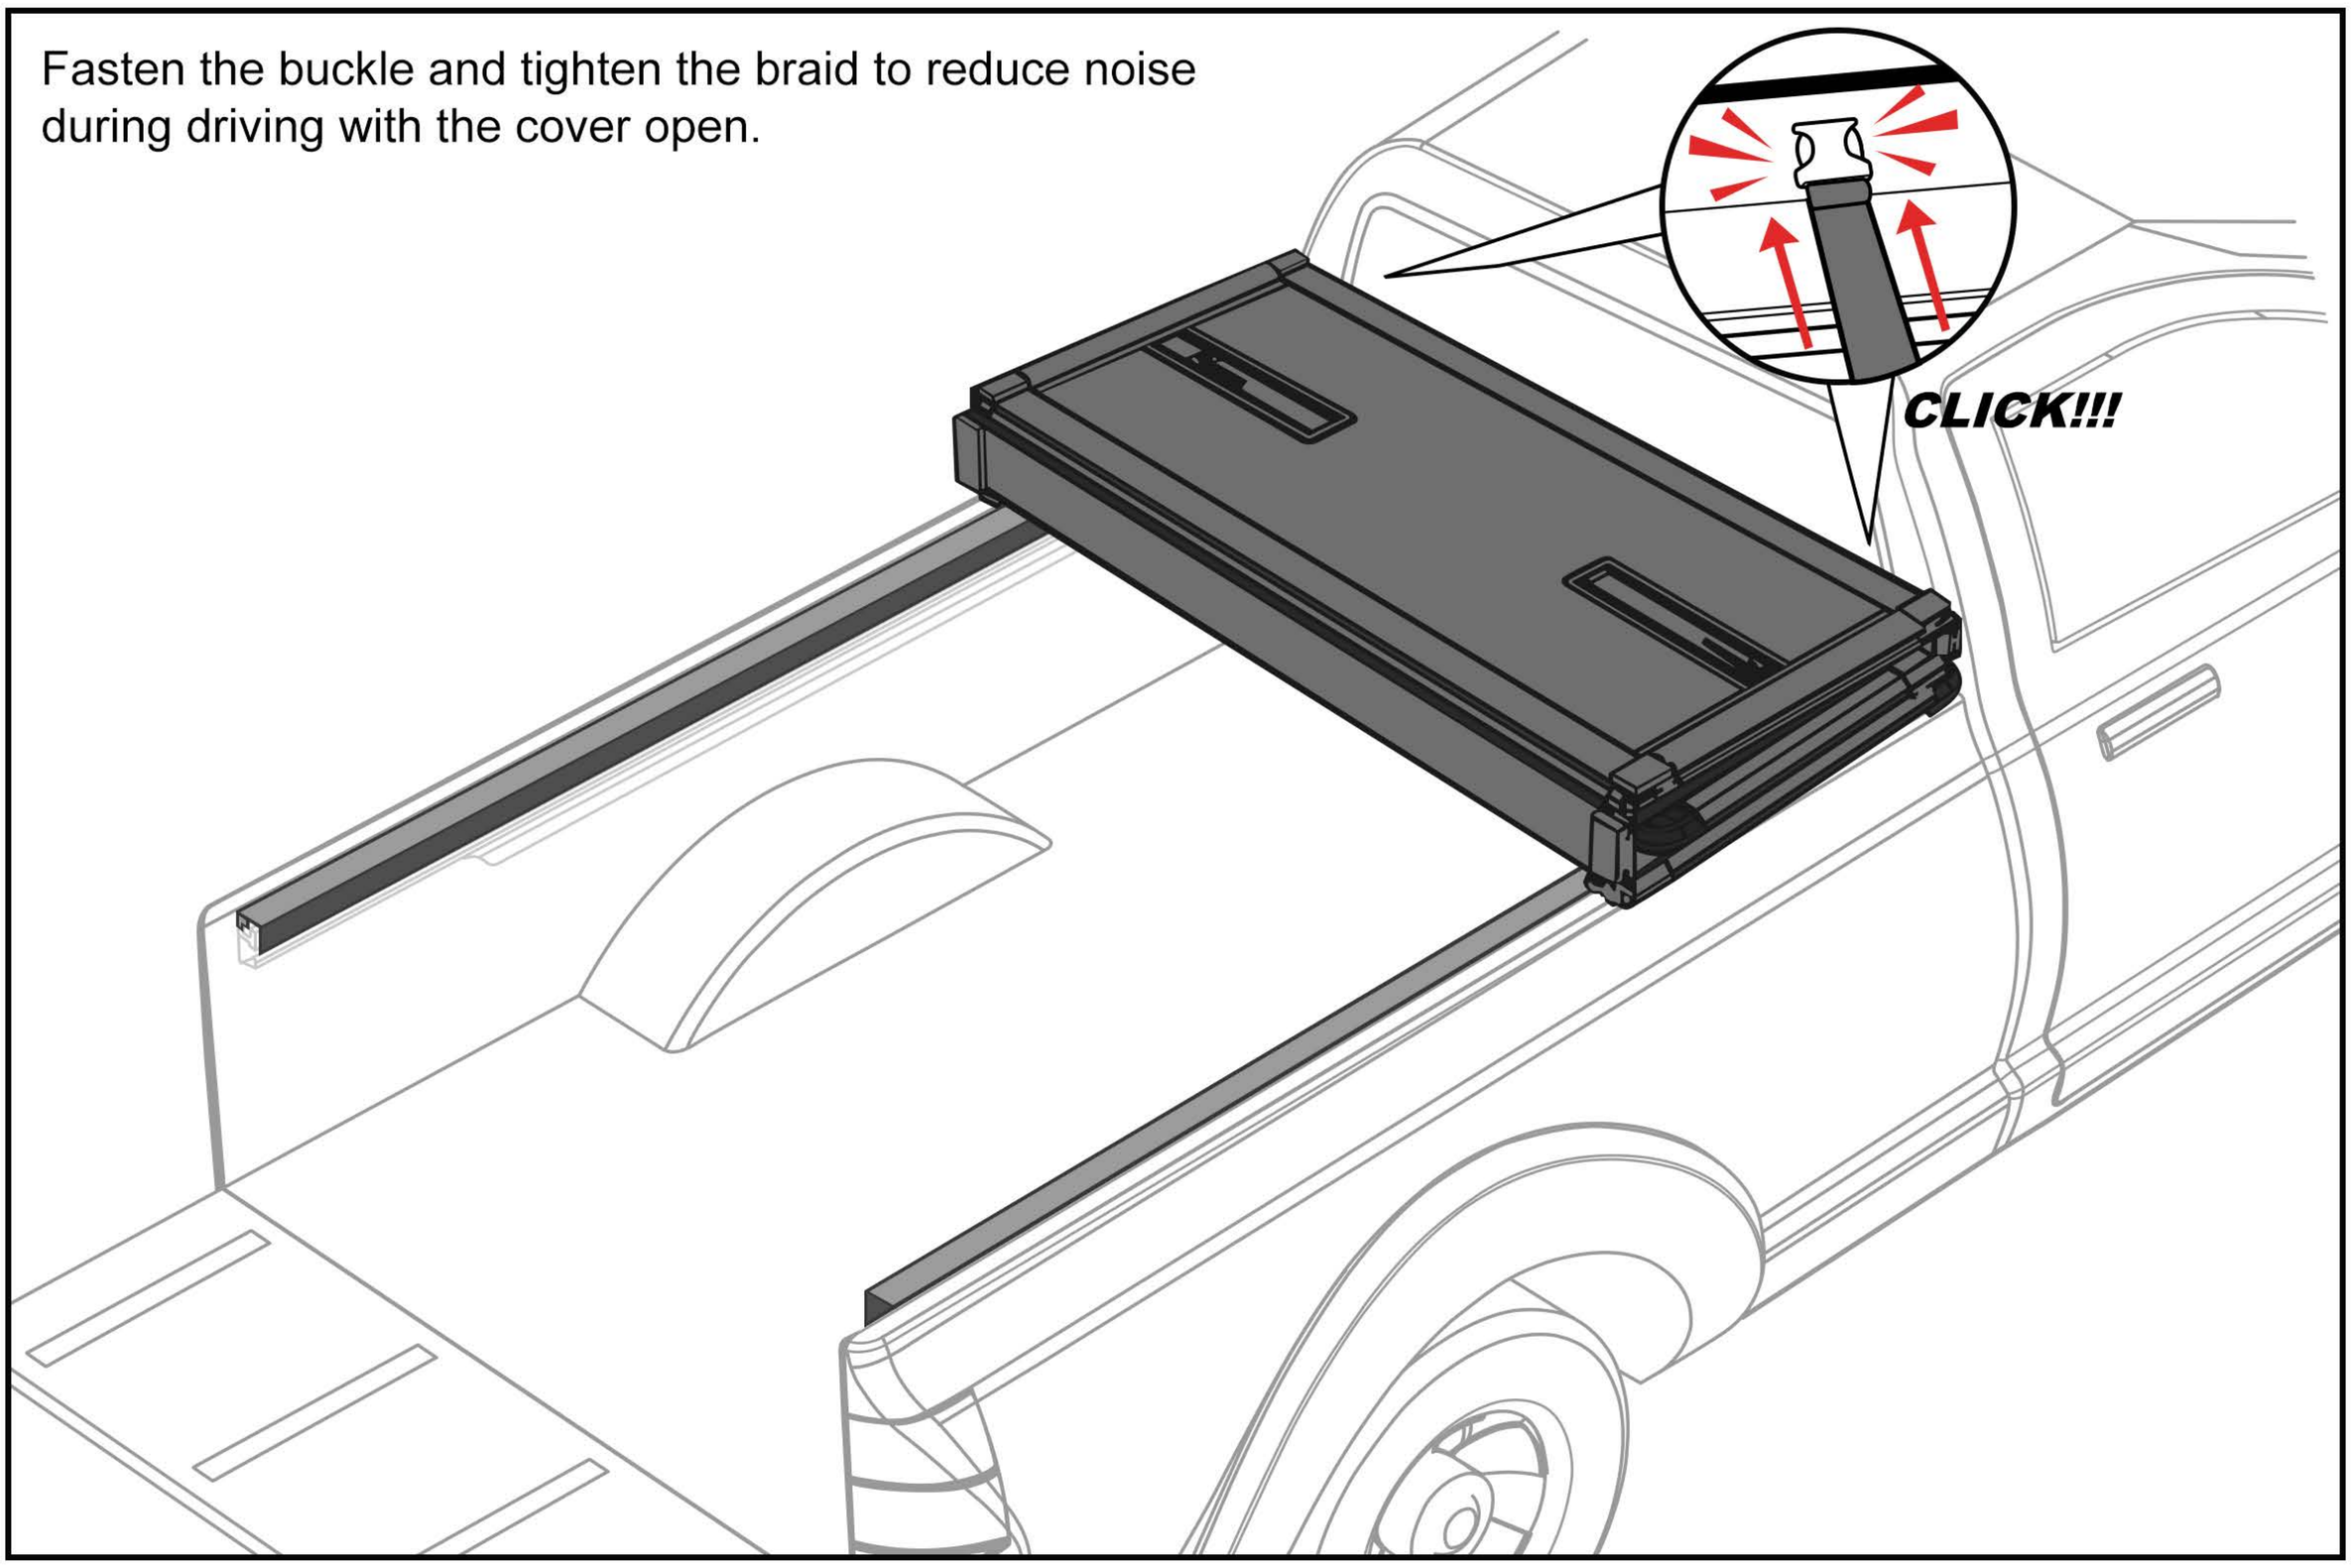



# ADDITIONAL REPLACEMENT PARTS INSTALLATION


**Products may be damaged during the transportation process. If any damage occurs, please contact us immediately or replace the damaged parts with our additional parts.**

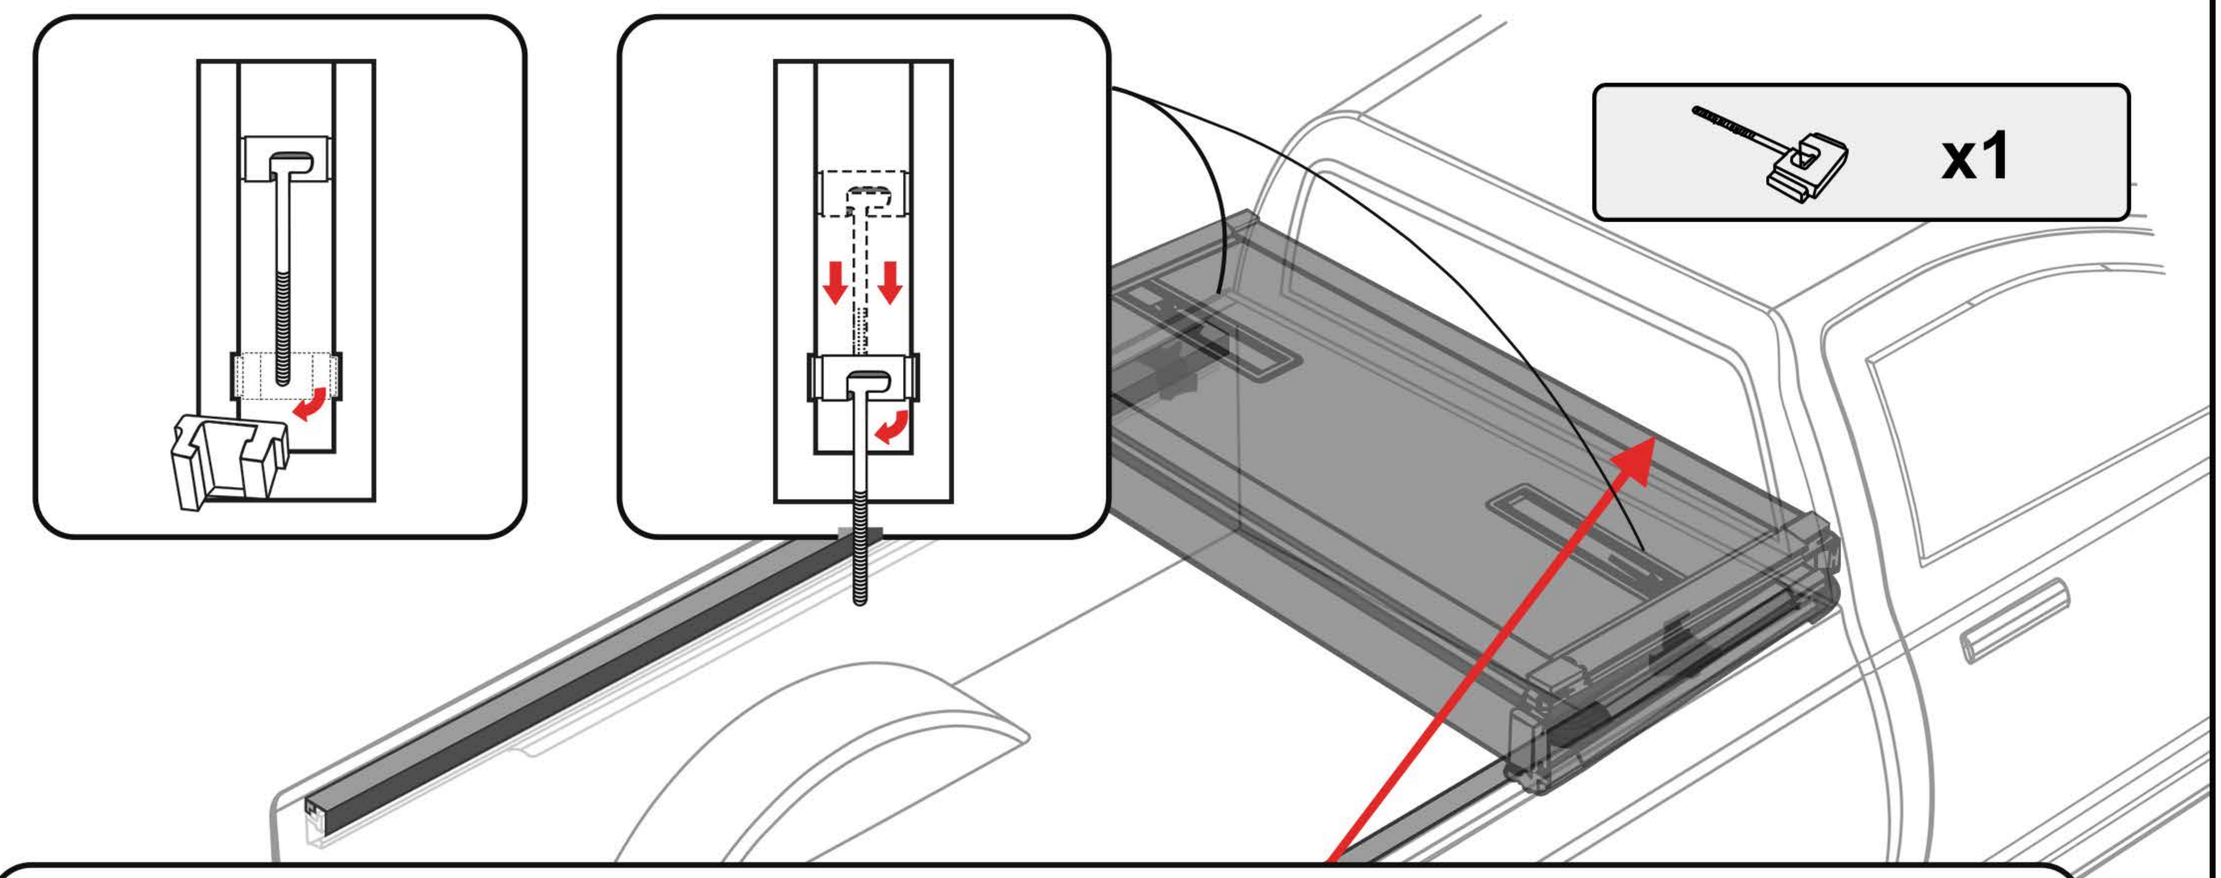




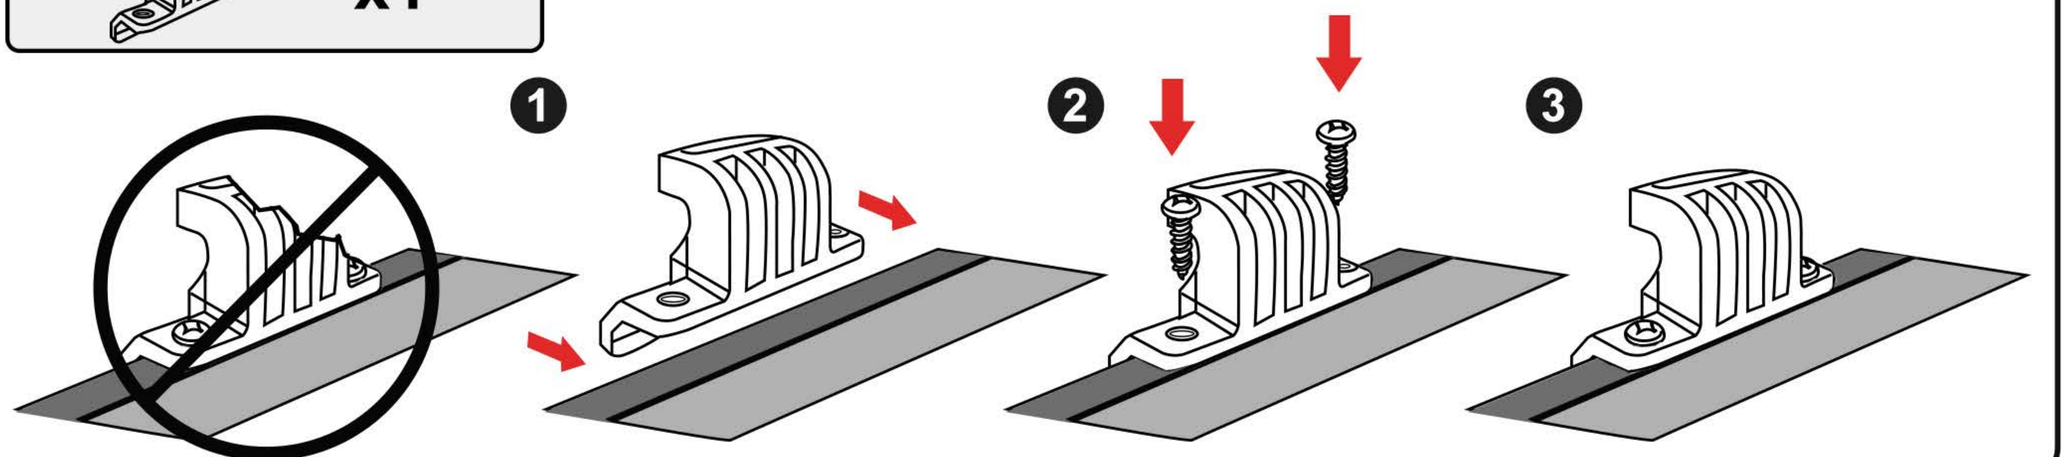

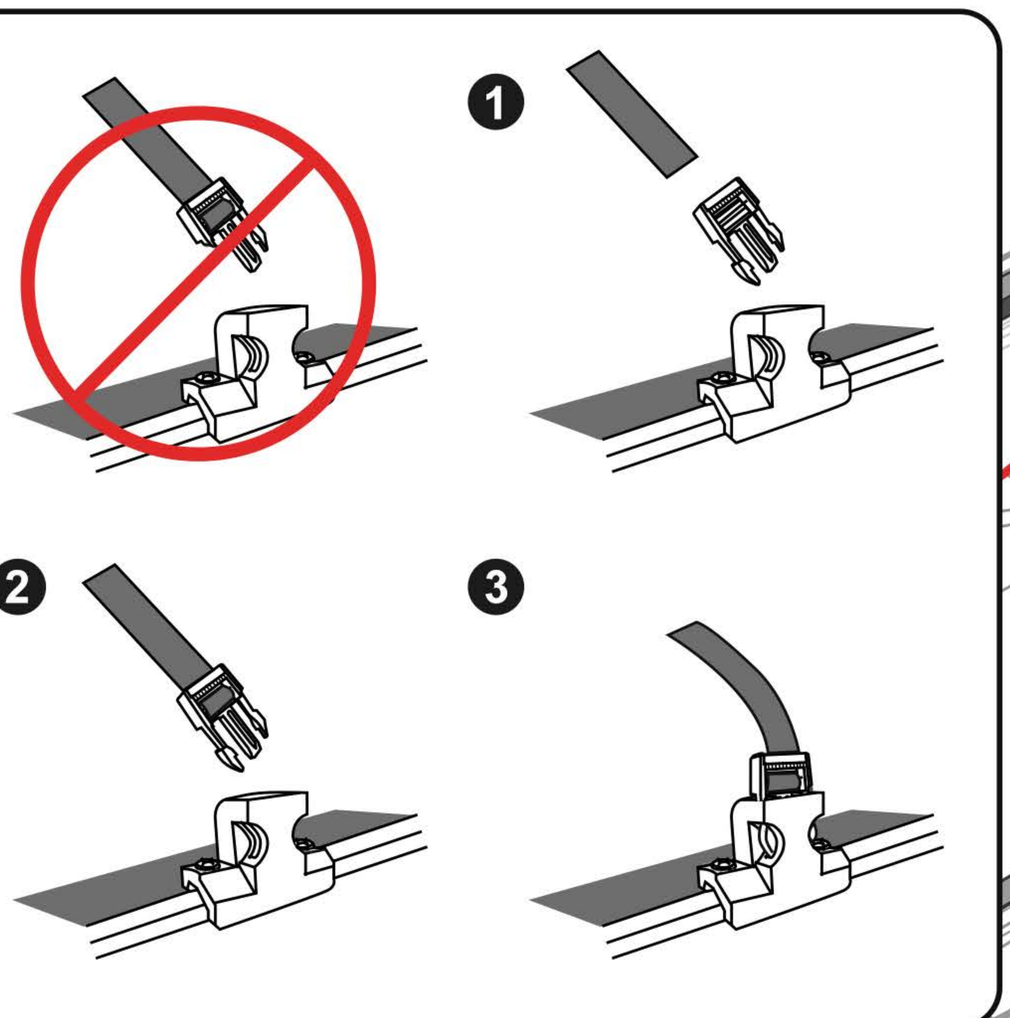Rear latches must be tucked in before fold back the cover.Rotate the latch as shown and snap it into the rubber block with the reserved groove. Prevent the cover from opening and closing properly due to the protruding wrench.
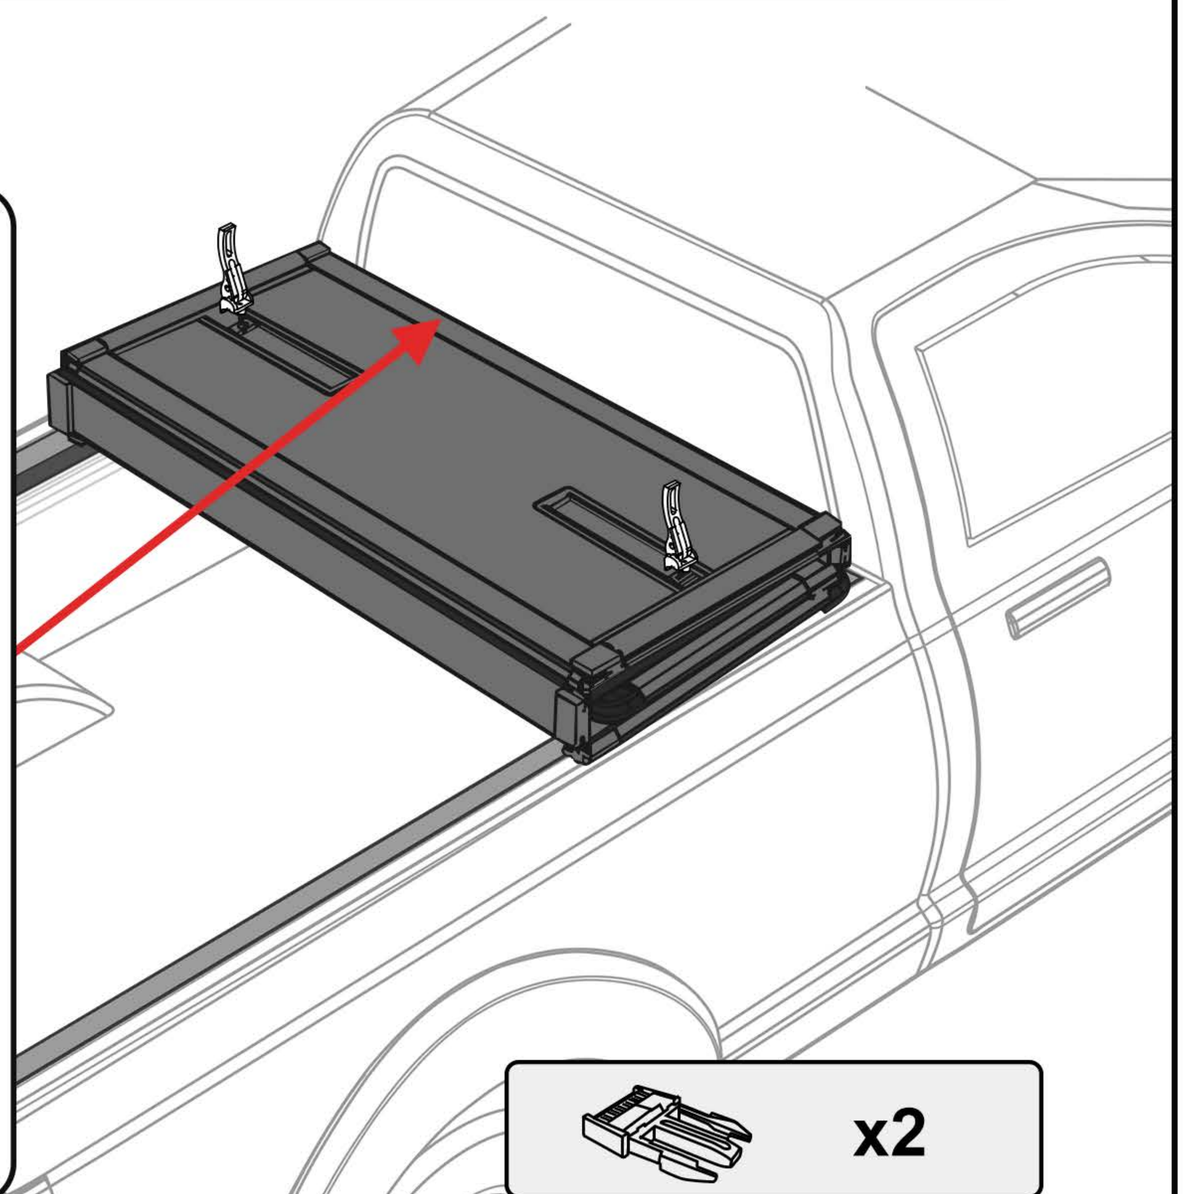
# 4 Maintenance

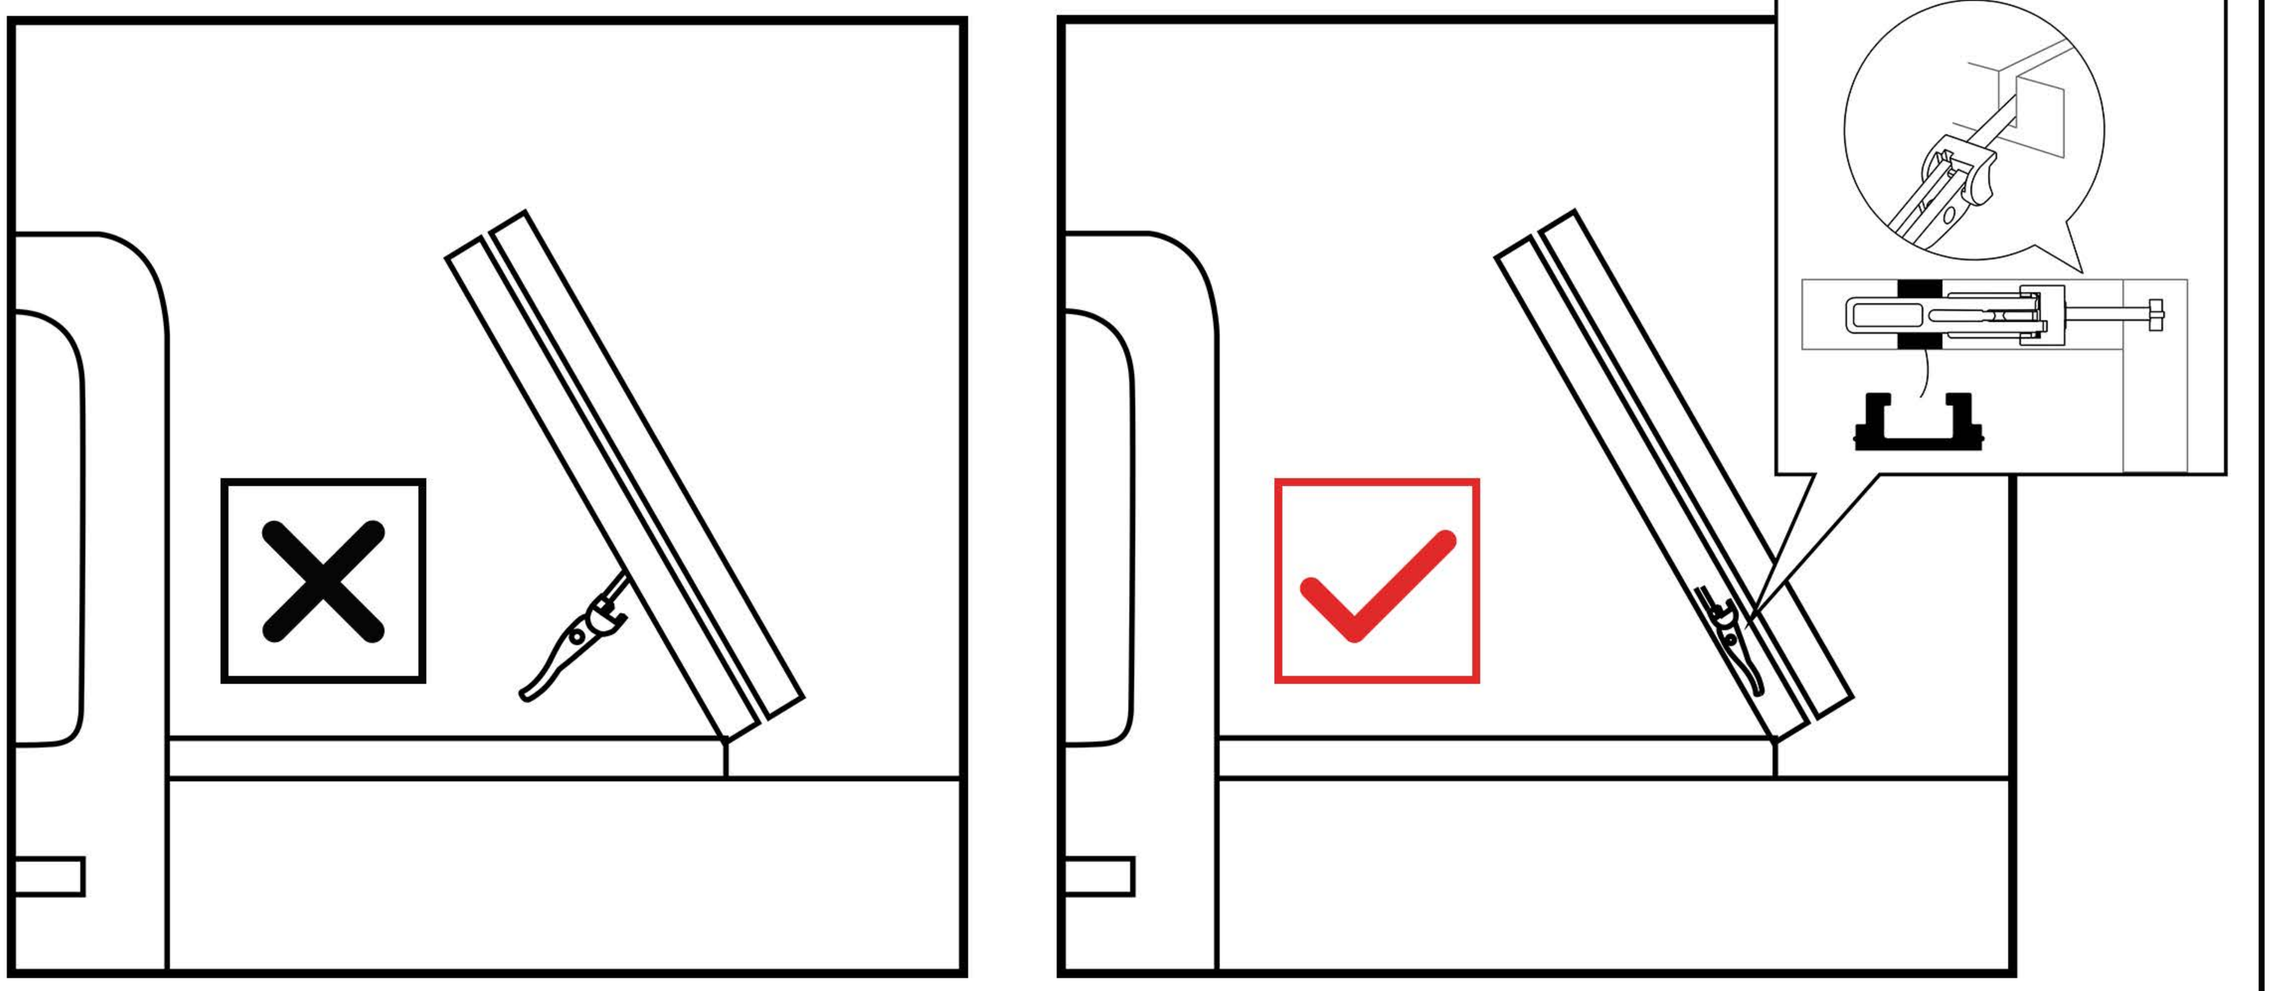1. We Recommends The User to Check The Cover Is Securely Attached To The Truck Bed Regularly.Look For Any Loose Bolts Due To Driving Vibration,Cargo Contact,etc. Make Sure All Mount Points of The Cover Are Properly Attached.

2. Use a Sponge or Soft Cloth With Water and Soap to Gently Remove Any Dust Or Dirty Off the surface, Pls washing out the sand before cleaning .

3. Pls don't accelerate rapidly or decelerate sharply when the cover standing,Fully Unfold the cover if the truck bed is empty.

4. Loading less than 100KGS on the surface of cover, sharp goods is forbidden to contact the surface.

# 5 After-sale Service

Thank you for choosing our product. We take pride in its quality and recommend professional installation with adherence to the user manual. Should you need assistance, paid repair services are available.

Retain your purchase receipt for verification. Please note that damages caused by modifications, accidents, misuse, non-genuine parts, or force majeure are not covered. For optimal safety, we advise regular inspections and use of manufacturer-recommended accessories.

Your satisfaction drives our commitment to delivering lasting reliability.