

Hard Folding
Installation Manual

1 Accessories Inventory

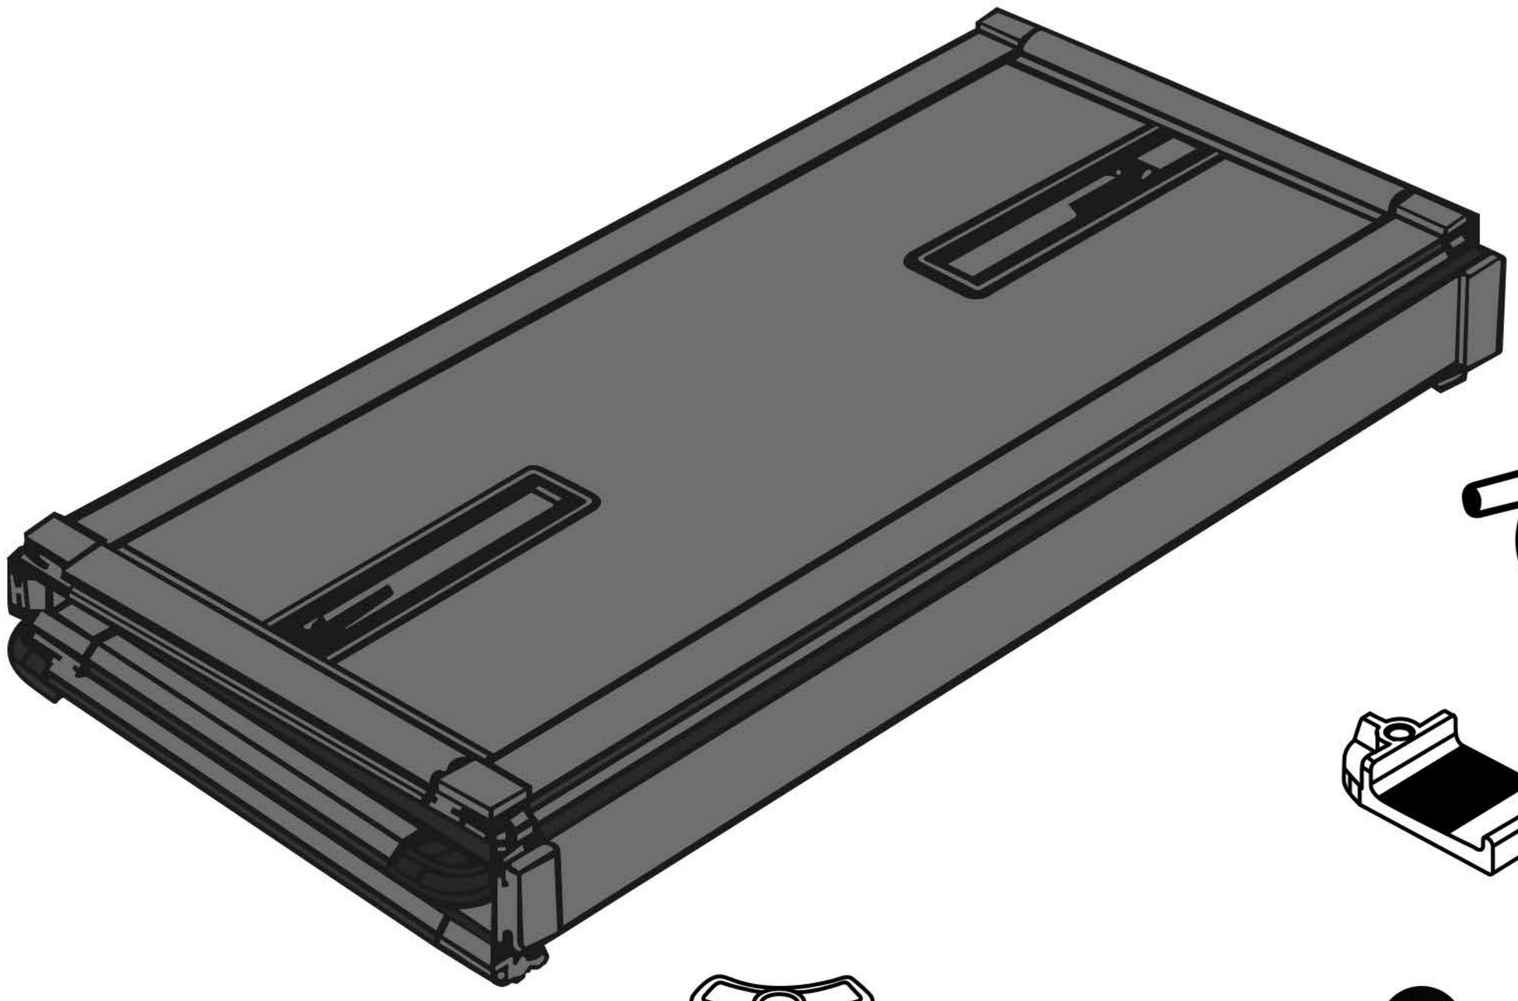

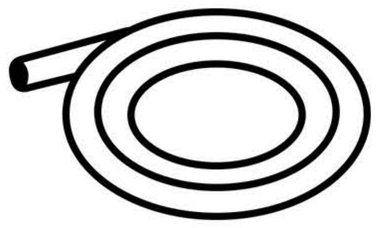


☐ Sealing strip X1




☐ Front clamps X2




☐ Triangle screw X2

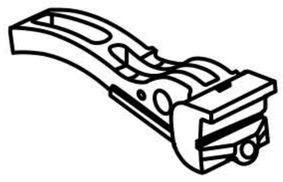

☐ Rear clamps X4

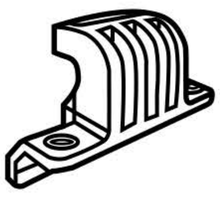


☐ Buckle Base X1

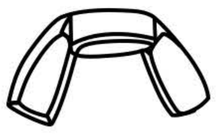


☐ Fastening nut X2



☐ Bolts X2

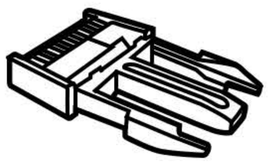

☐ Buckle X2

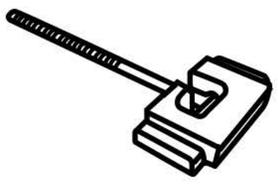

☐ T-bar X1

2 Product Advantages


Our Tonneau Cover Is Made of Several Durable Materials,
Such as FRP Clip Mesh, Aircraft-grade alloy aluminum and High Performance


We Offer Matched Tonneau Cover For Dozens Of Car Models, Fit For The Truck Bed Perfectly.


3 Installation

CAUTION


- CLEAN THE BULKHEAD WITH SOAP AND WATER TO REMOVE IMPURITIES AND GREASE, ALLOWING THE MOISTURE TO EVAPORATE TO ENSURE A DRY SURFACE.

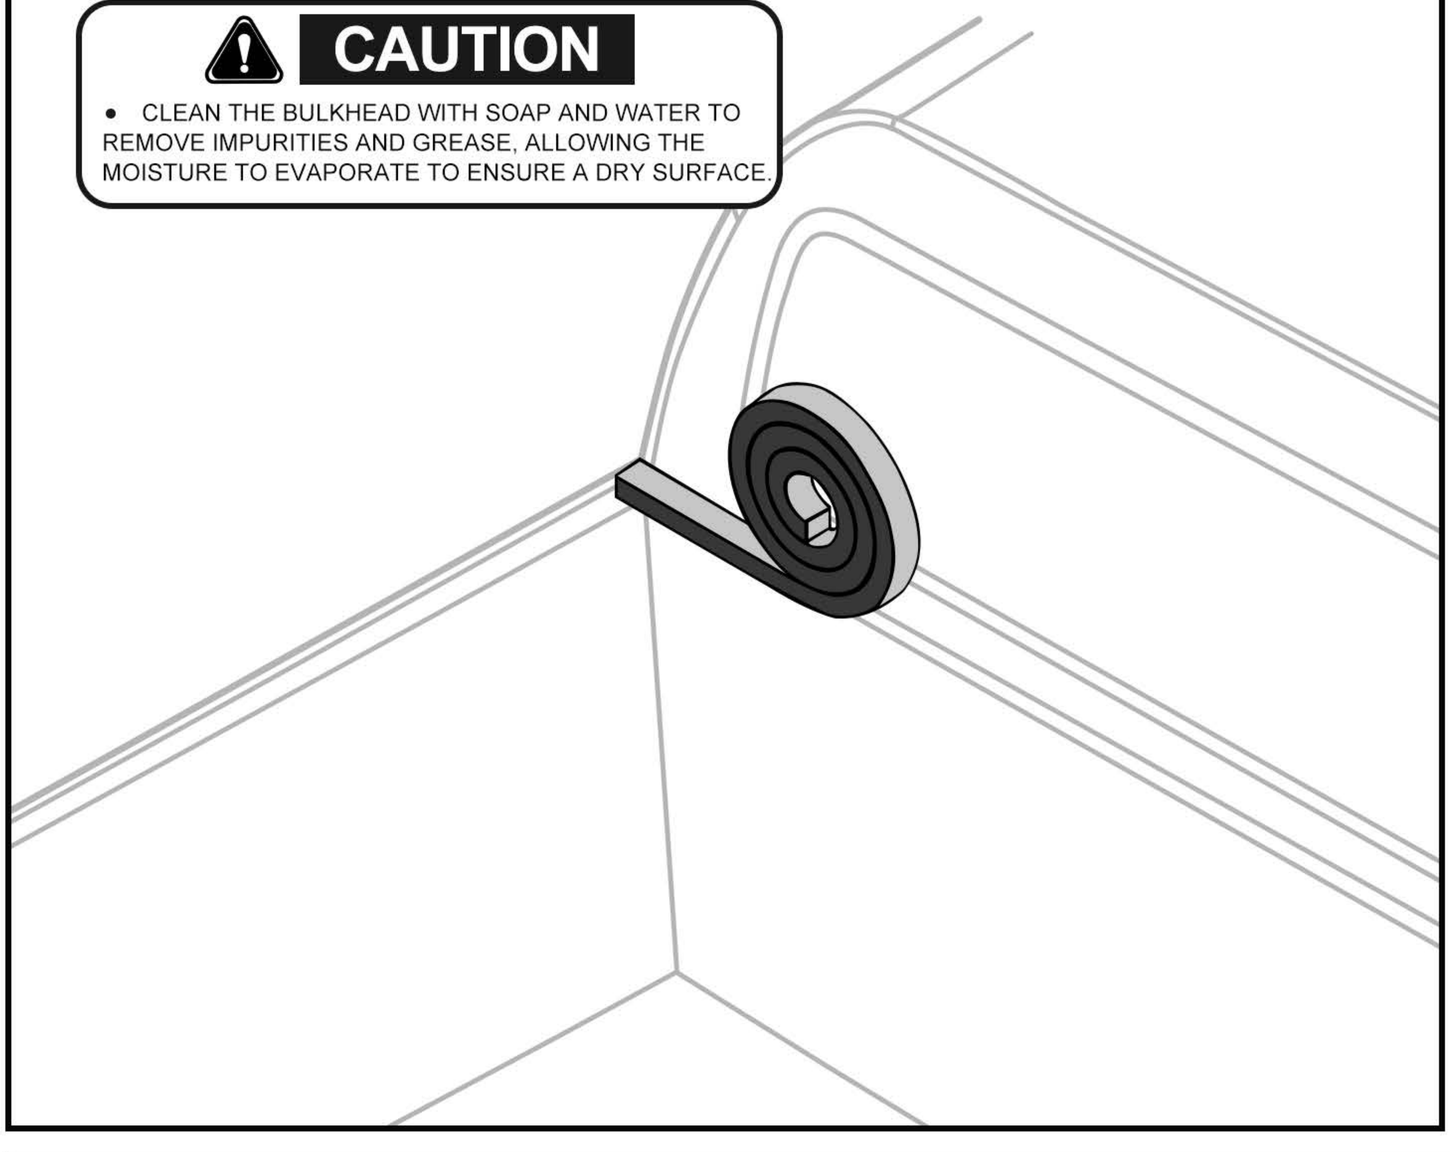

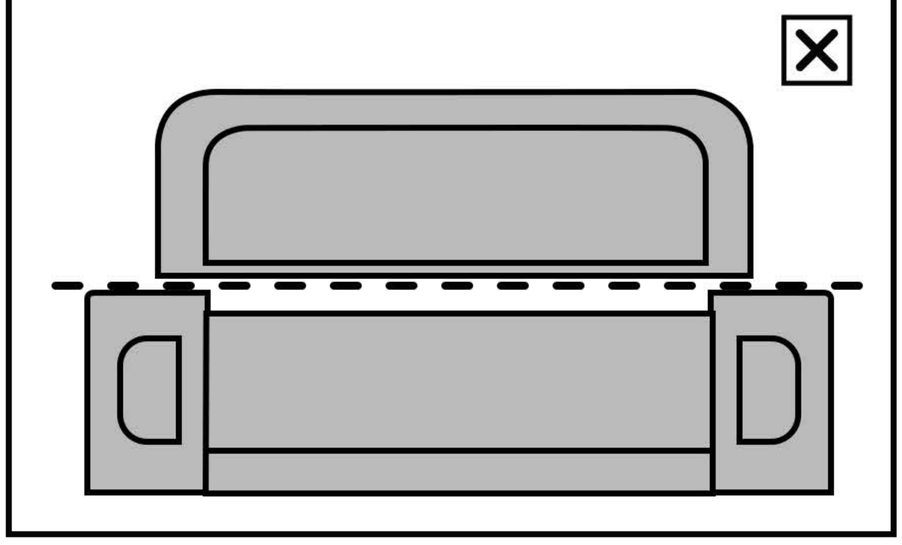


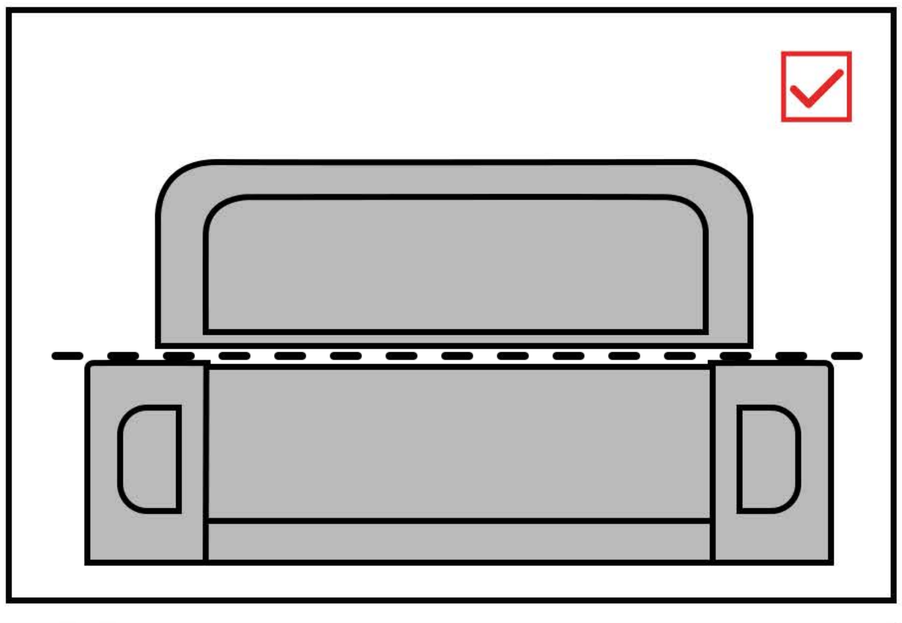


Peel off the backing and stick the seal from one edge to the other edge. Use scissors or a utility knife to remove any excess. Apply even pressure along the entire seal to ensure good adhesion. If the truck has a Plastic bed liner the seal is not necessary

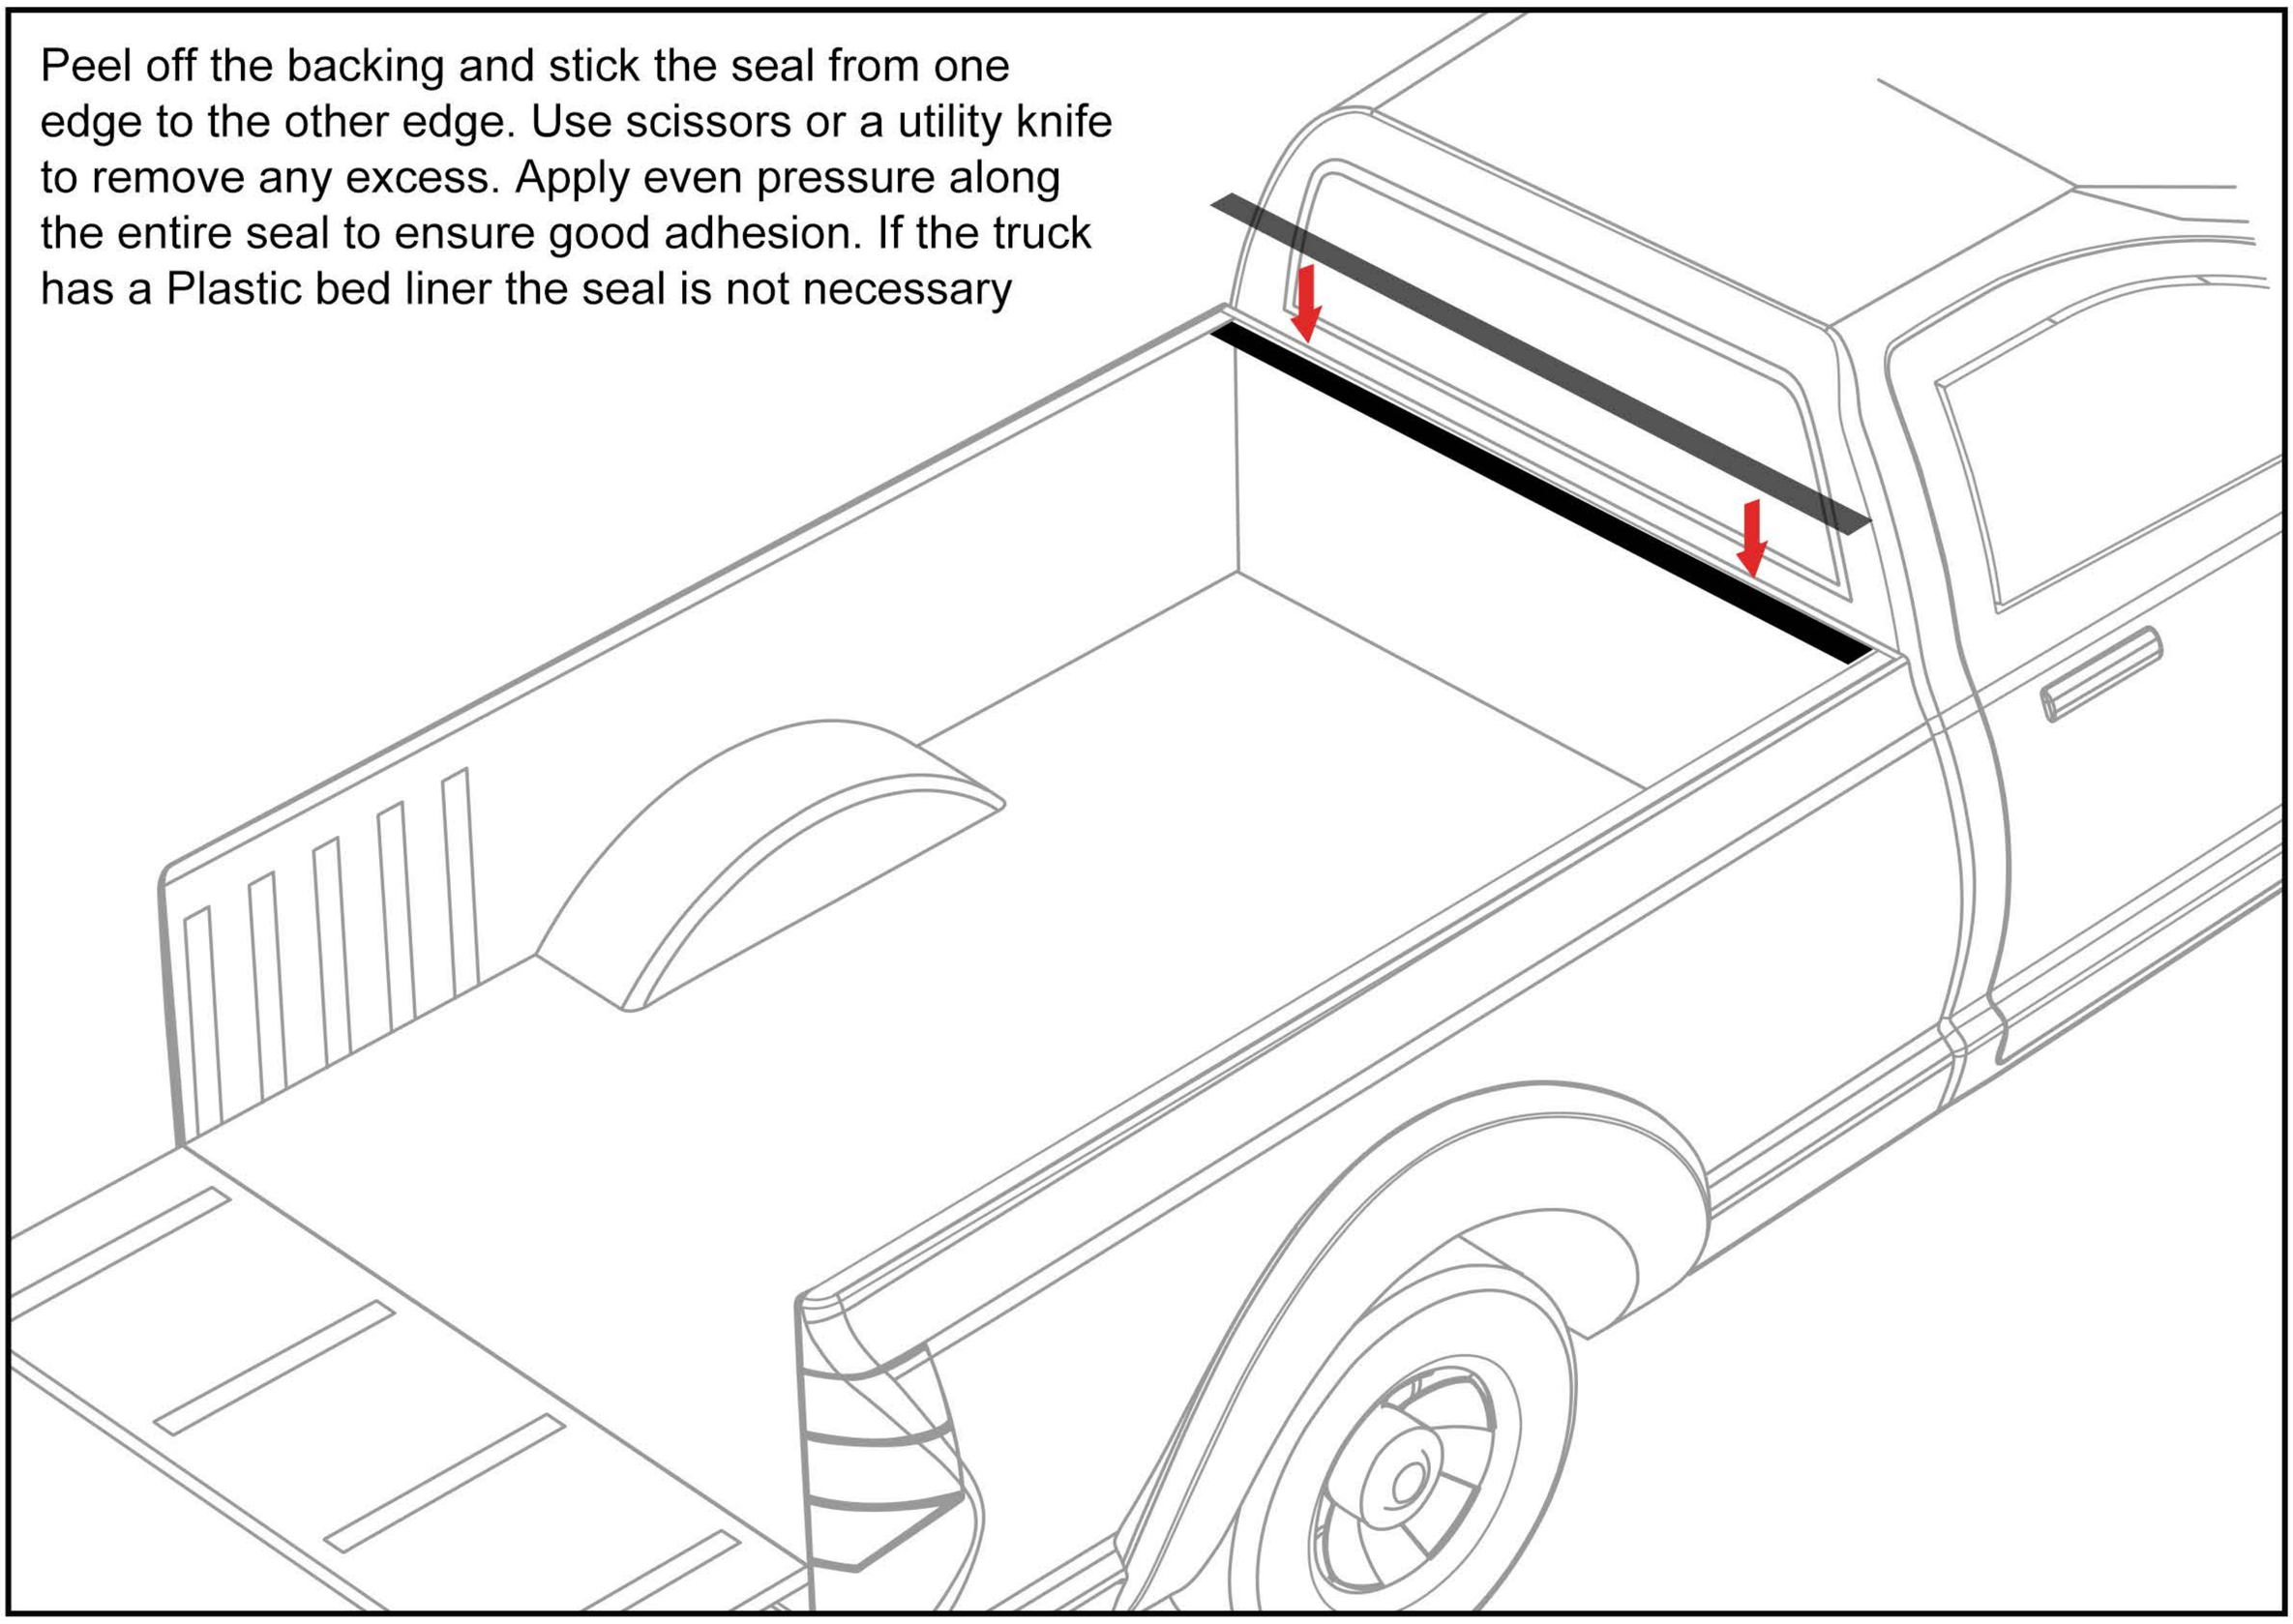


Place the cover that has been assembled on the bulkhead, positioning it against the cab.

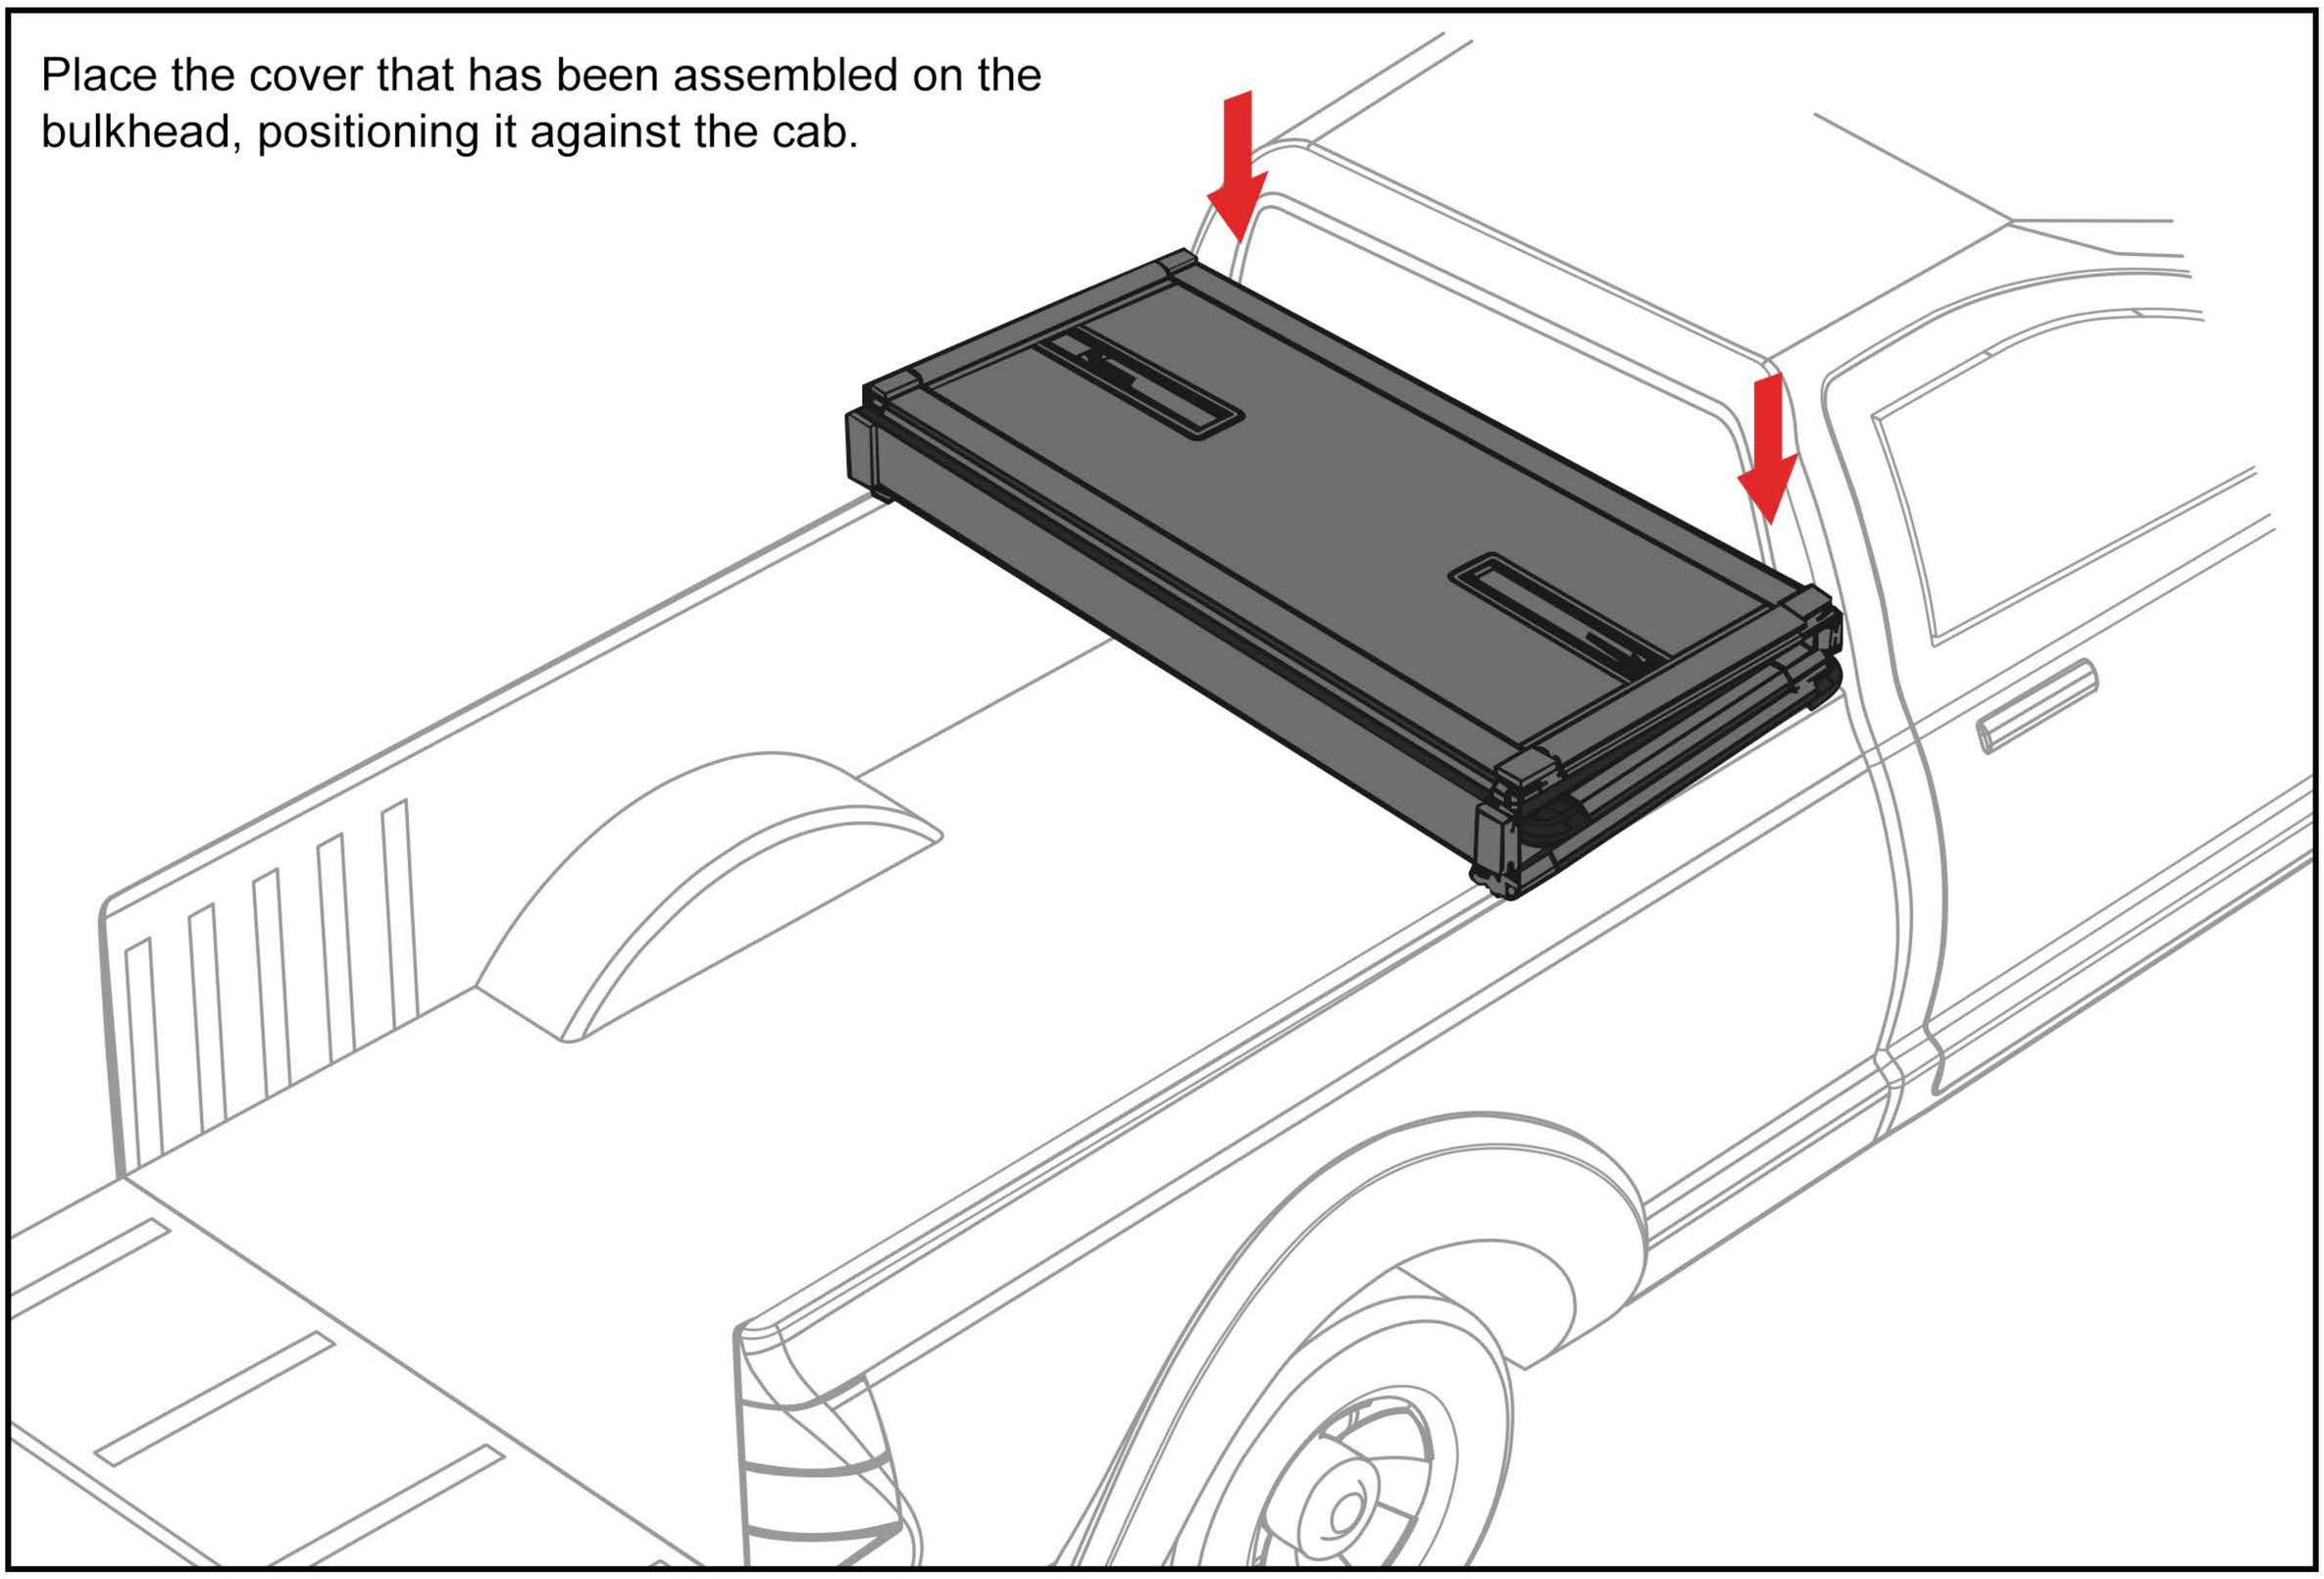


Fully unfold the cover towards the tailgate and ensure cover aligns on all sides.

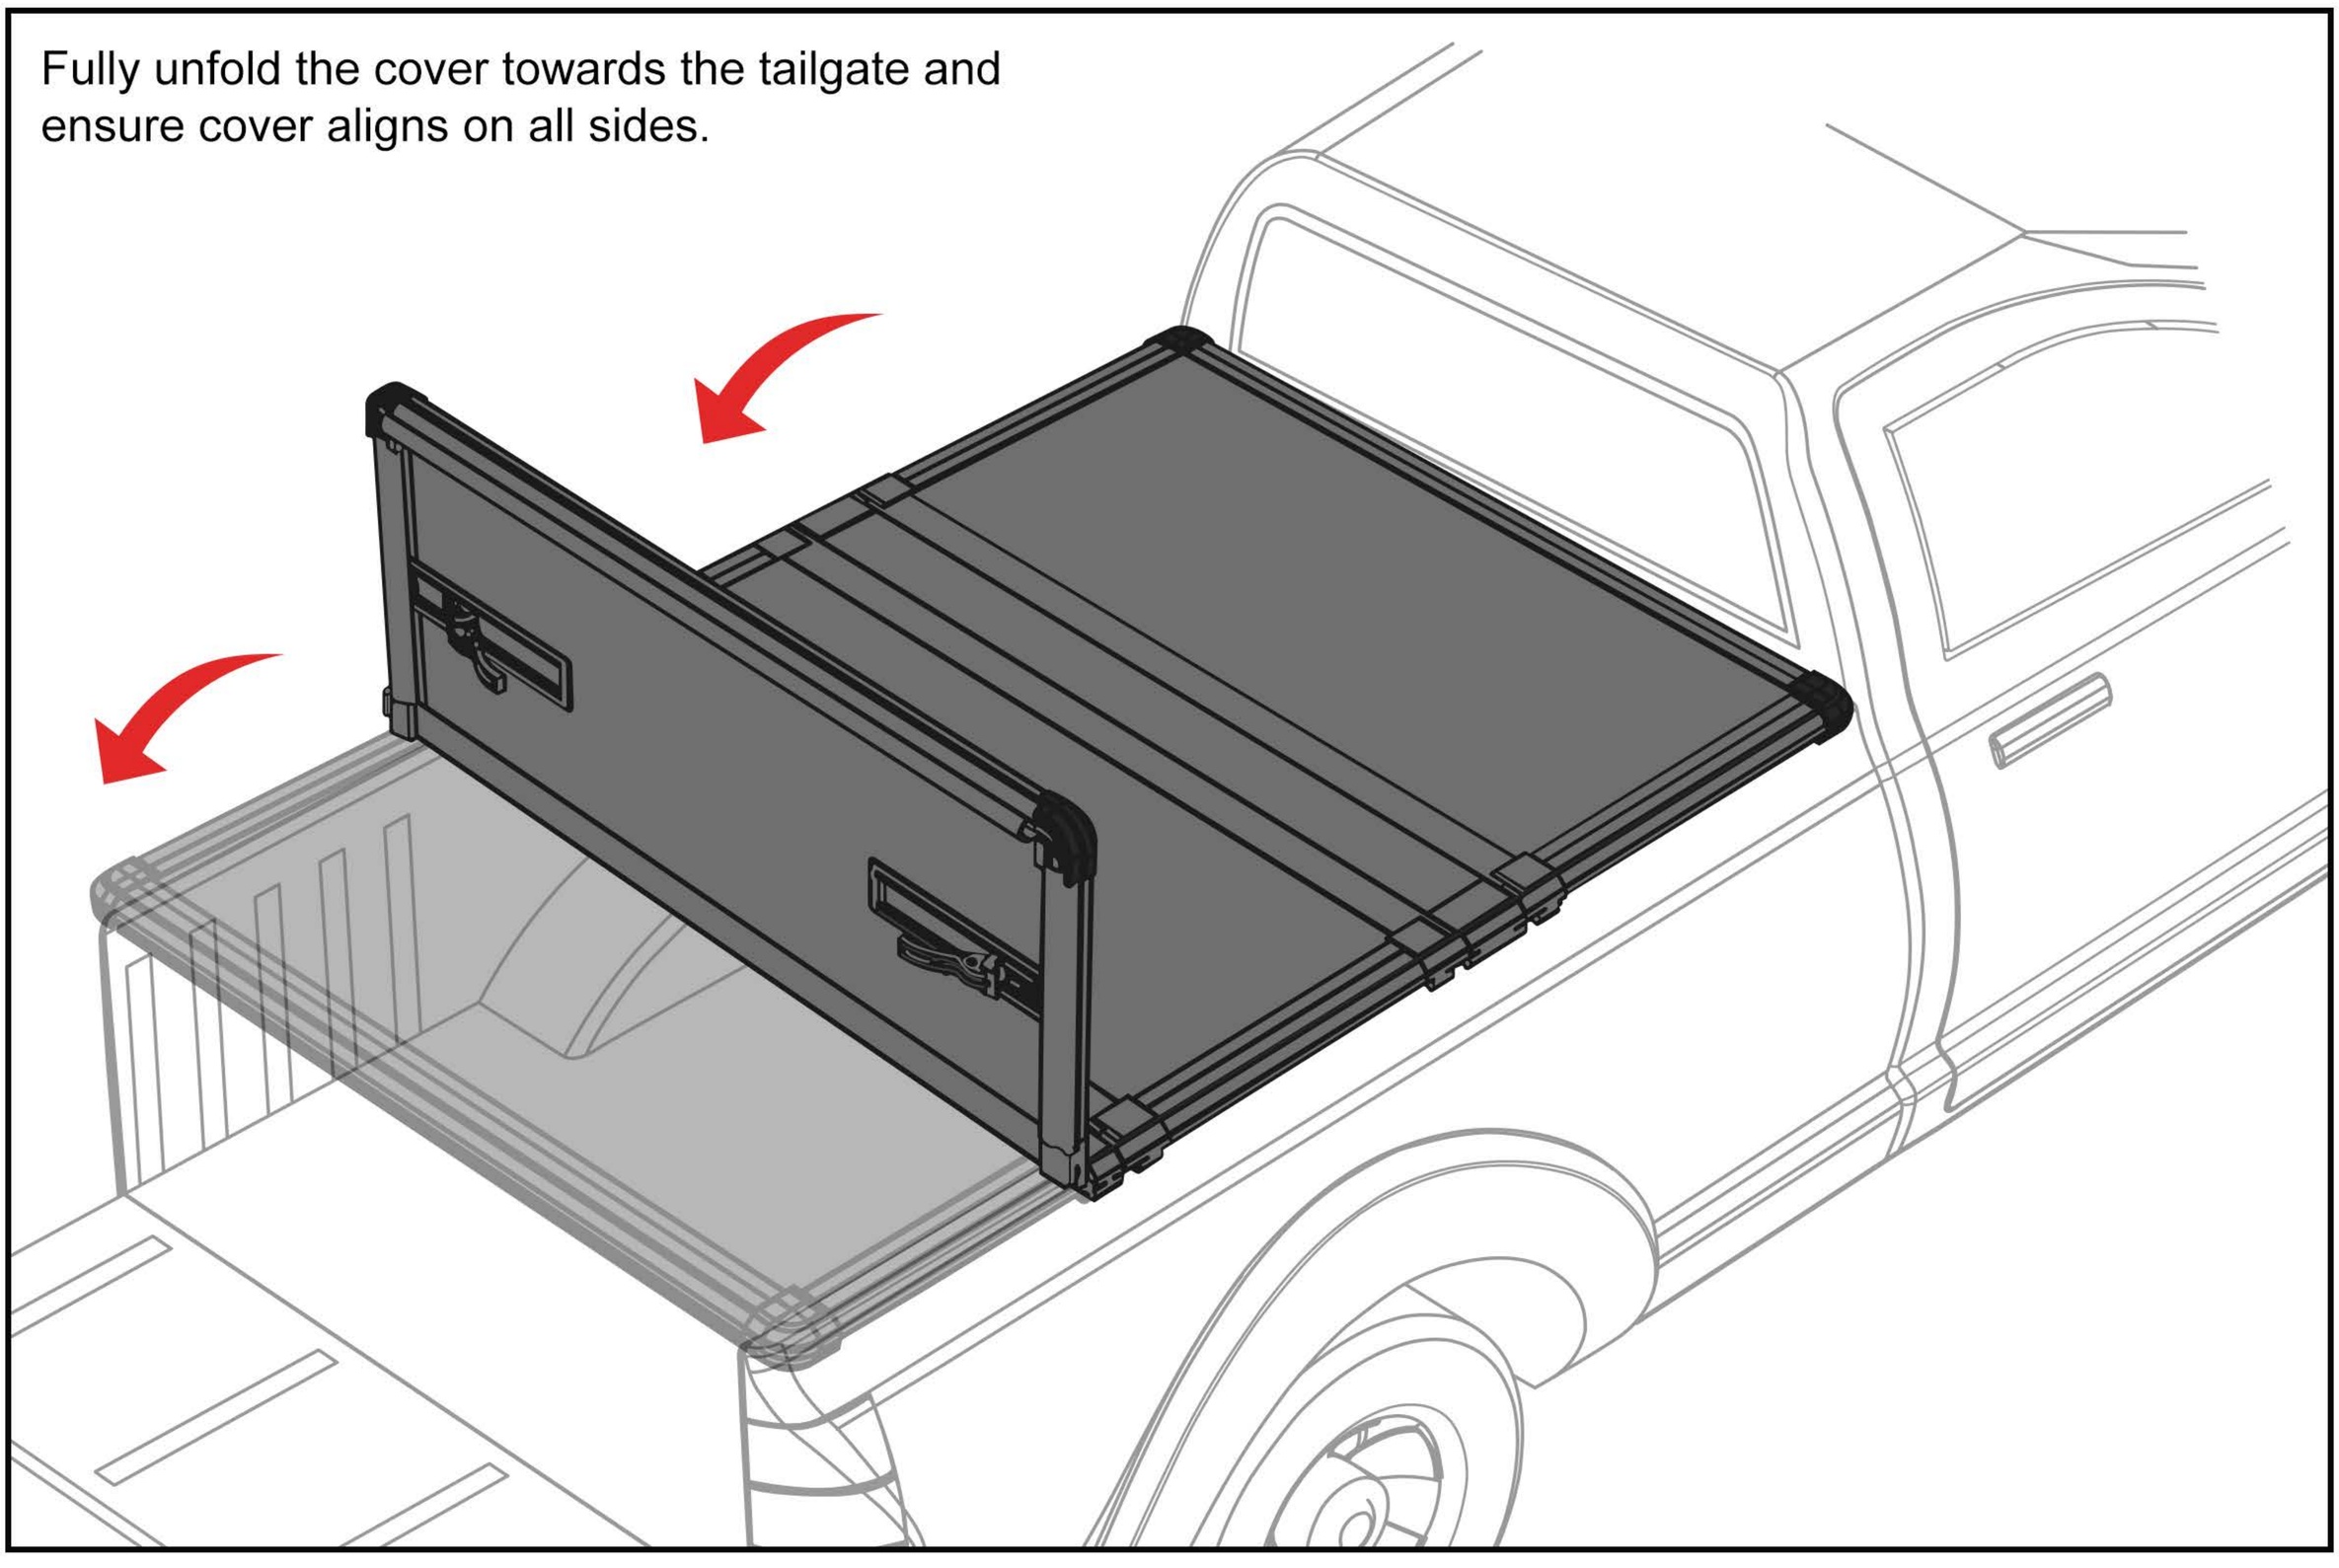


Move the front clamp to the best spot, lock it under the metal bed rail, and twist the Triangle screw into the metal rod to secure the clamp. Lastly, tighten the Fastening nut to keep it from getting loose.

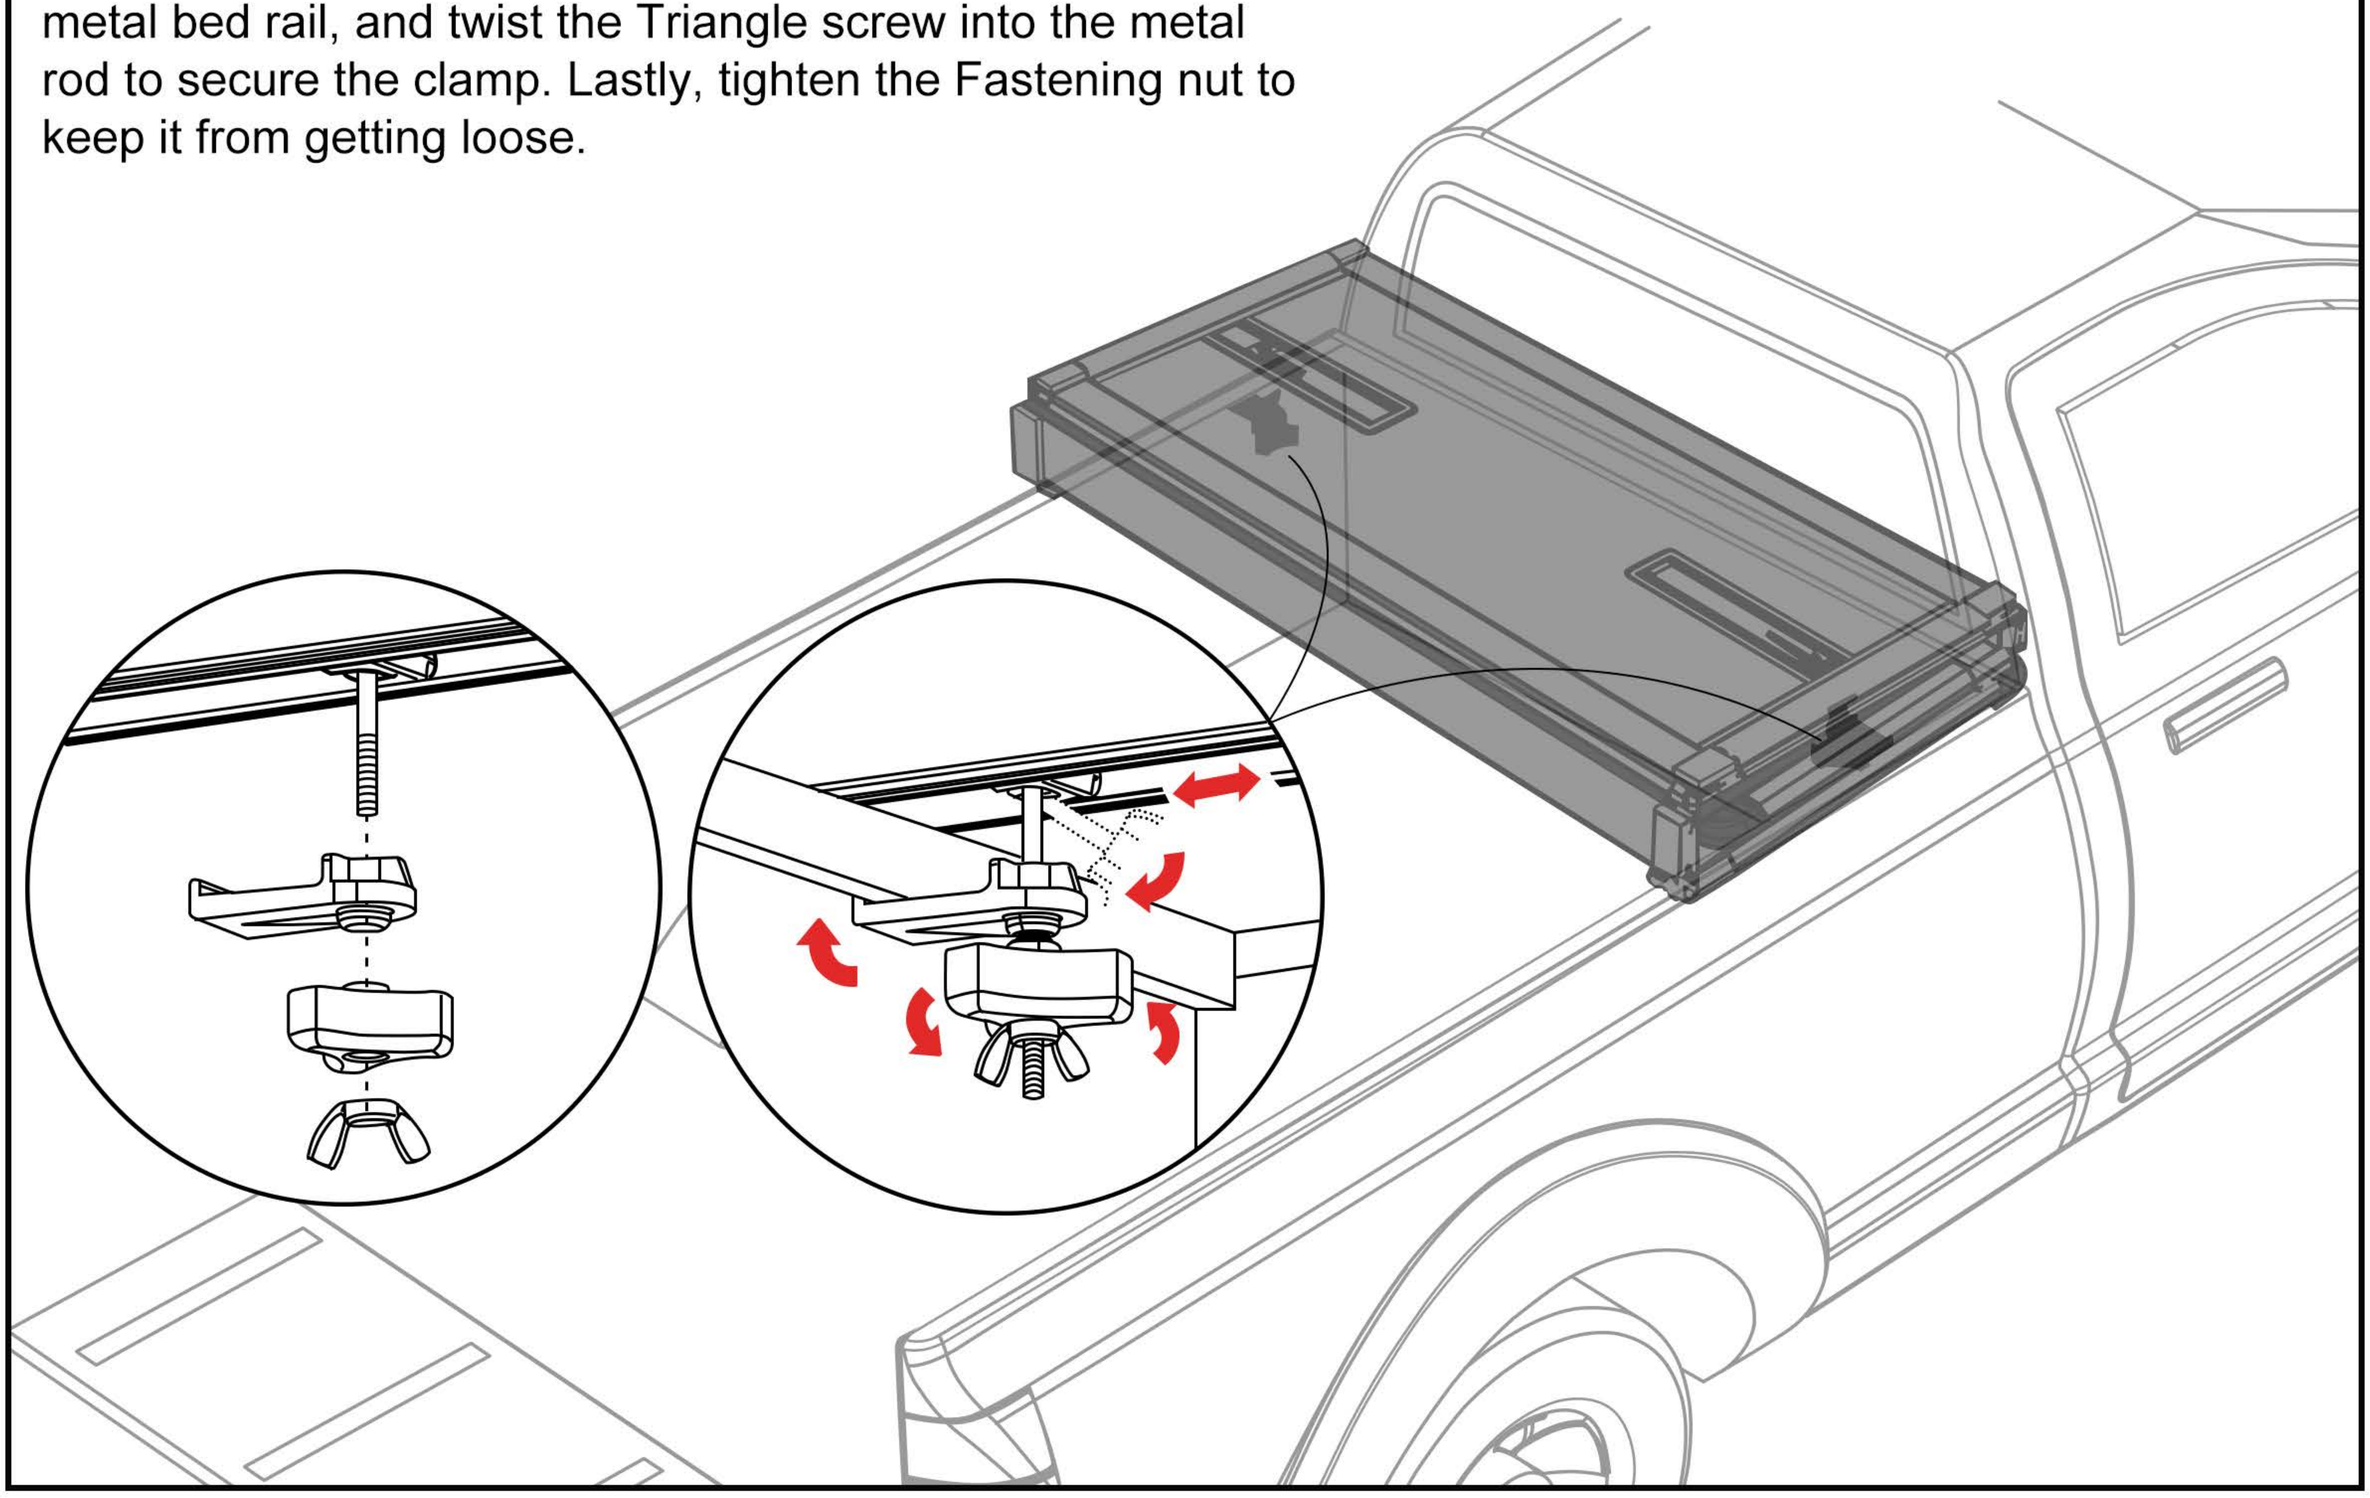


Connect the provided Rear clamps to the T-bar on the cover as shown in the figure

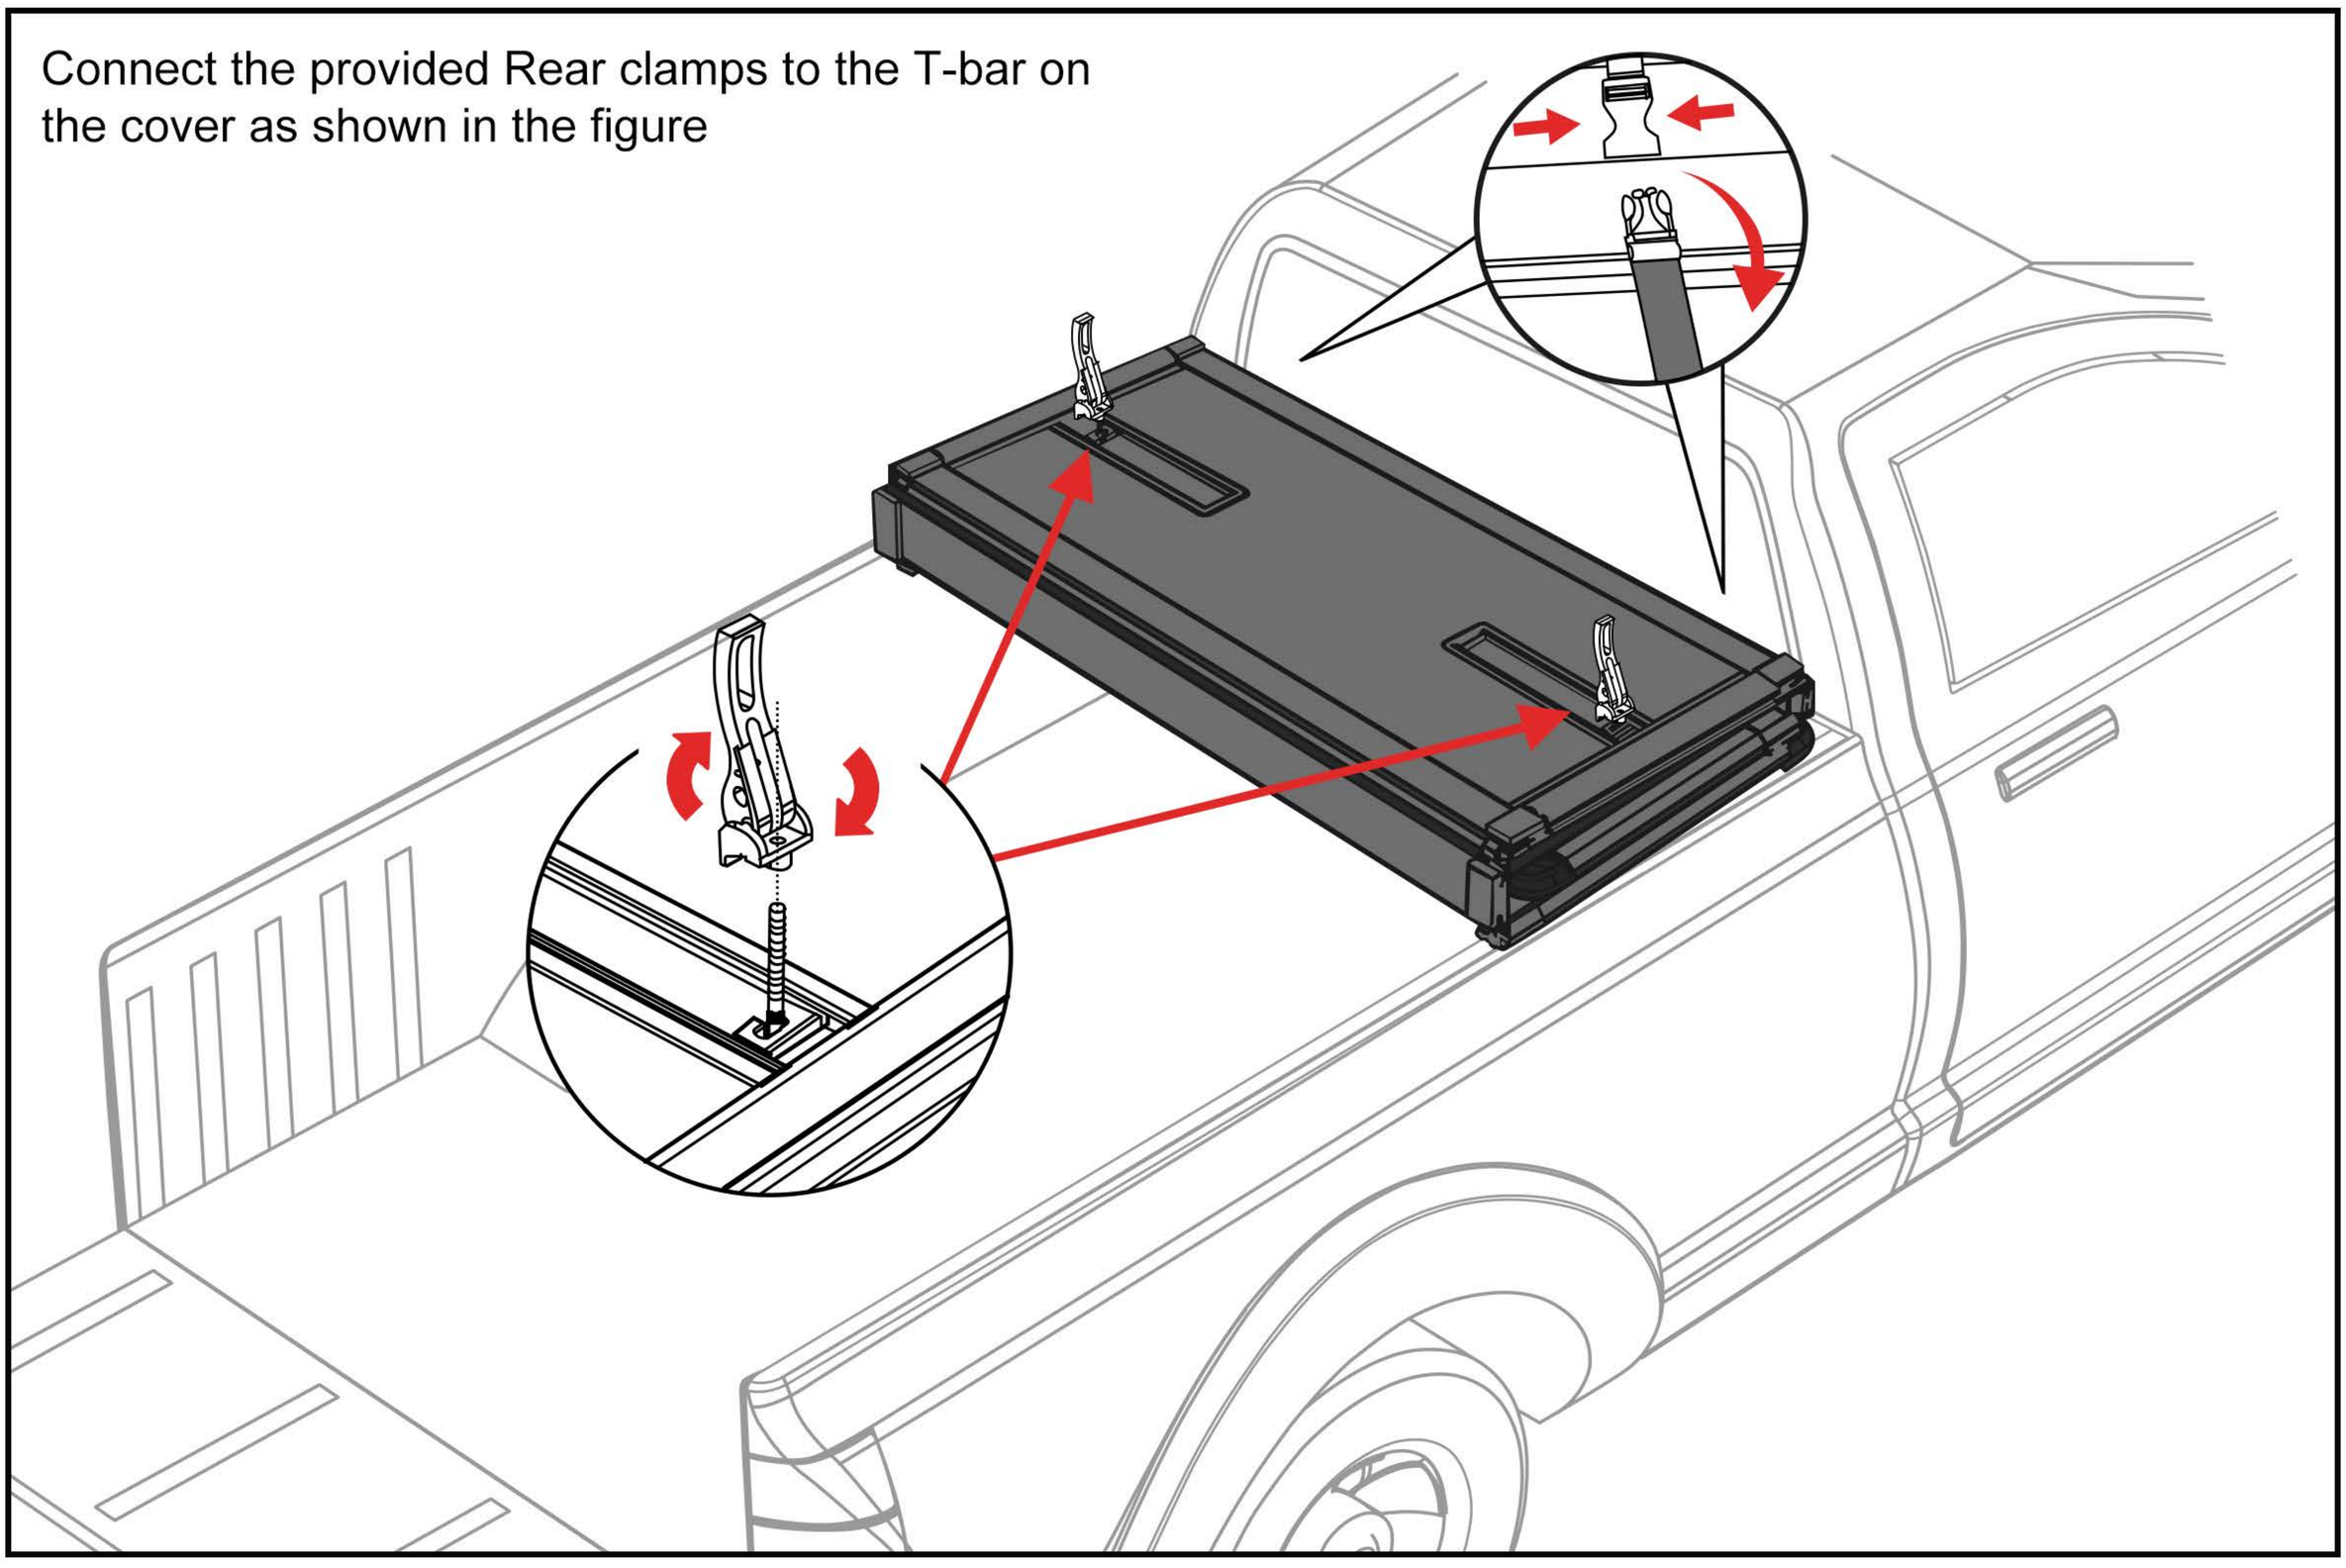


Fix the rear clamp on the third cover as shown in the second cover.

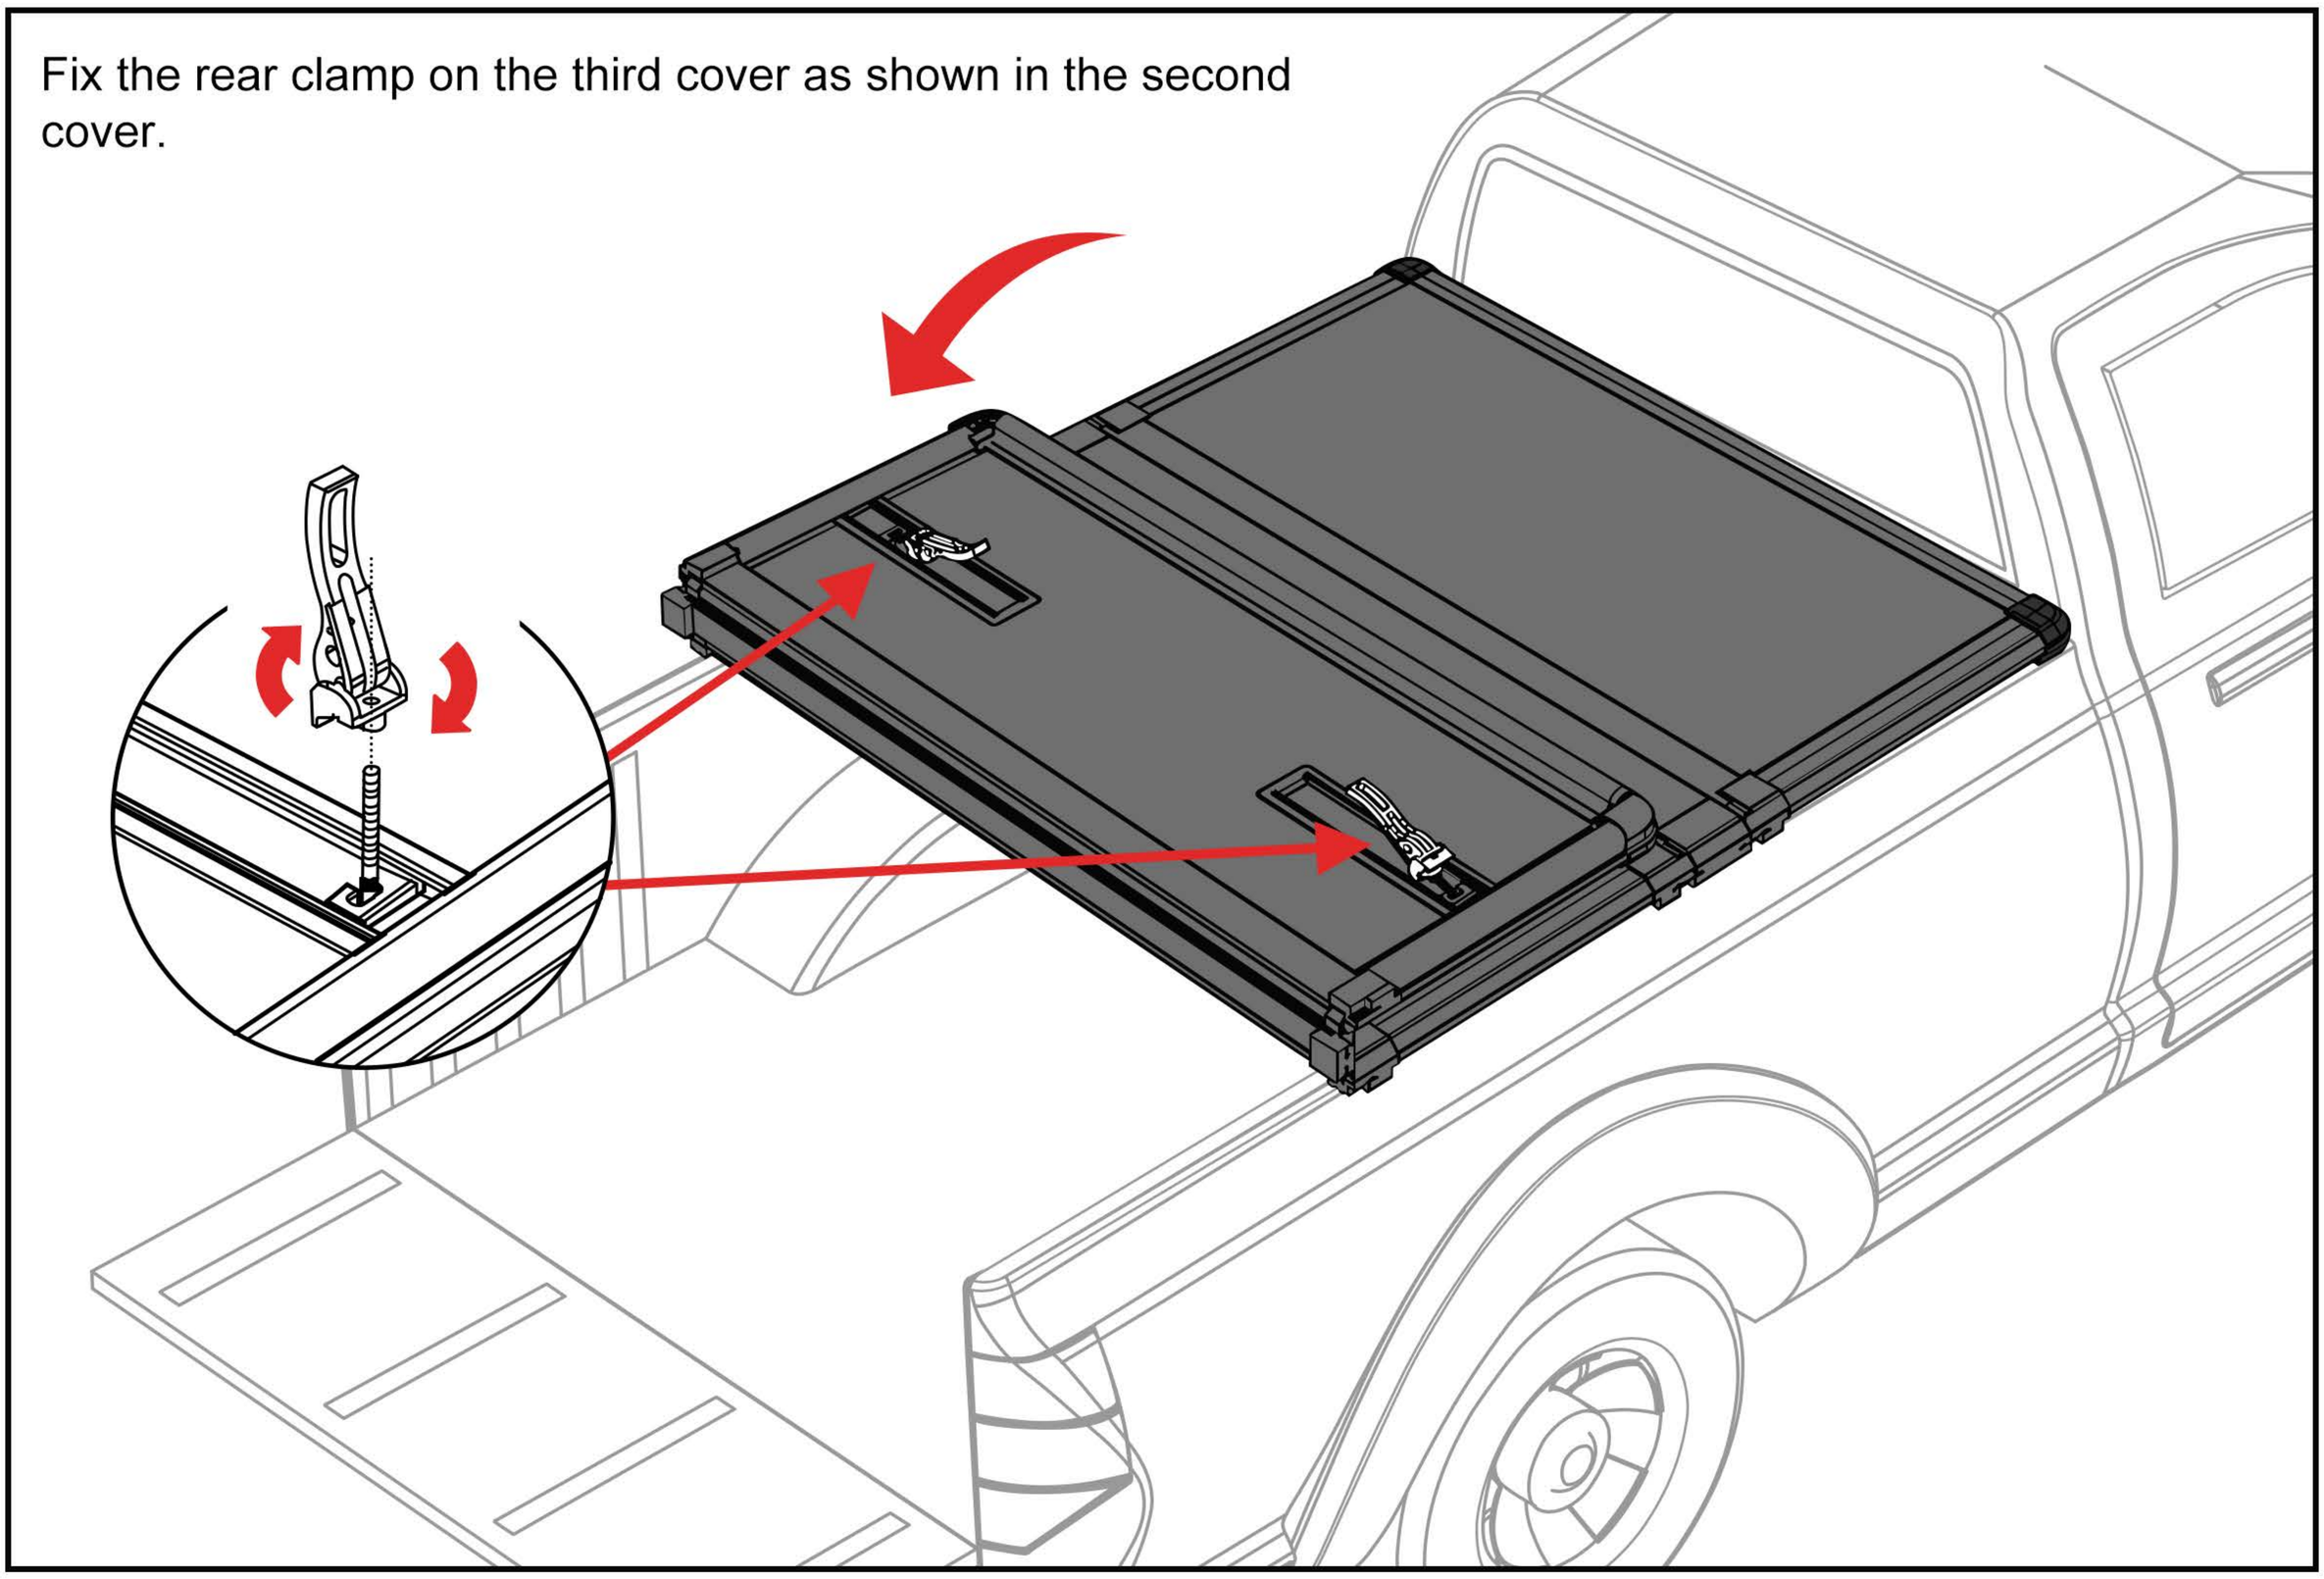


Adjust the connection position of the rear clamp and T-bar as needed.Securely fix the rear clamp to the bed rails by pushing it vertically.

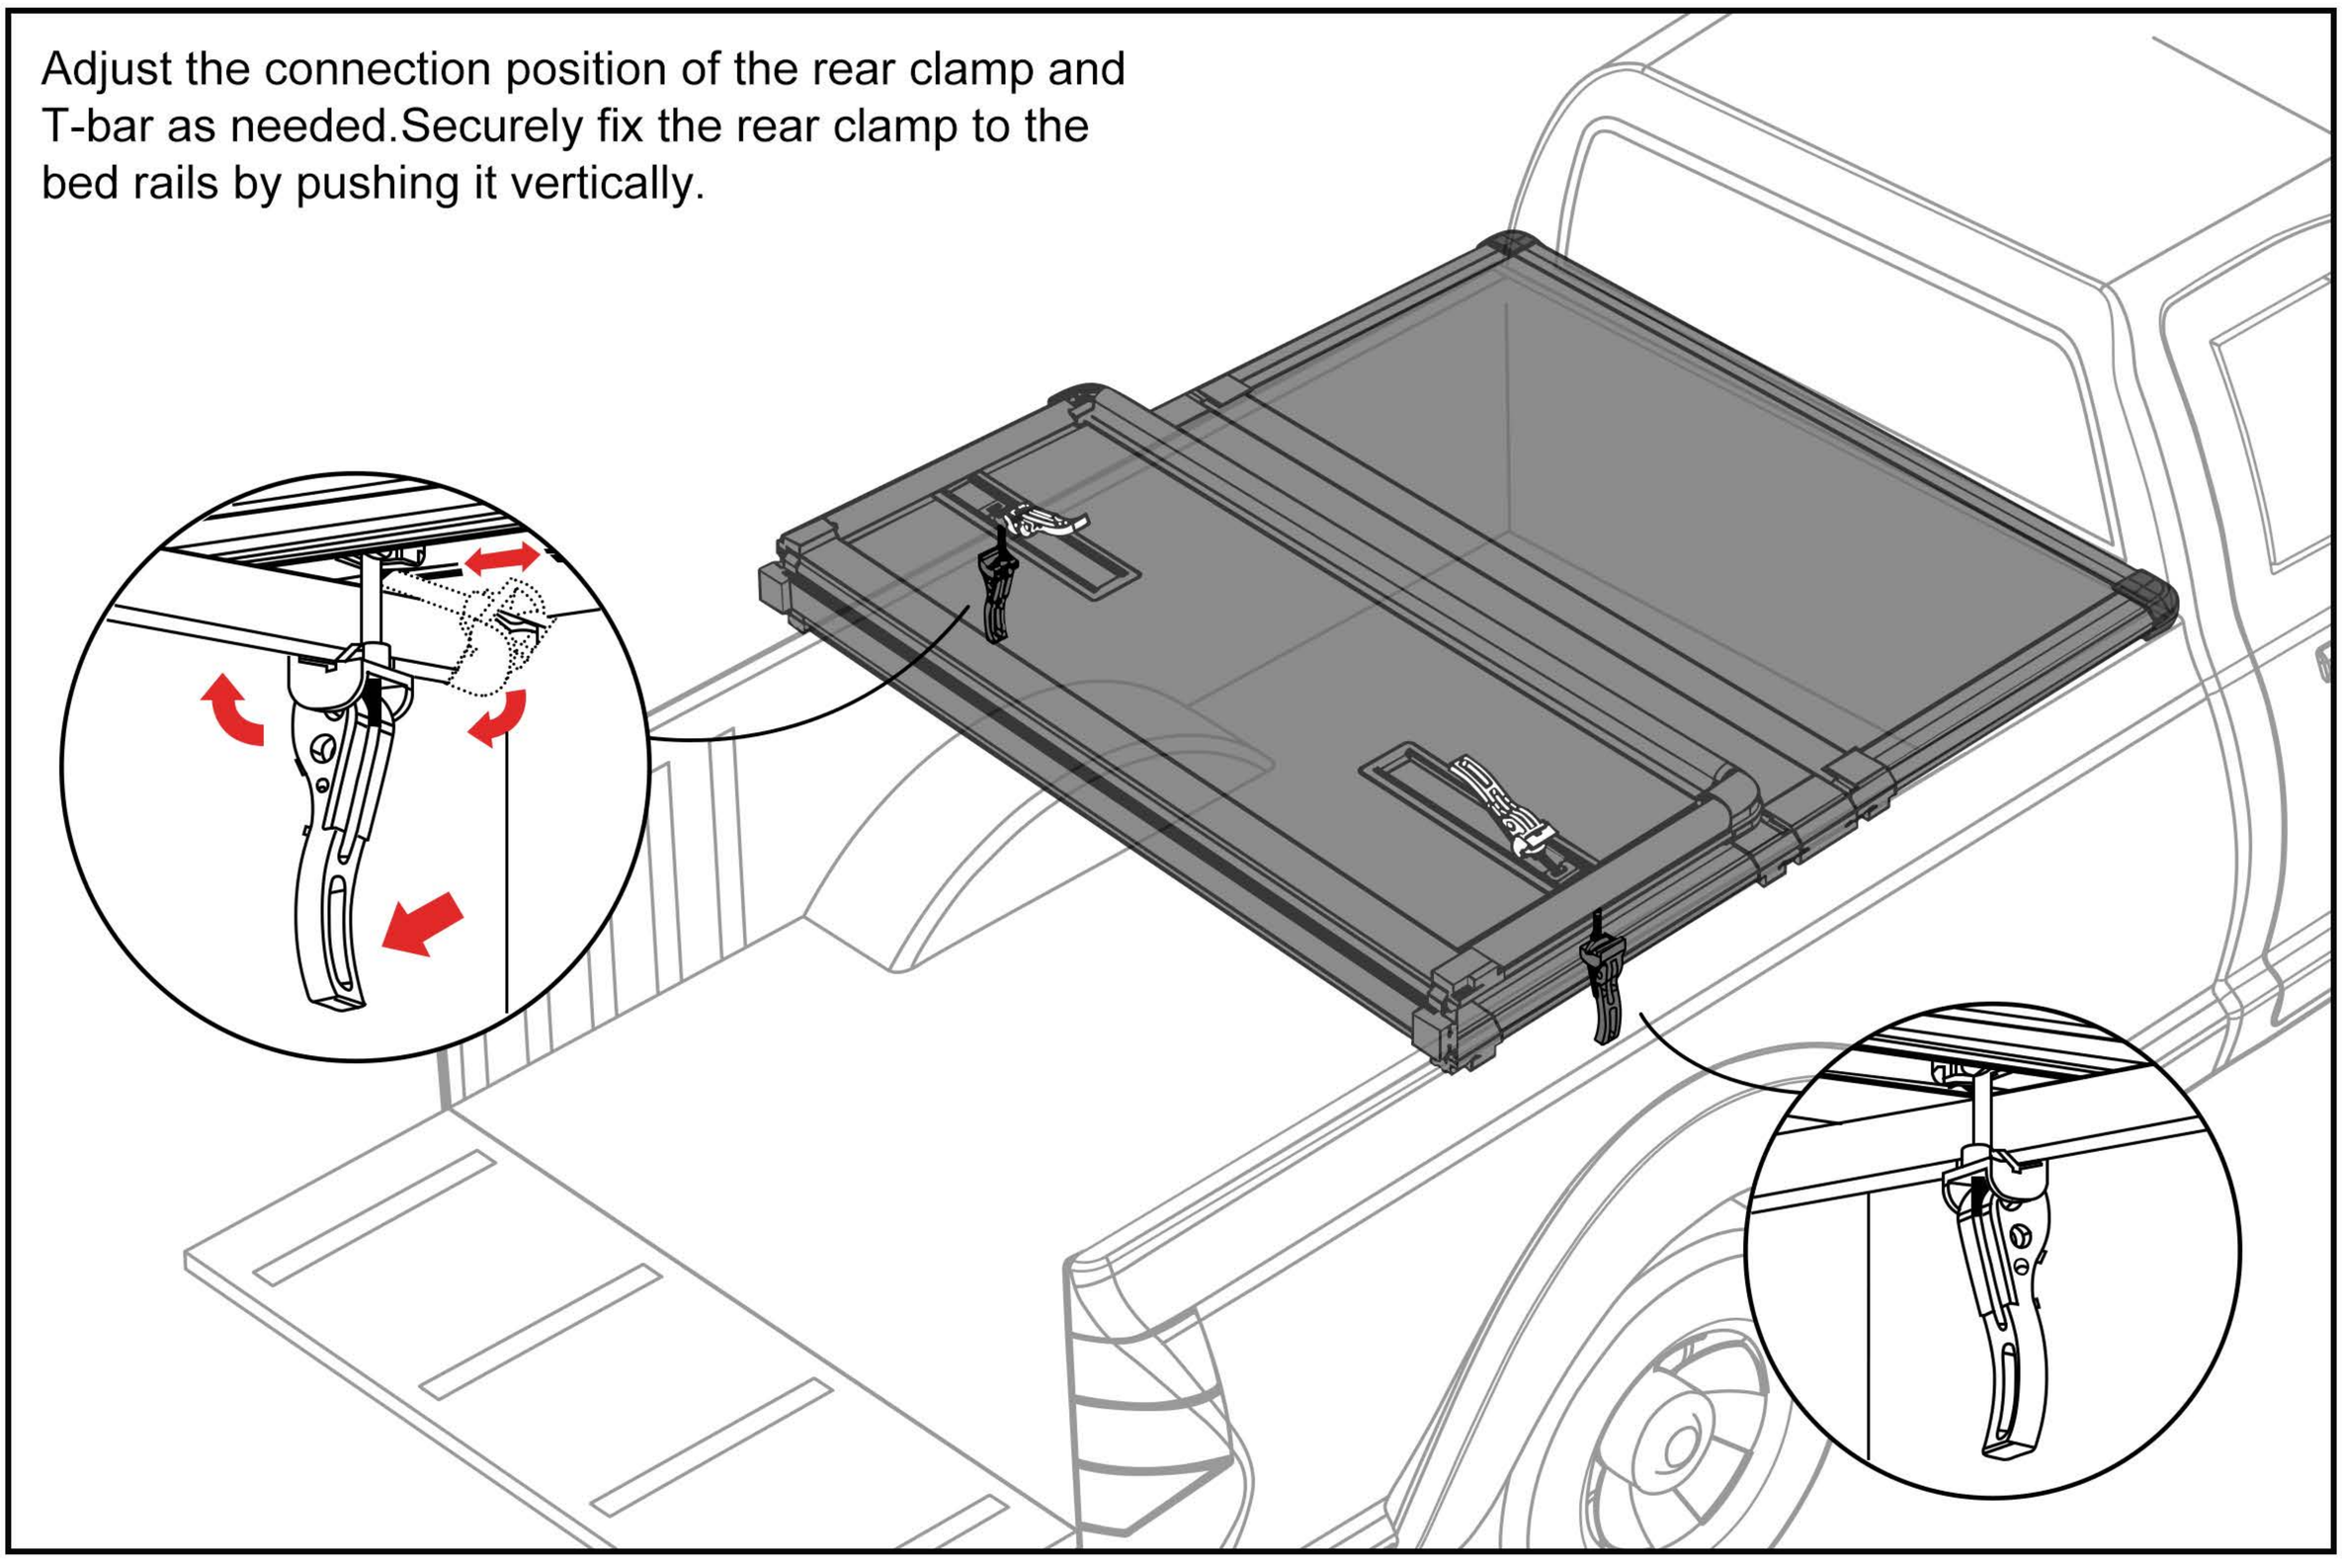


All clamps must be firmly in contact with the lip of the metal bed rail to ensure a firm cover, and finally move the rear clamp parallel to the left and snap it into the groove to prevent loosening.

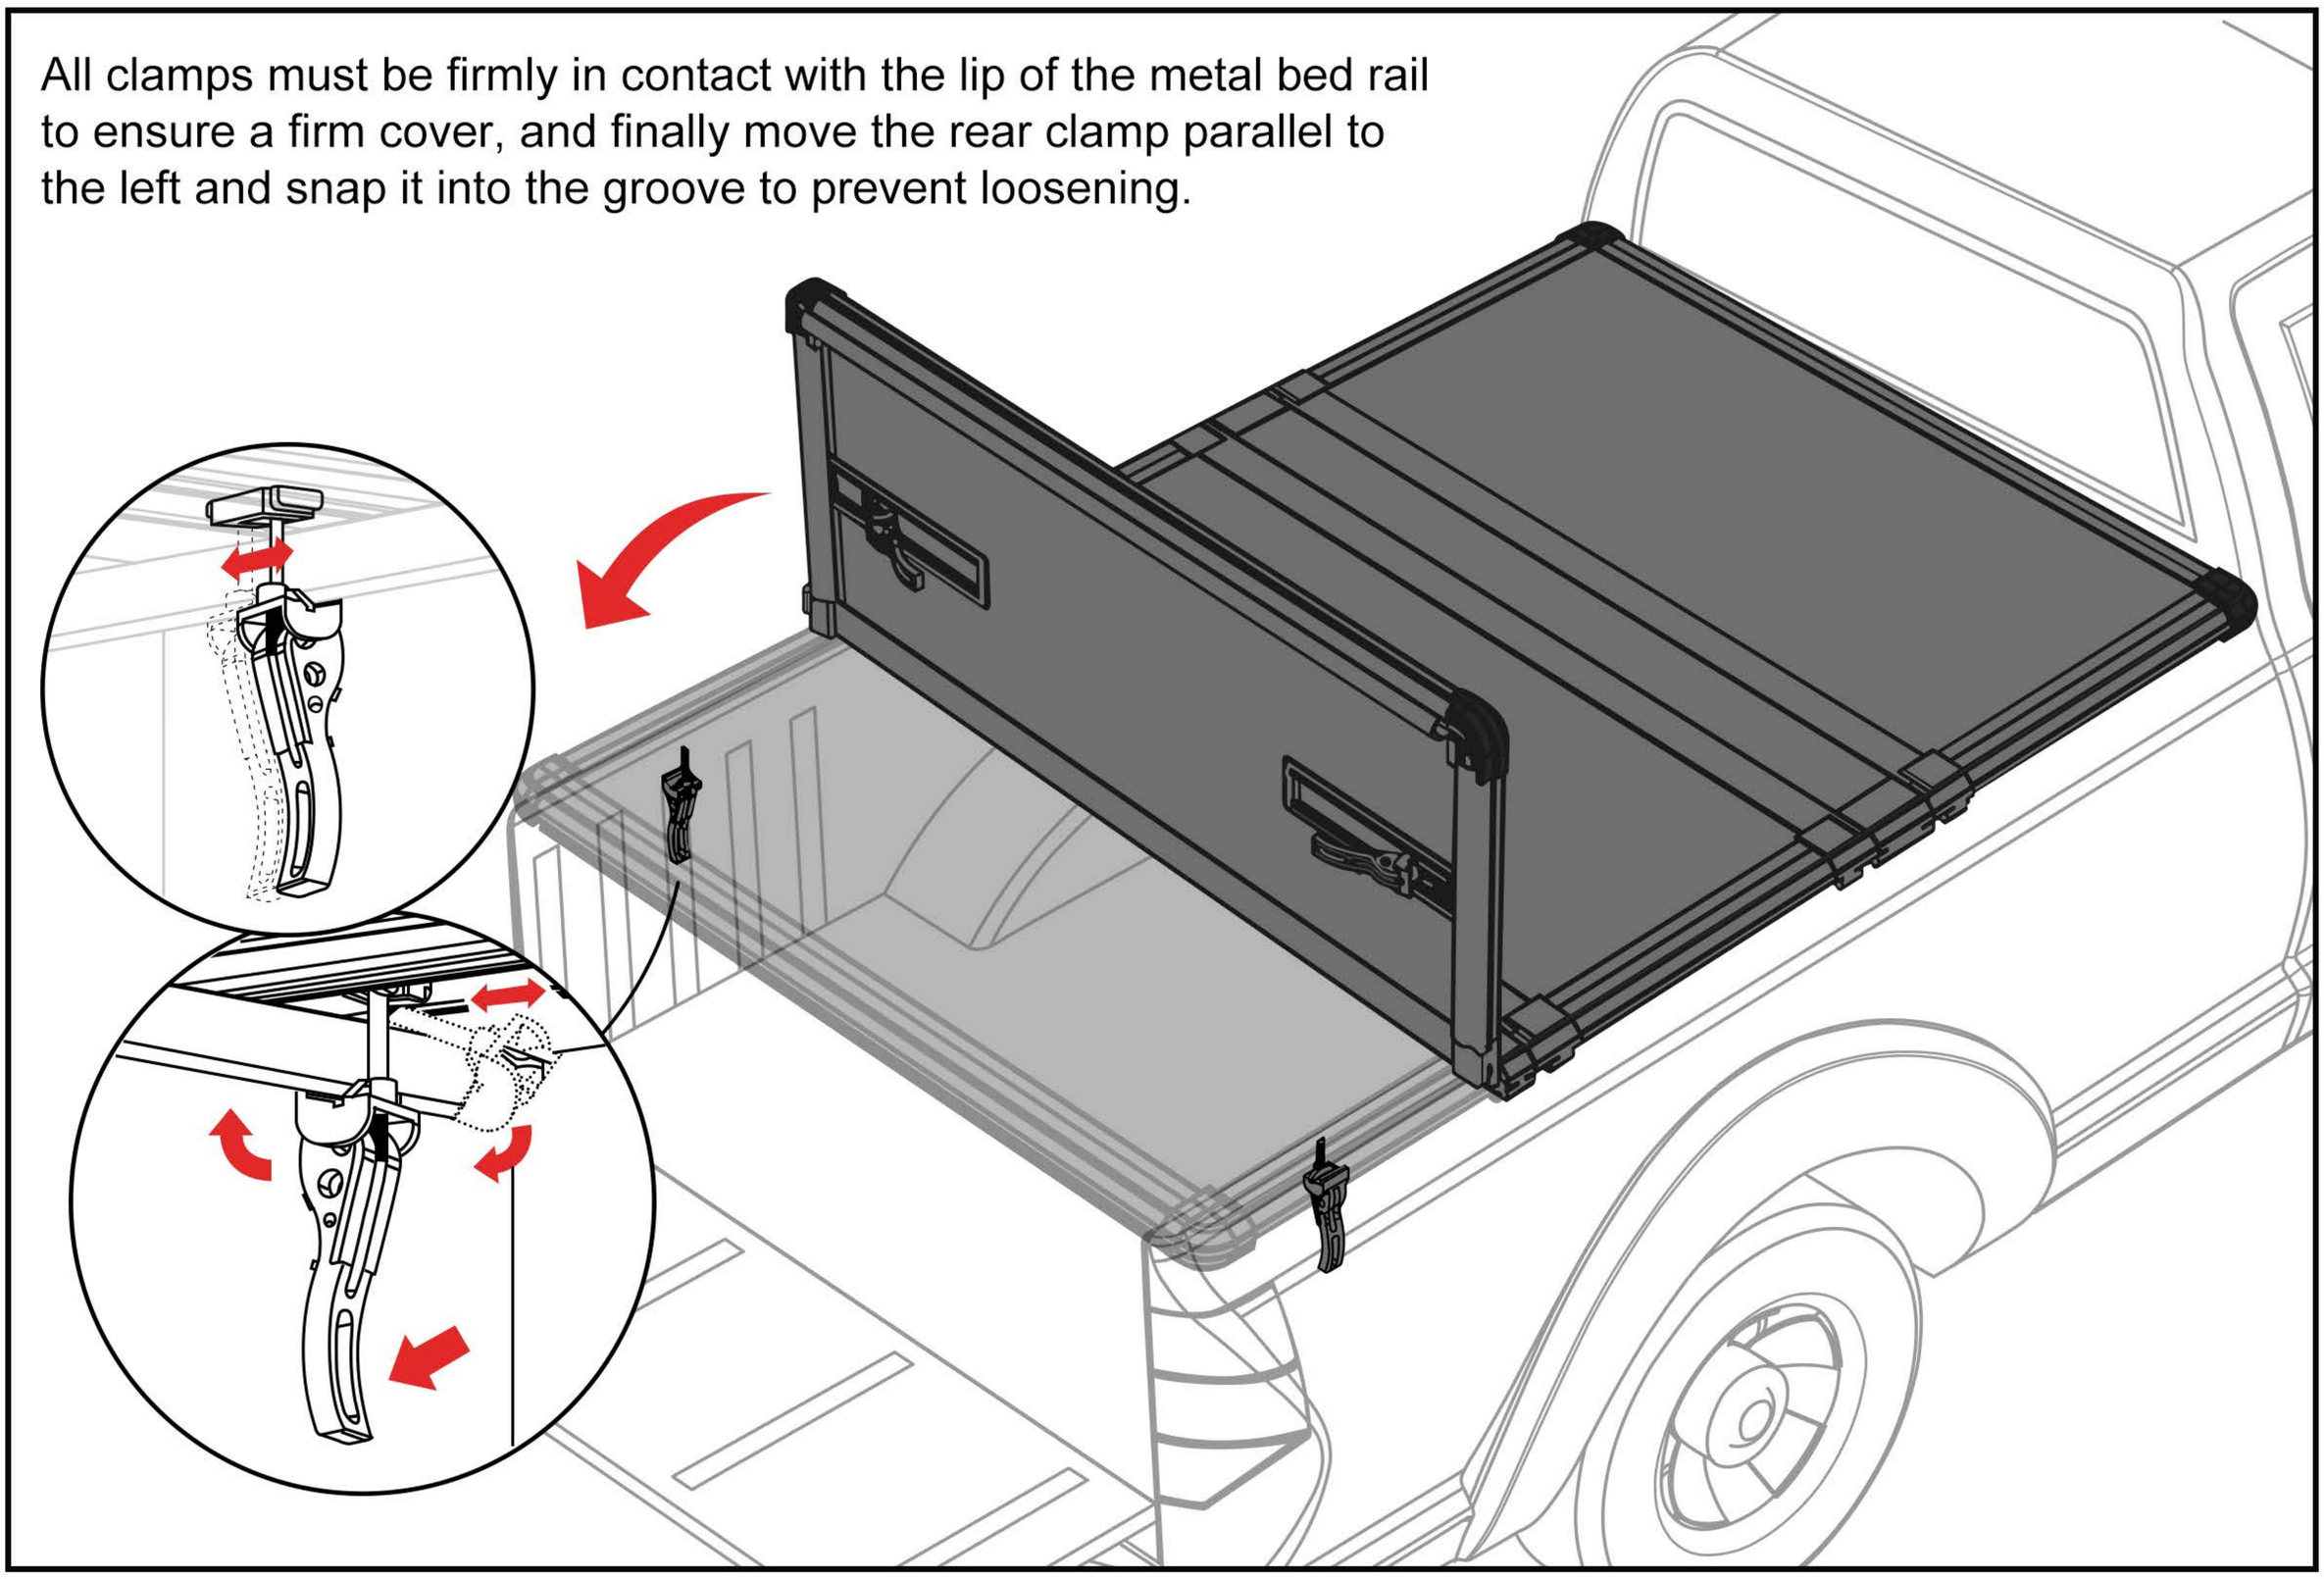


Close the tailgate and the installation is complete.

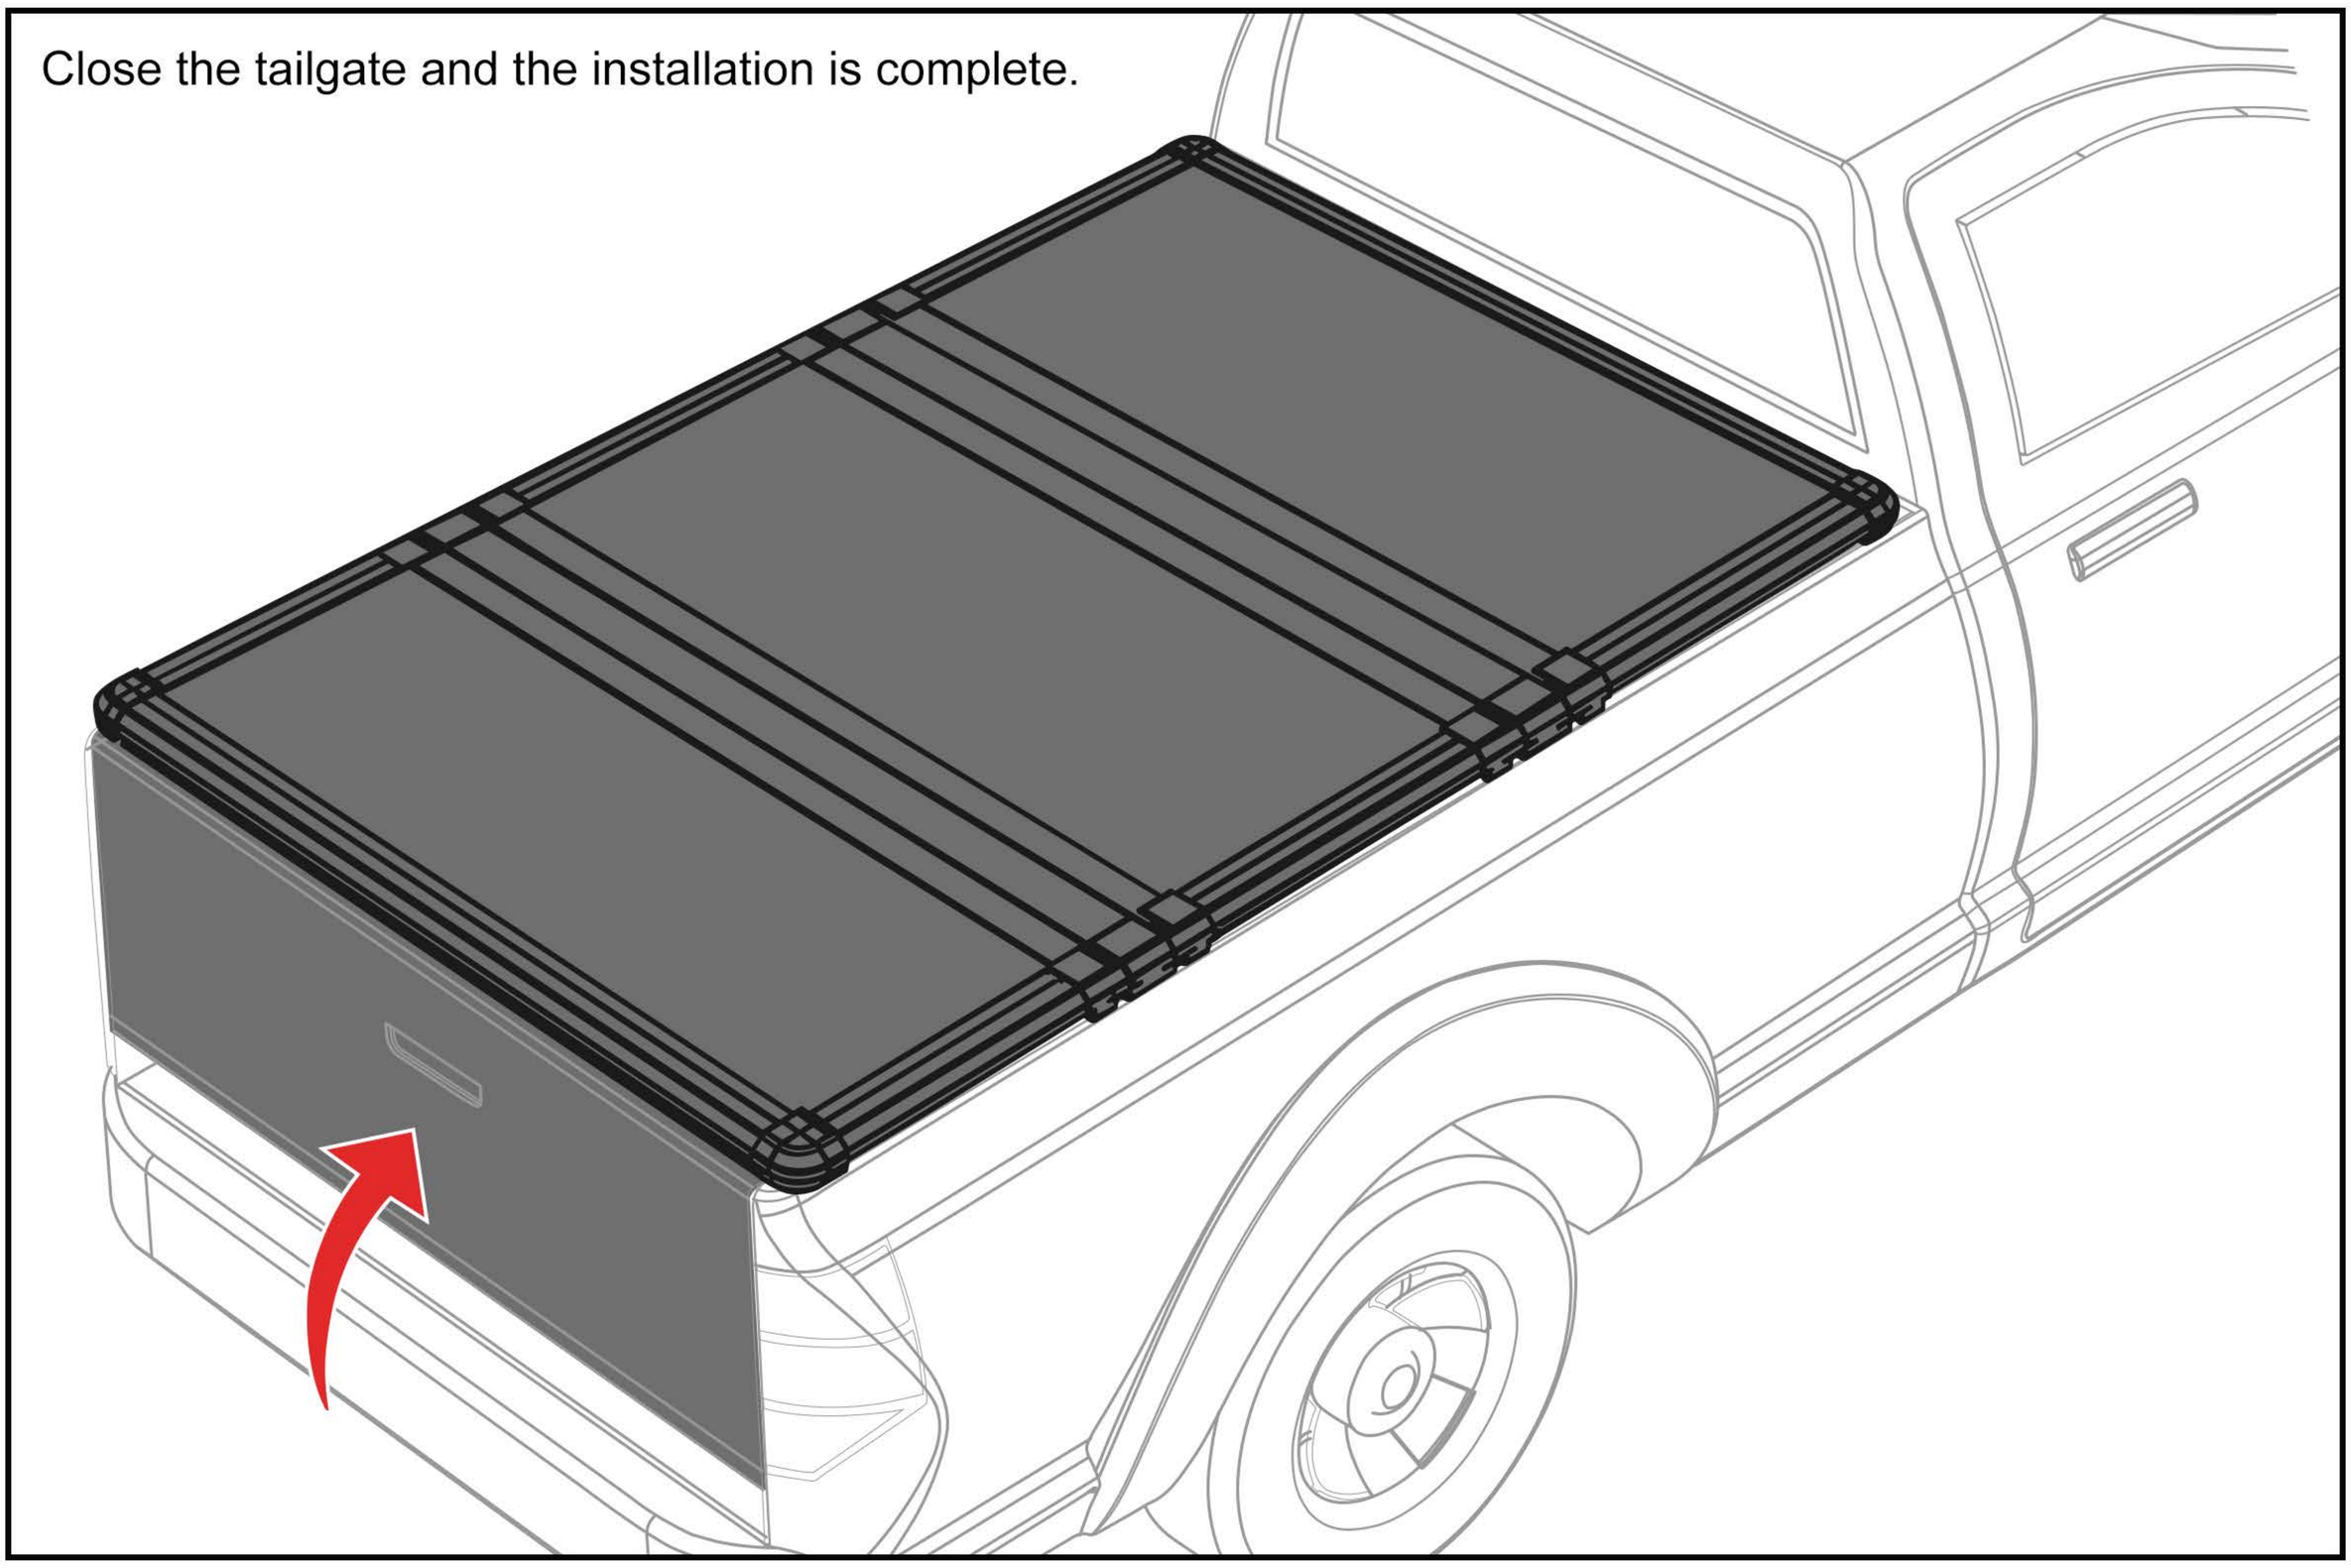

When it is necessary to completely fold the cover,place the rear clamps correctly clamping rubber block,and then fold it.

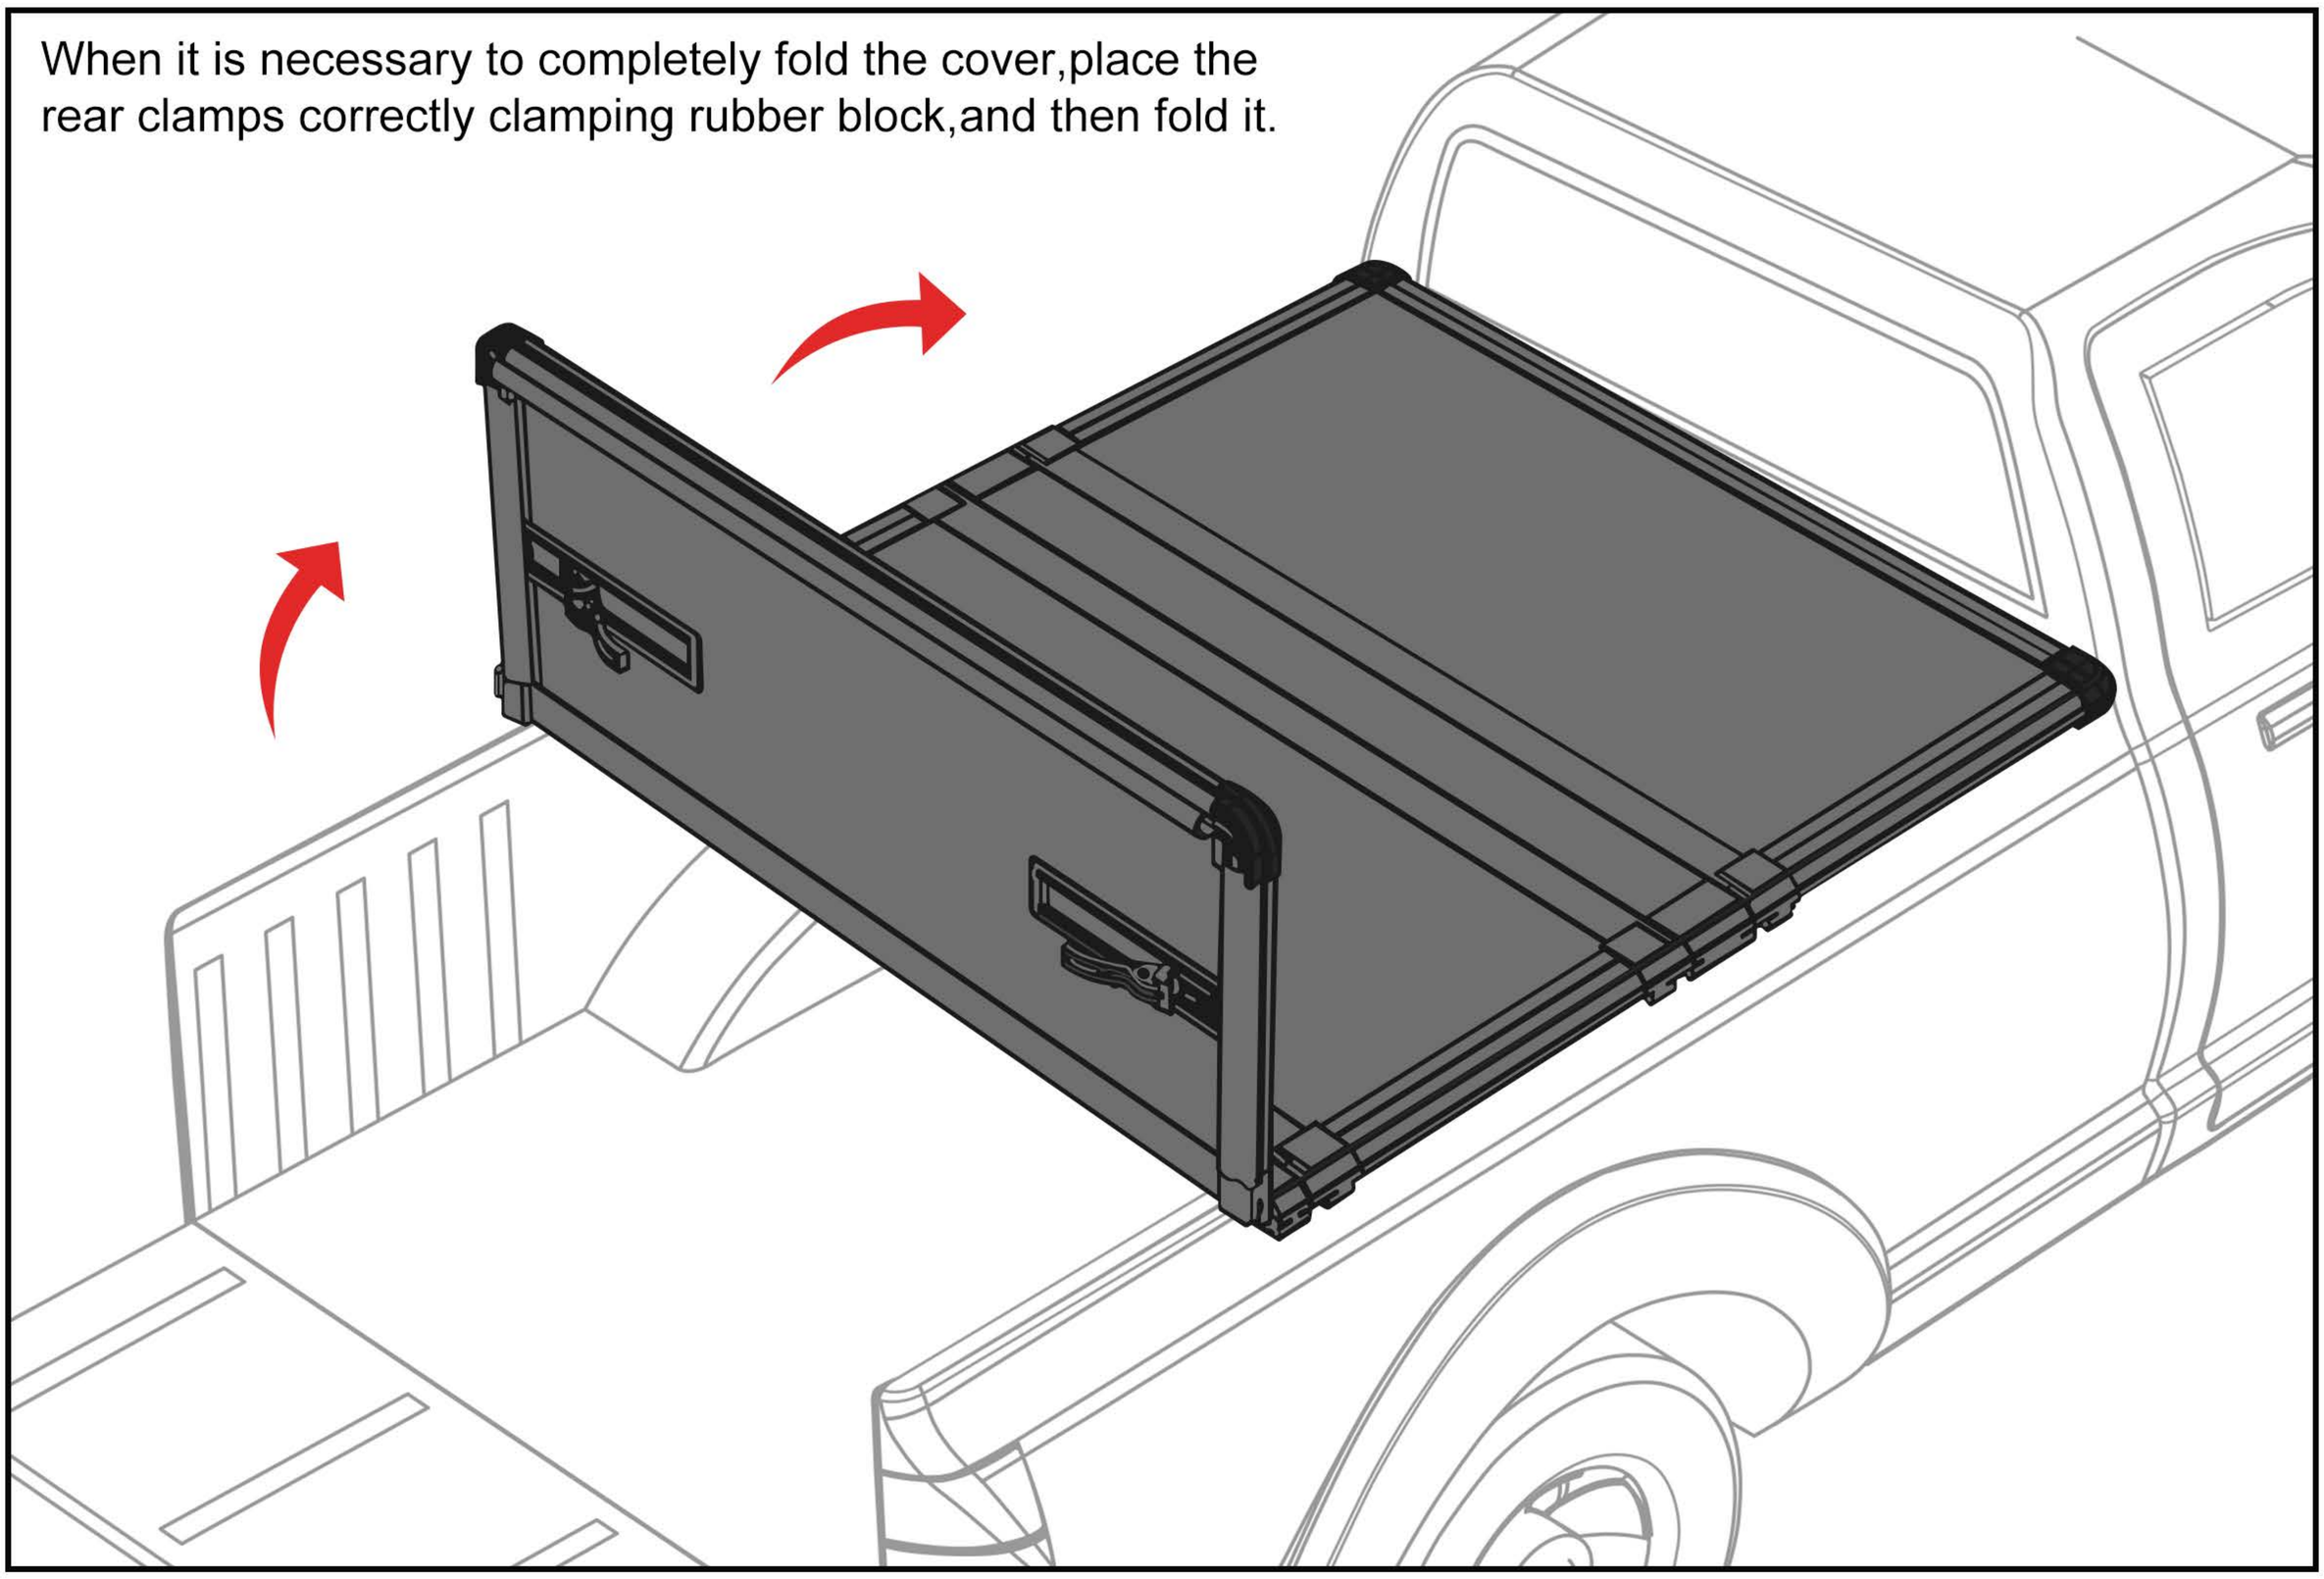

Fasten the buckle and tighten the braid to reduce noise during driving with the cover open.

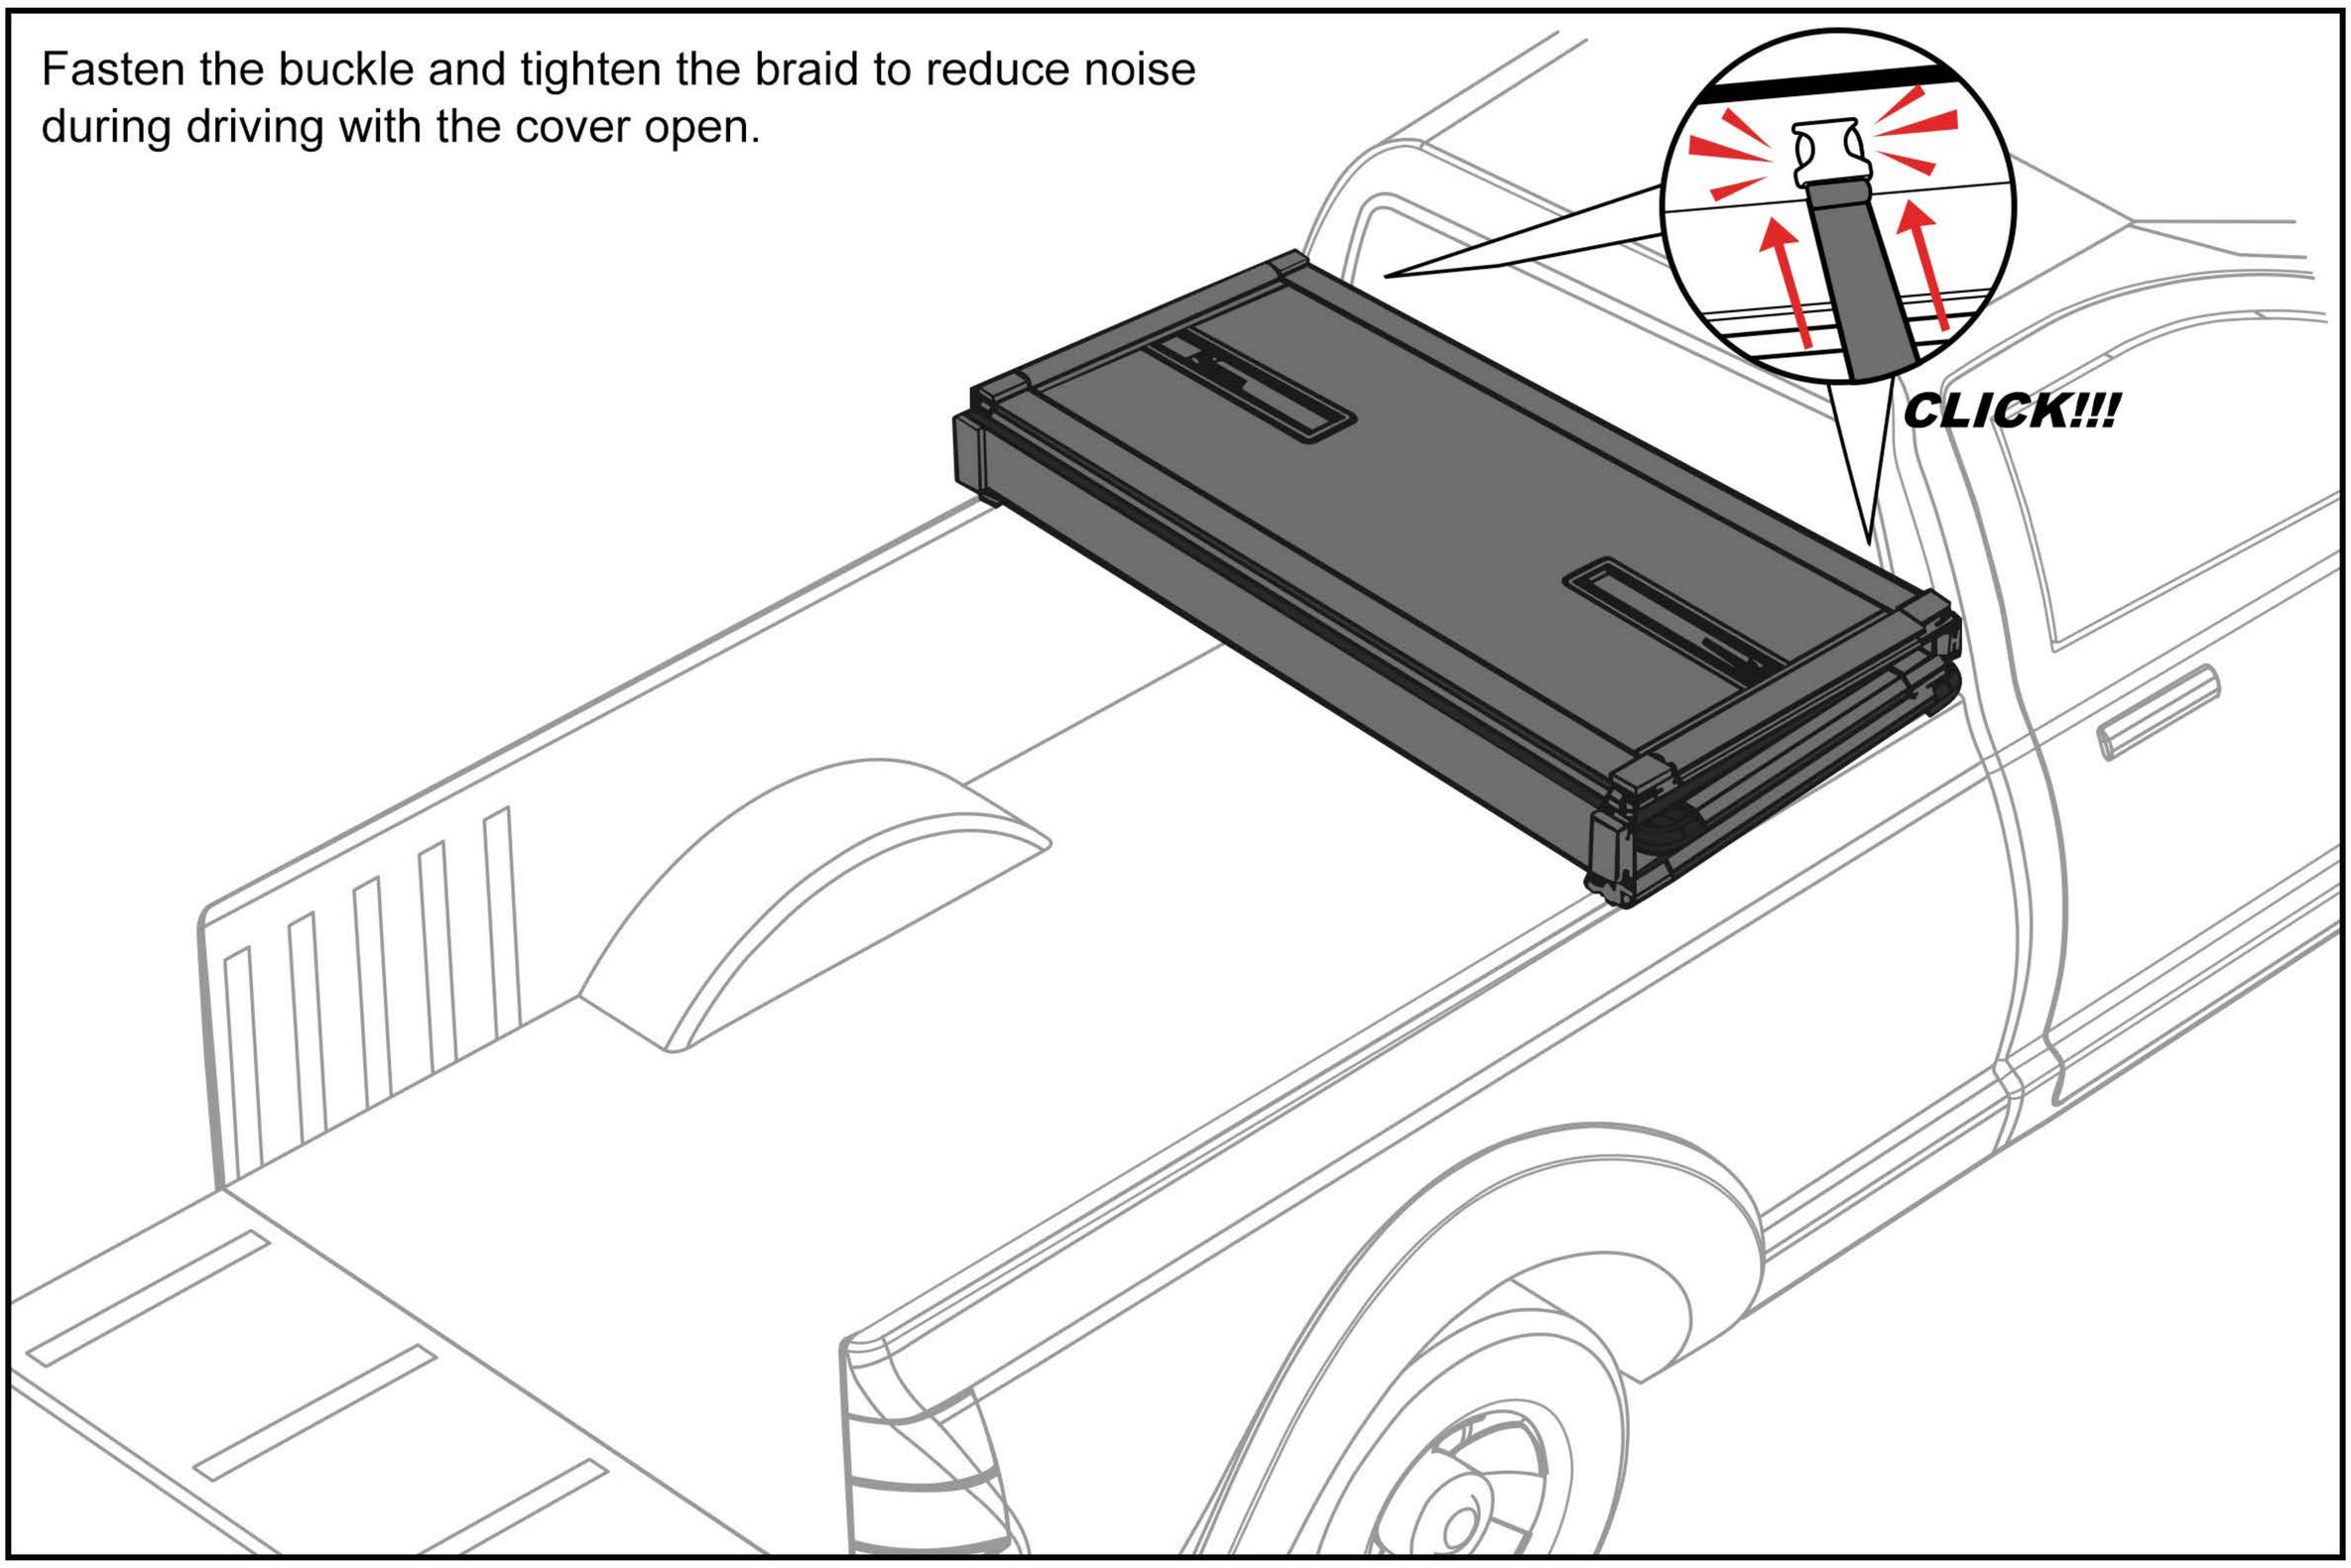


SPECIAL INSTRUCTIONS FOR ALTERNATIVE BRACKETS


SUPPLEMENT TO INSTALLATION INSTRUCTIONS(Only for models with utility track)

Use for NISSAN FRONTIER

You will need:

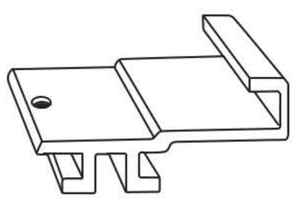


1

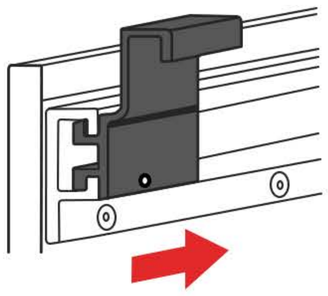


- Slide aluminum blocks into track

2

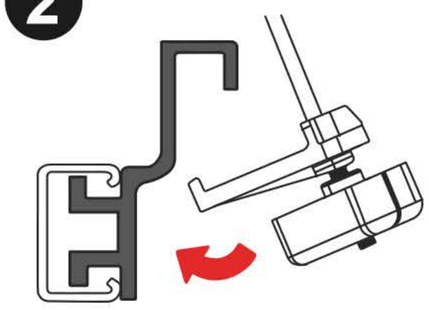

- Attach Front Clamps on to aluminum block


3

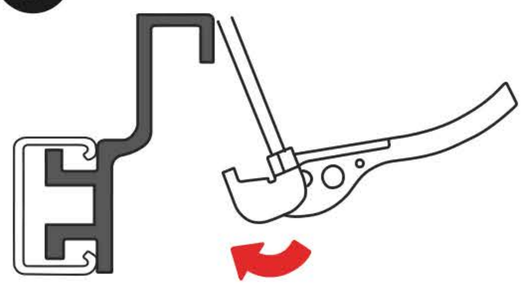


- Attach Rear Clamps on to aluminum block

Use for TOYOTA

You will need:

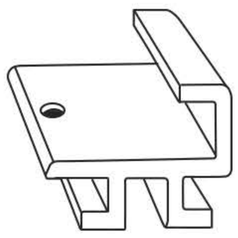


1

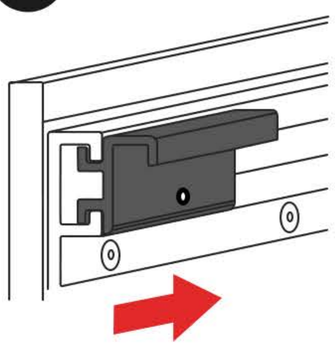


- Slide aluminum blocks into track

2

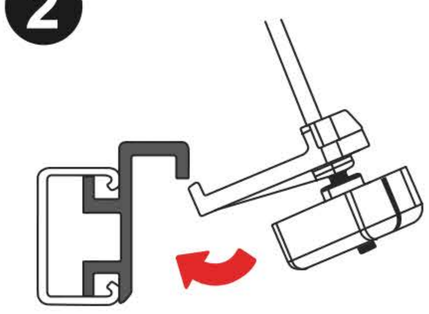

- Attach Front Clamps on to aluminum block


3

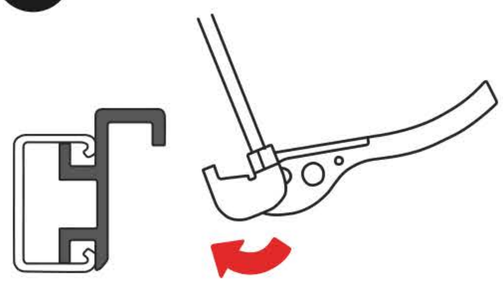


- Attach Rear Clamps on to aluminum block

Use for JEEP GLADIATOR

You will need:

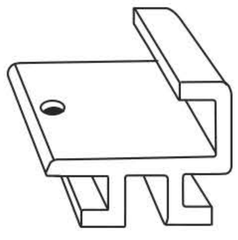


1

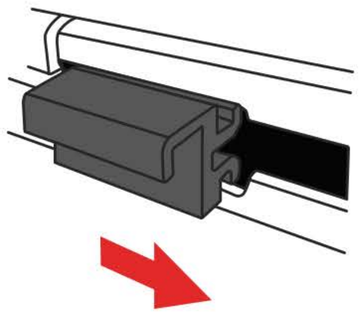


- Slide aluminum blocks into track

2

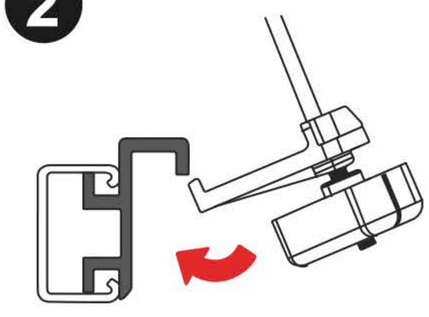

- Attach Front Clamps on to aluminum block


3

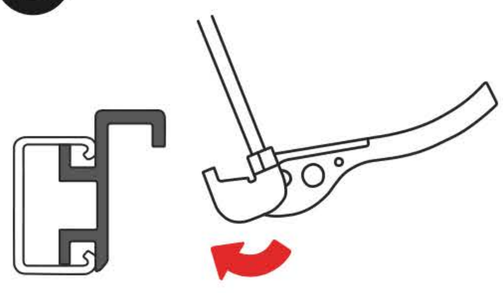



- Attach Rear Clamps on to aluminum block

ADDITIONAL REPLACEMENT PARTS INSTALLATION

Products may be damaged during the transportation process. If any damage occurs, please contact us immediately or replace the damaged parts with our additional parts.

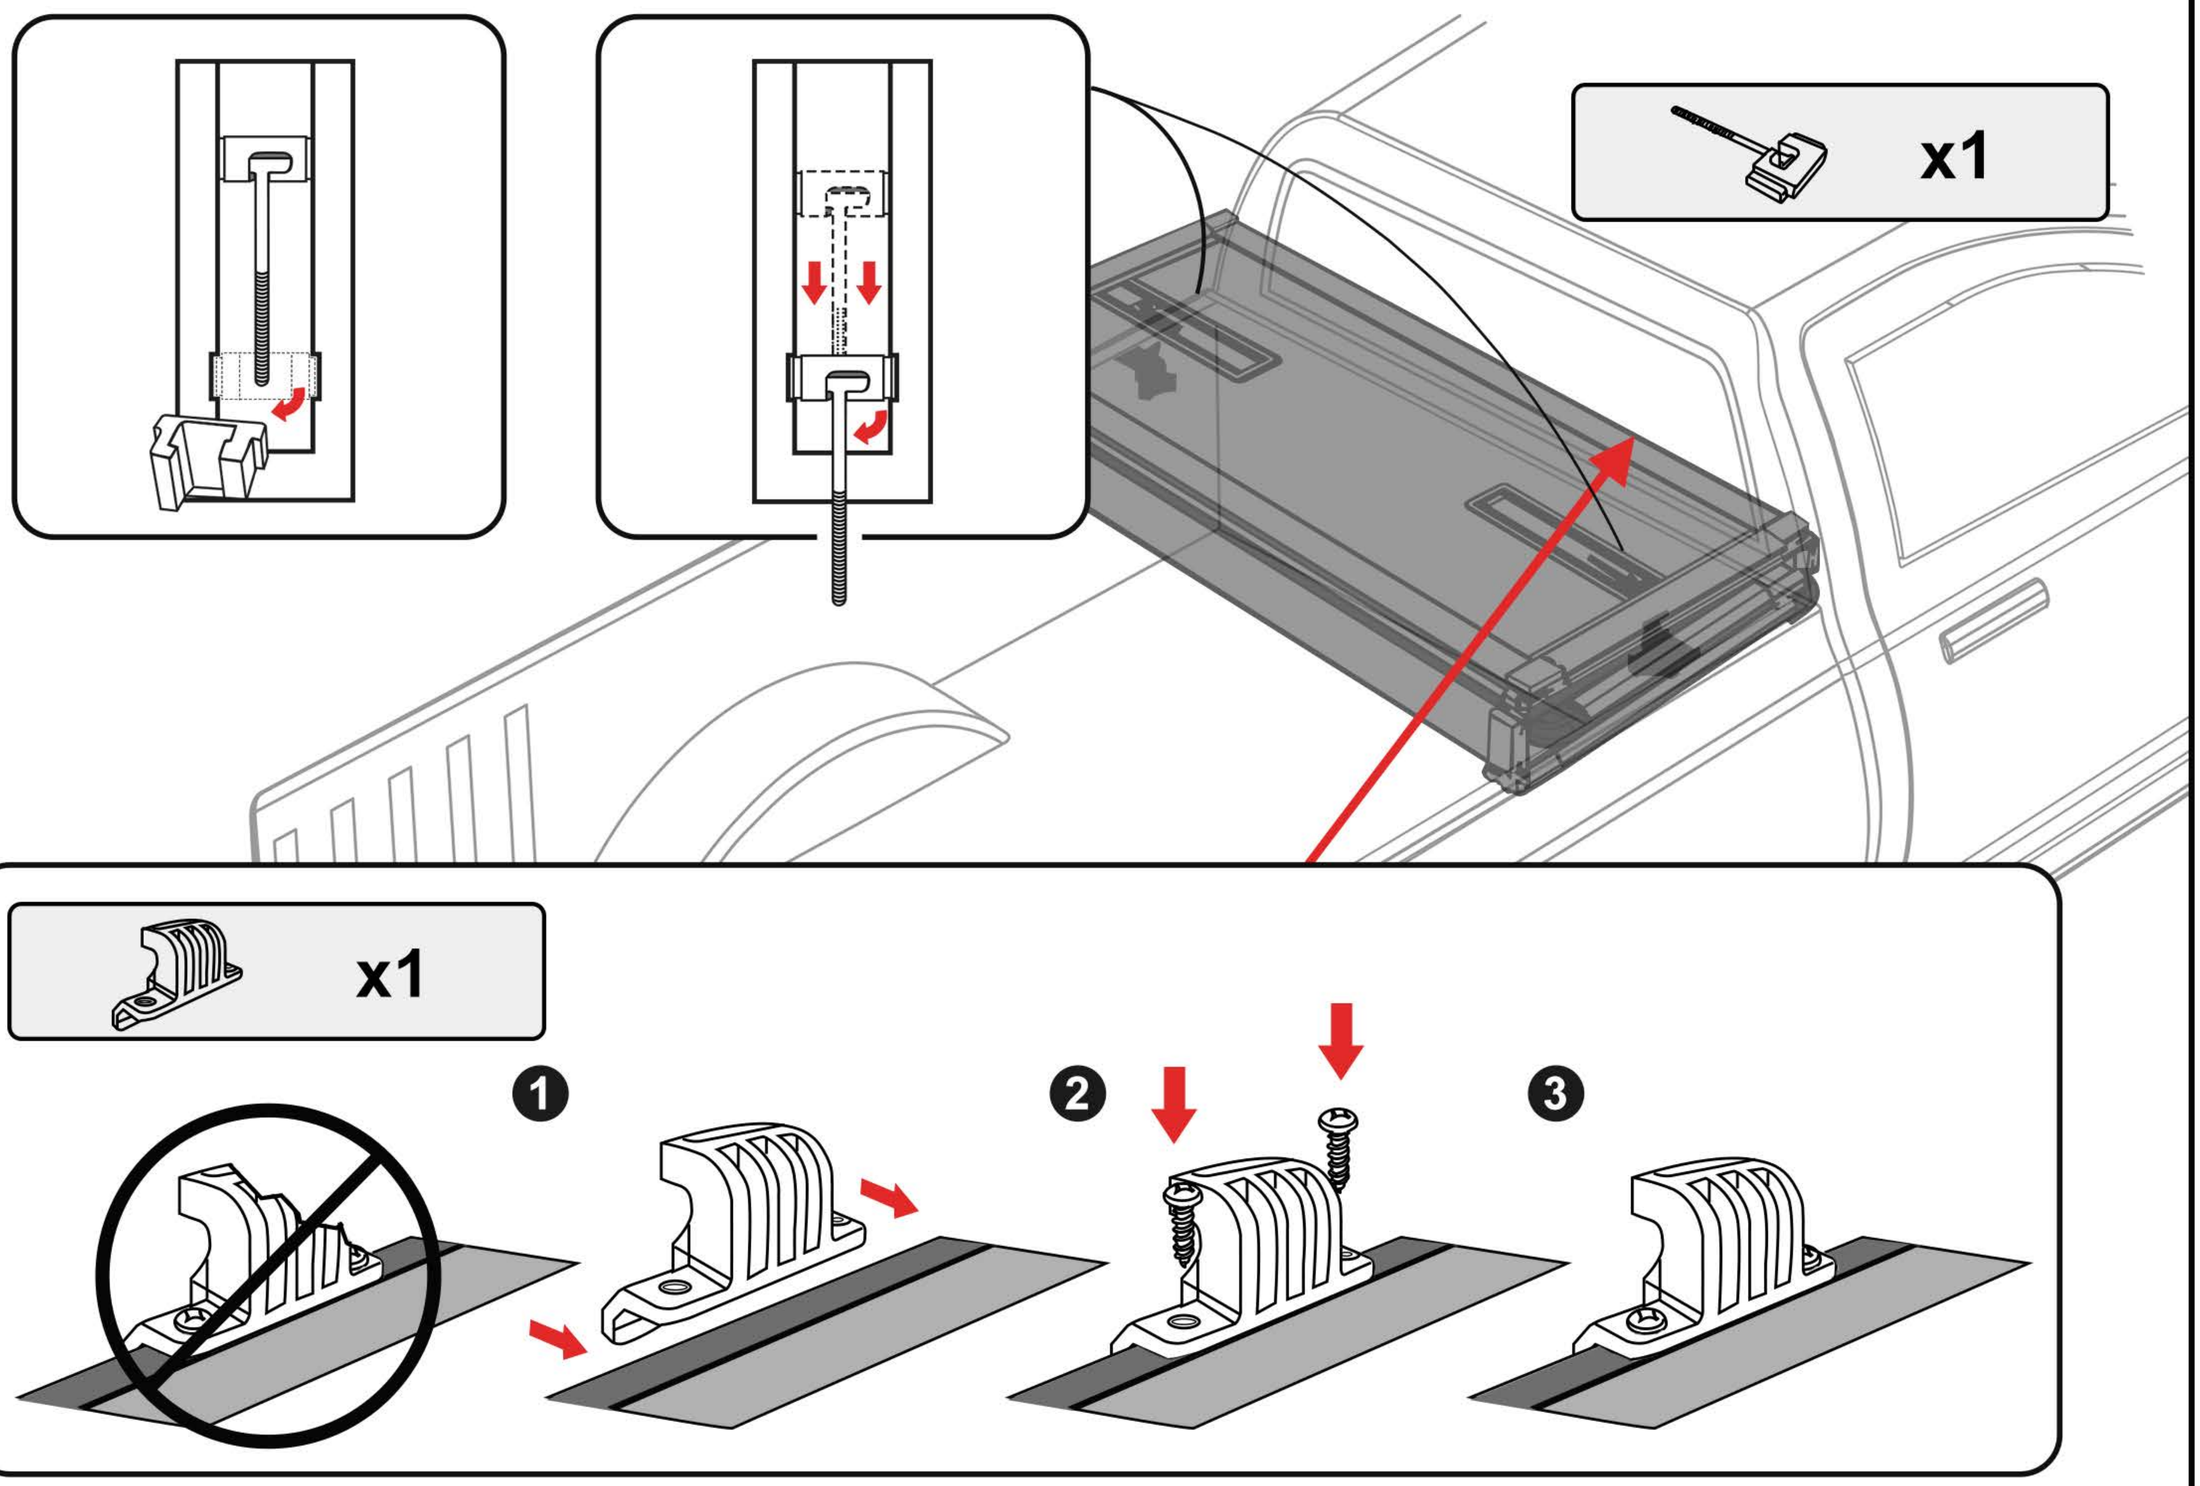

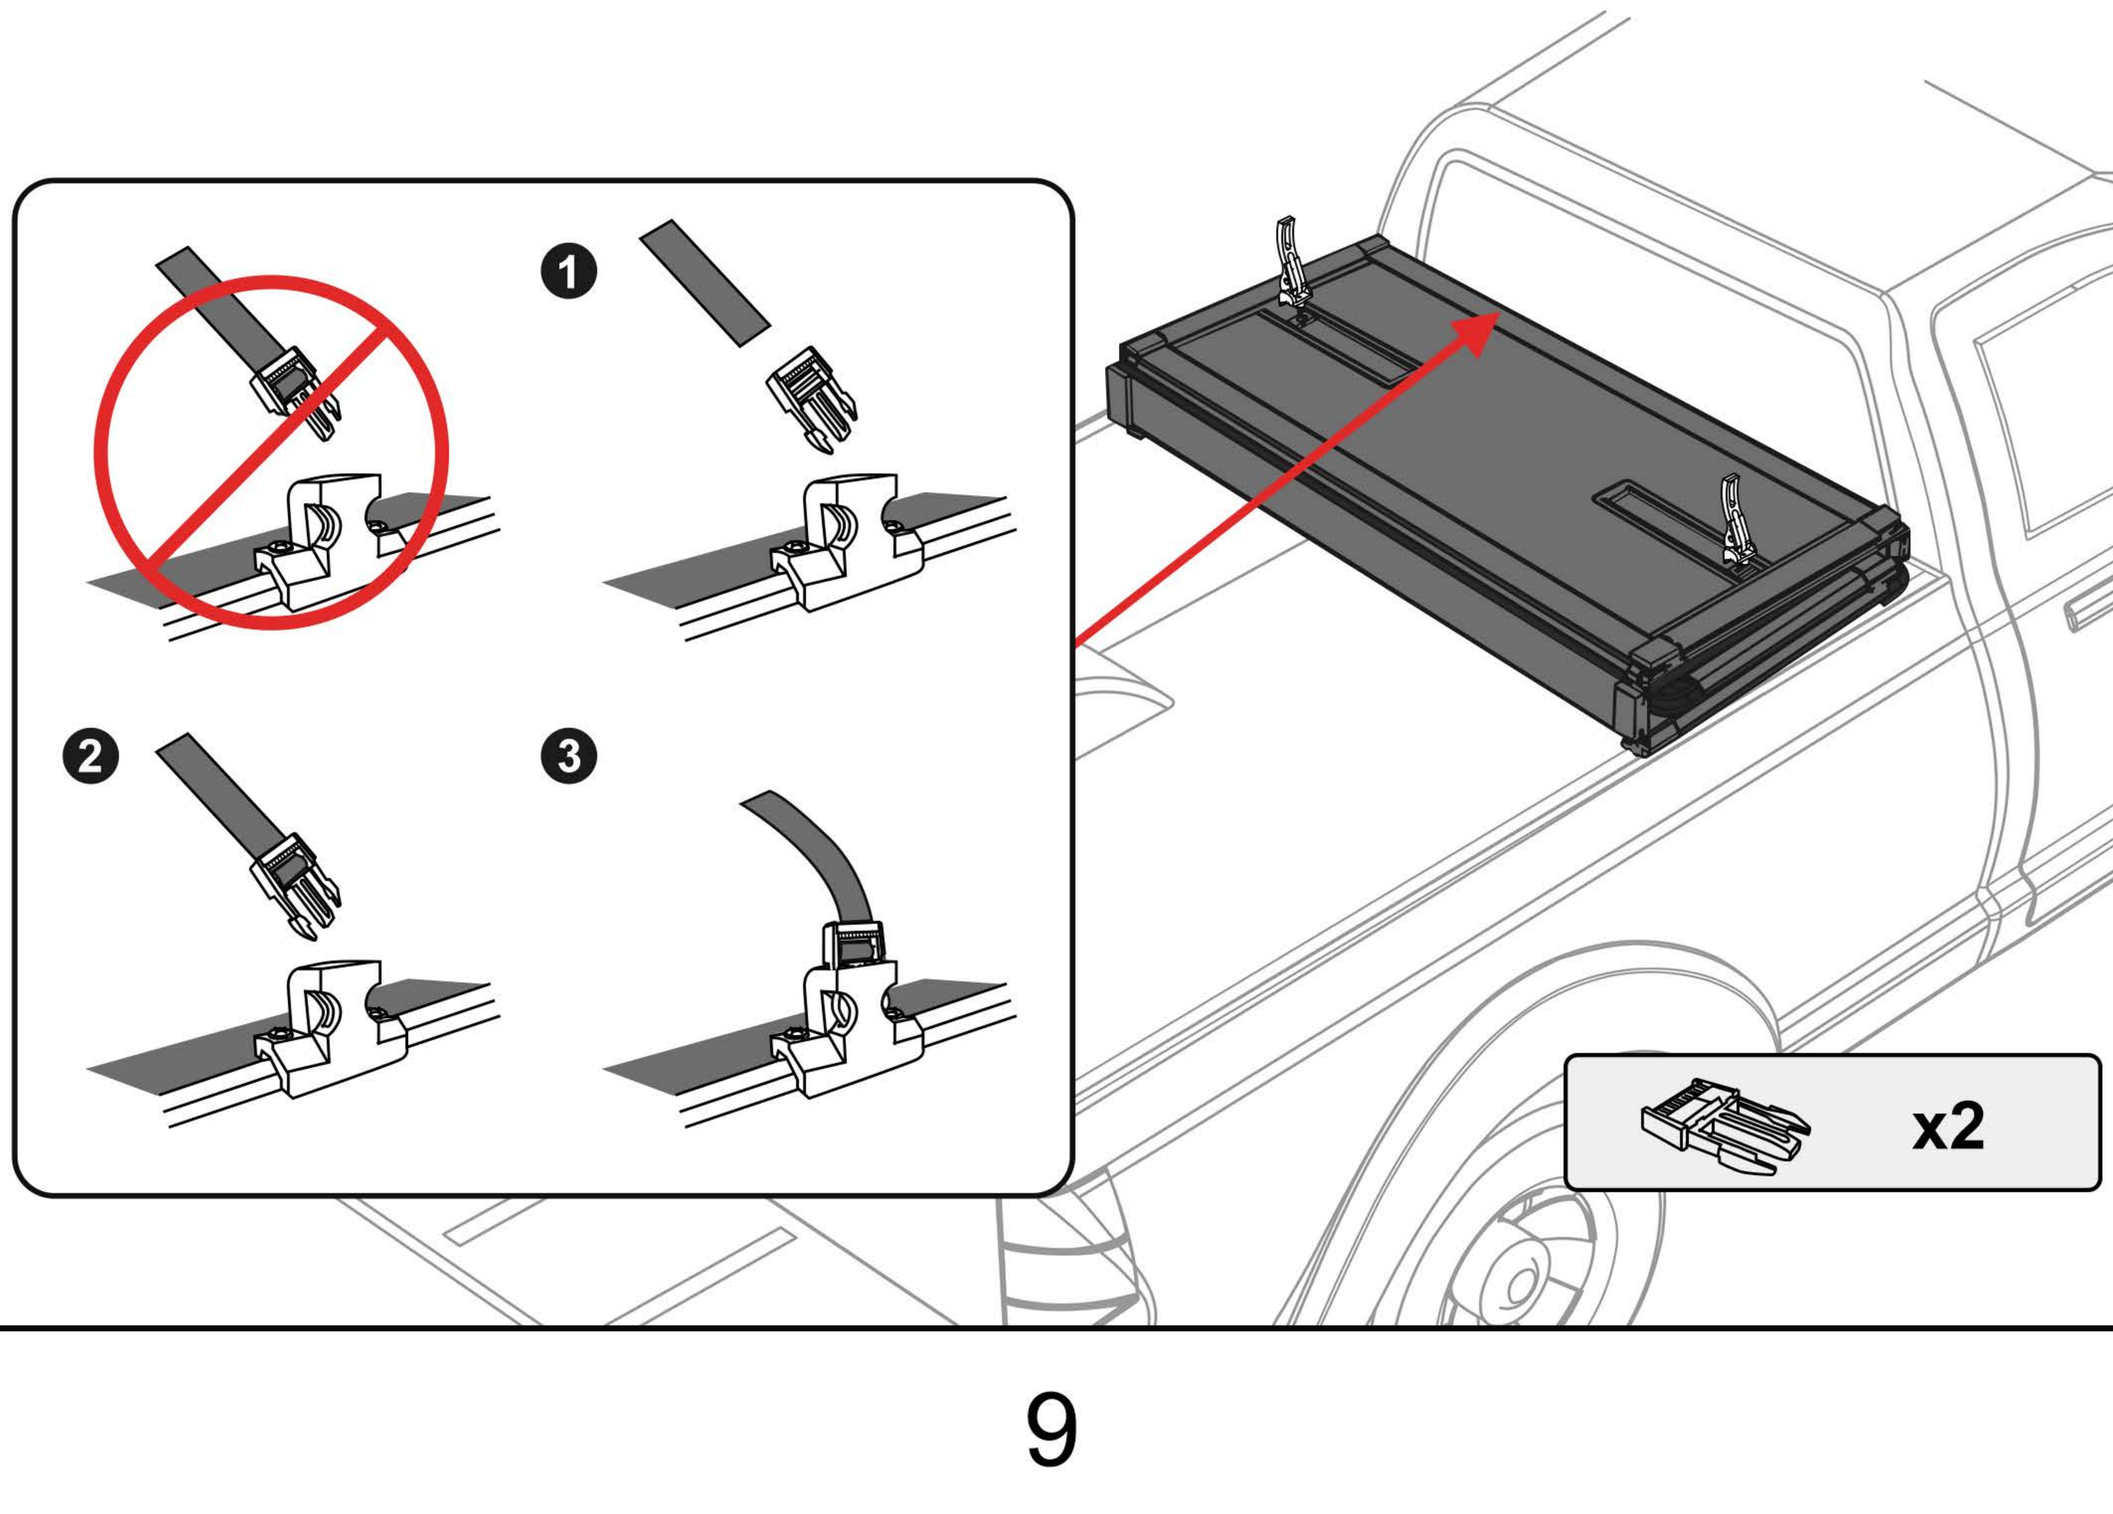

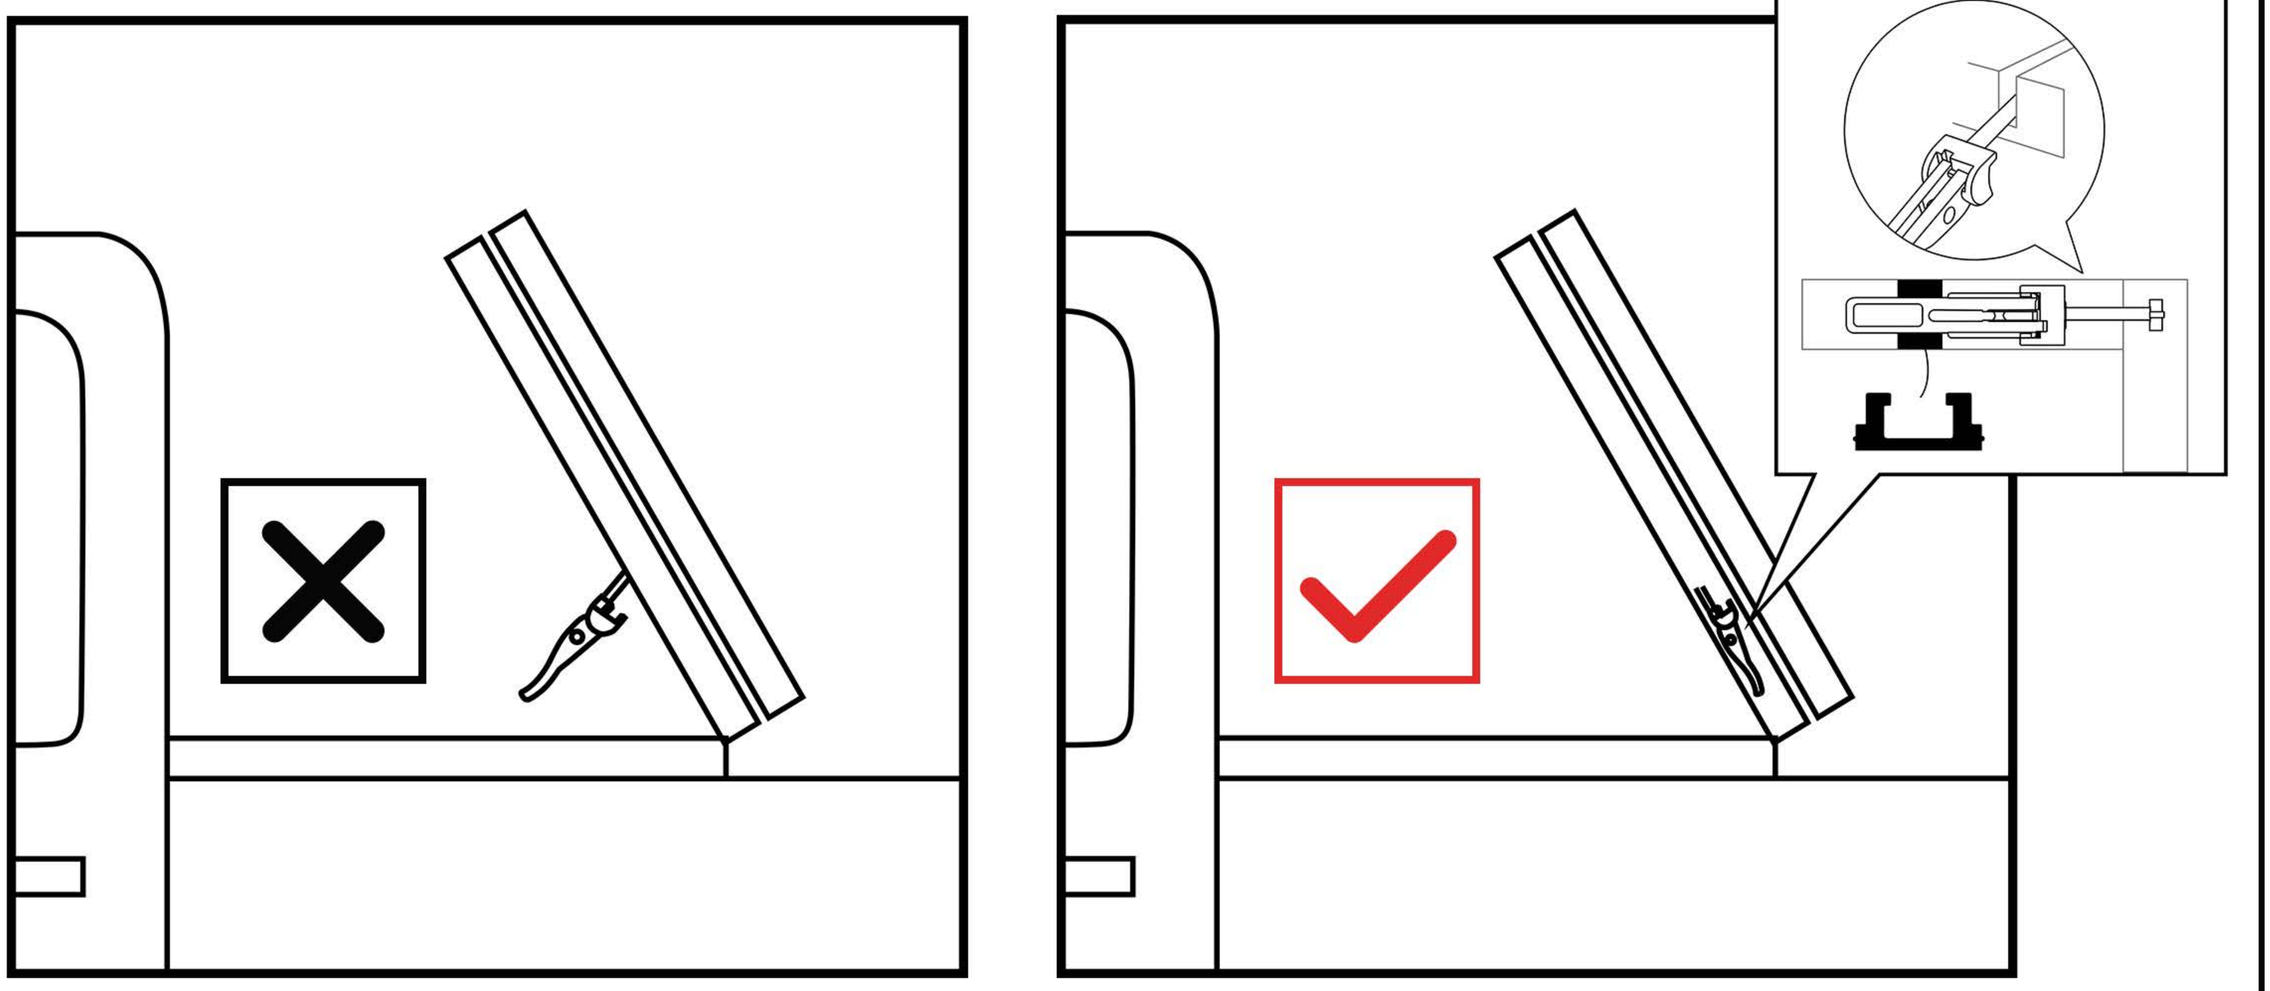

Rear latches must be tucked in before fold back the cover.Rotate the latch as shown and snap it into the rubber block with the reserved groove. Prevent the cover from opening and closing properly due to the protruding wrench.

4 Maintenance

1. We Recommends The User to Check The Cover Is Securely Attached To The Truck Bed Regularly.Look For Any Loose Bolts Due To Driving Vibration,Cargo Contact,etc. Make Sure All Mount Points of The Cover Are Properly Attached.

2. Use a Sponge or Soft Cloth With Water and Soap to Gently Remove Any Dust Or Dirty Off the surface, Pls washing out the sand before cleaning .

3. Pls don't accelerate rapidly or decelerate sharply when the cover standing,Fully Unfold the cover if the truck bed is empty.

4. Loading less than 100KGS on the surface of cover, sharp goods is forbidden to contact the surface.