


Wiring:

DAC OUT - wired to your S on the Analog In 5V (in or out) - wired to the 5V line on the Analog In GND - wired to Ground on the Analog In

Pixy Setup:

http://www.cmucam.org/projects/cmucam5/wiki/Install PixyMon on Windows Vista 7 8

Install PixyMon. Connect Camera over USB to computer. Click Interface and then select Analog/digital X. Click Apply. Unplug USB. Analog should start moving.

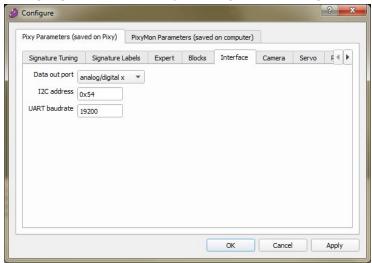

More Info about voltages:

http://cmucam.org/projects/cmucam5/wiki/Porting_Guide https://www.youtube.com/channel/UCZWJf3quTMb-lxg2rn-g6DA/videos