


# WF196079AAE

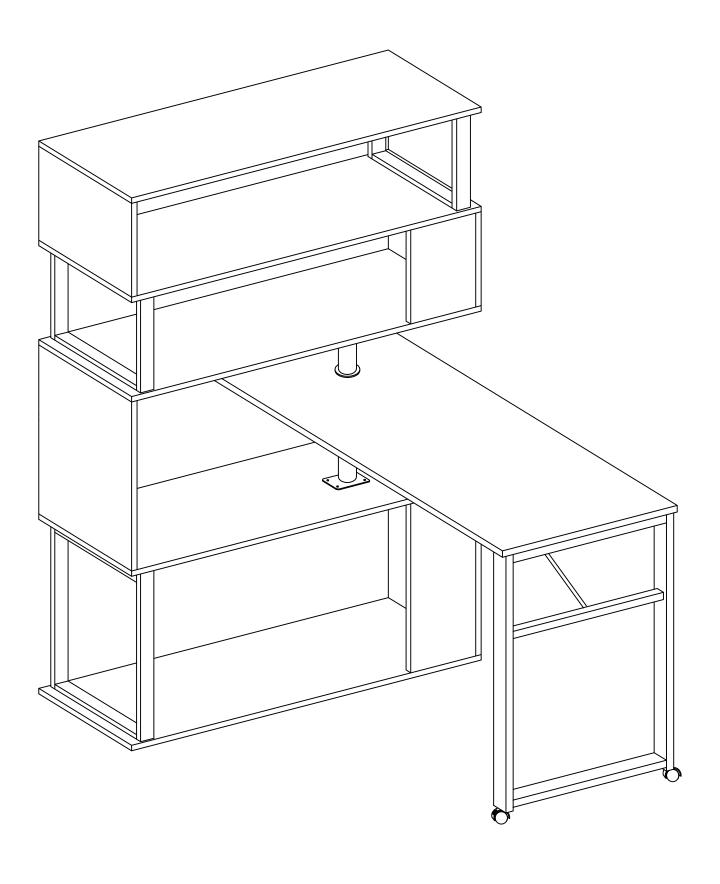


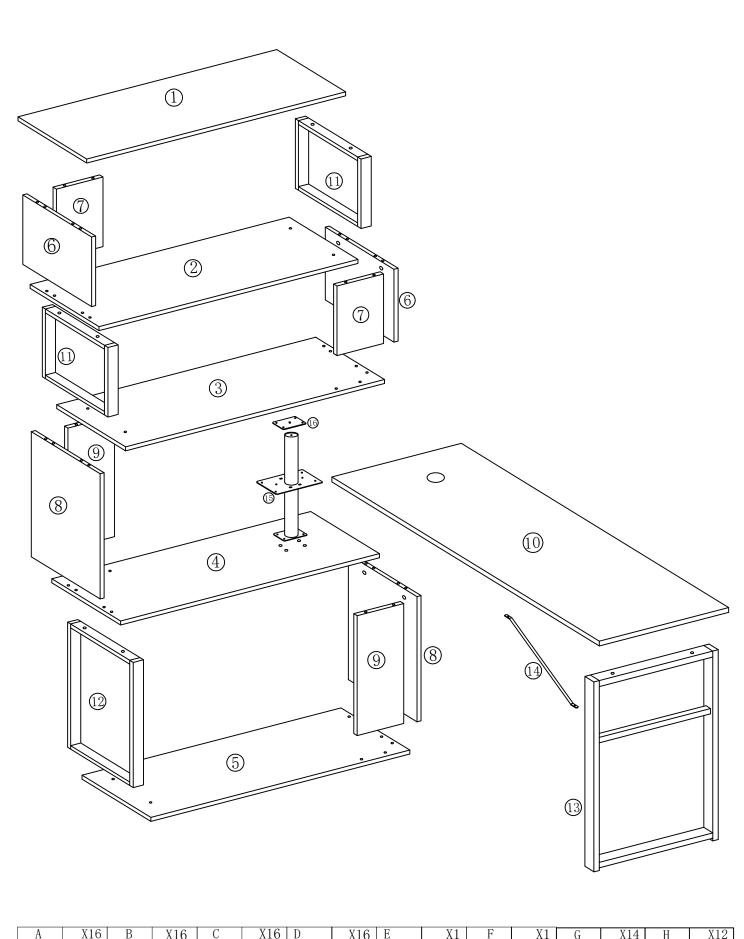


A	X16	В	X16	С	X16	D	X16	Е	X1	F	X1	G	X14	Н	X12
						<b> </b> □-##	w						Om		
	X35	ф 15	X12	ф 8Х3	30	ф 7Х	47	M4>	(55	M5X	(55	M6*1	2mm	M6*2	2mm

Ι	Х2	J	Х1	K	Х4	L	X1	M	X1	N	X1	0	X1
						6)	U	$\bigcup$		Q Q	}	Q	
M6*3	30mm	M8*3	Omm	45*45	*5mm	开口:	12mm	Ф 62	2mm	M8	}	M	8

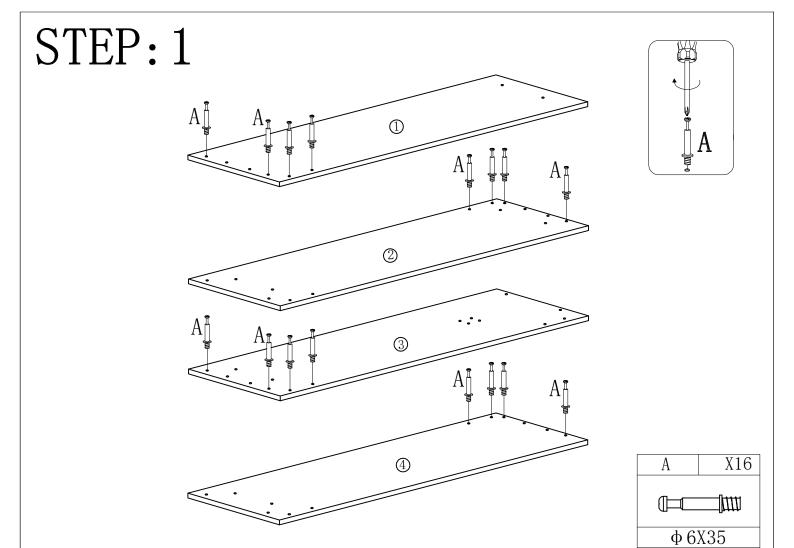

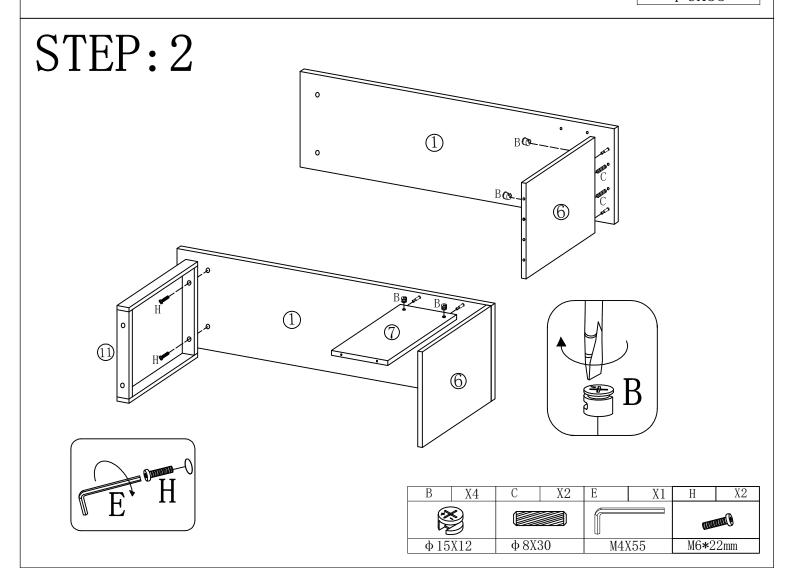


#### STEP: 3

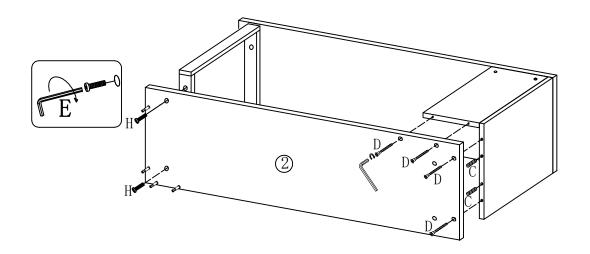


С	Х2	D	X4	Н	X2	
			<b>,,,,,,</b>	Ommun		
ф 8Х3	Ф 8Х30		47	M6*2	2mm	

### STEP: 4

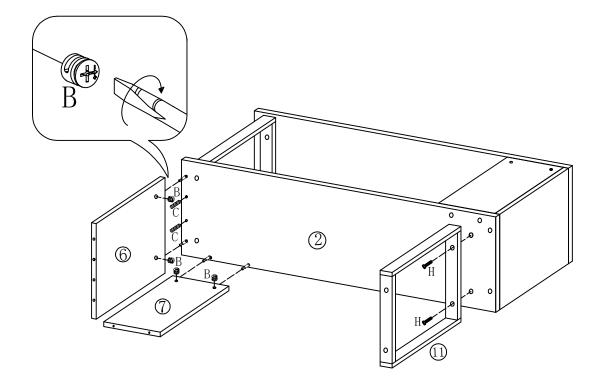


В	Х4	С	X2	Н	Х2
ф 15	X12	ф 8Х3	30	M6*2	2mm

STEP: 5

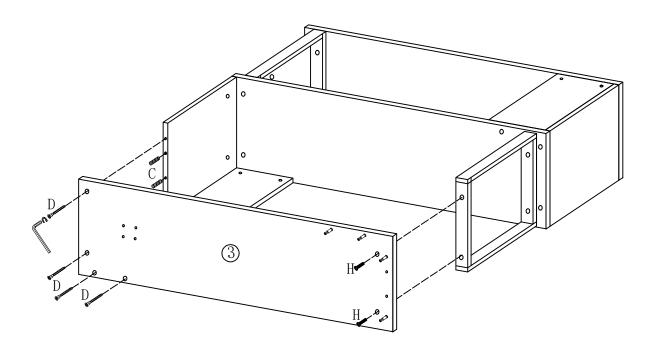



С	X2	D	X4	Н	X2	
			<b>******</b>			
ф8Х	Ф 8Х30		47	M6*2	2mm	

#### STEP:6

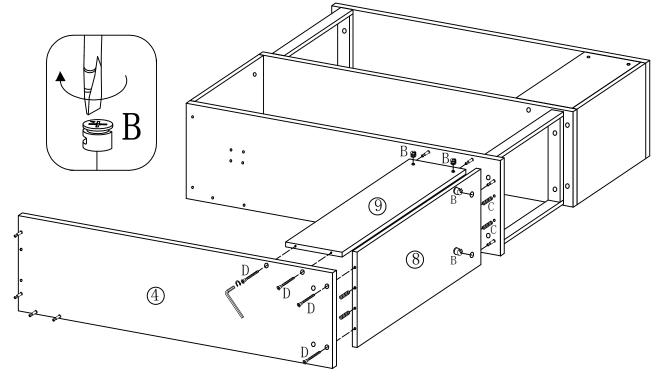

В	Х4	С	X4	D	X4	
				[D-11111111111		
ф 15	X12	ф 8Х3	30	ф 7Х	47	

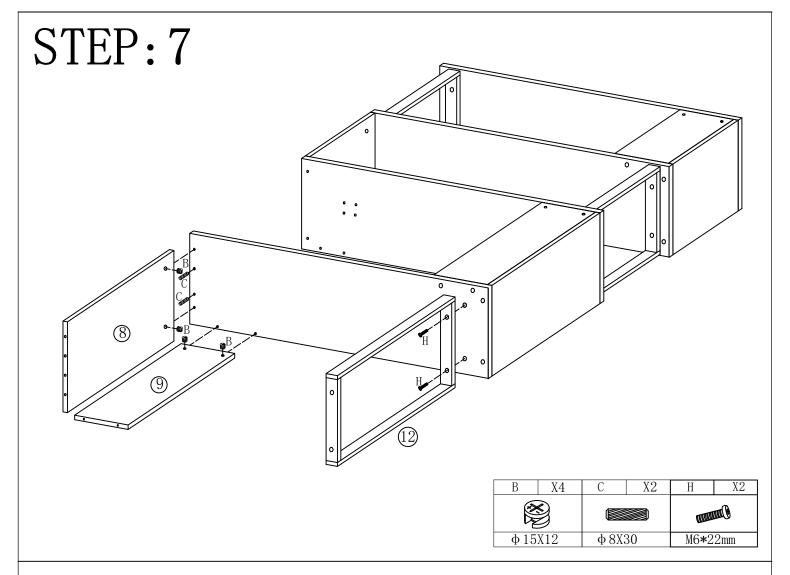

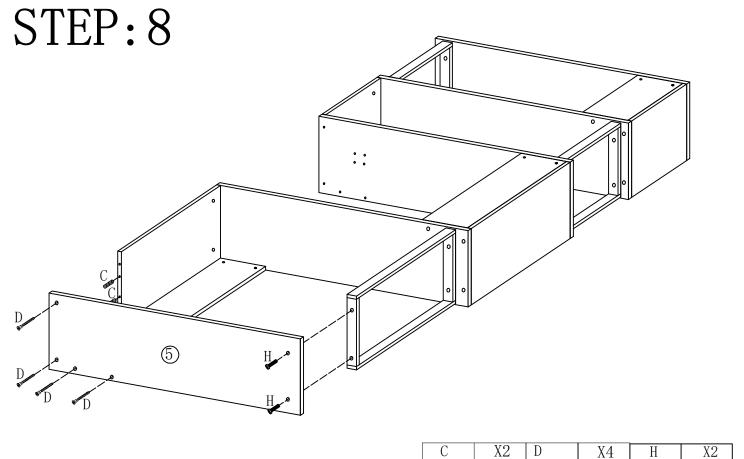



**|** 

ф 7Х47


ф 8Х30

M6\*22mm

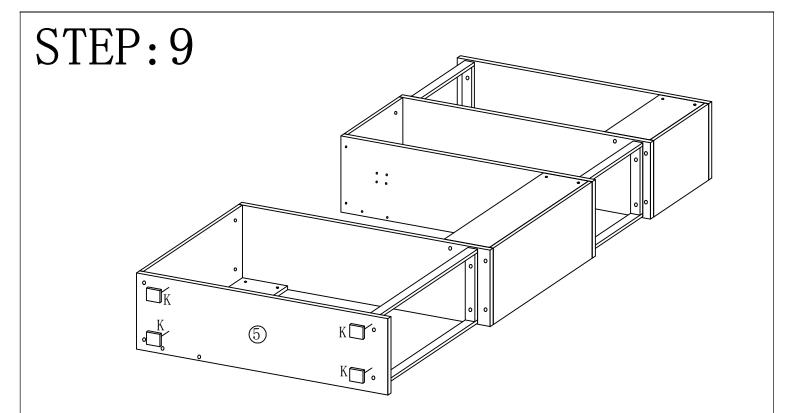






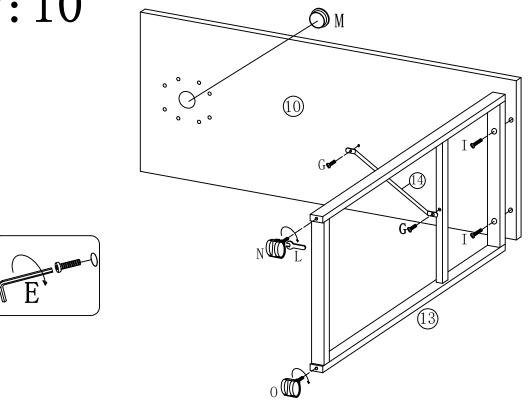


G	Х2	Ι	X2	L	X1	M	X1	N	X1	0	X1
				6	$\int$	$\bigcup$				Q	
M6*1	2mm	M6*3	Omm	开口:	12mm	ф	62mm	M8		M8	

## STEP: 11

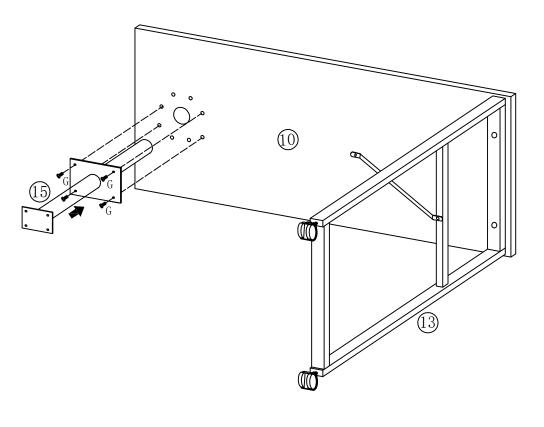

G	X4
•	
M6*	12mm

#### STEP: 12

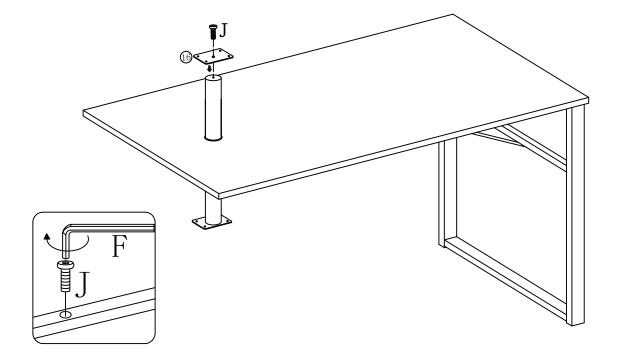

F	X1	J	X1
M5X	55	M8*3	30mm

