
Mixcept

for a lively home

ASSEMBLY INSTRUCTIONS


Computer Desk HT-14004

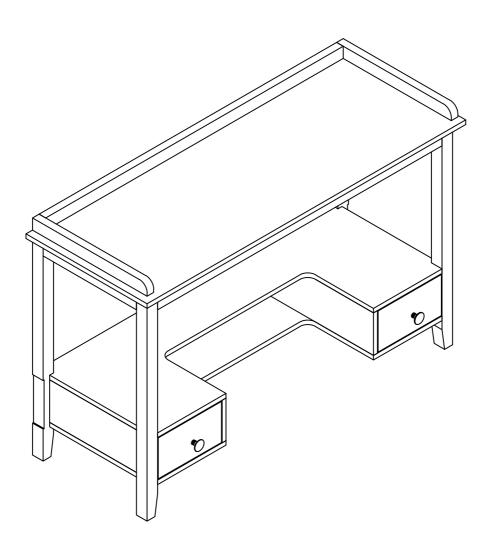

ASSEMBLY TOOLS REQUIRED (NOT INCLUDDE)






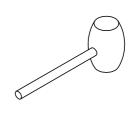

WOODEN DOWEL INSTALLATION PROCEDURE

Gently tap dowel into hole with rubber mallet

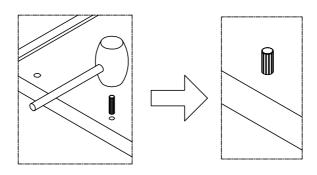

HIDEN CONNECTOR......ASSEMBLY TECHNIQUES

