


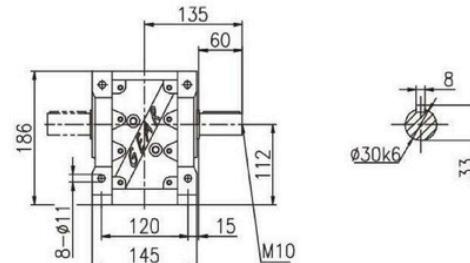
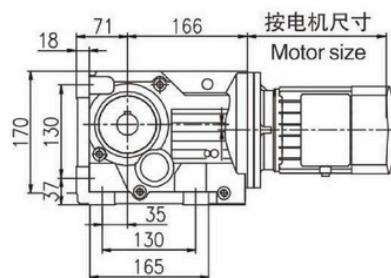
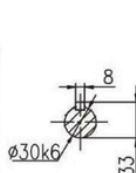




## K47

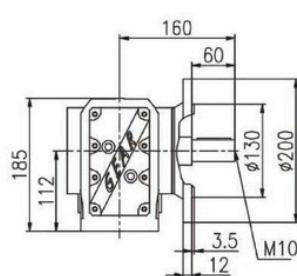




## KF47

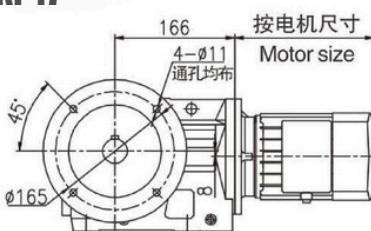



## KAF47

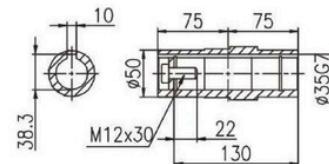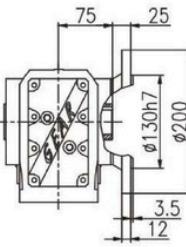


## KA47

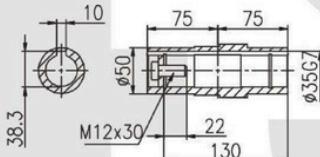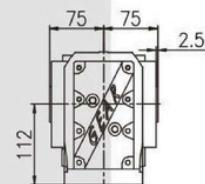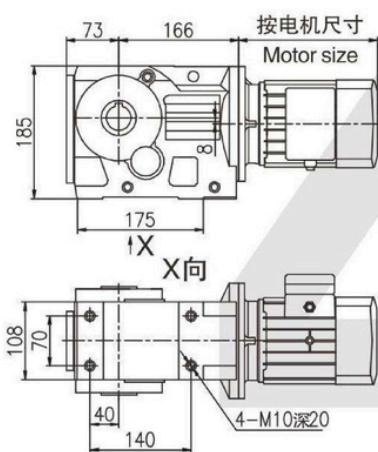

## KAZ47

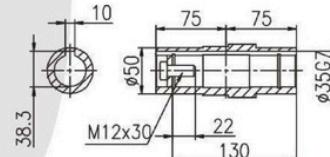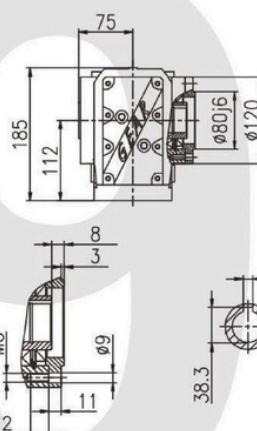




## KAT47

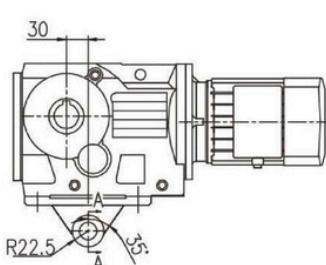


A-A局部

防转臂C面安装

防转臂D面安装

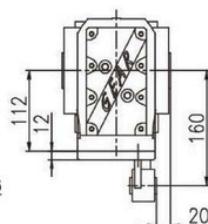
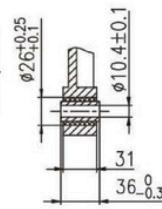


## K..S47

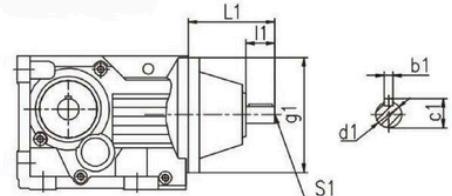


d1	L1	I1	S1	c1	b1	g1
Ø16k6	120	40	M6	21.5	6	Ø160
Ø19k6	130	50	M8	27	8	Ø160

## KAB47

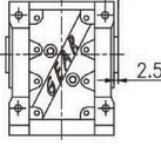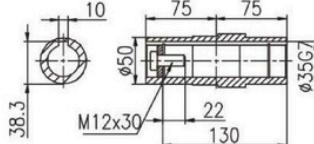


## K..47R37

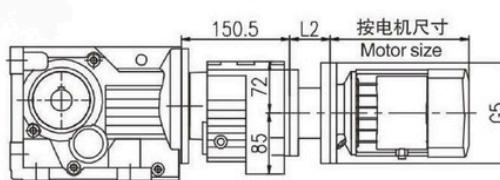

Y2电机座号 Motor size	63	71	80	90	100	112
功率/4P Power/(kw)	0.18	0.25	0.37	0.55	0.75	1.1
L2	77	77	77	77	80	80
G5	Ø140	Ø160	Ø200	Ø200	Ø250	Ø250

## K..47

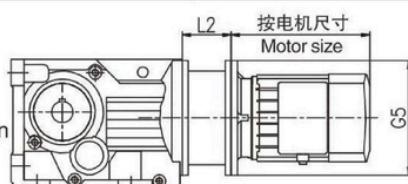

Y2电机座号 Motor size	63	71	80	90	100	112
功率/4P Power/(kw)	0.18	0.25	0.37	0.55	0.75	1.1
L2	77	77	77	77	80	80
G5	Ø140	Ø160	Ø200	Ø200	Ø250	Ø250

The connected flange is needed when the motor supplied by customer