


Defect ID	Defect Type	Count	Percentage	Cumulative Count	Cumulative Percentage
D01	Scratch	78	31.2%	78	31.2%
D02	Dent	60	24.0%	138	55.2%
D03	Paint Issue	35	14.0%	173	69.2%
D04	Wrong Size	25	10.0%	198	79.2%
D05	Loose Part	20	8.0%	218	87.2%
D06	Crack	15	6.0%	233	93.2%
D07	Missing Label	12	4.8%	245	98.0%
D08	Other	5	2.0%	250	100.0%
Total Count		250			

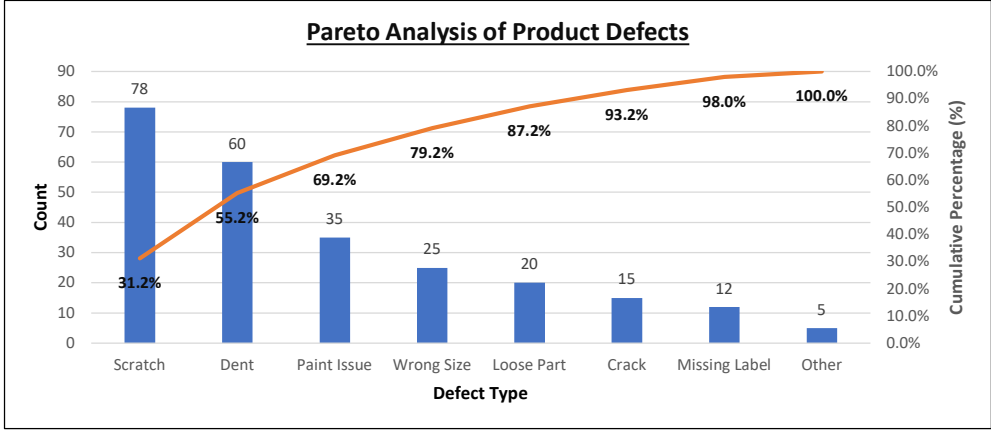

What is the 80/20 Rule?

The 80/20 Rule states: The Pareto Principle (80/20 Rule) states that approximately 80% of the effects are caused by 20% of the causes. It helps identify the most significant factors that should be prioritized for improvement.

It doesn't always have to be exactly 80% and 20%. These numbers are an approximation that helps identify the few most important causes.

In simple words, A small number of causes usually create most of the problems.

Q1. Which defects should management fix first?

Management should prioritize:

- ☒ Scratch
- ☒ Dent
- ☒ Paint Issue
- ☒ Wrong Size

These are the vital few defects contributing to the majority of quality issues.

Q2. Which defects contribute to approximately 80% of all issues?

Defect	Contribution
-----	-----
Scratch	31.2%
Dent	24.0%
Paint Issue	14.0%
Wrong Size	10.0%
Total	79.2% ≈ 80%

The first four defect categories (Scratch, Dent, Paint Issue, and Wrong Size) contribute 79.2% of the total defects, which is approximately 80%. According to the Pareto Principle, these are the "vital few" defects that should be addressed first. Notice that after the first 4 defects, you've already explained about 80% of all defects.

This means:

Total defect types = 8

Important defect types = 4

These are the vital few that deserve immediate attention.