
Tetr4 Switch — User Manual

Tetr4 Switch is a 4-preset CV switcher for the MOD Devices ecosystem, inspired by hardware preset switchers like the Pedrone Penta Switch, Pedrone Yet and the Carl Martin Octa Switch.

With a single tap you recall one of 4 presets, each of which drives 4 CV outputs. Wire those outputs into the CV-addressable parameters of other plugins (most commonly their "Enabled"/bypass control) and one footswitch tap turns a whole group of effects on or off together — like recalling an amp channel or a pedalboard "scene".

1. Overview

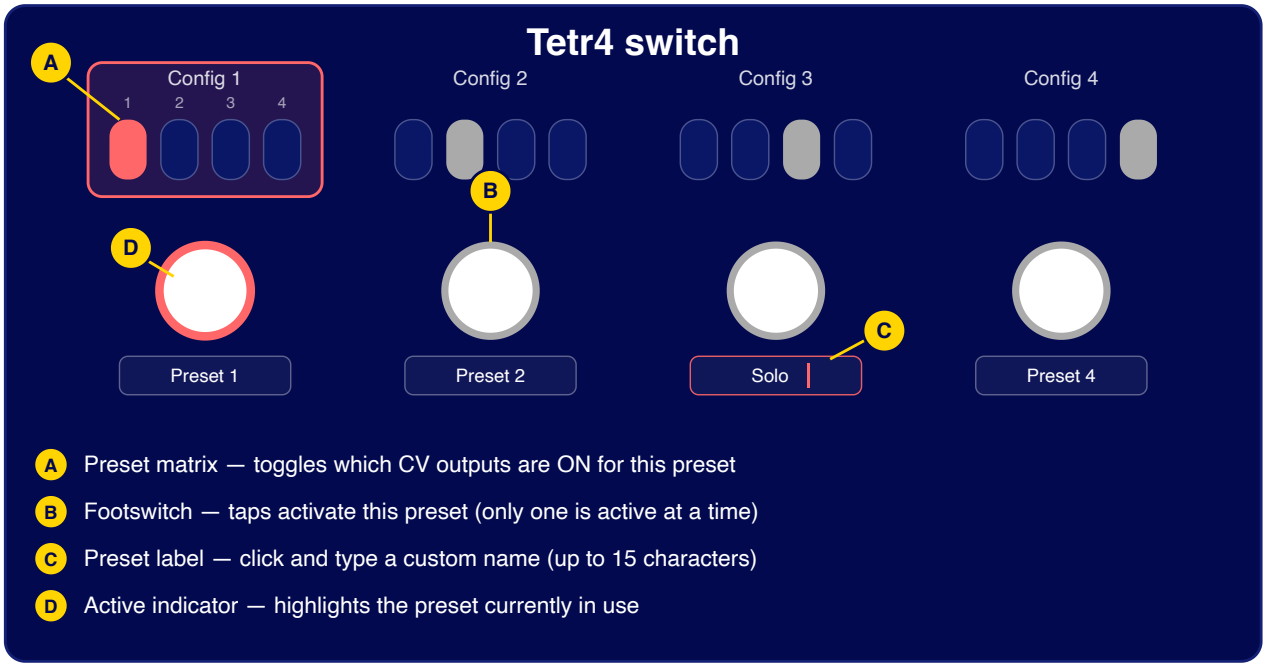

A — Preset matrix	4 toggles per preset. Each one decides whether the matching CV output is ON (10 V) or OFF (0 V) *when that preset is active*.
B — Footswitch	Tap to make that preset the active one. Only one preset is active at a time.
C — Preset label	Click the text field and type a name (up to 15 characters) so the preset reads "Clean", "Solo", etc. instead of "Preset N".

D — Active indicator	The active preset's footswitch and matrix are highlighted. The same state is mirrored on any hardware control you assign (see "Assigning hardware footswitches and controls", below).

2. Presets and CV outputs

The plugin has 4 CV outputs and 4 presets. Each preset stores its own on/off state for all 4 outputs — that's the matrix in the plugin's GUI: 4 presets × 4 outputs.

- An output that's **ON** for the active preset sends **10 V**.
- An output that's **OFF** for the active preset sends **0 V**.

Only the matrix row of the *currently active* preset reaches the outputs; switching presets swaps which row is "live" without touching the other three, so you can keep re-configuring presets you're not using without any audible/CV glitch.


By default the plugin ships with an "identity" mapping to make the concept obvious: preset 1 turns on output 1 only, preset 2 turns on output 2 only, and so on. Rewire the matrix to whatever combination your rig needs.

3. Using it on the pedalboard screen

- **Switch preset** — click a footswitch (B). The matrix for that preset is highlighted and its footswitch glows.
- **Edit a preset's outputs** — click the individual toggles (A) in any of the 4 matrix columns, active or not. Changes apply immediately the next time that preset becomes active (or immediately, if it already is).
- **Rename a preset** — click the label field (C) under a footswitch and type. Allowed characters are letters, digits, spaces and `+ - : _ .`; anything else is replaced with `_` and the name is capped at 15 characters. The name is saved with the pedalboard/preset, so it survives a reload.
- **Current preset control** — a fifth control, "Current preset", exposes the active preset (0–3) as a regular parameter. Automating or MIDI-mapping it selects a preset the same way a footswitch tap does, which is handy for scene-recall setups or an external controller.

4. Wiring CV outputs to your other plugins

Any plugin parameter that can be addressed by CV can be one of Tetr4 Switch's targets — in practice this is almost always another plugin's **Enabled**/bypass parameter. Address it to the matching `CV Output N` and it will follow that output's 0 V/10 V state.

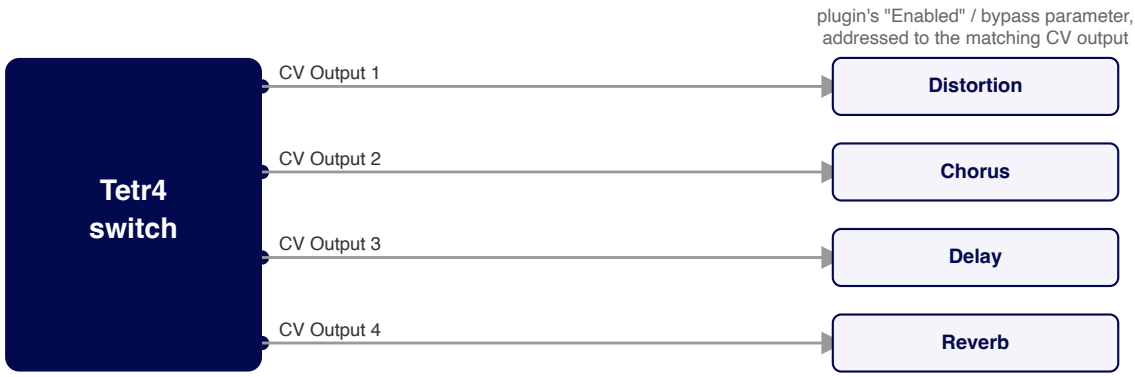

Which preset turns on which effect

Preset	Distortion	Chorus	Delay	Reverb
1 · Clean	○	○	○	○
2 · Crunch	●	○	○	○
3 · Ambient	○	●	●	●
4 · Solo	○	○	●	●

A concrete example with a rig of Distortion, Chorus, Delay and Reverb:


- **1 · Clean** — everything bypassed.
- **2 · Crunch** — only Distortion.
- **3 · Ambient** — Chorus, Delay and Reverb together.
- **4 · Solo** — Delay and Reverb, for a bit of extra sustain and tail.

Each preset is recalled with a single footswitch tap instead of turning four pedals on and off by hand.

> **Tip.** You aren't limited to one destination per output — a single CV output can be connected to several plugins at once. If two effects should always switch together (say, an octaver and a fuzz that only ever run as a pair), address both of their bypass parameters to the same `CV Output N` and they'll always move together, freeing up the other three outputs for independent effects.

5. Assigning hardware footswitches and controls

Beyond the touchscreen, every relevant parameter can be assigned to a physical control on the device (footswitch, encoder, or an assignable screen slot), with feedback coming back through the device's LEDs and display.

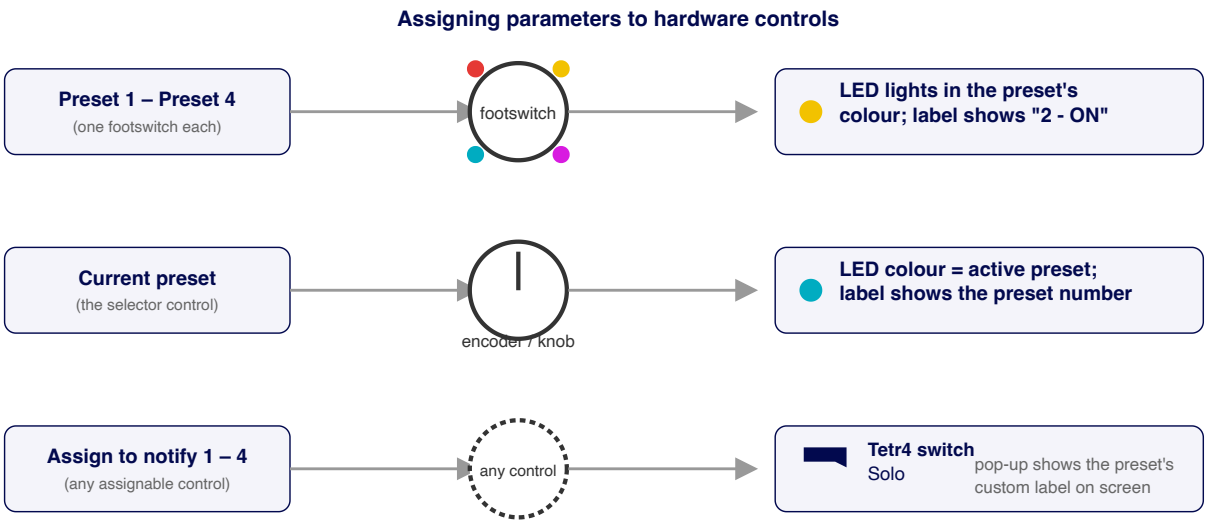

- **Preset 1 – Preset 4** — assign each to a physical footswitch (e.g. `B`, `C`, or `B+C` on a Dwarf-class device) to switch presets without touching the screen. The footswitch's LED lights up in the preset's colour (Red / Yellow / Cyan / Magenta for presets 1–4) and its label shows `N - ON` or `N - OFF`.
- **Current preset** — assign it to an encoder, knob or footswitch to get a single control whose LED colour always matches the active preset and whose label shows the preset number.
- **Assign to notify 1 – 4** — assign any of these four to any assignable control to get a pop-up on the device screen with the active preset's custom label every time you switch. This is useful when you want a readable confirmation ("Solo", "Clean", …) rather than just a number or an LED colour — pair it with a control you rarely touch, since it exists only to receive the notification.

6. Saving your setup

Preset labels are stored in the plugin's LV2 state, so they're saved and restored with the pedalboard/preset like any other plugin setting — no extra step needed. The matrix (which outputs are on for which preset) is saved the same way, as regular plugin parameters.

7. Port reference

Port	Type	Description
`CV Output 1 – 4`	CV output	0 V/10 V, driven by the active preset's matrix row.
`Preset 1 – 4`	Control input (footswitch)	Momentary trigger: selects that preset.
`Current preset`	Control input (enumeration)	The active preset, 0–3. Can be read or set directly.
`Assign to notify 1 – 4`	Control input	No audio/CV effect; exists only to be assigned to a hardware control that should show the preset-change pop-up.
`Preset N – Output M`	Control input (toggle)	The matrix cell: is output `M` ON when preset `N` is active?
Preset label 1–4	Plugin property (patch)	The custom name for each preset, edited from the GUI text field.

8. Credits

Tetr4 Switch is developed by Paulo Mateus (SrMouraSilva). Discuss the plugin, report issues or follow its progress on the MOD Audio forum thread or the plugins-lv2 repository.