



Tasks

1. List 5 common issues users face with USB keyboards or mice on laptops, and write one possible solution for each.

- 1 **Device not recognized** — The laptop shows no response when the USB device is plugged in
Unplug and re-insert the device into a different USB port. If still unrecognized, open **Device Manager**, find any unknown devices with a yellow warning icon, right-click, and select **Update Driver**

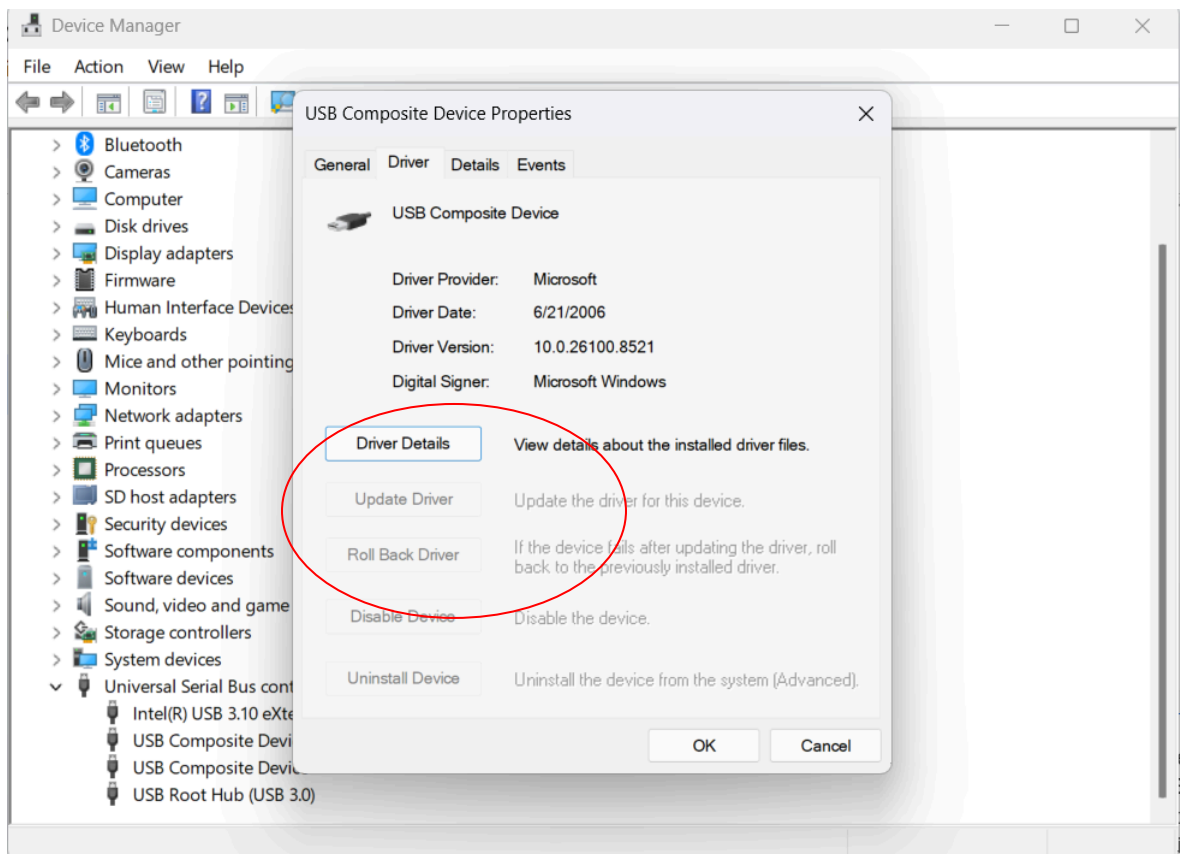

- 2 **Intermittent disconnection** — The keyboard or mouse randomly stops working mid-use
Replace the USB cable or if BT mouse/keyboard check batteries or try a different port.
Check Device Manager - USB Root Hub - Properties - Power Management tab and uncheck "Allow the computer to turn off this device to save power"

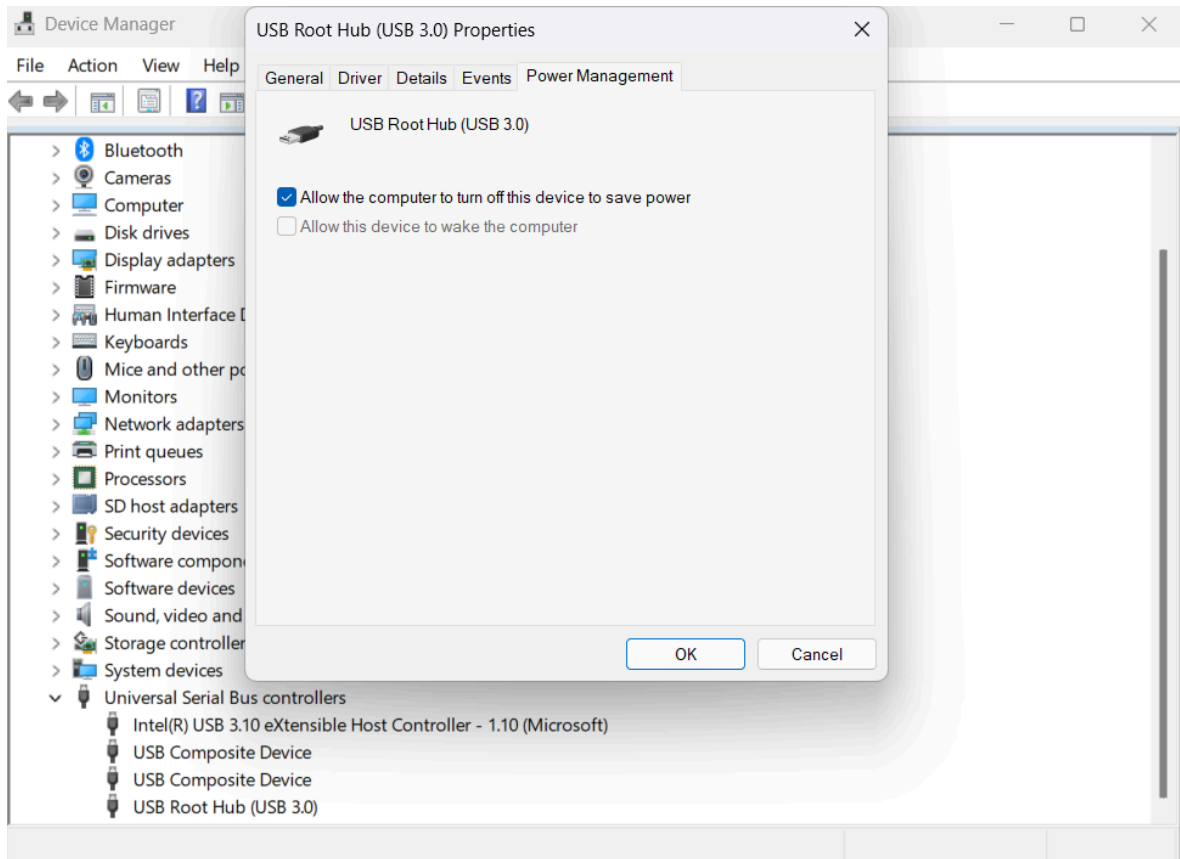


- 3 **Lag or delayed response** — Noticeable delay between keypress/mouse movement and on-screen action

Update USB drivers and check for background apps consuming high CPU.

- 4 **Keys/buttons not working correctly** — Some keys register wrong characters or buttons perform unexpected actions

Check that the correct keyboard layout is set under **Settings – Time & Language – Language**.

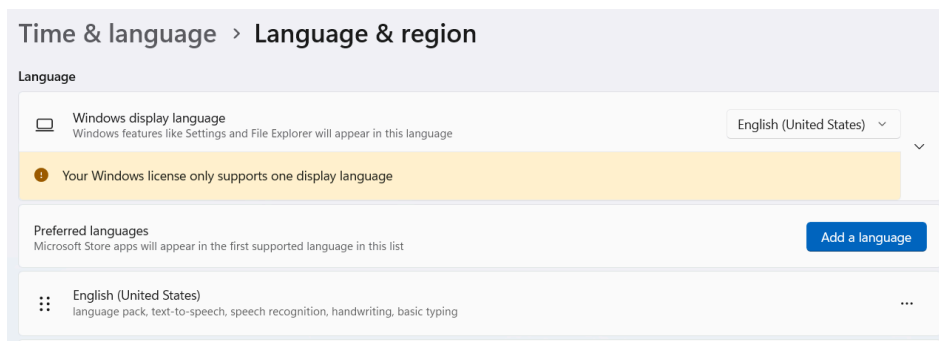


- 5 **Device works on one port but not another** — The peripheral only functions on specific USB ports

The non-working port may have a damaged controller. Go to **Device Manager – Universal Serial Bus Controllers**, uninstall all USB host controller entries, then restart the laptop to force Windows to reinstall fresh drivers

Task 2 - Simulate a troubleshooting flow: Your Bluetooth headphones are not connecting to your phone. Write the exact step-by-step actions you would take to diagnose and fix the issue, mentioning any settings or indicators you would check.


Step 1 — Check headphone power & pairing mode Turn the headphones fully off, then power them back on. Hold the pairing button (usually indicated by a Bluetooth symbol) until you see a flashing blue/red LED or hear an audio prompt like *"Pairing mode."*

Step 2 — Check phone Bluetooth is ON Go to **Settings - Bluetooth** and confirm the toggle is enabled. Also verify Airplane Mode is **off**, as it disables all wireless radios.

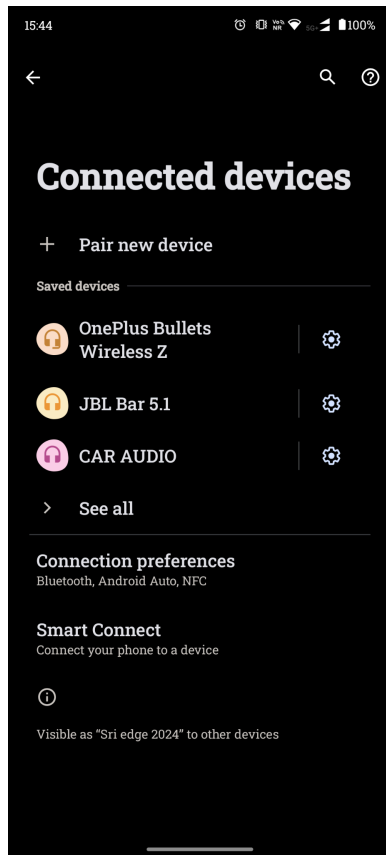

Step 3 — Check for existing conflicting connections Bluetooth headphones often auto-connect to the last paired device. If they previously paired with a laptop, tablet, or another phone, that device may be intercepting the connection. Turn Bluetooth off on all nearby devices except your phone.

Step 4 — Remove the old pairing (Forget device) On your phone, go to **Settings - Bluetooth - “Headphone Name” - Forget / Unpair**. On the headphones, perform a **factory reset** (hold power + volume down for 10 seconds on most models). This clears both sides of the pairing memory.

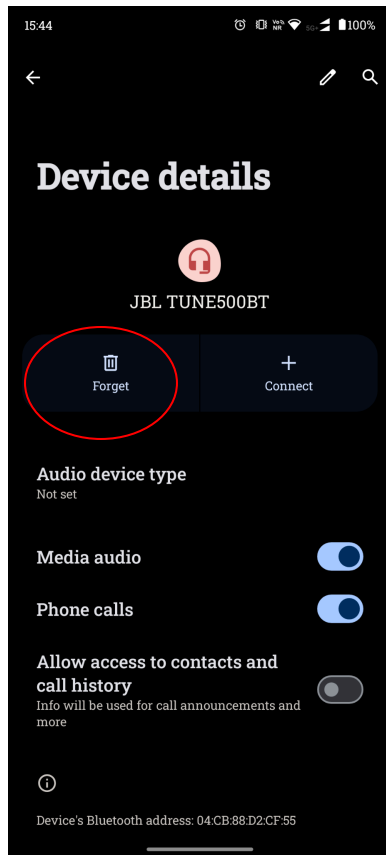


Step 5 — Re-pair from scratch With headphones in pairing mode, go to **Settings - Bluetooth - Scan / Add New Device** on your phone. Select the headphone name from the discovered devices list and confirm .

Step 6 — Check audio output After connection, go to **Settings - Sound / Audio Output** and ensure the headphones are selected as the active output device.



Step 7 — Update firmware & OS Check the headphone manufacturer's app (e.g., Sony Headphones Connect, Bose Music) for firmware updates. Also check **Settings - Software Update** on the phone, as Bluetooth bugs are often patched in OS updates.

Step 8 — Test on another device Pair the headphones with a different phone or laptop. If they connect successfully elsewhere, the issue is isolated to the original phone's Bluetooth chip or settings — consider resetting network settings via **Settings - System - Reset options - Reset bluetooth and WIFI**.

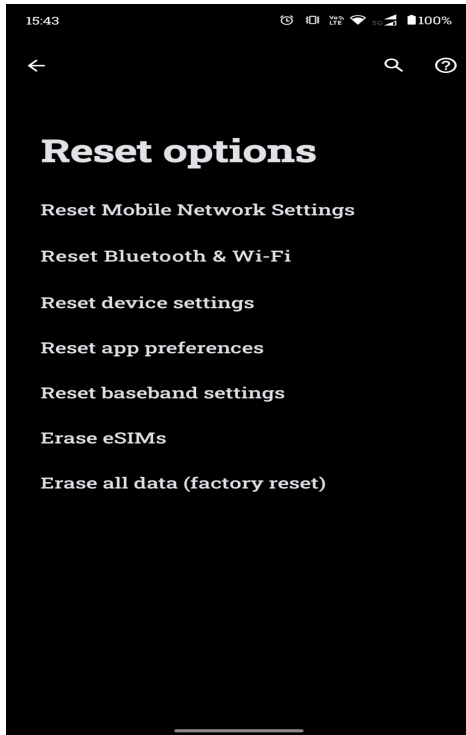


Task 3 - A user reports that their external webcam is not detected during a Zoom call on Windows 10. Write a checklist of 6 things to check or try to resolve the problem. Hint: Consider device manager, privacy settings, and app permissions.

1. **Check physical connection** Unplug the USB cable and reconnect it firmly to a different USB port. Avoid USB hubs — connect directly to the laptop. Verify the webcam's power indicator LED is lit.
2. **Check Device Manager for driver errors** Open Device Manager (Win + X - Device Manager) - expand Cameras or Imaging Devices. Look for a yellow exclamation mark ⚠ next to the webcam. If present, right-click - Update Driver - Search automatically.

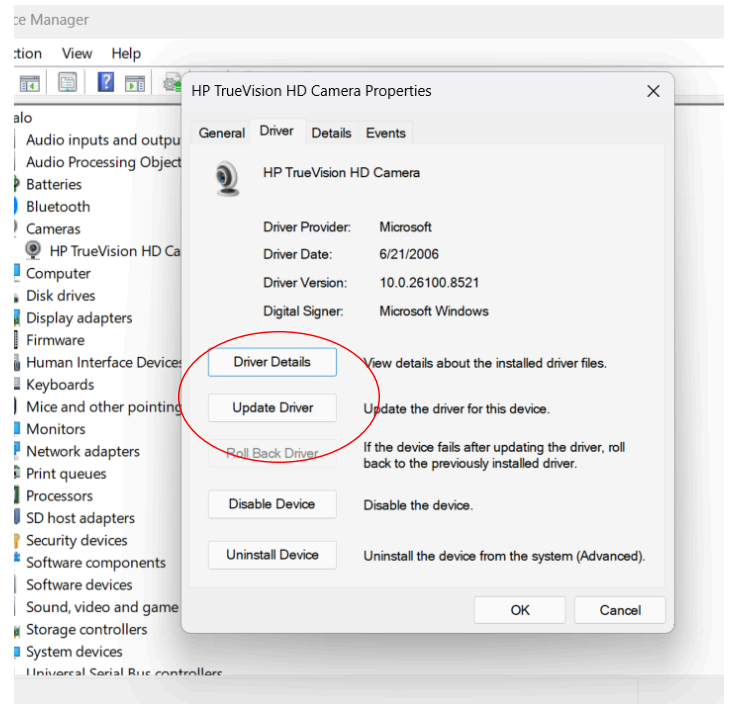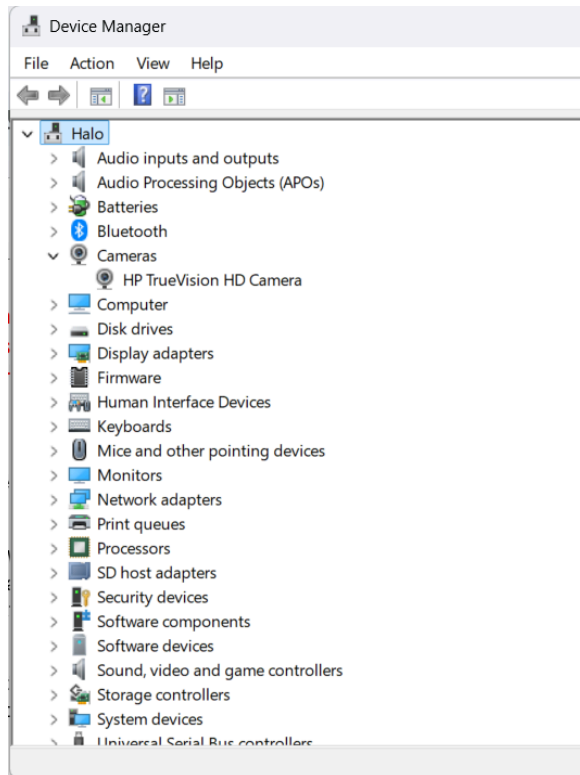

3. **Check Windows Camera Privacy Settings** Go to Settings - Privacy - Camera. Ensure "Allow apps to access your camera" is toggled On. Also scroll down and confirm "Allow desktop apps to access your camera" is enabled.

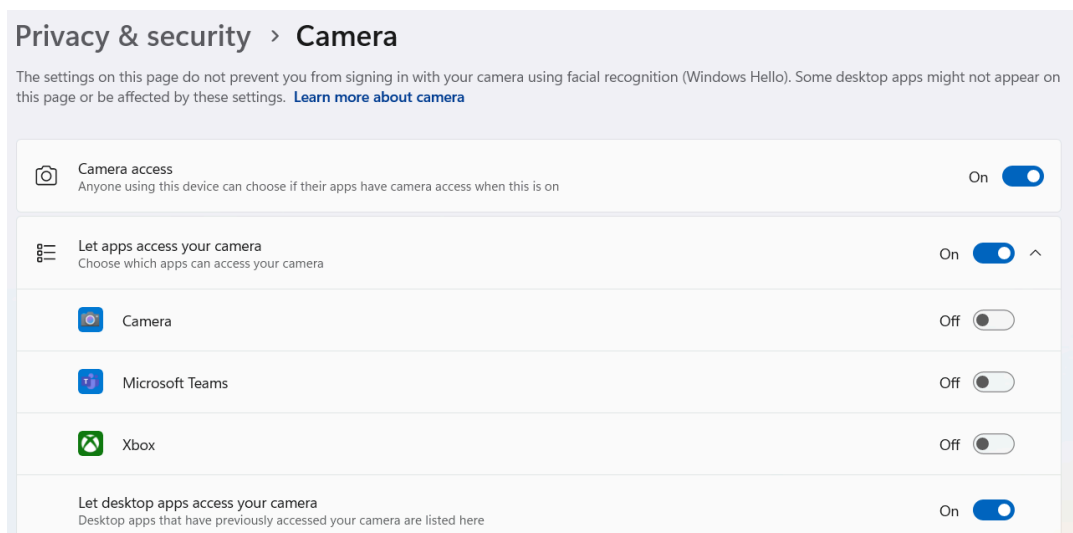


4. **Check Zoom's camera permissions and selected device** Inside Zoom, go to Settings - Video. Under the Camera dropdown, check if the external webcam appears and is selected. If it shows the built-in webcam only, the external one is not being detected at

the app level.

5. **Disable the built-in webcam temporarily** In Device Manager, right-click the laptop's built-in camera - Disable device. This forces Zoom to default to the external webcam and eliminates any conflict between the two devices.
6. **Reinstall webcam drivers** In Device Manager, right-click the external webcam - Uninstall device (check "Delete driver software" if prompted). Unplug the webcam, restart Windows, then plug it back in. Windows will auto-reinstall the driver. Visit the manufacturer's website (e.g., Logitech, Microsoft) for the latest driver if auto-install fails.


Task 4 - You are helping a friend whose printer is showing 'offline' status on their PC. Describe how you would use the Windows Troubleshooter tool to try to fix the issue, and explain what information the tool provides during the process.

Step 1 — Launch the Troubleshooter Go to Settings - System - Troubleshoot → other Troubleshooters. Select Printer from the list and click "Run the troubleshooter."

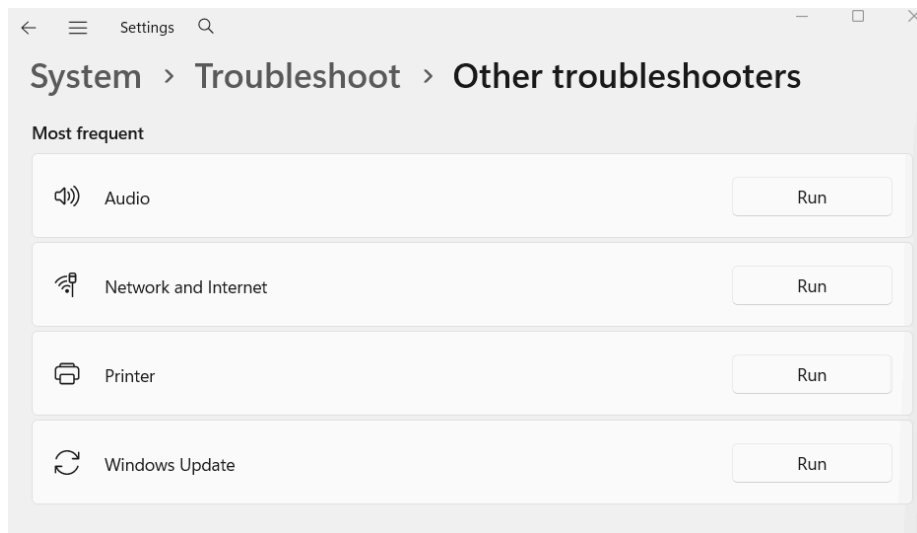

Step 2 — Automatic scanning phase The tool immediately begins scanning. During this phase it checks:

- Whether the Print Spooler service is running
- Whether the printer is reachable over USB or the local network
- Whether there are stuck jobs in the print queue blocking operation
- Whether drivers are correctly installed and up to date

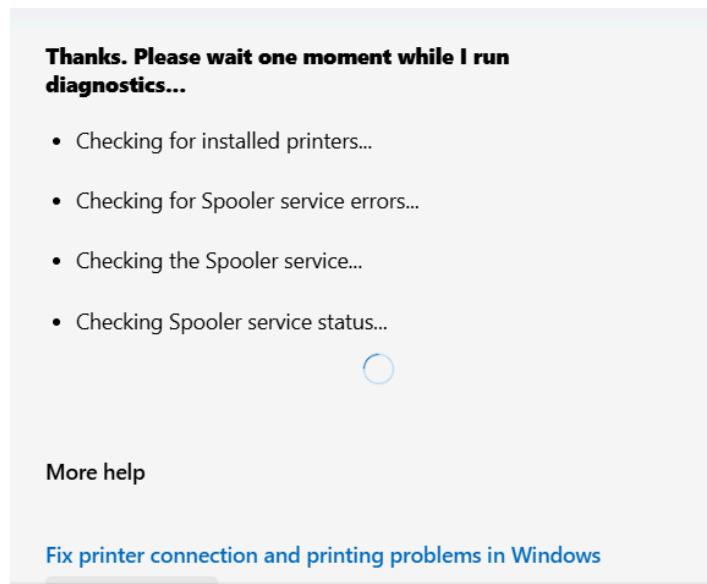

Step 3 — Reviewing what the tool reports The troubleshooter displays findings in plain language, for example:

- "Print Spooler service was not running — Fixed"
- "Printer driver may be corrupted — Detected" (with a fix option)

Items marked 'Detected' - manual action is needed

Step 4 — Applying suggested fixes For each detected issue, the tool offers a "Apply this fix" button.

Step 5 — Verify resolution Print a test page by going to Printers & Scanners - [Printer Name] → Manage → Print a test page. A successful test page confirms the printer is back online.