Clontech Laboratories, Inc.

SMARTer® Stranded Total RNA-Seq Kit -Pico Input Mammalian User Manual

Cat. Nos. 635005, 635006, 635007 (101215)

Clontech Laboratories, Inc.

A Takara Bio Company

1290 Terra Bella Avenue, Mountain View, CA 94043, USA

U.S. Technical Support: tech@clontech.com

United States/Canada Asia Pacific 800.662.2566

+1.650.919.7300

Europe +33.(0)1.3904.6880 Japan +81.(0)77.543.6116

Table of Contents

I.	Introduction	3
II.	List of Components	6
III.	Additional Materials Required	8
IV.	General Considerations	9
A.	Recommendations for Preventing Contamination	9
В.	General Requirements	9
C.	Sample Requirements	10
D.	Sequencing Analysis Guidelines	11
V.	Protocols	11
A.	Protocol: First-Strand cDNA Synthesis	11
В.	Protocol: PCR1 – Addition of Illumina Adapters and Indexes	13
C.	Protocol: Purification of the RNA-Seq Library Using AMPure Beads	14
D.	Protocol: Removal of Ribosomal cDNA with ZapR and R-Probes	15
E.	Protocol: PCR2 – Final RNA-Seq Library Amplification	16
F.	Protocol: Purification of Final RNA-Seq Library Using AMPure Beads	17
G.	Protocol: Validation Using the Agilent 2100 Bioanalyzer	18
VI.	References	18
Appei	ndix A: Constructing a Magnetic Separation Device for 0.2 ml PCR Tubes	19
Tab	le of Figures	
_	e 1. SMARTer Stranded Total RNA-Seq Kit - Pico Input Mammalian Protocol Overview	
_	e 2. Schematic of the Technology in the SMARTer Stranded Total RNA-Seq Kit - Pico Input Mammalian	
	e 3. Electropherogram Example Results from Agilent 2100 Bioanalyzer	
1 igui	2 4. Constructing a Magnetic Separation Device for 0.2 in Tubes from Rate Latti Magnets	1)
	le of Tables	
Table	1. Cycling Guidelines Based on Amount of Starting Material	16

I. Introduction

SMARTer cDNA Synthesis for Illumina® Sequencing Platforms

The **SMARTer Stranded Total RNA-Seq Kit - Pico Input Mammalian** (Cat. Nos. 635005, 635006 & 635007) includes all components needed to generate indexed cDNA libraries suitable for next-generation sequencing (NGS) on any Illumina platform, with recommended input ranging from 250 pg to 10 ng of total mammalian RNA.

The entire library construction protocol, starting with total RNA, can be completed in about 5 hours (Figure 1). This kit incorporates SMART® (Switching Mechanism At 5' end of RNA Template) technology (Chenchick *et al.*, 1998) and locked nucleic acid (LNA) technology, included as part of the template-switching oligo (TSO). The inclusion of LNA technology into the TSO (LNA-TSO) stabilizes the interaction between the TSO and non-templated nucleotides added by the reverse transcriptase (Picelli *et al.*, 2013). PCR amplification generates Illumina-compatible libraries without the need for adapter ligation. The directionality of the template-switching reaction preserves the strand orientation of the original RNA, making it possible to obtain strand-specific sequencing data from the synthesized cDNA. See Figure 2 for an illustration of the cDNA library construction process.

The SMARTer Stranded Total RNA-Seq Kit - Pico Input Mammalian is compatible with picogram-input samples (250 pg–10 ng of total RNA) regardless of the RNA quality. In order to generate library inserts of an appropriate size for compatibility with Illumina sequencing, high-quality or partially degraded RNA samples are processed to the suitable fragment size prior to cDNA synthesis. For highly degraded, low-quality starting material, the RNA fragmentation step should be skipped. Please refer to the protocol Option 2 (Section V.A.) for guidance on how to proceed if you are skipping the fragmentation step.

Ribosomal RNA (rRNA) comprises a significant proportion (~90%) of total RNA samples. Depleting these abundant transcripts from total RNA samples prior to generating libraries provides benefits by lowering sequencing costs and improving mapping statistics. However, with very low input amounts, initial rRNA depletion from total RNA is not very effective and often leaves an insufficient amount of material for preparation of a good library. The workflow used in this kit takes advantage of a novel technology allowing removal of ribosomal cDNA (cDNA fragments originating from rRNA molecules) after cDNA synthesis using probes specific to mammalian rRNA. These R-Probes hybridize to ribosomal RNA and mitochondrial rRNA sequences; however, the mitochondrial sequences are derived from the human mitochondrial genome and are therefore strictly human specific. The rRNA depletion method used in this kit makes it especially well-suited for working with very small quantities of total RNA.

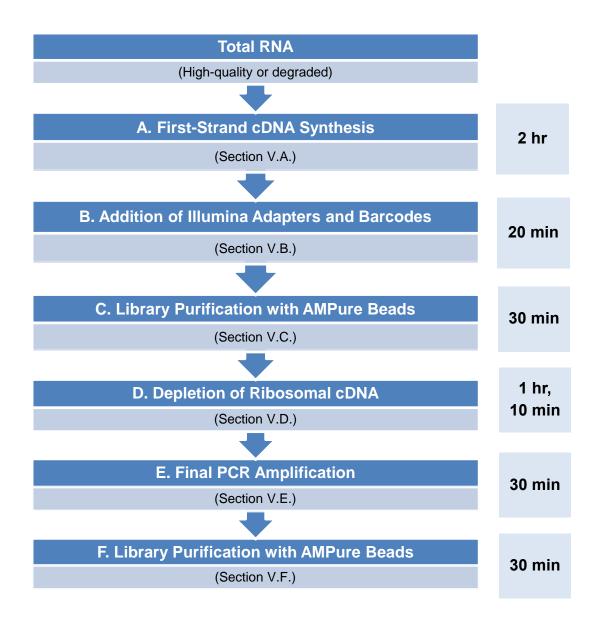


Figure 1. SMARTer Stranded Total RNA-Seq Kit - Pico Input Mammalian protocol overview. This kit features an easy workflow that generates Illumina-compatible RNA-seq libraries in approximately 5 hr. First, total RNA is converted to cDNA (Step A), and then adapters for Illumina sequencing (with specific barcodes) are added through PCR using only a limited number of cycles (Step B). The PCR products are purified (Step C), and then ribosomal cDNA is depleted (Step D). The cDNA fragments from Step D are further amplified (Step E) with primers universal to all libraries (they work regardless of the barcode added in Step B). Lastly, the PCR products are purified once more to yield the final cDNA library (Step F).

(101215) www.clontech.com Page 4 of 19

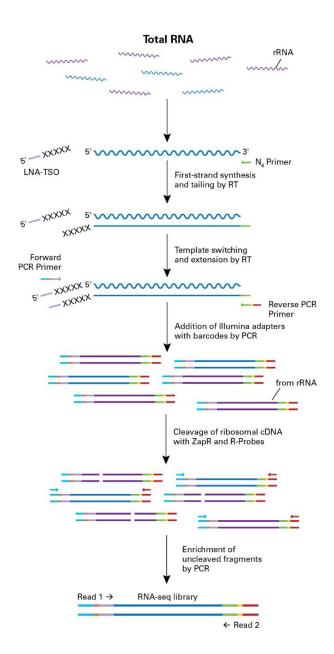


Figure 2. Schematic of the Technology in the SMARTer Stranded Total RNA-Seq Kit - Pico Input Mammalian. SMART technology is used in this ligation-free protocol to preserve strand-of-origin information. Random priming (represented as the green N6 Primer) allows the generation of cDNA from all RNA fragments in the sample, including rRNA. When the SMARTScribe™ Reverse Transcriptase (RT) reaches the 5' end of the RNA fragment, the enzyme's terminal transferase activity adds a few non-templated nucleotides to the 3' end of the cDNA (shown as Xs). The carefully designed LNA-TSO (included in the Template Switching Oligo Mix) base-pairs with the non-templated nucleotide stretch, creating an extended template to enable the RT to continue replicating to the end of the oligonucleotide. The resulting cDNA contains sequences derived from the random primer and the LNA-TSO used in the reverse transcription reaction. In the next step, a first round of PCR amplification (PCR1) adds full-length Illumina adapters, including barcodes. The Forward PCR Primer binds to the LNA-TSO sequence (light purple), while the Reverse PCR Primer binds to sequence associated with the random primer (green). The ribosomal cDNA (originating from rRNA) is then cleaved by ZapR in the presence of the mammalian-specific R-Probes. This process leaves the library fragments originating from non-rRNA molecules untouched, with priming sites available on both 5' and 3' ends for further PCR amplification. These fragments are enriched via a second round of PCR amplification (PCR2) using primers universal to all libraries. The final library contains sequences allowing clustering on an Illumina flow cell (P5 shown in light blue, P7 shown in red), Illumina (TruSeq® HT) indexes (Index 1 [i7] sequence shown in yellow, and Index 2 [i5] sequence shown in orange) as well as the regions recognized by sequencing primers Read Primer 1 (Read 1, purple) and Read Primer 2 (Read 2, green).

Ш. **List of Components**

The SMARTer Stranded Total RNA-Seq Kit - Pico Input Mammalian consists of the SMARTer Stranded Total RNA-Seq Kit - Pico Input Mammalian Components (not sold separately), the Indexing Primer Set HT for Illumina (not sold separately), and SeqAmpTM DNA Polymerase. These components have been specifically designed to work together and are optimized for this particular protocol. Please do not make any substitutions. The substitution of reagents in the kit and/or a modification of the protocol may lead to unexpected results. Please make sure to spin down tubes to collect all the liquid at the bottom before first use.

SMARTer S	tranded Total RNA-Seq Kit - Pico Input	635005	635006	635007
Mammalian		(12 rxns)	(48 rxns)	(96 rxns)
	SMARTer Stranded Total RNA-Seq Kit - Pico (Not sold separately. Storage conditions are listed	•	•	e 2.)
Cap Color	Package 1 (Store at -70°C)			
Red	TSO Mix ^{1, 2}	54 µl	216 µl	432 µl
Blue	R-Probes ¹	12 µl	50 µl	100 µl
Blue	ZapR	15 µl	60 µl	120 µl
	Control Total RNA³ (1 μg/μl)	5 µl	5 µl	5 µl
Package 2 (Store at -20°C)				
Pink	SMART Pico Oligos Mix ¹	12 µl	50 µl	100 µl
Pink	5X First-Strand Buffer	50 µl	200 µl	400 µl
Purple	SMARTScribe RT (100 U/μl)	25 µl	100 µl	200 µl
White	RNase Inhibitor (40 U/µI)	6 µl	25 µl	50 μl
Blue	10X ZapR Buffer	50 µl	200 µl	400 µl
Stranded Elution Buffer		250 μΙ	1 ml	2 x 1 ml
Orange	PCR2 Primers ⁴	25 µl	100 µl	200 µl
Nuclease-Free Water		1.25 ml	2 x 1.25 ml	4 x 1.25 ml
SeqAmp DNA Polymerase ⁵		50 µl	200 µl	2 x 200 µl
	SeqAmp PCR Buffer (2X)	1.25 ml	3 x 1.25 ml	6 x 1.25 ml

¹ Clontech proprietary sequences

WARNING: Do not freeze/thaw ZapR and R-Probes more than 3 times! We recommend aliquoting ZapR and R-Probes into multiple vials to avoid repeated freeze-thaw cycles.

WARNING: The Nuclease-Free Water is used in Steps V.A., V.B., and V.E. When using this kit for the first time, set aside a small amount of water to be used only for first-strand synthesis (Step V.A.). This helps to avoid contamination during the kit's subsequent uses from previously introduced molecules with library adapters from Steps V.B. and V.E.

² TSO Mix contains the template-switching oligo (TSO) with locked nucleic acid (LNA) technology.

³ Control Total RNA is from mouse brain.

⁴ Do not freeze-thaw the PCR2 Primers more than 10 times.

⁵ SegAmp DNA Polymerase is a hot-start enzyme.

Indexing Primer Sets:

Indexing Primer Set version	HT for Illumina - 12	HT for Illumina - 48 A	HT for Illumina
Cat. No.	635005	635006	635007
Size	12 rxns	48 rxns	96 rxns

(Not sold separately. Store at -20°C.)

Forward Primers	F1 ^b		2 x 15 µl	15 µl
12 µM	F2	2 x 15 µl	2 x 15 µl	15 µl
Full names of	F3		2 x 15 µl	15 µl
primers have	F4		2 x 15 µl	15 µl
been shortened ^a	F5		·	15 µl
	F6			15 µl
	F7			15 μl
	F8			15 µl
Reverse Primers	R1	12 µl	12 µl	12 µl
12 µM	R2	12 µl	12 µl	12 µl
Full names of	R3	12 µl	12 µl	12 µl
primers have	R4	12 µl	12 µl	12 µl
been shortened ^a	R5	12 µl	12 µl	12 µl
	R6	12 µl	12 µl	12 µl
	R7	12 µl	12 µl	12 µl
	R8	12 µl	12 µl	12 µl
	R9	12 µl	12 µl	12 µl
	R10	12 µl	12 µl	12 µl
	R11	12 µl	12 µl	12 µl
	R12	12 µl	12 µl	12 µl

^a Full names of primers have been shortened: for example, Forward PCR Primer HT Index 2 has been shortened to F2 and Reverse PCR Primer HT Index 1 has been shortened to R1.

Indexing Primer Set HT for Illumina barcode sequences:

i5 Index (Tube Label)	Barcode Sequence	i7 Index (Tube Label)	Barcode Sequence
F1	TATAGCCT	R1	ATTACTCG
F2	ATAGAGGC	R2	TCCGGAGA
F3	CCTATCCT	R3	CGCTCATT
F4	GGCTCTGA	R4	GAGATTCC
F5	AGGCGAAG	R5	ATTCAGAA
F6	TAATCTTA	R6	GAATTCGT
F7	CAGGACGT	R7	CTGAAGCT
F8	GTACTGAC	R8	TAATGCGC
		R9	CGGCTATG
		R10	TCCGCGAA
		R11	TCTCGCGC
		R12	AGCGATAG

^b F1–F8 correspond to Illumina TruSeq HT indexes D501–D508; R1–R12 correspond to Illumina TruSeq HT indexes D701–D712.

III. Additional Materials Required

The following reagents are required but not supplied. These materials have been validated to work with this protocol. Please do not make any substitutions because you may not obtain the expected results.

- Single-channel pipette: 10 μl, 20 μl, and 200 μl, two each (one for pre-PCR amplification steps and one dedicated for PCR amplification)
- Hot-lid PCR thermal cyclers: two (one dedicated for pre-PCR amplification steps and one dedicated for PCR amplification)
- Multi-channel pipettes: 20 µl and 200 µl (eight- or twelve-channel pipettes are recommended when performing multiple reactions in a single experiment)
- Filter pipette tips: 10 μl, 20 μl, and 200 μl
- Quickspin Minicentrifuge for 0.2 ml tubes
- 96-well PCR chiller rack: IsoFreeze PCR Rack (MIDSCI, Cat. No. 5640-T4) or 96 Well Aluminum Block (Light Labs, Cat. No. A-7079)

NOTE: A PCR chiller rack is essential to keep samples cold during several steps of the protocol. Be sure to decontaminate the ice bucket and the PCR chiller rack before each use.

For PCR Amplification & Validation:

- Agilent High Sensitivity DNA Kit (Agilent, Part Number 5067-4626)
- Qubit dsDNA HS kit (Life Technologies, Cat. No. Q32851)
- Nuclease-free thin-wall PCR tubes (0.2 ml; USA Scientific, Item No. 1402-4700)
- Nuclease-free nonsticky 1.5 ml tubes (USA Scientific, Item No. 1415-2600)

For Purification Using AMPure Beads:

• Agencourt AMPure XP PCR Purification Kit (5 ml; Beckman Coulter, Item No. A63880 or 60 ml; Beckman Coulter, Item No. A63881). Kit size needed depends on the number of reactions performed.

NOTE: The Agencourt AMPure beads need to come to room temperature before the container is opened. Therefore, we recommend aliquoting the beads into 1.5 ml tubes upon receipt, and then refrigerating the aliquots. Individual tubes can be removed for each experiment, allowing them to come to room temperature more quickly (~30 min). This aliquoting process is also essential to minimize the chances of bead contamination.

NOTE: Immediately prior to use, vortex the beads until they are well dispersed. The color of the liquid should appear homogeneous. Confirm that there is no remaining pellet of beads at the bottom of the tube. Mix well to disperse before adding the beads to your reactions. The beads are viscous, so pipette them slowly.

• Magnetic separation device containing rare earth magnets for 0.2 ml tubes (see Appendix A)

IMPORTANT: Very strong magnets produce the best-quality library with the highest yield. See Appendix A for instructions on how to make your own magnetic separation device. In order to prevent cross-contamination, we strongly recommend using separate magnets for library purification in Section V.C. and for post-PCR purification in Section V.F.

• 80% ethanol: freshly made for each experiment

IV. General Considerations

A. Recommendations for Preventing Contamination

- 1. Before you set up the experiment, it is advisable to have three physically separated work stations:
 - **A PCR-clean work station** for all pre-PCR experiments that require clean room conditions such as first-strand cDNA synthesis (Section V.A.)
 - A second work station located in the general laboratory where you will perform PCR1 (Section V.B.) and PCR2 (Section V.E.), and cleave ribosomal cDNA with ZapR and R-Probes (Section V.D.)
 - A third work station located in the general laboratory where you will purify the library (Sections V.C. and V.F.) and measure its concentration (Section V.G.)

IMPORTANT: We recommend three separate work areas in order to avoid contaminating samples with PCR products from previous reactions. Since the PCR primers recognize sequences common to all libraries, setting up new reactions in the same area where the final library cleanup occurs increases the risk of contamination. The PCR-clean work station must be located in a clean room with positive air flow, as contamination may occur very easily. Once contamination occurs, it can be difficult to remove. While the use of three separate work areas is not an absolute requirement, it can greatly minimize contamination and ensure the preparation of great-quality libraries every time.

2. Guidelines for PCR-clean work station operation:

- Only move materials/supplies from the PCR-clean work station to the general lab, NOT
 the other way around. Do not share any equipment/reagents between the PCR-clean work
 station and the general lab work stations.
- Use a separate PCR thermal cycler (dedicated to first-strand cDNA synthesis) inside the PCR-clean work station for first-strand cDNA synthesis.
- Wear gloves and sleeve covers throughout the procedure to protect your RNA samples
 from degradation by contaminants and nucleases. Be sure to change gloves and sleeve
 covers between each section of the protocol.

B. General Requirements

- The success of your experiment depends on the purity of your starting RNA sample. Prior to cDNA synthesis, please make sure that your RNA is free of contaminants.
- The assay is very sensitive to variations in pipette volume, etc. Please make sure that all pipettes are calibrated for reliable reagent delivery and that nothing adheres to the outside of the tips when dispensing liquids.
- All lab supplies related to SMARTer cDNA synthesis need to be stored in a DNA-free, closed cabinet. Ideally, reagents for SMARTer cDNA synthesis should be stored in a freezer/refrigerator that has not previously been used to store PCR amplicons.

- Add enzymes to reaction mixtures last, and thoroughly incorporate them by gently pipetting the reaction mixture up and down.
- Do not change the amount or concentration of any of the components in the reactions; they have been carefully optimized for the SMARTer amplification reagents and protocol.
- If you are using this protocol for the first time, we **strongly recommend** that you perform negative (without RNA) and positive (with provided Control Total RNA) control reactions.
- Because of the large volume and viscosity of the SeqAmp PCR buffer, AMPure bead purification requires a very strong magnet, particularly for the last purification (Step V.F.). Do not only rely on the time indicated; leave samples on the magnet long enough for the samples to be completely clear. (See Appendix A for instructions on how to make your own magnetic stand.)

C. Sample Requirements

Input RNA Quality

Degraded, partially degraded, or high-quality RNA can be used in this protocol. Please determine
the quality of your RNA (RIN score) before starting this protocol using the Agilent RNA 6000
Pico Kit (Cat. No. 5067-1513). The first-strand cDNA synthesis protocol includes a 3–4 min
fragmentation step for partially degraded or high-quality RNA, while the alternate protocol
proceeds without fragmentation for highly degraded RNA, such as material extracted from FFPE
samples. Please refer to Option 2 in Section V.A. for guidance on how to proceed if you are going
to skip the fragmentation step.

Input RNA Purity and Quantity

• **Purity of input RNA:** Input RNA should be free from genomic or carrier DNA and contaminants that would interfere with oligo annealing. Samples should have been treated with DNase I prior to use with this kit, as the random priming used in this protocol may lead to amplification of any DNA present in the starting material.

IMPORTANT: Purified total RNA should be resuspended in Nuclease-Free Water (included), **not in TE or other buffers containing EDTA**. Chelation of divalent cations by EDTA will interfere with RNA fragmentation and the efficiency of reverse transcription.

• Volume and amount of input RNA: This kit accommodates up to 8 μl of input RNA. This protocol has been optimized for cDNA synthesis with 250 pg–10 ng of total mammalian RNA.

NOTE: Inputs in the range of 250 pg to 10 ng of total RNA are recommended. Inputs higher than 10 ng have not been validated. It is strongly recommended that working conditions for your samples be established before trying inputs below the recommended range. For total RNA samples <250 pg, the yield may be low and is highly dependent on the RNA source (e.g., the mRNA content in a particular sample/cell type/tissue) and the strength of the magnet used for bead purification steps. Libraries from <250 pg input RNA will also contain a significantly higher amount of PCR duplicates due to the low complexity of the starting material, and are more likely to contain undesirable environmental contaminants.

Diluting the Control Total RNA

1. Dilute the Control Total RNA (mouse brain) to 50 ng/ μ l by mixing 38 μ l of Nuclease-Free Water with 2 μ l of 1 μ g/ μ l concentrated Control Total RNA in a sterile microcentrifuge tube.

NOTE: Fresh dilutions should be made before use. If desired, make single-use aliquots of the $50 \text{ ng/}\mu\text{l}$ dilution and store at $-70 ^{\circ}\text{C}$ until needed, then further dilute.

- 2. Further dilute Control Total RNA to 5 ng/ μ l by mixing 45 μ l of Nuclease-Free Water with 5 μ l of 50 ng/ μ l Control Total RNA in a sterile microcentrifuge tube.
- 3. Further dilute Control Total RNA to 0.25 ng/µl by mixing 95 µl of Nuclease-Free Water with 5 µl of 5 ng/µl Control Total RNA in a sterile microcentrifuge tube.
- 4. Use 1 μl or more of 0.25 ng/μl Control Total RNA as a positive control RNA input for the kit and proceed alongside your samples.

NOTE: Try to match the amount of Control Total RNA input to the amount of your own samples, and use the same number of PCR cycles. Due to the high quality of the Control Total RNA (RIN >8), a 4 min fragmentation is necessary, regardless of the amount of fragmentation needed for your experimental samples.

D. Sequencing Analysis Guidelines

- The first three nucleotides of the first sequencing read (Read 1) are derived from the templateswitching oligo. These three nucleotides must be trimmed prior to mapping.
- Read 1 is derived from the sense strand of the input RNA. If you are performing paired-end sequencing, Read 2 will correspond to the antisense strand.

V. Protocols

A. Protocol: First-Strand cDNA Synthesis

Fragmentation of RNA into a size appropriate for sequencing on Illumina platforms is performed in the first step of the cDNA synthesis protocol. Fragmentation time is adjusted depending on the quality of the RNA input: 3 min for RIN = 4–6 or 4 min for RIN ≥ 7 . However, degraded RNA samples (RIN = 2–3) should not be further fragmented and instead processed using protocol Option 2 (Without Fragmentation).

For this protocol, you will need the following components: SMART Pico Oligos Mix (pink cap), 5X First-Strand Buffer (RNase-Free) (pink cap), Nuclease-Free Water, Template Switching Oligo Mix (TSO Mix) (red cap), RNase Inhibitor (white cap), and SMARTScribe Reverse Transcriptase (purple cap).

Option 1 (With Fragmentation): Starting from High-Quality or Partially Degraded RNA (RIN ≥4)

1. Mix the following components on ice:

1–8 µl	RNA (0.25–10 ng)
1 μl	SMART Pico Oligos Mix
4 µl	5X First-Strand Buffer (RNase-Free)
0–7 μl	Nuclease-Free Water
13 µl	Total volume per reaction

2. Incubate the tubes at 94° C in a preheated, hot-lid thermal cycler for exactly 3 min (RIN = 4–6) or 4 min (RIN \geq 7), then immediately place the samples on ice (or PCR chiller rack) for 2 min.

NOTE: The samples should be taken out of the thermal cycler immediately after the time indicated in order to avoid over-fragmentation. Make sure to wait by the thermal cycler when the incubation time is over and immediately chill the samples.

NOTE: If your samples are only partially degraded and you are unsure about the RIN value, use a 3 min fragmentation time. Use Option 2 if starting from degraded RNA (RIN = 2-3).

NOTE: The next reaction steps (Step 4–5) are critical for first-strand synthesis and should not be delayed after Step 2. Start Step 3, preparing the First Strand Master Mix, while your tubes are incubating (Step 2), or have it almost ready before starting Step 2.

3. Prepare enough First Strand Master Mix for all reactions, plus 10%, by combining the following reagents on ice, in the order shown:

4.5 µl	Template Switching Oligo Mix (TSO mix)
0.5 µl	RNase Inhibitor
2 µl	SMARTScribe Reverse Transcriptase
7 µl	Total volume per reaction

- 4. Add 7 μl of the First Strand Master Mix to each reaction tube from Step 2. Mix the contents of the tube by gently vortexing or tapping the tubes with your finger, and spin the tubes briefly to collect the contents at the bottom.
- 5. Incubate the tubes in a preheated hot-lid thermal cycler with the following program:

42°C	90 min
70°C	10 min
4°C	forever

Leave the samples in the thermal cycler at 4°C until the next step.

NOTE: For convenience, samples can be left overnight in the thermal cycler at 4°C.

Option 2 (Without Fragmentation): Starting from Highly Degraded RNA (RIN = 2-3)

1. Mix the following components on ice:

```
1–8 μl RNA (0.25–10 ng)
1 μl SMART Pico Oligos Mix
0–7 μl Nuclease-Free Water
9 μl Total volume per reaction
```

- 2. Incubate the tubes at **72**°C in a preheated, hot-lid thermal cycler for exactly 3 min, then immediately place the samples on ice (or PCR chiller rack) for 2 min.
- 3. Prepare enough First Strand Master Mix for all reactions, plus 10%, by combining the following reagents on ice, in the order shown.

```
    4 μl 5X First-Strand Buffer (RNase-Free)
    4.5 μl Template Switching Oligo Mix (TSO mix)
    0.5 μl RNase Inhibitor
    2 μl SMARTScribe Reverse Transcriptase
    11 μl Total volume per reaction
```

- 4. Add 11 μl of the First Strand Master Mix to each reaction tube. Mix the contents of the tubes by gently vortexing or tapping with your finger, and spin the tubes briefly to collect the contents at the bottom.
- 5. Incubate the tubes in a preheated hot-lid thermal cycler with the following program:

42°C 90 min 70°C 10 min 4°C forever

6. Leave the samples in the thermal cycler at 4°C until the next step.

NOTE: For convenience, samples can be left overnight in the thermal cycler at 4°C.

B. Protocol: PCR1—Addition of Illumina Adapters and Indexes

The indexes (barcodes) that are used to distinguish pooled libraries from each other after sequencing are added at this step. Great care must be taken to select the right indexes.

For this protocol, you will need the following components: Nuclease-Free Water, 2X SeqAmp PCR Buffer, SeqAmp DNA Polymerase, and Forward and Reverse PCR Primer HT sets.

1. Prepare a PCR Master Mix for all reactions. Combine the following reagents in the order shown, then mix well and spin the tube briefly in a microcentrifuge:

2 µl	Nuclease-Free Water
25 µl	2X SeqAmp PCR Buffer
1 µl	SeqAmp DNA Polymerase
28 µl	Total volume per reaction

NOTE: If the forward index is going to be the same for all libraries, the Forward Primer can also be added to the master mix (1 μ l/reaction). Typically, a single forward index can be used if fewer than 12 libraries will be pooled for sequencing.

- 2. Add 28 μl (29 μl if the Forward Primer is included) of PCR Master Mix to each sample from Step A.6.
- 3. Add 1 µl of each Forward and Reverse PCR Primer HT to each sample. Mix by gentle vortexing or tapping of the tubes, then spin down briefly.
- 4. Place the tubes in a preheated hot-lid thermal cycler. Perform PCR using the following program:

94°C	1 min
5 cycles:	
98°C	15 sec
55°C	15 sec
68°C	30 sec
68°C	2 min
4°C	forever

C. Protocol: Purification of the RNA-Seq Library Using AMPure Beads

The amplified RNA-seq library is purified by immobilization onto AMPure beads. The beads are then washed with 80% ethanol and the cDNA is eluted in Nuclease-Free Water.

For this protocol, you will need the following components: AMPure beads (at room temperature), 80% ethanol (freshly prepared), Nuclease-Free Water, and a magnetic separation device.

1. Allow AMPure beads to come to room temperature before use (\sim 30 min). Add 45 μ l of AMPure beads to each sample.

NOTE: Mix by vortexing for 5 sec (recommended) or by pipetting the entire volume up and down at least 10 times. The beads are viscous; pipette the entire volume up and then out slowly.

- 2. Incubate at room temperature for 8 min to allow the DNA to bind to the beads.
- 3. Briefly spin the sample tubes to collect the liquid at the bottom. Place the sample tubes on the magnetic separation device for 5 min or longer, until the solution is completely clear.
- 4. While the tubes are sitting on the magnetic stand, pipette out the supernatant and discard.
- 5. Keeping the tubes on the magnetic stand, add 200 µl of **freshly made** 80% ethanol to each sample, without disturbing the beads, to wash away contaminants. Wait for 30 sec and carefully pipette out and discard the supernatant. cDNA will remain bound to the beads during the washing process.
- 6. Repeat Step 5 once.
- 7. Perform a brief spin of the tubes (~2,000 x g) to collect the remaining ethanol at the bottom of each tube. Place the tubes on the magnetic stand for 30 sec, then carefully remove any remaining ethanol with a pipette, without disturbing the beads.
- 8. Let the open sample tubes rest at room temperature for $\sim 3-5$ min until the pellets appear dry.

NOTE: You may see a tiny crack in each pellet when dry. Do not overdry.

- 9. Once the beads are dry, add $52 \mu l$ of Nuclease-Free Water to cover the beads. Remove the tubes from the magnetic stand and mix thoroughly by pipetting up and down until all the beads have been washed off the sides of the tubes.
- 10. Incubate at room temperature for 5 min to rehydrate.
- 11. Briefly spin the sample tubes. Place the sample tubes on the magnetic separation device for 1 min or longer, until the solution is completely clear.
- 12. Pipette 50 µl supernatant from each sample into respective wells of a new 8-well strip.
- 13. Perform a second bead clean-up by repeating Steps 1–8.

NOTE: Drying of the beads (Step C.8) will be faster the second time. 1–2 min should be sufficient. Do not overdry.

- 14. Once the beads are dried, add 18 μ l of Nuclease-Free Water to cover the beads. Remove the tubes from the magnetic stand and mix thoroughly by pipetting up and down or by gently tapping the tubes to resuspend the beads.
- 15. Incubate at room temperature for 5 min to rehydrate.
- 16. Briefly spin the sample tubes. Place the sample tubes on the magnetic separation device for 1 min or longer, until the solution is completely clear.
- 17. Label a new strip of 8-strip nuclease-free 0.2-ml thin wall PCR tubes.
- 18. Pipette out 16 µl of each supernatant, being careful not to disturb the beads, into respective tubes of the new PCR strip. Keep samples on ice (or PCR chiller rack) until the next step.

NOTE: This step can be performed with a multi-channel pipette.

D. Protocol: Depletion of Ribosomal cDNA with ZapR and R-Probes

In this section, the library fragments originating from rRNA (18S and 28S) and mitochondrial rRNA (m12S and m16S) are cut by ZapR in the presence of R-Probes (mammalian-specific). These R-Probes hybridize to ribosomal RNA and mitochondrial rRNA sequences; however, the mitochondrial sequences are derived from the human mitochondrial genome and are therefore strictly human specific.

For this protocol, you will need the following components: R-Probes (blue cap), ZapR (blue cap), and 10X ZapR Buffer (blue).

- 1. Thaw R-Probes, ZapR, and ZapR buffer at room temperature. Place R-Probes and ZapR on ice as soon as they are thawed, but keep the buffer at room temperature.
- 2. Pipette into a PCR tube an R-Probes aliquot large enough for the number of reactions desired (1 μ l per reaction), plus 5–10% to account for pipetting errors.
- 3. Incubate the PCR tube containing R-Probes at 72°C in a preheated hot-lid thermal cycler using the following program:

72°C 2 min 4°C forever

- 4. Leave the R-Probes tube in the thermal cycler at 4°C for at least 2 min, but no more than 10 minutes, before using it in next step.
- 5. Prepare enough Master Mix for all reactions, plus 10%, by combining the following reagents at room temperature in the order shown. Store ZapR and R-Probes components at -70°C immediately after use. Mix the components well and spin the tubes briefly in a microcentrifuge.

2 μl 10X ZapR Buffer
1 μl R-Probes
1.25 μl ZapR
4.25 μl Total volume per reaction

- 6. Add 4.25 μ l of the Master Mix to the purified RNA-seq libraries from Step C.18. The total volume is now 20.25 μ l.
- 7. Mix the contents of the tubes by gently tapping, and spin the tubes briefly to collect the contents at the bottom.
- 8. Incubate the tubes in a preheated hot-lid thermal cycler using the following program:

37°C 60 min 72°C 10 min 4°C forever

E. Protocol: PCR2—Final RNA-Seq Library Amplification

In this section, the library fragments not cleaved by the ZapR reaction in section D will be further enriched in a second round of PCR. Since barcodes have already been added to the libraries, a single pair of primers can be used for all libraries.

For this protocol, you will need the following components: Nuclease-Free Water, 2X SeqAmp PCR Buffer, PCR2 Primers (orange cap), and SeqAmp DNA Polymerase.

1. Prepare a PCR Master Mix for all reactions (plus 10%). Combine the following reagents in the order shown, then mix well and spin the tubes briefly in a microcentrifuge:

26 µl	Nuclease-Free Water
50 μl	2X SeqAmp PCR Buffer
2 μl	PCR2 Primer mix
2 µl	SeqAmp DNA Polymerase
80 µl	Total volume per reaction

NOTE: Do NOT reduce the reaction volume. The ~100 µl final volume is important for yield.

- 2. Add 80 µl of PCR Master Mix to each tube from Step D.8. Mix by tapping gently, then spin down.
- 3. Place the tubes in a preheated hot-lid thermal cycler. Perform PCR using the following program:

94°C	1 min
12–16 cycles:	
98°C	15 sec
55°C	15 sec
68°C	30 sec
4°C	forever

NOTE: The actual number of cycles varies depending on the starting material. The guidelines below must be validated with your material. We do not recommend performing more than 16 cycles, as it will lead to background amplification. We recommend that you perform a pilot experiment with a small number of samples to determine the optimal number of cycles for your input material.

Table 1. Cycling Guidelines Based on Amount of Starting Material.

Amount of Input RNA (ng)	Typical Number of PCR Cycles
10	12
1	14–15
0.25	16

F. Protocol: Purification of Final RNA-Seq Library Using AMPure Beads

The amplified RNA-seq library is purified by immobilization onto AMPure beads. The beads are then washed with 80% ethanol and eluted in Stranded Elution Buffer.

For this protocol, you will need the following components: AMPure beads (at room temperature), 80% ethanol (freshly prepared), Stranded Elution Buffer, and a magnetic separation device.

1. Allow AMPure beads to come to room temperature before use (~30 min). Add 100 μl of AMPure beads to each sample.

NOTE: Mix by vortexing for 5 sec or by pipetting the entire volume up and down at least 10 times. The beads are viscous; pipette the entire volume up, and then out slowly.

- 2. Incubate at room temperature for 8 min to let the cDNA bind to the beads.
- 3. Briefly spin the sample tubes to collect the liquid at the bottom. Place the sample tubes on the magnetic separation device for 5–10 min or longer, until the solution is completely clear.

NOTE: This step will take more time than in Protocol C (Section V.C.) due to the high volume.

- 4. While the tubes are sitting on the magnetic stand, pipette out the supernatant and discard.
- 5. Keep the tubes on the magnetic stand. Without disturbing the beads, add 200 µl of **freshly made** 80% ethanol to each sample to wash away contaminants. Wait for 30 sec and carefully pipette out the supernatant. cDNA will remain bound to the beads during the washing process.
- 6. Repeat Step 5 once.
- 7. Perform a brief spin of the tubes (~2,000 x g) to collect the remaining ethanol at the bottom of each tube. Place the tubes on the magnetic stand for 30 sec, then carefully remove all remaining ethanol with a pipette, without disturbing the beads.
- 8. Let the sample tubes rest open at room temperature for ~10 min until the pellets appear dry.

NOTE: You may see a tiny crack in each pellet. Do not overdry.

9. Once the beads are dry, add 20 μ l of Stranded Elution Buffer to cover the beads. Remove the tubes from the magnetic stand and mix thoroughly by pipetting up and down several times until all the beads have been washed off the sides of the tubes.

NOTE: Consider eluting in 12 µl instead of 20 µl if anticipated yield is low.

- 10. Incubate at room temperature for 5 min to rehydrate.
- 11. Briefly spin the sample tubes. Place the sample tubes on the magnetic separation device for 2 min or longer, until the solution is completely clear.
- 12. Transfer the supernatants to nonsticky tubes. Proceed to validation immediately or store at -20°C.

G. Protocol: Validation Using the Agilent 2100 Bioanalyzer

- 1. Quantify libraries with Qubit dsDNA HS kit (Life Technologies). A yield >3 ng/μl will provide enough material for further library validation and sequencing. Consider adding one PCR cycle in subsequent experiments if yield is insufficient, or reducing cycles if yield is more than 10 ng/μl. Eluting the final libraries in a smaller volume (e.g., 12 μl instead of 20 μl) is also a simple way to achieve more concentrated libraries.
- 2. Evaluate library size distribution by running samples on the Agilent 2100 Bioanalyzer using the Agilent High Sensitivity DNA Kit (Agilent, Part Number 5067-4626) or an equivalent microfluidic device/kit. Dilute libraries to about 1.5 ng/μl prior to loading the chip (for a consistent library-to-library profile). See Figure 3 for an example of a successful library.
- 3. Compare the results for your samples and controls (if performed) to determine whether samples are suitable for further processing. Successful cDNA synthesis and amplification should produce a distinct curve spanning 200–1,000 bp, with a local maximum at ~300–400 bp, in the positive control RNA sample (see Figure 3A) and no product or very minimal background over the corresponding range in the negative control (see Figure 3B).

NOTE: Library preparation adds 139 bp to the size of the original RNA molecules.

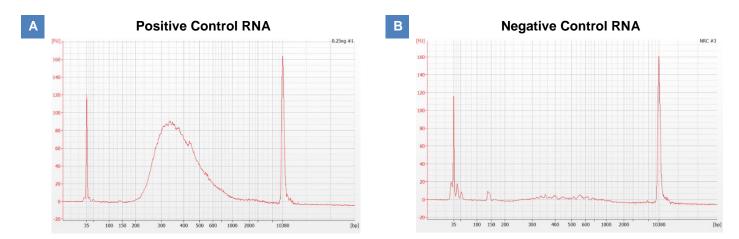


Figure 3. Electropherogram example results from the Agilent 2100 Bioanalyzer. Libraries were generated using 0.25 ng Control Total RNA (mouse brain; Panel A—1:3 library dilution) and a no-RNA control (Panel B—no library dilution). For both examples, PCR2 was performed using 16 cycles. Note that the no-RNA control exhibits a small amount of background (indicated by minimal product in the 200–1,000 bp range), which is acceptable as long as the libraries from the RNA samples contain a significantly larger amount of material.

VI. References

Chenchik, A., *et al.* (1998) In RT-PCR Methods for Gene Cloning and Analysis. (BioTechniques Books, MA), pp. 305–319.

Picelli, S., *et al.* (2013) Smart-seq2 for sensitive full-length transcriptome profiling in single cells. *Nat. Methods*. **10:**1096–1098.

Appendix A: Constructing a Magnetic Separation Device for 0.2 ml PCR Tubes

It can be difficult to find magnetic separation devices designed specifically to handle 0.2-ml PCR strip tubes. Often, one can place strip tubes in a column/row of a magnetic separation device designed for use with 96-well plates. Alternatively, one can construct a suitable low-cost separation device from common laboratory materials.

Building a 0.2-ml tube magnetic separation device from rare earth bar magnets and a tip rack

As seen in Figure 4, neodymium bar magnets are taped together on the underside of the top section of a 20-µl tip rack (Panel A), and the rack is inverted so the tubes can be inserted (Panel B).





Figure 4. Constructing a magnetic separation device for 0.2-ml tubes from rare earth magnets. (Panel A) Six 0.75" x 0.25" x 0.5" neodymium bar magnets (Applied Magnets, Model # NB026) taped together on the underside of the top section of a 20-µl tip rack. (Panel B) The upright rack, with an 8-tube strip of 0.2-ml tubes inserted.

Contact Us For Assistance		
Customer Service/Ordering	Technical Support	
Telephone: 800.662.2566 (toll-free)	Telephone: 800.662.2566 (toll-free)	
Fax: 800.424.1350 (toll-free)	Fax: 650.424.1064	
Web: www.clontech.com	Web: www.clontech.com	
E-mail: orders@clontech.com	E-mail: tech@clontech.com	

Notice to Purchaser

Our products are to be used for research purposes only. They may not be used for any other purpose, including, but not limited to, use in drugs, *in vitro* diagnostic purposes, therapeutics, or in humans. Our products may not be transferred to third parties, resold, modified for resale, or used to manufacture commercial products or to provide a service to third parties without prior written approval of Clontech Laboratories, Inc.

Your use of this product is also subject to compliance with any applicable licensing requirements described on the product's web page at http://www.clontech.com. It is your responsibility to review, understand and adhere to any restrictions imposed by such statements.

Illumina and TruSeq are trademarks of Illumina, Inc.

Clontech®, the Clontech logo, SeqAmp, SMART, SMARTer, and SMARTScribe are trademarks of Clontech Laboratories, Inc. All other marks are the property of their respective owners. Certain trademarks may not be registered in all jurisdictions. Clontech is a Takara Bio Company. ©2015 Clontech Laboratories, Inc.

This document has been reviewed and approved by the Clontech Quality Assurance Department.