

Project Smores

Full Build Plan — Modular Lift-Out Design

Contents

- 0. Measurements to Take
- Renders
- 1. Overview
- 2. Dimensions & Layout
- 3. Full Lumber Sizing & Cut List
- 4. Bill of Materials (BOM)
- 5. Power Cord Routing
- 6. Illustrated Build Manual — By Component
- 7. Induction Cooktop & Power Strip Design
- 8. Modular Lift-Out Design & Weight
- 9. Seat Removal & Reinstall (Camper ↔ Passenger Mode)
- License
- Appendix A — Build Sequence & Assembly Order
- Appendix B — Materials Shopping List
- Appendix C — Cut List (consolidated)
- Appendix D — Leveling: Block Calculator
- Appendix E — Weight Budget & Weight-Distribution Analysis
- Appendix F — Nighttime Van + Tent Cooling Setup

Project Smores — Full Build Plan



Free to view, share, and build from for personal, non-commercial use only. Commercial use, resale, or redistribution for profit is prohibited without prior written permission. © 2026 JJJJJ Enterprises, LLC — all rights reserved.

Two-person setup, 2nd row seats **removed entirely** (3rd row folded flat; seat removal/reinstall procedure incl. the SRS airbag emulators: Section 9). Layout, tailgate to front seats: **Kitchen (Panel C's fridge/kitchen void) → Rear pantry (prefab drawers on Panel C's deck) → Bed (Panel B + Panel A) → front seats**. The rear pantry is a **prefab drawer cluster** (owner, July 2026): a 2x2 array of IRIS USA 12"W stackable drawers sitting on the tailgate end of Panel C's deck, held by a cleat pocket + a cam strap, with a pot/pan crate in the ~21.8" of open deck beside it — nothing built, ~27 lb lighter, and each drawer unit lifts straight out (Component 1). Panel A and B have no top of their own (capped by the one-piece bed frame), while Panel C keeps its fixed top — **recessed flush into its rail plane** (the deck ply drops between the rails onto cleats; Panels A/B run 16.25" legs vs Panel C's 17", so the platform on their rails lands in the same flush 18.5" plane — ¾" more headroom) — forming one continuous deck with 80" of sleeping length for the HEST Dually Long mattress (78" x 50" x 4") (Panel A now sits flush with the front seatbacks, using up the floor space that used to sit empty in front of it). Panel B is a bare-frame deep-storage bay — the side doors don't reach it, so it has no drawers and loads from above by lifting the platform; Panel A holds a right drawer (EcoFlow DELTA 3) plus a left open-storage bay (EcoFlow WAVE 3, no drawer box); Panel C's under-deck void instead houses a real BougeRV compressor fridge and a real JAGAHABA slide-out camp kitchen, both on heavy-duty slides pulling straight out the open tailgate — bought products, not built from plywood — plus a shallow slide-out **kitchen drawer** hung under the deck in the dead air above the kitchen unit. The fridge and its cooling fans run off the EcoFlow DELTA 3 stack (Panel A) via their own DC line, so they keep running when people are away from the van regardless of ignition state; the DELTA 3 itself gets AC-charged from the front console outlet while driving, while the induction cooktop and Power strip 1 plug into the van's REAR AC outlet (back passenger area — verified to exist), right beside them: two short cords, no seam crossings.

0. Measurements to Take

Start here once you have the van (2nd row out), the fridge, and the kitchen unit in hand. Every number below either says UNVERIFIED somewhere in this plan (an estimate that drives real cut dimensions) or came from an online listing/photo rather than a hands-on measurement. All of them feed directly into `params.scad` — update the value there, re-run `./render.sh`, and every diagram, cut list, and BOM total in this plan updates to match. If a measurement comes in smaller than the estimate, the `assert()` guards in `params.scad` will fail loudly (not silently overflow the van) until the design is adjusted.



The van (once the 2nd row is physically out)

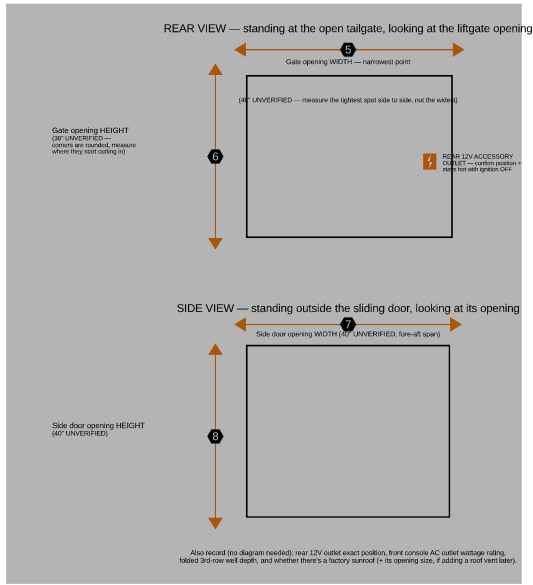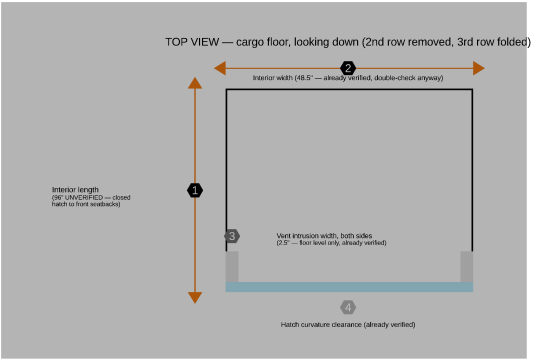

Measurement guide: the van

#	Measure	Goes in params.scad as	Current estimate	Your measurement
1	Interior length, closed hatch to front seatbacks	van_interior_length	96" — UNVERIFIED	
2	Interior width, between wheel wells	van_interior_width	48.5" — already verified	
—	Interior height, floor to headliner	van_interior_height	44" — already verified	
3	Vent intrusion width, each side (floor level)	vent_intrusion_width	2.5" — already verified	
4	Hatch curvature clearance	hatch_curvature_clearance	2" — already verified	
5	Gate opening width — the narrowest point, not the widest	gate_opening_width	48" — UNVERIFIED	
—	Interior wall-to-wall width at ~18.5" AND ~22.5" above the floor, along the whole 80" sleeping run	gates_bed_frame_width (52" platform needs >=53" at platform height — the 48.5" figure is the FLOOR pinch between the wheel wells; the walls are wider up here)	— UNVERIFIED, the platform-width gate	
6	Gate opening height — where the rounded corners start cutting in	gate_opening_height	36" — UNVERIFIED	
7	Side door opening width (fore-aft span)	side_door_opening_width	40" — UNVERIFIED	
8	Side door opening height	side_door_opening_height	40" — UNVERIFIED	
—	Rear 12V accessory outlet — exact position	(no longer used by this design — the fridge and fan system now run off the DELTA 3 stack instead, Section 1. Informational only, not a blocker.)	—	
—	Front console AC outlet — wattage rating	(Section 1/7 — drives the DELTA 3's AC charge rate and the cooktop's power check)	1500W — VERIFIED	1500W
✓	AC outlets — VERIFIED: 2 total, both fed by the one 1500W inverter. Front: center console. Rear: passenger-side rear quarter trim — ~9.5" above the cargo floor, ~10" forward of the liftgate scuff plate, socket center ~16" laterally in from the right sidewall; directly above the 12V battery access panel, below the rear cup holders. NEW verify item: confirm the quarter trim (cup holders) doesn't intrude inboard of the 46" deck width at deck height near that corner	(Section 5 — cooktop + Power strip 1 plug into the rear outlet via a 2-way tap; DELTA 3 charging has the front outlet; all share the one 1500W inverter budget)	—	
—	Folded 3rd-row well depth	(confirms leg_height — 17" on Panel C, fridge-driven; A/B legs are 16.25", deck recess — actually clears it)	—	
—	Factory sunroof present? Opening size if so	(only relevant if you pursue a roof vent later)	—	
9	Cargo floor level — does it slope front-to-back, or is it flat?	(not currently modeled — every module's 4 legs are the same leg_height, which only gives a level deck if the floor itself is level)	assumed flat — UNVERIFIED	
—	Side sliding door — usable clear width AND height at the door's actual stopping point, not just the rough opening	side_door_opening_width / side_door_opening_height	40" / 40" — UNVERIFIED (see the reachability note in Section 1 — this number decides whether the DELTA 3 stack stays in Panel A or needs to move)	

The fridge (BougeRV) and kitchen unit (JAGAHHA), once purchased

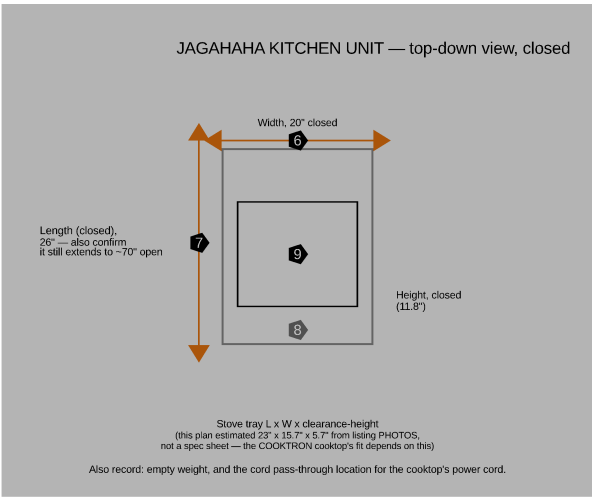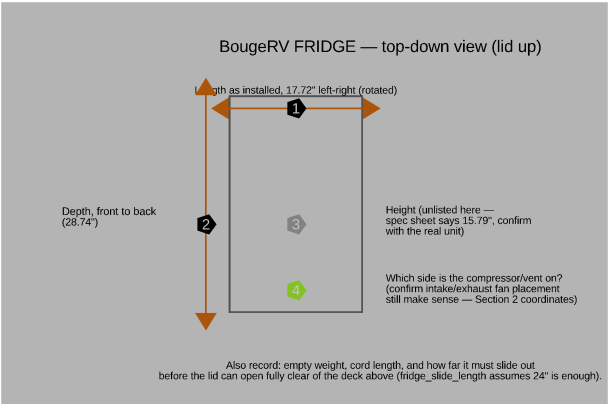

Measurement guide: fridge and kitchen

#	Measure	Goes in <code>params.scad</code> as	Listing spec (unverified)	Your measurement
1	Fridge length as installed (left-right, the 450mm side)	<code>fridge_ext_length</code>	17.72"	17¾" (owner, July 2026 — matches)
2	Fridge depth, front to back incl. handles	<code>fridge_ext_width</code>	28.74" (body 28.03")	27¾" (owner, July 2026 — ~1" under; hard to tape a rounded-corner case square, and easy to undercount how far the handle protrudes. Spec used, since the tray is already cut to it.)
3	Fridge height	<code>fridge_ext_height</code>	15.79"	15½" (owner, July 2026 — matches within rounded-corner tolerance)
4	Which side is the compressor/vent on?	(confirms the intake/exhaust fan placement in Section 2 still makes sense)	—	
5	Fridge empty weight	(Section 8 weight table)	40.6 lb (18.4 kg, manual)	
5b	Floor vents at Panel C's REAR corners	Panel C's rear legs sit at the TRUE corners now	must be vent-free for ~4"	
—	Fridge cord length	(confirms it reaches the new DC line's connection point inside Panel C's void — Section 5)	—	
—	Fridge slide clearance — how far it must come out before the lid opens fully	<code>fridge_slide_length</code> (confirms 24" is enough)	24" slide	
6	Kitchen unit width, closed	<code>kitchen_box_width</code>	20"	
7	Kitchen unit length, closed	<code>kitchen_box_length</code>	26"	
8	Kitchen unit height, closed	<code>kitchen_box_height</code>	11.8"	
9	Stove tray length x width x clearance height	(Section 7 — the COOKTRON cooktop's fit depends on this; the current numbers came from listing photos, not a spec sheet)	23" x 15.7" x 5.7"	
10	Kitchen unit empty weight	(Section 8 weight table)	~45 lb	
—	Cord pass-through location for the cooktop's power cord	(Section 5/6 cord routing)	—	
—	Confirm it still extends to ~70" open	(sanity check — this happens outside the vehicle, doesn't affect interior length)	~70"	

The rear floor under Panel C — is there even floor to bolt to? (UNVERIFIED — check BEFORE buying anchors or drilling anything)

The problem (owner, July 2026, from a photo of the actual cargo area): the rearmost stretch of the Sienna — exactly where Panel C, the fridge slide, and the kitchen unit live — is not plain sheet-metal floor. It's the 3rd-row stowage area: a **deep cargo well** the folded seatbacks drop into, so much of the "floor" back there is actually **folded seatback over a void**, plus the seats' own latch/hinge hardware and (passenger rear corner) the hybrid's 12V battery access panel. The whole E-track plan in Section 8 assumes 8 anchors through-bolted into *structural floor pan* at Panel C's footprint — **nobody has yet confirmed that drillable pan actually exists at those 8 X/Y positions**. A 1000 lb-rated anchor bolted through a seatback, a plastic well liner, or thin trim over a void is worth nothing. This section is what settles it — do it with the 3rd row folded exactly as it will sit in camper mode.

#	Measure / check	Feeds	Current assumption	Your finding
F1	With the 3rd row folded flat, map the load surface: press/knock along the whole Panel C footprint and mark (masking tape) where it's folded SEATBACK , where it's the well/tub (hollow underneath), and where it's carpet over solid pan	The entire Section 8 anchor plan	assumed all solid pan — UNVERIFIED	
F2	Fore-aft position of the stowage well: where its front and rear edges sit, measured from the closed hatch (same Y datum as measurement #1)	Whether ANY of the 8 anchor X/Ys (fridge install detail, Section 2) land on real pan	—	
F3	Well depth below the surrounding load floor, and its width	Whether the well floor itself (its bottom is structural) could take the anchors instead, on standoffs/spacers	—	
F4	At each of the 8 planned anchor positions specifically: solid pan / well void / seat hardware / liner?	Go–no-go per anchor; relocate any that miss	—	
F5	Where Panel C's 4 legs and the kitchen unit's footprint actually bear: solid floor, or folded seatback (springy — a deck leg on seat cushion won't sit level or solid)?	<code>leg_height</code> , deck levelness, kitchen strap-down	—	
F6	Does exposing real pan require REMOVING the 3rd row rather than folding it? If so: does the 3rd row carry its own SRS/seatbelt-pretensioner wiring?	Section 9 covers 2nd-row removal only — a 3rd-row removal procedure (and possibly more emulators) would be NEW scope	assumed fold-only — UNVERIFIED	
F7	Match top-side positions to the underside: crawl under and confirm what's directly below each candidate anchor spot (fuel tank, lines, spare area, exhaust)	Section 8's pre-drill clearance check, done at the SAME 8 spots F4 approves	—	

Photos to take while you're in there (each one answers a specific question later, at the workbench, without crawling back in):


1. **Wide shot from the open tailgate**, 3rd row folded as it will sit in camper mode, with a tape measure laid fore-aft along the floor from the hatch — establishes the Y datum every other photo hangs off.
2. **Carpet/liner pulled back at the tailgate end** — what's actually under it: painted steel, a plastic tub, or the seat mechanism.
3. **Straight-down shot into the stowage well** (seats up if needed) with the tape showing its depth and its front edge's distance from the hatch.
4. **Close-ups of the seat latch/hinge hardware** anywhere it falls inside Panel C's 36" footprint — this is what an anchor or a deck leg would be fighting for space with.
5. **The passenger rear corner** showing the 12V battery access panel — the one spot already ruled out for anchors (Section 8).
6. **From under the van, the same area looking up** — fuel/brake lines, tank, exhaust, spare — framed so it can be lined up against photo 1's tape datum. This pairs with F7.

If F1–F4 come back "no solid pan where the anchors want to be," the securing plan in Section 8 has to change before anything else proceeds — candidate fallbacks to evaluate *against what you find* (not decided here): move the anchors to wherever pan really exists and bridge to the slide rails with longer steel angle; bolt into the well's bottom with standoff spacers; or use the 3rd row's own seat-mount points (they're the strongest hardpoints in that whole area, engineered for crash loads — but that likely means removing the 3rd row, which triggers F6). Every one of those changes geometry that `params.scad` currently takes on faith, so settle this measurement before cutting Panel C.

Renders


Parametric 3D model: `platform.scad` (dimensions in `params.scad` — edit one file to regenerate every view via `./render.sh`).

Whole-Vehicle Overview

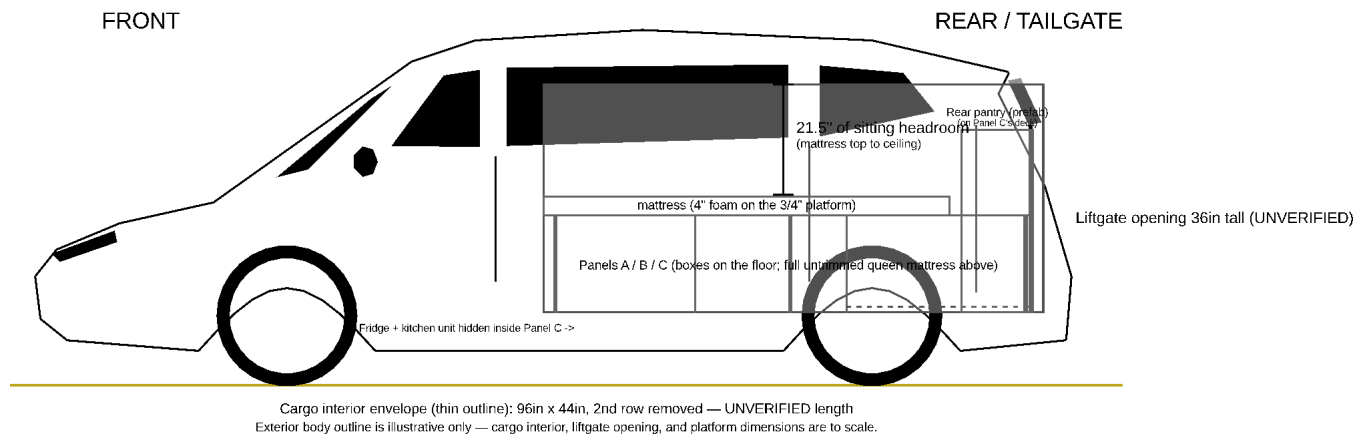


Side profile of the van itself (illustrative exterior body outline — hood, windshield, roofline, tailgate, wheels) with the cargo interior envelope, liftgate opening, and platform assembly drawn to scale inside it. Front at left, tailgate at right.

Overhead Floorplan

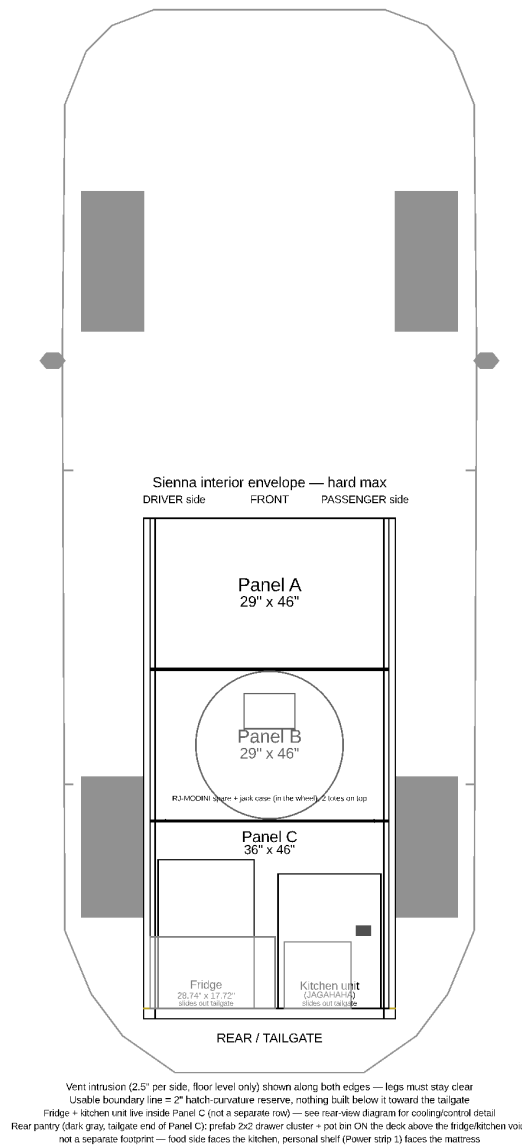

Top-down view: Panel A/B/C plus the fridge and kitchen unit living inside Panel C's footprint, drawn to scale inside the interior envelope. Front of the vehicle is at the top, tailgate at the bottom.
Seam bumpers, alignment pins, and grab-handle positions are all marked.

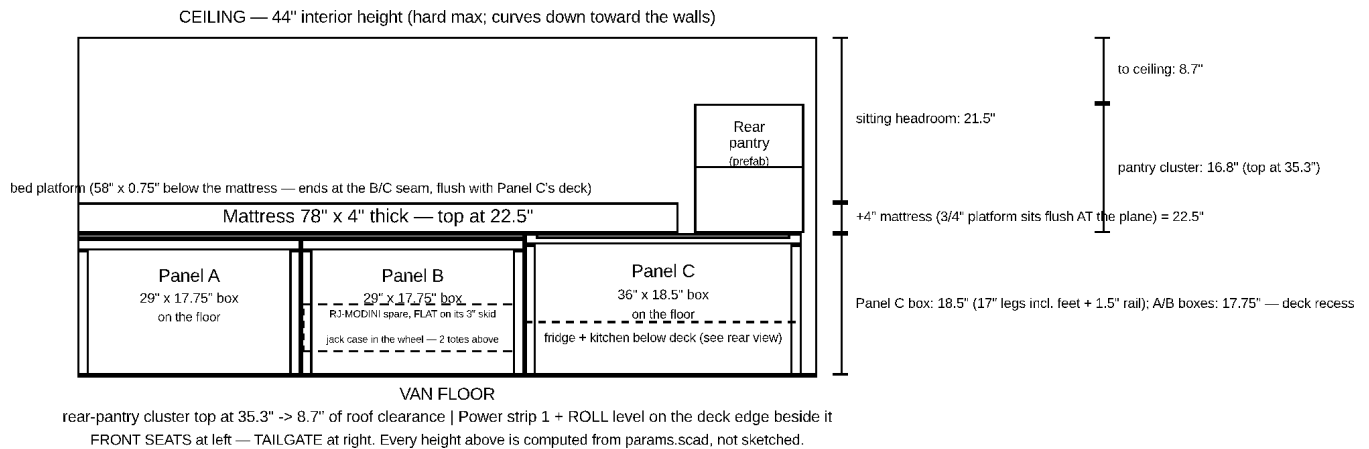


Side profile

The interior envelope used for fit checks (Section 1: 96" x 48.5" x 44" — the 96" length is an UNVERIFIED estimate) is a simplified rectangular box — the real hatch curvature, vent shapes, and wall taper aren't modeled beyond the reserves called out in `params.scad`.

Rear view, looking forward from the open tailgate at Panel C with the fridge and kitchen unit both stowed for driving:


Sienna interior envelope (width x height) — hard max

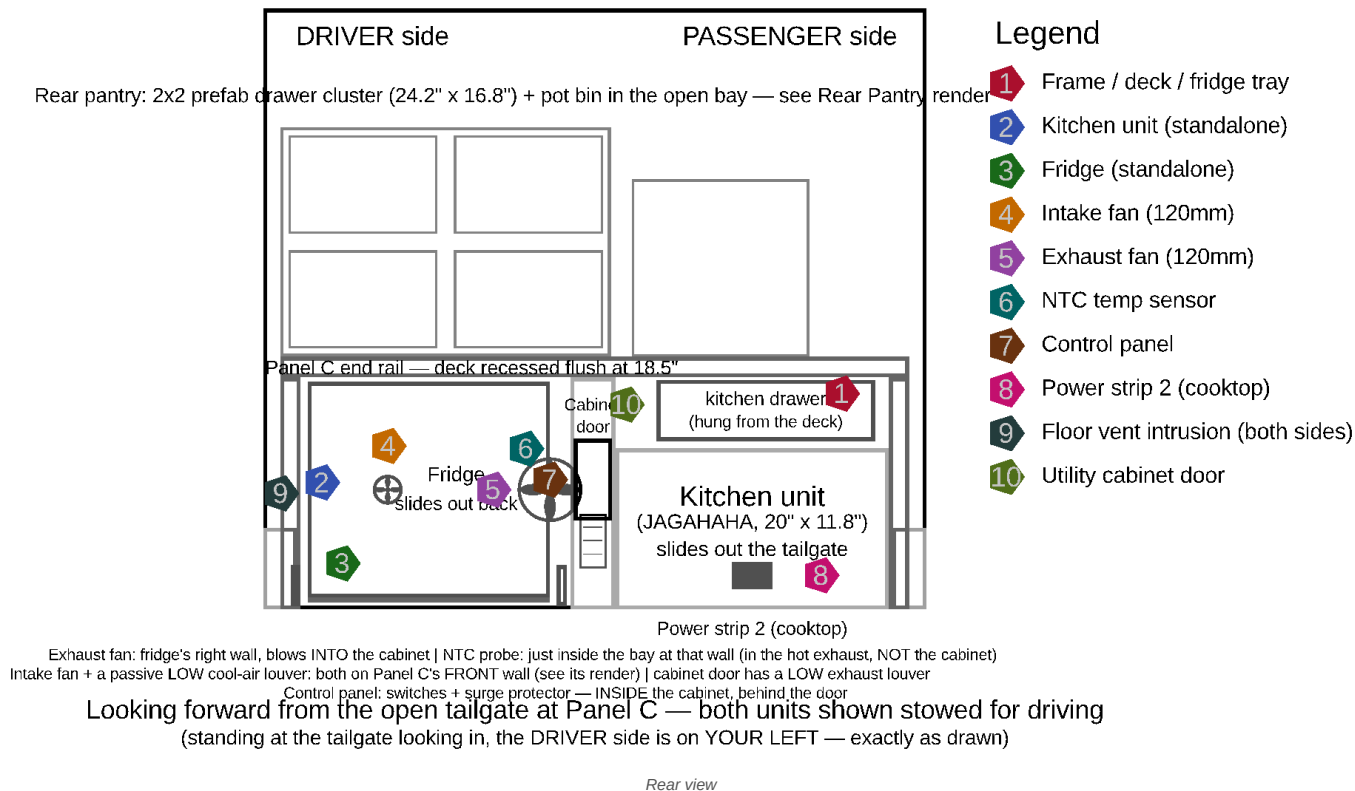

Fridge Installation Detail

The rear view above is too small-scale to label the fridge's 2 cooling fans and temperature sensor clearly. This top-down detail of Panel C zooms in on just that area, with numbered markers and a coordinate list (see Section 2 for the coordinate system and the full component coordinate table):

(4 is INSIDE the cabinet behind the door — Z in the list. CO monitor + fire extinguisher: owner-placed, not located here)

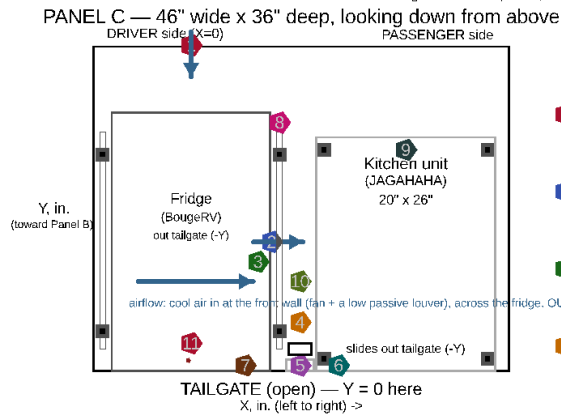

Component

Position / fastener


- 1 Intake fan (120mm) — blows IN
X=10.86 Y=36 (Panel C's FRONT wall) Z=8.8
4x M4x20 machine screws over the wall's fan hole (Front Wall render)
- 2 Exhaust fan (120mm) — blows INTO the cabinet
X=19.72 Y=14.4 Z=8.8
4x M4x20 machine screws, 105mm bolt circle, into a plywood fan ring
- 3 NTC temp sensor
X=18.22 Y=12.2 Z=8.8
adhesive thermal pad or 1x #4 screw through its bracket tab
- 4 Control panel enclosure
X=21.5-24.3 Y=-2 Z=6.5-12.5 — INSIDE the cabinet
backer board (3/4" offcut) hung from the deck; 4x #8x1" screws
- 5 Cabinet door
X=21.2-24.5 Y=0-1.5
1/2" ply panel, closes the kitchen/fridge gap (not airtight — by design)
- 6 Door hinges (x2)
on the kitchen-side (high-X) edge
2x small butt hinges, 4x #6x5/8" screws each
- 7 Door catch
on the fridge-side (free) edge
1x magnetic or roller catch, 2x #6x5/8" screws
- 8 Fridge slide floor anchors (x4)
E-track, 2 per slide rail, front+back of each rail line BESIDE the tray (side-mount)
1000lb WLL each — 2x 5/16" carriage bolts through the floor per anchor
- 9 Kitchen floor anchors (x4)
E-track, one per corner
1000lb WLL each — 2x 5/16" carriage bolts through the floor per anchor
- 10 WAVE 3 hose/cord hook
inside the cabinet, kitchen-side wall
1x heavy-duty wall hook, #8x1.5" screw — stows hoses+cord when not in use
- 11 Fridge hold-down strap D-rings (x2)
tray side apron, near the tailgate end — hooks to the fridge's 2 end handles
cam strap, snug not tight — secures fridge TO its tray (E-track anchors secure the tray to the van); side profile in fridge-slide-detail

All coordinates measured from Panel C's tailgate-facing left corner, floor level (see file header).
Floor-anchor bolts go THROUGH the van's floor pan — inspect underneath for fuel/brake lines and wiring before drilling any hole (Section 8).

Fridge install detail

And the electrical side — a schematic (not to physical scale) of how the fridge, both fans, and the NTC sensor are powered and wired — now down to **every physical wire landing**: connection points P1–P12 are numbered on the diagram, each naming the exact terminal, connector type, and crimp, with the full list repeated in Section 5's connection-point table:

Fridge System Wiring — every connection point (P1-P12), schematic, not to physical scale

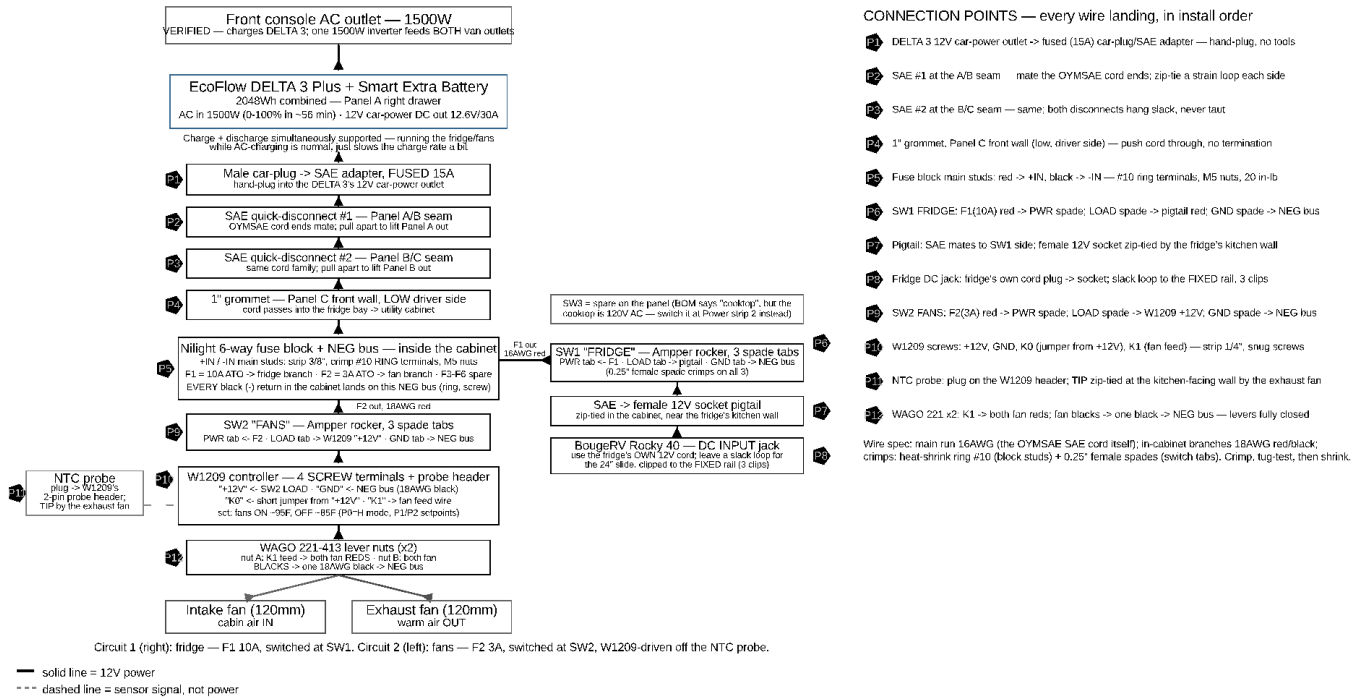


Fridge wiring diagram

The fridge's slide mechanism itself, closed vs. fully extended. The VADANIA rails stand vertically BESIDE the tray (side-mount): each fixed rail on a steel riser angle bolted to the E-track floor anchors, each moving rail on the tray's 1x3 side apron — nothing under the hanging tray, so the slide hardware adds zero height and the mounted fridge keeps 0.33" of running clearance under Panel C's end rail:

Fridge Slide Mechanism — side view (one of 2 parallel slides shown)

CLOSED (solid) vs fully OPEN (dashed) — pulled out through the tailgate for top-lid access

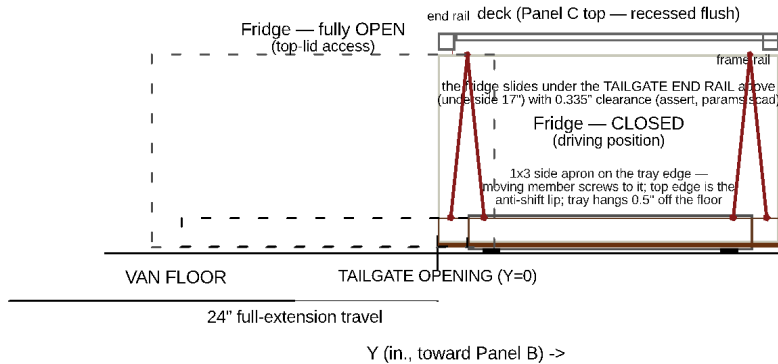

Fridge slide detail

The utility cabinet door that closes off the gap between the kitchen unit and the fridge, exploded so the 2 hinges and magnetic catch each get their own numbered marker (companion to item 8 in the fridge install detail above):

Hold-down strap (x1, cam-buckle): fridge's end handle -> 2 D-rings on the tray's side apron — stops the fridge lifting off the TRAY (the riser/E-track bolting only pins the TRAY to the van). Snug, not tight — must clear the lid at OPEN.


VADANIA VD2576 Industrial pair, 24", 379lb, LOCKS closed (transit) and extended (loading) — loaded fridge can hit 60-90lb, well within rating.

Tray (3/8" ply + two 1x3 side aprons) hangs BETWEEN the rails on the moving members; the aprons' top edges are the fridge's anti-shift lip.

DC line slack clips to THIS fixed rail (3 screw-mount clips, Sec. 5/6) — never to the moving tray, so it can't get pinched between apron and rail when the slide comes home.

FIXED rail (VADANIA VD2576, 3" tall, stands VERTICALLY beside the tray — screwed to a steel riser angle bolted to the E-track anchors; it adds WIDTH beside the tray, ZERO height under it — never mount it undermount: flat under the tray it would add ~1.2" and hit the end rail above.

E-track anchor (x2 this rail line, x4 total both slides — Sec. 8), BESIDE the tray on the rail lines, never under it

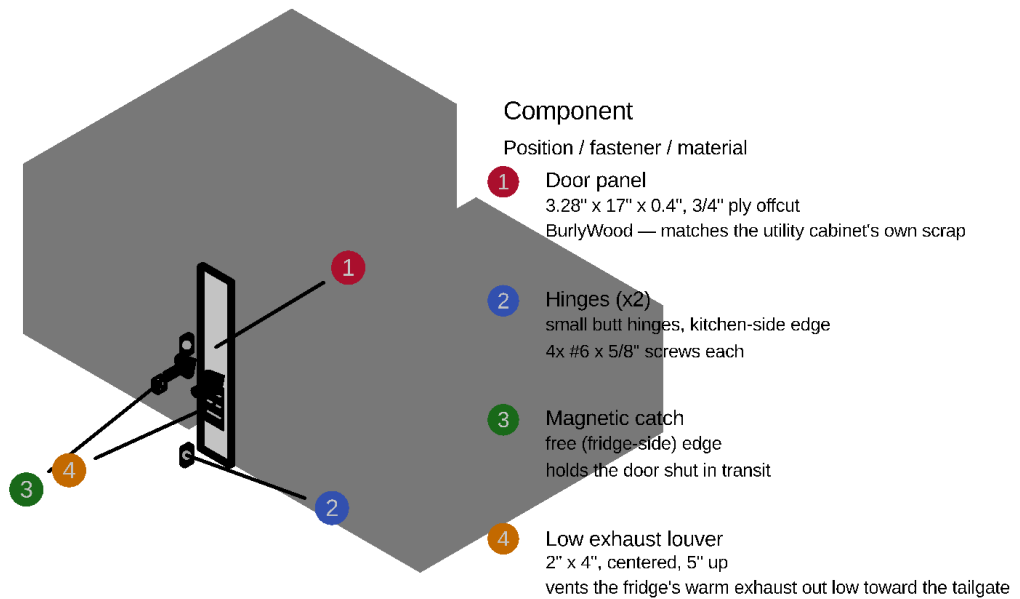

UTILITY CABINET DOOR — exploded detail (3.28" wide x 17" tall x 0.4" thick)


Hinged on the kitchen-side edge, swinging open toward the fridge — magnetic catch holds it shut on the free edge. A low louver (4) gives the exhaust fan's warm air a direct path OUT toward the tailgate — the rest stays dust/draft control.

Cabinet door detail

The kitchen drawer — a shallow slide-out drawer hung under Panel C's deck in the dead air above the kitchen unit (11.8" unit, 17" clear void), riding a 24" full-extension slide pair and pulling out the open tailgate; ~3.5" clear inside for utensils, cutting board, flat dry goods, and the cooktop's griddle plate:

KITCHEN DRAWER — hung under Panel C's deck, above the kitchen unit (Component 7)


Box: 1/2" ply, glue + 1-1/4" screws, ~3.5" clear inside — utensils / cutting board / flat dry goods / griddle plate.
Face matches the utility-cabinet door look, with the same magnetic catch so nothing rattles in transit.

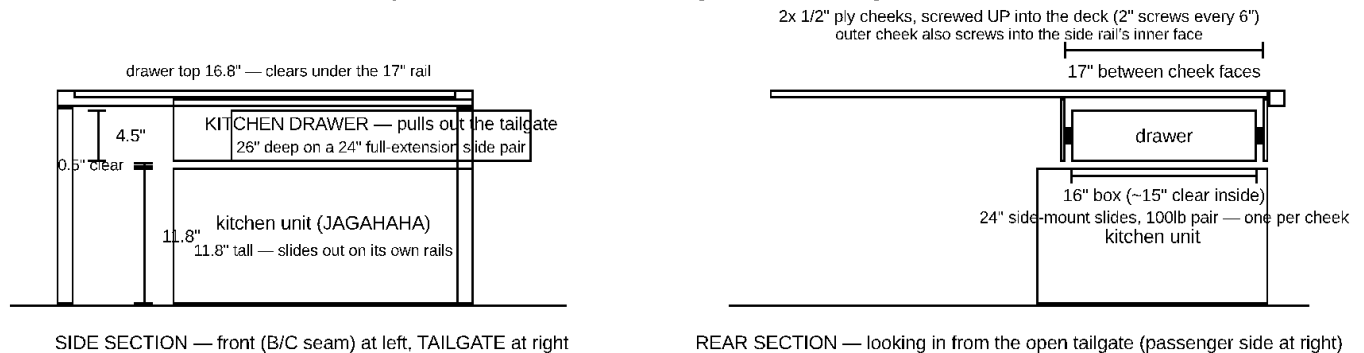

Kitchen drawer detail

Rear Pantry — Prefab Drawer Cluster + Pot Bay

The custom plywood pantry was **swapped for bought prefab drawers** (owner, July 2026 — Component 1): a 2x2 array of IRIS USA 12"W stackable drawers (Home Depot #500163) on the tailgate end of Panel C's deck, plus a pot/pan bay in the ~21.8" of open deck beside it. Nothing is built — a cleat pocket + one cam strap hold it, and each drawer unit lifts straight out (removable). This deletes the plywood carcass, the cam-lever clamp set, the 2 steel sway braces, and the fiddle-lip retention kit, and drops the pantry from ~42 lb to ~15 lb:

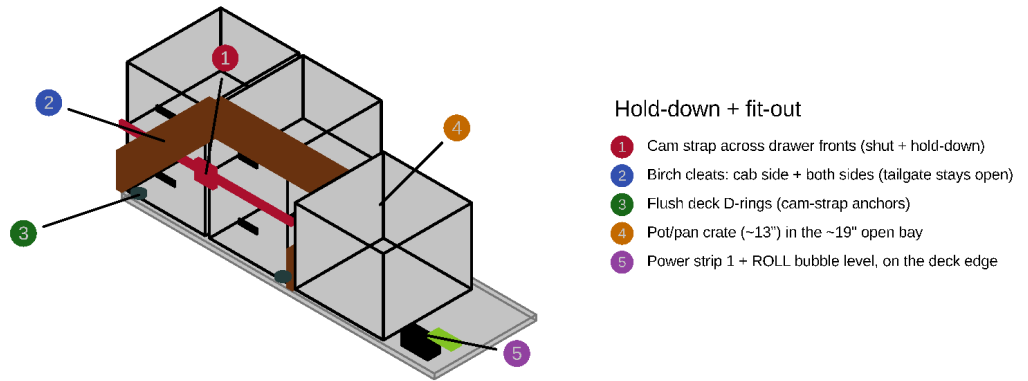

Hold-down + fit-out

- 1 Cam strap across drawer fronts (shut + hold-down)
- 2 Birch cleats: cab side + both sides (tailgate stays open)
- 3 Flush deck D-rings (cam-strap anchors)
- 4 Pot/pan crate (~13") in the ~19" open bay
- 5 Power strip 1 + ROLL bubble level, on the deck edge


REAR PANTRY — prefab 2x2 IRIS drawer cluster (24.2" x 16.8") + pot crate, on Panel C's deck (Component 1)

Replaces the plywood pantry — ~27 lb lighter, nothing built. Each drawer unit lifts straight out once the cam strap is loosened.
Canned goods LOW, boxed dry goods UP. Cab-side cleat stops the forward slide under braking; the strap doubles as drawer-shut + hold-down.

Rear pantry layout

Floor Panel Detail

Each floor panel, exploded (Panel A: frame + legs + center divider + one right drawer, left bay is WAVE 3 open storage; Panel B: a bare cube frame — no divider or drawers; Panel C: no divider or drawers — the fridge/kitchen units live in its void, shown here as reserved footprint):

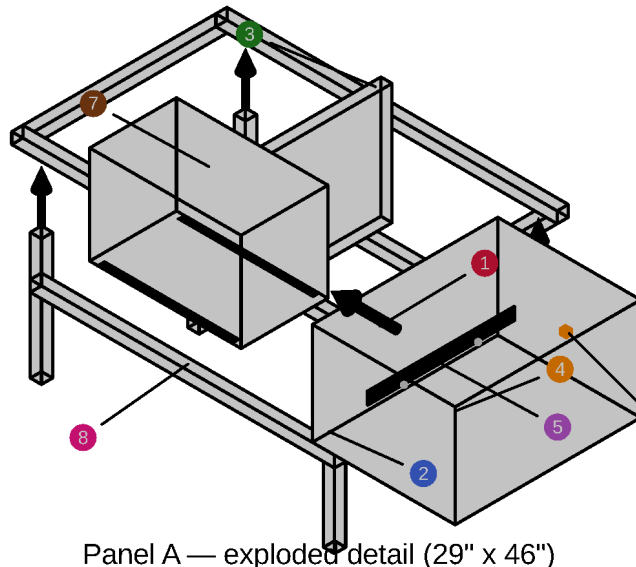

Panel A — exploded detail (29" x 46")

Left (driver-side) bay: WAVE 3 open storage, no drawer box or slide — the unit is too wide for a boxed drawer.

Component

Position / fastener / material

- 1 End rails (x2) + side rails (x2)
29" x 46" perimeter, 2x2 pine
corner brackets + 2" screws + glue
- 2 Legs (x4)
16" cut + leveling foot, inset 2.5" from the edge
1/2" x 3/4" insert hole in each bottom (Panel B detail's inset)
- 3 Center divider
26" cut, 2x2 pine
splits the bay — drawer (right) / WAVE 3 (left)
- 4 Drawer box (right, DELTA 3 side)
19.25" x 25" x 13.75", 3/8" ply, 1/2" bottom
5 pieces, glued + biscuited
- 5 Drawer slide (right)
20" full-extension pair
box-to-rail + box-to-divider
- 6 Drawer catch (right)
friction catch or small turn latch
keeps the drawer shut in transit
- 7 WAVE 3 + glide strips (left)
2x glide strip, UHMW/laminate scrap
no box, no slide — rests directly on the bay floor
- 8 Bottom rails (x2, END faces only)
2x2 pine, underside at 1"
the SIDE faces stay open — the drawer + WAVE 3 exit there at floor level

Panel A detail


LEG BOTTOM, zoomed — same hole on all 12 legs
 1/2" dia x 3/4" deep, dead center of the
 1.5" x 1.5" end grain -> 3/8-16 insert




drill BEFORE assembly (Leveling Foot render)

END-RAIL SEAM FACE — both ends

2x 3/8" dia x 3/8" deep pin holes, 3" in from each side edge, centered on the rail



drill the mating panel's face as a matched pair — clamp both, drill through the side block (Component 5)

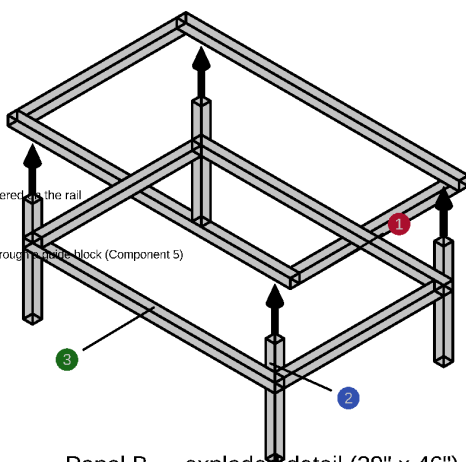

Panel B — exploded detail (29" x 46")

NO divider, NO drawers, no skirts — the side doors don't reach Panel B, so its whole bay is deep storage, loaded from above.


THE FULL CUBE: bottom rails on all 4 faces (nothing exits Panel B sideways). Both hole types dimensioned in the insets at left.

Panel B detail

Component

Position / fastener / material

- 1 End rails (x2) + side rails (x2)
29" x 46" perimeter, 2x2 pine
corner brackets + 2" screws + glue; grip these rails to lift the panel
- 2 Legs (x4)
16" cut + leveling foot, inset 2.5" from the edge
1/2" x 3/4" insert hole in each bottom (inset at left)
- 3 Bottom rails (x4 — full cube)
2x2 pine, underside at 1" (clears the feet/knobs)
2x 2" screws + glue into each leg — the frame racks far less as a closed box

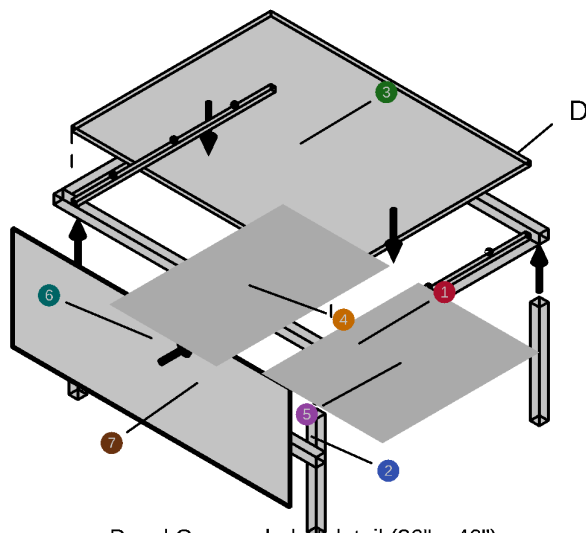

Panel C — exploded detail (36" x 46")

No divider, no drawers — the void stays open for the bought fridge + kitchen unit (Component 7). ONE wall: the front (B-facing) face.

Panel C detail


Component

Position / fastener / material

- 1 End rails (x2) + side rails (x2)
36" x 46" perimeter, 2x2 pine
corner brackets + 2" screws + glue
- 2 Legs (x4)
16" cut + leveling foot, inset 2.5"
insert hole in each bottom — see the Panel B detail's inset
- 3 Fixed top
43" x 33", 3/4" ply — RECESSED between the rails, flush with the rail tops
on 3/4x3/4 bearer cleats; screwed down — NOT a lift-off lid, unlike Panel A/B's bed-frame cap
- 4 Fridge zone (reserved)
17.72" x 28.74", flush LEFT/driver
bought product — see fridge-install-detail
- 5 Kitchen zone (reserved)
20" x 26", flush RIGHT/passenger
bought product — see fridge-install-detail
- 6 Front wall (the ONLY wall)
46" x 17", 3/8" ply, on the B-facing face
fan hole + 2 grommets — Panel C Front Wall render
- 7 Bottom rail (x1, FRONT face only)
2x2 pine, underside at 1", behind the wall
tailgate face stays open (appliances exit there); REAR legs at the TRUE corners

Bed Platform Detail

Component 2's one-piece slatted bed platform (58" x 52", 8 slats pocket-screwed between two full-length 1x4 side rails — one flush 3/4" plane, cantilevered 3" past the boxes on each side), exploded. Per-site leveling is done at the WHEELS with blocks (Block Calculator, Appendix D); the interior leg feet are a one-time set. It rests DIRECTLY on Panel A/B's top rails and ENDS at the B/C seam — Panel C's own fixed deck sits at exactly the same surface height, so the two meet flush and the mattress's last ~20" rides that deck. It lifts straight off; leveling happens at the leg feet, down at the floor, and an RV bar bubble level screwed to the driver-side rail's outer edge reads fore-aft pitch while you turn the knobs (its twin on the rear-pantry deck edge reads roll):

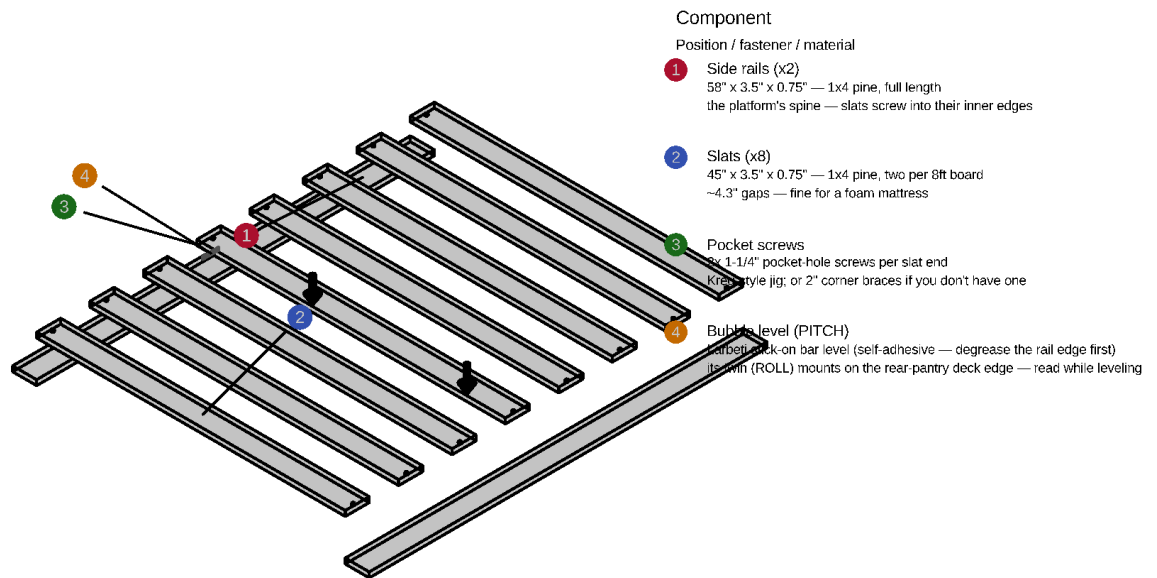

BED PLATFORM — flush ladder, exploded (Component 2, 58" x 52", 8 slats, 0.75" thick total)

One 3/4" plane: slats sit BETWEEN the two full-length side rails, pocket-screwed — no battens below, nothing above.
Rests DIRECTLY on Panel A/B's top rails and ENDS at the B/C seam, flush with Panel C's deck (the mattress's last ~20" rides that deck).

Bed frame detail


Leg Leveling Foot Detail

Leveling lives at the floor: each leg is cut 1" short and gets a 3/8-16 insert in its bottom end grain, taking a leveling glide bolt with a floor pad and a ~2" star-knob hand grip (12 total: 4 per panel x 3). Effective leg heights are 17" on Panel C / 16.25" on A/B (cuts: 16" and 15.25" — deck recess); dropping the old between-layers adjusts bought 1.25" of headroom, and recessing the deck ply into the rail plane buys another 3/4". To adjust: tip that corner of the box slightly and spin the knob — every leg is exposed at floor level:

Component

Position / fastener / material

- 1 Leg (bottom end shown)
2x2 pine (1.5" x 1.5" actual), cut to 16"
drill centered, 1/2" dia x 7/8" deep for the insert
- 2 3/8-16 threaded insert
driven UP into the leg's end grain
screw-in style, 7/16" OD coarse outer thread
- 3 Star knob, ~2" dia (hand grip)
3/8-16 thru-hole knob + jam nut on the bolt shaft
the adjustment — big enough to turn with the box tipped
- 4 Leveling glide bolt + pad
1.375" floor pad; +/-0.5" travel around 1" nominal
threads into the insert — leveling only, not height changes

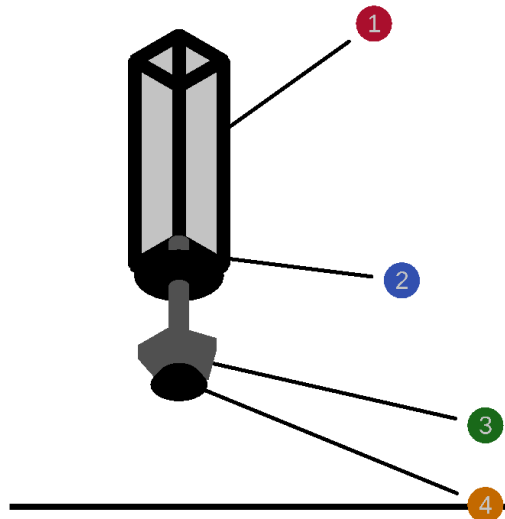

LEG LEVELING FOOT — shown 3x actual size (12 total: 4 per panel x 3 panels)

Legs are CUT to 16" (Panel C) / 15.25" (A/B — deck recess) — the foot makes up the last 1".

To level: kneel at the side door, tip that corner of the box slightly, spin the star knob. Every leg is exposed at floor level — nothing boxes it in. The platform above rests DIRECTLY on the box rails (no adjusters up top anymore).

Leveling foot detail

Load: worst case is ~700 lb total (2 people + mattress + platform + boxes + cargo) spread over 12 feet — ~60 lb per foot against the feet's 330 lb rating each, a 5x margin before dynamic factors. The feet are not the weak point. If you want more margin anyway, 1/2"-13 leveling mounts (1,100 lb each) are a drop-in upgrade — same install, just a 5/8" insert hole instead of 1/2".

Access: the practical answer is to stop crawling under the bed at camp entirely — **level the VAN at the wheels** (Andersen/Camco-style curved ramps, standard van-life practice) each site, and set the interior feet ONCE against the van's own floor irregularities. After that first setup you shouldn't need to touch a knob; the two bubble levels tell you at a glance whether the wheels need a ramp.

Blocks + calculator (the no-feet workflow): the two bubble levels read DEGREES (-7 to 7). Degrees plus the wheelbase are all the math needs, so there's a phone calculator for it — [Sienna Block Calculator](#) (also saved in the repo as `leveling_calculator.html`): enter the two readings and which end/side is low, and it returns how many Lynx-style leveling blocks to stack under each tire, the total, and the residual tilt after driving up. One 10-pack of blocks covers ~2.9° of correction at 1.5"/block over the 120.5" wheelbase — beyond ~4 blocks per tire, find a flatter spot. This makes the interior feet a ONE-TIME set (against the van's own floor irregularities), not a per-site chore — and if you'd rather delete the feet entirely, replace them with fixed shims set once and let the blocks do all site leveling (saves ~\$72, loses the fine-trim option).

Installing the calculator on a phone (two ways):


1. *Online:* open the [calculator link](#) in Chrome on the phone (it needs the claude.ai login), then Chrome menu → **Add to Home screen** — it gets an icon and opens full-screen. Needs signal at launch.
2. *Offline — the one to rely on at camp:* `leveling_calculator.html` is a single self-contained file with zero network dependencies. Send the copy from this repo (or `~/Downloads/sienna_block_calculator.html`) to the phone by email/Drive/Nearby Share, open it once via **Files** → **Open with** → **Chrome**, and bookmark it. It runs with no signal forever and remembers the settings below.

Using it at a site:

1. Park in the spot you actually want, engine off, **parking brake on**.
2. Read the two bed-mounted levels: the fore-aft level on the platform's driver-side rail (pitch) and the side-to-side level on the rear-pantry deck edge (roll). Each reads in degrees; the bubble floats toward the HIGH side, so the opposite end/side is the LOW one.
3. Enter both degree readings and tap which end (nose/tail) and side (driver/passenger) are low. One-time settings under "Van & block settings": wheelbase 120.5", track ~68", and the height each block adds — Lynx-style ~1.5", but **measure your own stack once** and enter that.
4. The van diagram shows blocks per tire. Lay each stack just ahead of its low tire, **drive up slowly**, and chock a wheel.
5. Re-read the levels and refine once if needed — suspension squish and block nesting make a second small pass normal. If any tire calls for more than 4 blocks, the calculator says so: re-park (turning the van around often halves the stack) rather than building a tower.

DELTA 3 / WAVE 3 Stowage Detail

Stowage for the EcoFlow gear: the DELTA 3 Plus + Smart Extra Battery, stowed unstacked side by side in Panel A's right drawer, and the WAVE 3, stored as open bay storage (no drawer box, no slide) in Panel A's left bay (its hoses/cord stow separately — item 12 in the fridge installation detail above):

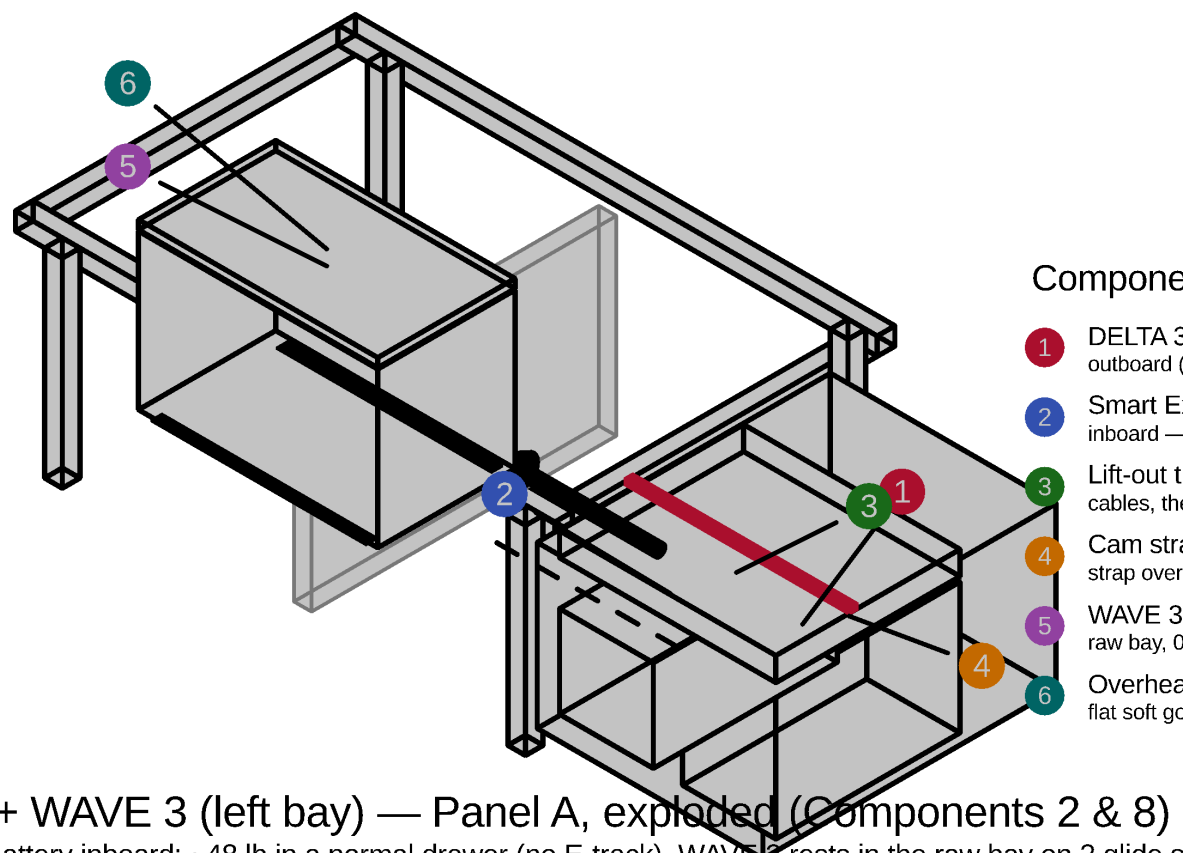

: drawer) + WAVE 3 (left bay) — Panel A, exploded (Components 2 & 8) into it), Extra Battery inboard; ~48 lb in a normal drawer (no E-track). WAVE 3 rests in the raw bay on 2 glide s 6" lift-out tray tops the DELTA stack; a shelf @ 13.7" tops the WAVE 3 (it still slides out beneath).

DELTA 3 and WAVE 3 stowage detail


Panel C Front Wall

The one wall any panel gets, as a flat pattern with **every hole dimensioned**: the 120mm intake-fan hole (with its 105mm screw square) centered on the fridge bay, ONE 1" grommet (fridge DC line low — Power strip 1 now plugs into the REAR outlet and never crosses this wall), and the 8 perimeter mounting screws (2 now landing in the cube-frame bottom rail). Panels A and B have no walls or skirts at all, Panel C's sides stay open, and its tailgate face needs no wall — the fridge, cabinet door, kitchen unit, and kitchen drawer face fill it completely:

PANEL C FRONT WALL — 3/8" ply, flat pattern (the ONLY wall on any panel)

Mounts on Panel C's front (B-facing) face, floor to rail underside. Intake fan bolts over the big hole (blows IN); the low louver is a passive cool-air scoop below it. Panel A/B: no walls or skirts anywhere. Panel C sides: open. Panel C tailgate face: no wall — fridge + cabinet door + kitchen + kitchen drawer fill it.

8x #8 x 1-1/4" perimeter screws: 2 into each front leg + 2 into the top rail + 2 into the bottom rail

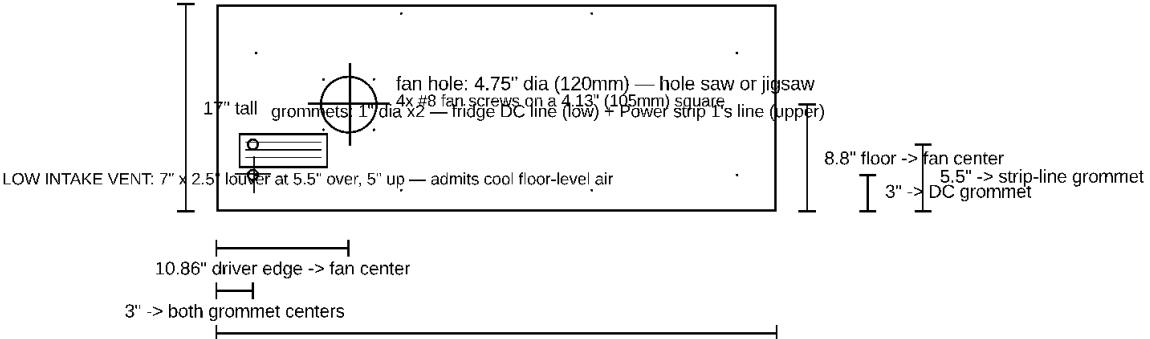

DRIVER side at left (the fridge bay's side) — PASSENGER at right. All positions computed from params.scad.

Panel C front wall detail

1. Overview

Vehicle constraints (hard limits — everything below is designed inside them)

The 2nd row seats are being **removed entirely** (not just pushed forward), with the 3rd row folded flat as before. Width, height, vent intrusion, and hatch clearance are unaffected by seat removal and remain the originally verified figures. Interior length is **not yet measured with the seats actually out** — see the UNVERIFIED note below.

Constraint	Value	Notes
Max interior length	96"	UNVERIFIED ESTIMATE — closed rear hatch to the front seatbacks, 2nd row removed. See note below.
Max floor width	48.5"	Between the wheel wells — verified
Max height	44"	Load floor to headliner — verified
Vent intrusion	2.5" per side	Rear lower heat vents, at floor level only — legs must stay clear; the raised deck may overhang — verified
Hatch curvature reserve	2"	Nothing is built into the last 2" before the closed hatch — verified

Why 96" is a placeholder, not a fact: the earlier 72" figure was measured with the 2nd row seats still installed, pushed fully forward on their tracks. Removing the seats entirely gains roughly the depth the seats themselves occupied at that forward position — typically 24-26" for a minivan 2nd-row bench/captain's chair plus a bit of track. 96" is that estimate, rounded, and it is **not a measurement**. Treat it exactly like the liftgate opening numbers below: **measure the actual empty interior (closed hatch to the front seatbacks) once the seats are physically out, and correct `van_interior_length` in `params.scad` before cutting anything**. Every downstream number in this plan (panel sizes, cut list, BOM) flows from this one value — re-run `./render.sh` after correcting it and check that all the `assert()` guards still pass.

That leaves a **94" usable length** and a **43.5" floor-level width** (full 48.5" available at deck height). The math: Panel A 29" + Panel B 29" + Panel C 36" = **94" of panels — Panel A sits flush with the front seatbacks (no open floor left over)**, filling usable `_length` exactly. Unlike the earlier "three panels + a separate rear row" layout, there's no length lost to a dedicated fridge/kitchen zone — the fridge and kitchen unit both live in the void *underneath* Panel C's deck, sharing space with the same legs that hold up the mattress. The rear pantry claims the last 14" of Panel C's own 36" (the tailgate-most strip, right next to the fridge/kitchen void), leaving **80" of continuous sleeping run** (Panel A + Panel B + the first 22" of Panel C) for the mattress — the HEST Dually Long (78" long) rides here with ~2" of spare at the head end. If the real measured interior comes in shorter than 96", every panel shrinks proportionally — this is exactly what the `assert()` guards in `params.scad` are there to catch. These limits live at the top of `params.scad`: bump any dimension past the envelope and every render fails loudly instead of silently overflowing the van.

Rear liftgate opening (UNVERIFIED — confirm by physical measurement)

Every module has to physically pass through the liftgate opening to be lifted in and out — that's the entire point of the modular design, so this matters as much as fitting once installed. Unlike the constraints above, these numbers came from an AI-summarized web search (Reddit/YouTube-sourced), **not a direct measurement** — treat them as a working estimate, not a fact, until you confirm with a tape measure.

Constraint	Value	Notes
Gate opening width	48"	Widest point — UNVERIFIED
Gate opening height	36"	Upper corners are heavily rounded, reducing effective clearance near the edges — UNVERIFIED, treat as optimistic

Fit check (each module carried upright, legs down, the way it sits once installed):

Module	Passes through as	Width margin	Height margin
Panel C	46"W x 18.5"H	1" per side	17.5" to spare
Panel A, Panel B	46"W x 17.75"H	1" per side	18.25" to spare
Rear pantry drawer units (prefab, Component 1)	~12.1"W each	easily	a few lb each — lifts out one at a time

The fridge and kitchen unit never need to pass through the gate opening at all — they live inside Panel C's own void as bought products, installed once and left in place, not lifted in and out. The one tight spot that remains: **1" of clearance per side on width** (a rigid 46" wood frame through a 48" opening — real-world weatherstripping intrusion and an imperfect carrying angle could eat that margin). `params.scad` asserts against this the same as every other hard limit — if you measure the real opening and it's smaller, every render will fail until the design is adjusted. **Measure the actual opening (narrowest width, height, corner rounding) before cutting anything**. The rear pantry's prefab drawer units are separate pieces from Panel C by nature — loosen the cam strap and each ~12.1"-wide unit lifts out and through the gate trivially (Component 1).

Side door openings (UNVERIFIED — confirm by physical measurement)

The side doors only matter for **Panel A**: its right drawer (DELTA 3) pulls out the passenger door and its left bay (WAVE 3) is reached through the driver door — the door openings sit over the old 2nd-row footprint, which is exactly where Panel A lives. **Panel B is beyond the door openings entirely** (owner-confirmed), which is why it has no drawers: nothing pulled sideways from it could clear a door, so its bay is top-loaded deep storage instead. Panel C's void houses the fridge and kitchen

unit, both pulling out through the open tailgate. Same status as the liftgate numbers above: a typical estimate, not a measurement — confirm the door openings do overlap Panel A's footprint.

Constraint	Value	Notes
Side door opening width (fore-aft)	40"	UNVERIFIED
Side door opening height	40"	UNVERIFIED

Reach caveat: a ~40"-wide door opening won't expose the full 58" drawer run (Panel A + Panel B) from one position. The drawers nearest the door are an easy reach; the far ones need a lean or a step inside. Once you've measured your door's actual fore-aft position, consider putting your most-used gear in whichever panel's drawers land closest to the opening.

Layout

- Rear pantry — prefab drawer cluster + pot bay** (owner, July 2026): the custom plywood pantry is **replaced by bought prefab drawers** — nothing built, and ~27 lb lighter. A **2x2 array of IRIS USA 12"W stackable drawers** (Home Depot #500163, two 3-packs) sits on the **tailgate end of Panel C's deck**, in the same last-14" footprint the plywood pantry used (so the 80" sleeping run is unchanged; the units' 14.3" depth sits 0.3" proud of the deck edge, well inside the 2" hatch reserve). The cluster is **24.2" W x 14.3" D x 16.8" H**, leaving **~21.8" of open deck** on the passenger side for a **pot/pan crate** (~13" milk crate — the pots' own 11x11 box drops inside) and the relocated power/wiring. It's held by a **cleat pocket + one cam strap across the drawer fronts** (which also keeps the drawers shut) — no fasteners into the units, so each drawer unit **lifts straight out** and clears the gate. **Gone with the plywood pantry:** the cam-lever clamp set, the 2 steel L-angle sway braces, the fiddle-lip/lash-strap retention kit, and the **enclosed bed cubby** — so **Power strip 1 and the ROLL bubble level move to the deck edge** in the 19" bay (still reached from the bed). See the Rear Pantry render and Section 6, Component 1.
- One continuous sleeping deck**, 46" wide x 94" long (Panels A + B + C, flush with the front seatbacks — no gap), deck surface sitting **18.5"** above the van floor: **the horizontal ply is recessed INTO the rail plane** (deck recess, owner July 2026 — Panel C's deck drops between its rails onto 3/4"x3/4" bearer cleats, flush with the rail tops; Panels A/B instead run **16.25" legs**, so the 3/4" bed platform resting ON their rails tops out at the same 18.5" plane). That buys 3/4" of headroom: **21.5" sitting headroom** over the 4" mattress. Panel C's `leg_height` stays 17", driven by the fridge's mounted stack (see below), not by the folded 3rd-row well depth — confirm 17" clears your actual well before cutting.
- Panel A and Panel B share the same frame, and neither has a top of its own.** Panel A has a center divider splitting its bay in two, reached through the side doors: the right (passenger) side is the one real drawer (DELTA 3), the left (driver) side is WAVE 3 open storage (the unit is too wide for a boxed drawer — Section 1). **Panel B has NO drawers and no divider** — the sliding-door openings sit over the old 2nd-row footprint (Panel A), not over Panel B, so nothing pulled sideways from Panel B could clear a door. Its whole bay is deep storage instead: lift the platform + mattress and load it from above (long-term/bulky items you don't touch at camp). The one-piece slatted bed platform (Component 2, 8 slats between 2 full-length side rails, 58" x 52" — cantilevered 3" past the boxes each side, 3/4" thick) spans Panel A + B ONLY and ENDS at the B/C seam: Panel C's own fixed deck is at exactly the same surface height, so the two meet flush and the mattress's last ~20" rides that deck (an 80" platform would have to sit ON that deck — 3/4" too high). It rests DIRECTLY on Panel A/B's top rails as one flush 3/4" plane (slats pocket-screwed between the two side rails). Leveling happens at the leg feet down at the floor — each leg is cut 1" short and carries a hand-adjustable leveling foot. Sourcing: cut eight 45" slats from four 1x4 x 8ft pine boards (two per board) plus two 58" side rails from two more — six boards total (weight swap: was ten slats/seven boards), no bought slat kit to fight with (many queen slat sets ride on metal frames or webbing that don't survive cutting down — Section 4 + Component 2). It lifts off (as a whole) for bay access from above — that's Panel B's ONLY access, and the occasional deep-cleaning route for Panel A.
- Trade-off: no top means no enclosure — answered with CUBE FRAMES.** Removing the plywood tops loses torsional rigidity and a dust barrier. Two fixes are now specified: diagonal corner braces up top, and **bottom rails closing each frame into a box** (underside 1" up — dropped to the leg bottoms, just clear of the leveling feet, for the tallest box section and the lowest floor-edge curb) on every face that can take one — Panel A's two END faces (its sides must stay open for the drawer/WAVE 3), ALL 4 faces of Panel B (the full cube), and Panel C's FRONT face (its tailgate face stays open for the appliances; its fixed top + new front wall already stiffen it). A closed frame racks far less than rails + brackets alone. The bed frame's slats still have gaps — small items can fall through into the bays below.
- Panel C has no drawers.** Its under-deck void instead holds two bought products side by side across the 46" width: a **BougeRV Rocky 40 (41-quart, dual-zone)** — 17.72" side left-right, reversible lid (manual \$4.4), optional detachable B240 battery at the tailgate-facing end — on a heavy-duty slide, against the driver-side REAR CORNER leg (1.5" in from the edge); and a **JAGAHABA slide-out camp kitchen** (26"L x 20"W x 11.8"H closed, with its own 2-burner stove space and built-in slide), against the passenger-side rear corner leg — its shelves swing out on that side. (Panel C's rear leg pair sits at the TRUE corners — inset legs would stand exactly in the appliances' slide paths, a collision the Rocky 40's extra width exposed. Verify the floor vents don't reach those corners — Section 0.) **Both pull straight out the open tailgate** (not a side door). Neither is something this plan builds from plywood — both are bought, standalone units. Unlike everything else in this build, both are **bolted through the van's floor pan** via E-track anchors (Section 8) — too heavy to rely on the same "rests unbolted" approach as the sleeping panels. A utility cabinet with a hinged door fills the gap between them: the exhaust fan blows the fridge bay's warm air INTO it, and a low louver in the door lets that warm air escape low toward the tailgate (rather than only bleeding around the door edges); the control panel (switches + surge protector) mounts INSIDE the cabinet, just behind the door on a backer board hung from the deck underside — open the door to reach everything electrical.
- A HEST Dually Long mattress (78" x 50" x 4", solid foam — no air chambers)** rides on the 52" cantilevered platform: **25" of width per person** (vs 23" at the old 46") and ~2" of spare length parked at the head end beside the rear-pantry cluster. The platform overhangs the 46" boxes by 3" per side — the boxes stay at 46" (floor vents + liftgate pass-through), but the mattress lives ~18.5–22.5" up where the van is wider than its 48.5" floor pinch. **UNVERIFIED: measure wall-to-wall at ~18.5" and ~22.5" above the floor along the whole run (need >=53") before cutting the platform** — Section 0. Budget fallback: the DIY 2-layer foam build (Section 4/Component 9), same 50x78 footprint.
- Panel legs sit inset 2.5" from the deck's side edges so they land clear of the floor-level vent intrusion (the deck itself overhangs the vents harmlessly at height).
- Power:** the fridge is 12V-native, but now runs off the EcoFlow DELTA 3 stack (Panel A) via its own dedicated DC cord rather than the van's rear accessory outlet — see Section 1 for why. **The cooktop, Power strip 1, and the DELTA 3's own AC charging cord each get their own dedicated run to the front console now** (previously the cooktop and Power strip 1 shared one line) — see Section 5 for all three routes.
- Fire safety + CO safety (owner-placed):** the fire extinguisher and the low-level CO monitor are **deliberately not located in this plan** — both are owner-supplied and will be positioned manually once the build is in the van. Two reminders that survive from the earlier analysis: the design has no propane at all

(electric induction cooktop), so the only combustion-gas risk is the Sienna's own engine exhaust while idling parked; and a generic 70ppm home-style CO detector is too slow for that job — use a low-level unit (alarms at 9/25ppm within ~60s).

- **Camp power/cooling (EcoFlow):** an EcoFlow DELTA 3 Plus + Smart Extra Battery (~48 lb combined) stows unstacked, side by side, in Panel A's **right (passenger-side)** drawer — a normal drawer, not E-track anchored, since 48 lb is well within what the drawer slides already handle and this gear is never used while driving. Within the drawer, the **DELTA 3 Plus sits outboard** (nearest the pull wall — it's what the WAVE 3 actually plugs into, used whether or not the extra battery is along) and the **Smart Extra Battery sits inboard** (grabbed less often, for extra runtime only). The **WAVE 3 portable AC/heater stores in Panel A's LEFT (driver-side) bay as open storage, not a drawer** — it's 20.4" wide, too wide for a boxed drawer's 19" clear interior, but the raw bay (20.75", no box walls to eat into it) fits it with ~0.35" to spare. It rests directly on the bay floor on 2 UHMW glide strips, reached by hand through the driver's side door — Panel A ends up with only one actual drawer (right/DELTA 3), since the left side gave up its drawer to make room for the WAVE 3. For camp use, the unit gets carried to wherever it actually runs (Panel C's tailgate deck or the front seat — see the sleeping-configurations note below); it's storage-only in Panel A, not used in place there.
- **Side-door access isn't confirmed yet.** The side door opening is only an UNVERIFIED ~40" estimate, narrower than Panel A + Panel B's combined 58" drawer run — so only part of that run lands within reach from any one real door position, and whether that favors Panel A or Panel B depends on the door's actual fore-aft position (still unmeasured — see Section 0). This design puts the DELTA 3 stack in **Panel A** since Panel A currently checks out as reachable against the placeholder door estimate, while Panel B comes back **severely limited (only ~3" of overlap)** — functionally blocked by the van's own body structure. **Panel B no longer has its own hinged 2nd access path** (removed along with its top — Section 1/6), so unlike before, there's no fallback if Panel A turns out to be the wrong choice once you measure the real door position: re-check both panels' numbers early, since moving the DELTA 3 stack to Panel B afterward would mean living with that ~3" reach for it, and the WAVE 3's open-storage bay along with it. Both units are charged at camp via shore power or solar — this design does not route van power to either (see Section 5).
- **Why the fridge (and its fan system) now run off the DELTA 3 stack, not the van's rear outlet.** The earlier design kept the fridge on the Sienna's rear 12V accessory outlet specifically to avoid two costs: a long cord run across all 3 module seams, and competing with the WAVE 3 for the DELTA 3's battery budget. This design accepts both costs deliberately, for a concrete reliability win: **the fridge keeps running when people are away from the vehicle, regardless of the van's ignition state** — the original design's whole fridge-on-the-van's-outlet approach had exactly one open risk (many factory 12V outlets cut off with the key out, which would mean the fridge stops cooling every time the van is parked and locked), and putting the fridge on the DELTA 3 instead makes that risk moot rather than just hoping the outlet turns out to be always-hot. **The real numbers make this hold up:** the DELTA 3 Plus + Smart Extra Battery combined is 2048Wh; the Rocky 40 is rated 60W max / 45W ECO (dual-zone, compressor duty-cycled) — realistically ~450–1050Wh/day depending on mode, partition use, and ambient temp, so a full charge runs the fridge alone for roughly **2 to 4.5 days** unattended, worst case to best case. And recharging is fast: the DELTA 3 Plus's AC input maxes out at 1500W, an almost exact match for the Sienna's front console outlet (**confirmed 1500W**) — a full 0-100% charge takes about 56 minutes, so even a short errand run tops it back off. EcoFlow's DELTA 3 line supports charging and discharging at the same time (running the fridge while AC-charging is normal, it just slows the charge rate somewhat), so there's no need to choose one or the other. **The fan system moves to the DELTA 3 too, not just the fridge** — the fans exist to vent the compressor's heat, so they need to stay available under the exact same conditions the fridge does (parked, people away, ignition off); leaving them on the van's outlet while moving only the fridge would defeat the point. The old rear 12V accessory outlet is simply unused by this design now — free for anything else you'd like to plug in there later. **One real trade-off to plan around:** the front console circuit now has 3 things wanting it (the cooktop, Power strip 1, and the DELTA 3's AC charging, which alone can draw up to the circuit's full 1500W) — see the shared-circuit note in Section 5.
- **Modular lift-out design:** Panel A, Panel B, and Panel C are each built as an independent, self-supporting module — own frame, own 4 legs (the fridge and kitchen unit are bought products with no frame of their own, and aren't lifted out as part of this; the rear pantry isn't its own module either — see below). All three now lift straight out and drop straight back in without touching the others (for deep cleaning or reconfiguring — day-to-day storage access is through the drawers/shelves, not by removing a module). With no tops or skirts, each panel is gripped by its exposed 2x2 top rails (no routed hand-holds needed — those were dropped along with the router jig), and anti-rattle bumpers + alignment pins + hand-released seam draw-latches at the A/B and B/C seams keep things fast to install/remove, quiet in transit, and clamped into one rigid beam (Component 5) — see Section 8. The rear pantry's prefab drawer units just sit on Panel C's deck behind a cleat pocket and one cam-buckle strap (Component 1) — loosen the strap and any unit lifts straight out, contents and all.

WAVE 3 sleeping configurations: tent vs. no tent

The WAVE 3 is **stored** in Panel A's left bay either way (see the DELTA 3/WAVE 3 stowage detail, Renders) — these two configurations are about where it gets carried to and set up for actual camp use, and where its hoses vent. Both use the same unit and DELTA 3 stack.

With a tent (tailgate open): carry the WAVE 3 from its Panel A storage bay back toward the tailgate, setting it down on the mattress-covered part of Panel C's deck just forward of the rear-pantry cluster (the pantry's 14" occupies the tailgate-most strip of Panel C, so the WAVE 3's spot sits a few inches forward of that) — still blowing toward the open tailgate so the shared van+tent air volume gets conditioned together. A cheap non-slip mat under it keeps it from creeping while it runs. Its intake/exhaust hoses route the extra short distance past the pantry cluster and through the open tailgate gap to true outside air — the open tailgate itself is the path outside, no window seal needed. Power cord runs from the DELTA 3 stack in Panel A's right drawer, the length of Panels A/B/C.

No tent (sleeping in the Sienna alone, tailgate closed): with the tailgate shut for security/weather, there's no gap to vent hoses through and nothing to usefully blow into at the tailgate — so the WAVE 3 instead moves to the front of the van:

- Move the WAVE 3 forward to the front passenger seat (seatback reclined or folded flat, whichever the unit sits more level on) — the only open seat/floor space once Panels A/B/C fill the rear cargo area. A non-slip mat or a simple bungee strap around the seat frame keeps it from sliding off during setup; it isn't a permanent mount, just an occasional-use position.
- Vent the hoses out a front window using the **EcoFlow WAVE Series Car Vent Kit** — a real EcoFlow accessory, **\$39, officially compatible with both WAVE 2 and WAVE 3**: a 47.2" x 27.6" waterproof, UV-resistant nylon cover that velcros over the window opening (window cracked, not removed) with sealed duct pass-throughs for both hoses. 15-second install, no permanent modification, fully reversible.
- With the front window sealed around the hoses and every other window/door shut, the WAVE 3 conditions the **entire sealed cabin**, not just the back — likely more effective in this configuration than the tent setup, since the whole volume it's blowing into is the one you're sleeping in.
- Power cord routes back to the DELTA 3 stack in Panel A's drawer — roughly the same length run as the induction cooktop's own forward cord (Section 5), just the opposite direction (front seat instead of tailgate). Budget for an extension or a quick-disconnect if the stock WAVE 3 cord doesn't reach.
- **This configuration seals the cabin more tightly than the tent setup, with no open tailgate providing passive fresh-air exchange — the owner-placed low-level CO monitor (see the safety note above; Section 4) matters even more here.** Confirm it's active and audible from the sleeping position before using this configuration, same engine-exhaust-while-idling risk as always, just less passive ventilation to dilute it.

2. Dimensions & Layout

Section	Length	Width	Notes
Rear pantry — prefab drawer cluster + pot bay (on Panel C's deck, tailgate end)	14.3" (of Panel C's last 14" + 0.3" into the hatch reserve)	24.2" cluster + ~21.8" bay = 46"	Bought, not built — a 2×2 IRIS drawer cluster (24.2" × 14.3" × 16.8") on the driver side + a rigid ~13" pot crate in the ~21.8" open deck; held by a cleat pocket + a cam strap (each unit lifts out). Power strip 1 + the ROLL bubble level relocate to the deck edge here.
Panel A	29"	46"	No top of its own — capped by the one-piece bed frame (Component 2); right (DELTA 3) drawer through the passenger door, left bay is WAVE 3 open storage through the driver door (no drawer box)
Panel B	29"	46"	No top of its own — capped by the same bed frame; no drawers, no divider, no skirts (the side doors don't reach it): a bare 2x2 frame whose bay is deep storage, loaded from above by lifting the platform + mattress
Panel C	36" (22" mattress-covered + 14" rear pantry)	46"	Keeps its fixed top (recessed flush between its rails on bearer cleats — deck plane 18.5") — the mattress-covered part only reaches ~22" into it (the rear pantry claims the last 14", Section 1), and the fridge/kitchen void underneath needs the enclosure regardless; no drawers
Fridge (BougeRV Rocky 40, in Panel C's void)	28.74" deep (incl. handles)	17.72" wide	15.79" tall — drives <code>leg_height</code> via the mounted stack: 0.5" tray hang + 3/8" tray + fridge = 16.67", leaving 0.33" running clearance under the tailgate end rail; on 24" VADANIA slides mounted on the SIDES (nothing under the tray), against Panel C's driver-side rear corner leg (1.5" in from the edge)
Kitchen unit (JAGAHABA, in Panel C's void)	26" deep (closed)	20" wide	11.8" tall; against Panel C's passenger-side rear corner leg (1.5" in from the edge) — shelves swing out that side; own built-in tailgate slide

Drawer dimensions (Panel A's single right-side DELTA 3 drawer — its left bay is WAVE 3 open storage, and Panel B and Panel C have no drawers):

Drawer dimension	Value	Notes
Travel (pull-out direction)	20"	Matches a standard 20" full-extension slide
Depth (fore-aft)	25"	Fits between the panel's front and back legs
Height	13.75"	Inside the 16.25" leg-height storage bay (A/B legs, deck recess), under the removable bed platform (Panel A has no fixed deck of its own)

`leg_height` (17") is driven by the fridge's mounted stack — 0.5" tray hang + 3/8" tray + 15.79" fridge = 16.67", leaving 0.33" of running clearance under the tailgate end rail (the slides mount on the tray's SIDES; nothing sits under it) — not by the folded 3rd-row well depth. **That 17" is Panel C only: Panels A/B run 16.25" legs since the deck recess, so the platform on their rails lands flush with Panel C's recessed deck at the one 18.5" plane.** Measure your actual well and confirm 17" clears it before cutting — if your well is shallower, the fridge (and therefore every leg on the platform) still needs the full 17" of standing height regardless, so the platform would simply sit a bit higher off the true floor than the well alone would require.

Walls & skirts, by panel

The panels are open 2x2 frames — plywood skins exist only where something needs one:

Panel	Walls/skirts	Why
Panel A	None	Both bays face the side doors — a skirt would block the only access. Passenger side: DELTA 3 drawer. Driver side: WAVE 3 open bay.
Panel B	None	Nothing to see or reach — it sits under the platform between A and C. Bare frame, deep storage from above.
Panel C — front (B-facing)	The ONE wall: 3/8" ply, 46" x 17"	Mounts the 120mm intake fan, holds the low intake louver, and passes the fridge DC line (one 1" grommet — Power strip 1 feeds off the rear outlet, not through this wall) — every opening dimensioned in the Panel C Front Wall render.
Panel C — sides	None	The van wall is ~1" away; the exhaust fan still pulls a net flow across the fridge, so side leakage doesn't matter.
Panel C — rear (tailgate)	None needed	Fully occupied already: fridge face + utility-cabinet door + kitchen unit face + kitchen drawer face.

With no tops and no skirts, every panel's top rails are exposed — **grip those to lift a panel out**. The old routed hand-hold holes (and the router jig for them) are gone from the plan.

Component coordinates


Two coordinate conventions, each picked to match how you'd actually stand at the access point in question — full reasoning and diagrams in `fridge_install_detail.scad` / `rear_view.scad`:

- **Panel C** (fridge + kitchen system, AND the rear pantry — it sits on Panel C's deck, sharing this same coordinate frame): origin (0,0) at Panel C's **tailgate-facing DRIVER-side corner**, floor level. X increases toward the passenger side (0-46"), Y increases forward toward the Panel B seam (0-36"). Z increases up

from the van floor. The rear pantry occupies Y 0-14 (the tailgate-most 14", above deck level) — the SAME Y range the fridge/kitchen's own tailgate-facing ends sit in, just at a different Z height (Z 18.5+ for the pantry vs. Z 0-16ish for the fridge/kitchen below deck).

- **Panel A, Panel B:** origin (0,0) at that panel's **own front-left corner** (front = toward the front seats). X increases right (0-46"), Y increases toward the tailgate (0 = that panel's own length). Z from the van floor.

(4 is INSIDE the cabinet behind the door — Z in the list. CO monitor + fire extinguisher: owner-placed, not located here)

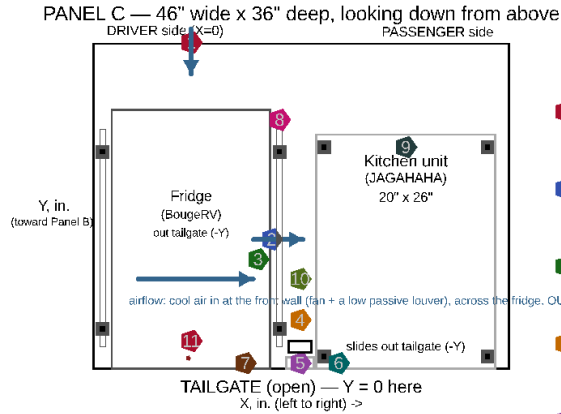

Component

Position / fastener

- 1 Intake fan (120mm) — blows IN
X=10.86 Y=36 (Panel C's FRONT wall) Z=8.8
4x M4x20 machine screws over the wall's fan hole (Front Wall render)
- 2 Exhaust fan (120mm) — blows INTO the cabinet
X=18.72 Y=14.4 Z=8.8
4x M4x20 machine screws, 105mm bolt circle, into a plywood fan ring
- 3 NTC temp sensor
X=18.22 Y=12.2 Z=8.8
adhesive thermal pad or 1x #4 screw through its bracket tab
- 4 Control panel enclosure
X=21.5-24.3 Y=2 Z=6.5-12.5 — INSIDE the cabinet
backer board (3/4" offcut) hung from the deck, 4x #8x1" screws
- 5 Cabinet door
X=21.2-24.5 Y=0-1.5
1/2" ply panel, closes the kitchen/fridge gap (not airtight — by design)
- 6 Door hinges (x2)
on the kitchen-side (high-X) edge
2x small butt hinges, 4x #6x5/8" screws each
- 7 Door catch
on the fridge-side (free) edge
1x magnetic or roller catch, 2x #6x5/8" screws
- 8 Fridge slide floor anchors (x4)
E-track, 2 per slide rail, front+back of each rail line BESIDE the tray (side-mount)
1000lb WLL each — 2x 5/16" carriage bolts through the floor per anchor
- 9 Kitchen floor anchors (x4)
E-track, one per corner
1000lb WLL each — 2x 5/16" carriage bolts through the floor per anchor
- 10 WAVE 3 hose/cord hook
inside the cabinet, kitchen-side wall
1x heavy-duty wall hook, #8x1.5" screw — stows hoses+cord when not in use
- 11 Fridge hold-down strap D-rings (x2)
tray side apron, near the tailgate end — hooks to the fridge's 2 end handles
cam strap, snug not tight — secures fridge TO its tray (E-track anchors secure the tray to the van); side profile in fridge-slide-detail

All coordinates measured from Panel C's tailgate-facing left corner, floor level (see file header).

Floor-anchor bolts go THROUGH the van's floor pan — inspect underneath for fuel/brake lines and wiring before drilling any hole (Section 8).

Fridge install detail

Component	Panel	X (in.)	Y (in.)	Z (in.)
Kitchen unit (JAGAHABA)	C	24.5–44.5	0–26	0–11.8
Fridge (BougeRV Rocky 40)	C	2–19.7 (slide rails flank at ~0.6–1.5 and ~20.2–21.2)	0–28.74	0.5–16.67 (hanging tray + fridge)
Intake fan (120mm)	C	10.86 (on the front wall)	~35 (Panel C's front wall)	8.8
Exhaust fan (120mm)	C	19.7 (fridge's kitchen-facing wall)	~14.4	8.8
NTC temp sensor	C	~18.2 (just inside the fridge's exhaust wall)	~12.9	8.8
Control panel (switches, surge protector)	C	21.1–25.1	~2 (just behind the cabinet door)	6.5–12.5 — INSIDE the utility cabinet, on a backer board hung from the deck underside
Power strip 2 (cooktop)	C	~34.5–37.5	~26 (kitchen unit's front face)	~1.5
Right drawer (the only one)	A	23.75–43.75	2–27	0–13.75
Center divider	A	22.25–23.75	1.5–27.5	0–16.25
Rear pantry: 2×2 IRIS drawer cluster (bought)	C	driver 0–24.2	0–14.3	18.5–35.3
Rear pantry: pot/pan crate + hold-down cleats/strap	C	passenger 24.2–46	0–14	18.5 (on the deck)
Power strip 1 + ROLL bubble level (relocated to the deck edge)	C	~33 (passenger bay)	on the deck, back edge	~19.25–20.25 (just above the deck)

Coordinates for the fixed/structural items (drawers, panels, fridge, kitchen) come directly from `params.scad` / `platform.scad` 's real geometry. Power strip 1/2 positions are schematic markers in the 2D diagrams (approximate, not separately modeled in the 3D assembly) — confirm exact placement against the real frame once built.

How under-deck storage is accessed, by panel

- **Panel A:** a **center divider** splits its under-deck void in two. The right (passenger) side is the one real drawer on a 20" full-extension slide (the DELTA 3 stack); the left (driver) side is **WAVE 3 open storage** — no box, no slide, the unit rests on 2 glide strips, reached by hand through the driver's side door. Both van side doors are used, both for Panel A only.
- **Panel B: no drawers, no divider** — the side-door openings don't reach it. Its whole bay is deep storage: lift the platform + mattress off and load from above. **The SPARE TIRE stows here** (RJ-MODINI kit, flat on 3" cleats at the axle — the best weight placement in the van, Component 3) with **2× Sterilite 28-Qt lidded totes restacked on top** and the jack kit beside it — you lift out whole labeled totes instead of rummaging a loose pile (plain lidded totes on purpose: with no side access, a slide-drawer front would be a wasted feature). Use it for the long-term/bulky stuff you don't touch at camp.
- **Panel C:** no drawers at all. Its entire under-deck void is split between the fridge (left/driver side, on its own slide) and the kitchen unit (right/passenger side, on its own slide) — both bought products, both accessed by pulling them out through the **open tailgate**, not a side door. There's no "storage bay" here in the drawer sense; the fridge and kitchen units *are* the storage, permanently installed rather than removable containers. (There's a ~7–10" strip of under-deck space in *front* of the stowed appliances, but it's deliberately **left empty** — it's the intake fan's cool-air plenum, and it's boxed in with poor access, so filling it would choke the fridge cooling. The found-storage additions instead reclaim the dead headroom above the DELTA 3 and WAVE 3, and the utility cabinet's spare volume — see Component 8.)
- None of the 3 panels needs to be lifted out for routine storage access — lifting a panel (gripping its exposed top rails) is only for deep cleaning or reconfiguring, per Section 8. (Panel B's bay is the exception in spirit: loading it means lifting the platform, though never the panel itself.) The rear pantry's drawer units are the one exception with routine lift-off access: loosen the cam strap and any unit lifts out in seconds — day-to-day restocking just opens the drawers, nothing needs removing.

3. Full Lumber Sizing & Cut List

The fridge and kitchen unit are bought products (Section 4) — **neither needs any plywood or lumber**, which is why this cut list is smaller than it would be if they were built. `render.sh` still generates a top-down/side/rear-view diagram of everything assembled, but the cutting layouts below are given as plain tables rather than bespoke nested-piece diagrams — simpler to keep correct as dimensions change, and just as usable at the saw.

Material options & upgrades (owner review, July 2026)

The base build is **Baltic birch plywood + pine framing**, chosen for cost and availability. Two optional upgrades trade a little weight and money for durability — worth it in targeted spots, overkill everywhere:

- **Plywood is already Baltic birch** for every panel that matters (Panel C's deck, the drawer/kitchen boxes, the fridge tray). No change needed — birch is the dent- and screw-holding win people usually ask for, and it's already specified.
- **Poplar (or ash/maple) for the top rails.** Pine dents, and the *one* place that matters is the exposed **2×2 top rails you grip to lift each module** — those get handled constantly. Swapping just those rails to poplar (a hardwood) resists denting and holds biscuits/screws noticeably better than pine, which suits the biscuit joinery. Cost: poplar is ~20% denser (a few lb of added lift weight across the rails) and pricier per board — so upgrade the **grip rails only**, and leave the hidden framing and the under-mattress 1×4 slats as pine (weight and cost win there, and they never show or get bumped). Budget ~\$25–40 extra.
- **Aluminum angle for the diagonal corner braces.** The Panel A/B corner braces can be aluminum L-angle instead of steel/wood — lighter (these modules are carried) and rust-proof. Budget ~\$10–15 for the aluminum swap.

Neither upgrade changes any dimension in the cut list below — same sizes, different stock. The weight deltas are folded into the note in **Appendix E (Weight Budget)**.

Weight-reduction swaps (APPLIED, July 2026). Separately, and pulling the *other* way, the owner asked to lighten the build wherever safe — so the plywood was thinned wherever it isn't carrying real load, and the bed dropped from 10 to 8 slats. This is already reflected in the cut list above and in Appendix E (~21 lb off the structure, build ~449 → ~424 lb):

- **Battery-drawer walls, fridge tray, Panel C front wall** → **3/8"** (was 1/2") — non-structural; the drawer corners get glued + biscuited, the tray gets a glued edge frame.
- **Kitchen-drawer cheeks** → **1/2"** (was 3/4"); **bed platform** → **8 slats** (fine under the solid-foam mattress).
- **The rear pantry went further than thinning — it's not plywood at all anymore:** the prefab IRIS drawer cluster (~15 lb) replaced ~42 lb of built shelving outright (Component 1).
- **Kept 3/4":** Panel C's deck — it carries sitting load. **Note the tension with the poplar upgrade above:** poplar *adds* ~20% weight, so if you're chasing weight, keep poplar to the grip rails only or skip it.

Honest trade: this reshuffles the plywood so it now needs a 3/8" half-sheet (~+\$25) even though it's lighter — a poor cost-per-pound, chosen for easier module lifts, not payload (which already has margin, Appendix E).

Plywood — 1 sheet 3/4" + 1 sheet 1/2" + a 3/8" half-sheet, Baltic birch (4x8), (or shop-grade)

Weight-swap note (owner, July 2026): the plywood was thinned wherever it isn't carrying real load, and the rear pantry left plywood entirely (prefab drawers — Component 1). Only Panel C's deck stays **3/4"** (it carries sitting load); the kitchen boxes and the battery-drawer bottom are **1/2"**; the three purely non-structural pieces — the battery drawer's walls, the fridge tray, and Panel C's front wall — are **3/8"**. This adds one 3/8" half-sheet to the buy (~\$25) but the 3/4" and 1/2" sheets are now only lightly used (spare stock). **Panel A/B have no tops** (Component 2), and **Panel B has no drawers**.

3/4" sheet — now just Panel C's deck (the plywood pantry is gone — Component 1 is prefab drawers). This sheet is mostly spare: rip the rear-pantry hold-down cleats from the offcut, and keep the rest for the control-panel backer board (Section 6) and repairs:

Piece	Qty	Dimensions
Panel C top (deck)	1	33" x 43" — drops BETWEEN the rails onto bearer cleats, flush with the rail tops (deck recess: 3/4" more headroom)
Deck bearer cleats	4	3/4" x 3/4" strips: 2 x 33" + 2 x 40" (ripped from the offcut; screwed to Panel C's rails' inner faces, tops 3/4" below the rail tops)
Rear-pantry hold-down cleats	~4	~1" x 1" x 12–14" strips (ripped from the offcut; cab-side + both sides of the drawer cluster)

1/2" sheet — the kitchen drawer box + its 2 hanging cheeks and the battery drawer's bottom (the plywood-pantry carcass is deleted — that frees most of this sheet):

Piece	Qty	Dimensions
Kitchen drawer box	5 pieces	bottom 16" x 26"; 2 sides 26" x 4"; front/back 15" x 4" (4.5" exterior height)
Kitchen drawer hanging cheeks	2	26" x 5.45" (1/2" — screwed up into Panel C's recessed deck, flanking the drawer)
Battery drawer bottom (Panel A right)	1	20" x 25" (1/2" — the base under the 48 lb stack)

3/8" half-sheet (weight swap) — the three non-structural pieces. ~18 sq ft, so a half 4x8 covers it:

Piece	Qty	Dimensions
Battery drawer side wall	2	25" x 14.5" (3/8" — glue + biscuit the corners)
Battery drawer front/back wall	2	20" x 14.5" (3/8")
Fridge tray	1	17.72" x 28.74" (3/8" + two 1x3 side aprons, 28¾" each, glued+screwed to its edges — the slides' moving members screw to them and their top edges are the fridge's anti-shift lip)
Panel C front wall	1	46" x 17" (3/8") — 120mm fan hole + two 1" grommet holes, positions in the Panel C Front Wall render
WAVE 3 glide strips (scrap, not from these sheets)	2	20" x 1", UHMW or laminate offcut

Frame lumber — 2x2 pine (or 1"x1" aluminum L-channel), sold in 8ft (96") lengths

Panel A, Panel B, and Panel C each get their own independent perimeter frame — 2 long rails + 2 end rails sized to that module's own footprint — plus its own 4 legs. No rail is shared between modules, which is what makes each one lift straight out on its own. **The rear pantry needs no frame lumber at all** — it's bought drawer units sitting on Panel C's already-built deck. The fridge and kitchen unit need no frame lumber either.

Piece	Qty	Cut length	Notes
Panel A long rails	2	29"	
Panel B long rails	2	29"	
Panel C long rails	2	36"	
End rails (all 3 modules)	6	46"	2 per module
Center divider	1	26"	Panel A only — splits its bay into drawer (right) + WAVE 3 (left) runs, see Step 2 diagram. Panel B and C have none.
Legs — Panel C	4	16"	cut 1" short; the leveling foot makes each an effective 17" (Leg Leveling Foot Detail). REAR pair at the true corners
Legs — Panels A/B	8	15.25"	cut 1" short; foot brings each to an effective 16.25" — 3/4" shorter than Panel C (deck recess: the platform on A/B's rails lands flush with C's recessed deck)
Bottom rails (cube frames)	5x 46" + 2x 26"	see notes	underside at 1" (dropped to the leg bottoms): Panel A both END faces (2x46), Panel B all 4 faces (2x46 + 2x26), Panel C FRONT face only (1x46) — 2x 2" screws + glue into each leg

Total linear footage needed: 958" (4@29 + 2@36 + 6@46 + 1@26 + 4@16 + 8@15.25, plus the cube-frame bottom rails: 5@46 + 2@26). Eleven 8ft (96") boards hold 1,056" — a ~9% margin for kerf and layout waste. **Buy 12 boards** to allow for a mis-cut.

Hardware sizing

Item	Size needed
Drawer slides	1 pair, 20" full-extension — Panel A's right (DELTA 3) drawer, mounted between the drawer box and the frame's long rail / center divider. Panel B has no drawers (side doors don't reach it)
Drawer catches	1, simple friction catch or small turn latch — Panel A's drawer
WAVE 3 glide strips	2, UHMW or laminate scrap, ~20" x 1", glued/screwed to Panel A's left bay floor — cuts friction sliding the unit in/out by hand (no slide hardware there)
Wood screws	1.25" for plywood-to-frame, 2" for frame-to-frame joints
Corner brackets	2" or 3" steel L-brackets, 12 total (4 per module x 3 modules — the rear pantry has no frame of its own, no brackets needed)
Cable grommets	1" diameter, 7 needed (1 cooktop line, 1 Power strip 1 line — both short rear-outlet hops, 3 fridge DC line, 2 DELTA 3 AC charging line — see Section 5)
Hand-hold holes	REMOVED — with no tops or skirts, every panel's 2x2 top rails are exposed; grip those to lift. (The router jig went with them.)
Anti-rattle bumper strips	2 strips (one at each lift-out seam: A/B, B/C — the pantry and fridge/kitchen aren't lift-out modules, so no seams of their own). Adhesive-backed felt or closed-cell foam weatherstrip
Alignment dowel pins	4 pins (2 per seam x 2 seams), 3/8" dowel rod, ~3/4" long, friction-fit into a matching hole on each module face
Seam draw-latches	4 over-center draw latches (2 per seam x 2 seams), stainless/zinc, ~3" body. Mounted LOW on the bottom-rail band (~1.75" up), over the inset leg line, one on each side of each seam. Base plate on one module, hooked bail + lever on its neighbour — flip to clamp the two tight against the bumper, flip to release. Alignment pins LOCATE the modules; these CLAMP them into one rigid beam (with the bed platform tying the A/B tops). Hand-released, so the modular lift-out is preserved — see Component 5
Rear pantry — prefab drawer cluster	4x IRIS USA 12"W stackable drawers (Home Depot #500163, two 3-packs), 12.1" x 14.3" x 8.4" each, stacked 2 wide x 2 high (24.2" x 14.3" x 16.8", ~13 lb). Contains its own contents; each unit lifts out for the gate
Rear pantry — hold-down	~1" birch cleats (cab side + both sides, ripped from the 3/4" offcut) + 1 cam-buckle strap across the drawer fronts + 2 flush deck D-rings (strap anchors) + anti-rattle felt tape + 2 Velcro ties linking top units to bottom
Pot/pan bay	1 rigid ~13" milk crate (the pots' 11x11 box drops inside) in the ~21.8" of open deck beside the cluster + a corner cleat + a bungee
Panel B deep-storage totes	2x Sterilite 28-Qt under-bed lidded totes (23.5" x 16.9" x 5.9"), restacked ON the spare in Panel B's bay — containerized top-load storage (lift the platform, lift out whole totes)
Spare tire stowage	RJ-MODINI kit (T155/85R18 on an 18x4 steel wheel, 28.5" dia x ~6.4" stored, ~40 lb w/ 2-ton jack) FLAT in Panel B's bay at the axle: a cradle skid (3x ~3" cleats screwed to 2 battens, from the offcut) over a non-slip liner offcut + 1" cam strap to 2 footman loops on the bottom rails + tool case nested in the wheel — install/access diagrams on the Spare Tire Stowage render
Panel A/B diagonal corner braces	4 used (2 per panel, Panels A + B) from the purchased Sumnacon 4" 8-pack (4 spares), steel flat-strap — recovers some of the racking rigidity lost by removing each panel's own top
Leg leveling feet	12 total (4 per panel x 3 panels), 3/8-16 screw-in threaded insert (7/16" OD coarse outer thread — the Anwenk kit's "T-nut") + leveling stud with a 1-3/8" pad, fixed hex collar, and ~2" star-knob hand grip. Legs are CUT to 16" and drilled in the bottom end grain (1/2" dia x 7/8" deep — the maker's spec; test-fit the insert in offcut first) — the foot brings each back to an effective 17" (Leg Leveling Foot Detail render). Tip a corner slightly and spin the knob to level
Bed platform side rails	2, 58" x 3.5" x 3/4" (1x4 pine), set 52" apart outside-to-outside — the 45" slats pocket-screw between them into one flush 3/4" plane cantilevered 3" past the boxes per side (Bed Platform Detail render); the platform rests directly on Panel A/B's top rails and ends at the B/C seam
Ryobi R-series biscuits	R1 (thin stock / 1/2" ply), R2, R3 (3/4" ply) — buy an R1/R2/R3 assortment for the DBJ50. Wood glue (already in the BOM) goes in every biscuit slot + mating face

Joinery & Fasteners (Ryobi DBJ50 biscuit guide)

Every wooden joint's method — biscuit vs. screw — with the exact biscuit spacing is on the **Joinery & Fastener Guide** render below. The short version, using the Ryobi DBJ50 detail biscuit joiner (R1/R2/R3 biscuits, 0–9/32" depth, 1-1/2" 6-tooth blade, 90°/45° fence):

- **Biscuits where clean plywood faces meet** (hidden strength + self-alignment, no screw heads on show faces): every drawer/tray box corner — the battery drawer and the kitchen drawer (**2× R1 per corner, centered on the ½"/⅓"**). (The plywood-pantry carcass that used to be biscuited here is gone — Component 1 is now prefab drawers.) **Rule for any biscuited joint: first biscuit 2" from each end, then ~6" on center, always centered on the stock thickness; glue the slot and the mating face, then clamp.**
- **Screws (+ glue) for everything into the 2×2 frame or hardware:** all frame corners get **2× 2" screws + a steel corner bracket** (a biscuit would blow out the 1.5" stock — the one place to skip biscuits); Panel C's fixed top and front wall, the base cleats, and the kitchen-drawer cheeks are screwed to the frame; slides and threaded inserts use their own hardware.
- **No fasteners:** the adjustable shelf rests on pins, and the DELTA 3 tray + cabinet bins just drop in.

JOINERY & FASTENERS — Ryobi DBJ50 detail biscuit joiner (R1 / R2 / R3 biscuits)

Legend: Peru ovals = biscuit slots (glue + biscuit, centered on thickness) Crimson = screws (+ glue) Grey = 2x2 frame

1

— SPACING RULE (any biscuited joint, edge-on): 2" from each end, then ~6" o.c., centered on thickness

— REFERENCE: any shelf into a side panel (3/4" ply): 3x R3 biscuits/end at 2" / 7" / 12" from the front, centered on 3/4", glue + clamp

4"
1.5" — BOX CORNERS (1/2" ply -> R1): 2x R1 biscuits/corner + glue, all 4 corners — Panel A drawer, kitchen drawer, fridge-tray apron
bottom sits in a glued rabbet (or glue + brads) — clean box, no visible fasteners

— FRAMES (2x2 pine, rail/leg/bottom-rail/divider): SCREWS ONLY — a biscuit would blow out the 1.5" stock
2x 2" screws + glue per corner + a steel corner bracket (diagonal corner braces screw on top of the frame)

5 — PLY TO FRAME (Panel C top / front wall / cleats / cheeks): SCREWS + glue
1-1/4" screws ~8" o.c. into the rail + glue (front wall: 8 screws per the Front Wall render; cheeks/cleats: 2" screws ~6")

COMPONENT	JOINT	METHOD (biscuit sizes are Ryobi R1/R2/R3)
Panel A drawer + kitchen drawer boxes (1/2)	box corners	2x R1 biscuits/corner + glue; bottom in a glued rabbet
Fridge tray + slide apron (1/2 + pine)	edge / face	R1 biscuits OR 1-1/4" screws + glue
Kitchen-drawer hanging cheeks <-> deck (3/4)	face-to-face	2" screws every ~6" up into the deck
WAVE 3 overhead shelf <-> 1x1 cleats	shelf-on-cleat	cleats screwed to the frame; shelf screws down to the cleats
Panel C fixed top <-> 2x2 rails	ply-to-frame	1-1/4" screws every ~8" + glue (R2 optional, corners, to align)
Panel C front wall <-> frame	ply-to-frame	8x #8 x 1-1/4" screws (exact positions in the Front Wall render)
ALL 2x2 frames (rails/legs/bottom rails/dividers)	2x2 corners	2x 2" screws + glue + a steel corner bracket (NO biscuit)
Bed platform slats <-> 1x4 side rails	end-to-edge	2x 1-1/4" pocket screws/end (OR 1x R2 biscuit + glue, cleaner)
DELTA 3 tray / cabinet bins / adjustable shelf	none	drop in / rest on pins — no fasteners

4. Bill of Materials (BOM)

Item	Qty	Est. Unit Cost	Est. Total
3/4" Baltic birch plywood, 4x8 sheet (Panel C deck + the rear-pantry hold-down cleats ripped from the offcut — now largely spare stock: backer board + repairs)	1	\$65	\$65
Rear pantry — IRIS USA 12"W stackable drawers, Home Depot #500163 3-pack (buy 2 packs; use 4, 2 spare)	2 packs	\$30.29	\$61
Rear pantry hold-down — 1 cam-buckle strap + 2 flush deck D-rings + anti-rattle felt tape + Velcro ties (cleats ripped from the 3/4" offcut)	1 set	\$26	\$26
Pot/pan bay — rigid ~13" milk crate + bungee (e.g. 1 of an ORGANIZE-IT 4-pack; in the ~21.8" bay)	1	\$15	\$15
Panel B totes — Sterilite 28-Qt under-bed lidded (23.5" x 16.9" x 5.9"), restacked on the spare	2	\$12	\$24
RJ-MODINI spare kit — 2011-2026 Sienna incl. Hybrid (T155/85R18 steel, 28.5" dia + 2-ton jack + wrenches/sockets + cases) — \$349.95 on Amazon	1	\$350	\$350
Spare hold-down hardware: 2x 1" footman loops (from a 4-pack, screws included) + 1" x 6 ft cam-buckle strap (Masterwise multi-pack, purchased — a ~5.5 ft over-stack run, so 6 ft reaches; spares cover the pantry + DELTA 3 drawer straps); skid + liner from offcuts	1 set	\$24	\$24
1/2" Baltic birch or shop-grade plywood, 4x8 sheet (kitchen drawer box & cheeks + battery-drawer bottom — the plywood pantry is deleted, so this sheet is now mostly spare)	1	\$50	\$50
3/8" Baltic birch plywood, half-sheet — weight swap (battery-drawer walls + fridge tray + Panel C front wall)	1	\$25	\$25
2x2 pine (8ft lengths) or aluminum L-channel	12	\$8–15	\$96–180
Panel drawer slides, 20" full-extension (1 pair — Panel A's right/DELTA 3 drawer; Panel B has no drawers, Panel A's left bay has none either)	1 pair	\$16	\$16
Drawer catches (friction catch or small turn latch)	1	\$3	\$3
WAVE 3 glide strips (Panel A's left bay floor, UHMW or laminate scrap)	2	\$3	\$6
Corner brackets (frame joints, 4 per module x 3 modules — the rear pantry has no frame, no brackets needed)	12	\$1	\$12
Wood screws (1.25" and 2", assorted box)	2 boxes	\$10	\$20
Anti-rattle bumper strip (adhesive felt/foam weatherstrip roll)	1	\$10	\$10
Alignment dowel pins (3/8" dowel rod, cut to 4 pins)	1	\$3	\$3
Seam draw-latches (over-center, 4 total — both sides of the A/B and B/C seams)	4	\$4	\$16
Utensil bins + non-slip liner (loose, inside the drawers/bins as desired)	1 set	\$12	\$12
Wood glue	1	\$8	\$8
Ryobi R-series biscuit assortment (R1/R2/R3) for the DBJ50 — carcass, shelf, drawer & box joints (see the Joinery & Fastener Guide)	1	\$12	\$12
Panel A/B diagonal corner braces (2 per panel, A + B = 4 used — Sumnacon 4" 8-pack, 4 spares, PURCHASED)	1 pack	\$9	\$9
Leg leveling feet — Heavy Duty 3/8-16 furniture levelers w/ T-nut kit, 4-pack (330 lb per foot; buy 3 packs = 12)	3 packs	\$12	\$36
Foot hand-grip knobs — Peachtree 3/8-16 thru-hole star knobs, ~2" dia, 4-pack (1 per foot, jam-locked on the bolt; buy 3 packs = 12) + 12x 3/8-16 jam nuts	3 packs	\$12	\$36
Bed platform lumber — 1x4 x 8ft pine boards (two 58" side rails + eight 45" slats, two per board)	6	\$5	\$30
Kitchen drawer slide pair — 24" full-extension side-mount, 100lb class	1	\$16	\$16
Kitchen drawer magnetic catch (box + cheeks come from the plywood sheets' spare area)	1	\$3	\$3
RV bubble levels — Larbeti stick-on 2+2 pack, bar + T-shape (PITCH on the platform's driver-side rail edge, ROLL on the rear-pantry deck edge) — PURCHASED July 2026	1	\$10	\$10
RV leveling blocks, Lynx-style 10-pack + 1 wheel chock (per-site leveling at the WHEELS — see the Block Calculator note, Appendix D)	1	\$40	\$40
HEST Dually Long mattress (hest.com/products/dually — 78" x 50" x 4" solid foam, memory-foam top, washable waterproof cover INCLUDED; no air chambers)	1	\$530–590	\$530–590
— Budget fallback: DIY 2-layer foam (queen 4" HD base + 1.5" memory topper, both cut to 50" x 78" with a serrated/electric knife + spray adhesive + a separate waterproof cover) — swaps in for the HEST at ~\$185–255 total	(alt)	(\$185–255)	(\$0 in total below)
Cable grommets (1 cooktop line, 1 Power strip 1's line — both short hops to the rear outlet now, 3 fridge DC line, 2 DELTA 3 AC charging line) — EASYEAH 20-pack covers all 7, PURCHASED	1 pack	\$10	\$10
16 AWG extension cord (household AC-rated — cooktop to the REAR outlet, short + slack loop for the slide)	1	\$8	\$8
16 AWG extension cord (household AC-rated — Power strip 1 to the REAR outlet beside it, short)	1	\$8	\$8

Item	Qty	Est. Unit Cost	Est. Total
Fridge DC line — OYMSAE 12-ft 16AWG SAE-to-SAE 2-pack: the cord AND its 2 seam quick-disconnects in one part, PURCHASED July 2026 (don't buy cord and connectors separately)	1 pack	\$22	\$22
16 AWG cord (household AC-rated — DELTA 3 AC charging line, front console to Panel A, ~3-4ft)	1	\$8	\$8
Per-module surface wire raceway — a CordMate II kit for the 3 AC lines (~\$28) + a 123" open-slot raceway kit for the DC line (~\$18, screws included), AC and DC in separate channels + screw-mount cord clips	1 set	\$46	\$46
SAE quick-disconnect connectors (2 for the fridge DC line's 2 seams — DC-rated, matches the fridge's actual 12V circuit)	2	\$8	\$16
Fused (15A) male car-plug → SAE adapter — DELTA 3 end of the fridge line (P1 ; its fuse is the line's upstream protection). Any 16AWG fused SAE adapter kit works	1	\$9	\$9
SAE → female 12V socket pigtail — fridge end (P7 ; the fridge's own cord plugs into it). Often sold in the same kit as the P1 adapter	1	\$9	\$9
18AWG red/black hookup wire, ~10 ft (in-cabinet branch runs, P6–P12)	1	\$8	\$8
Crimp terminal assortment — #10 heat-shrink rings (fuse-block studs) + 0.25" female spades (switch tabs)	1 kit	\$12	\$12
WAGO 221-413 lever nuts (fan feed + fan return splits — P12)	1 pack	\$10	\$10
2-way AC outlet tap (REAR outlet — Power strip 1 + the cooktop share it)	1	\$5	\$5
BougeRV Rocky 40 (CR04001), 41QT dual-zone (bougerv.com Rocky V3.0 — specs verified against the saved user manual: 28.74" x 17.72" x 15.79", 40.6 lb (18.4 kg), 60W max / 45W ECO, reversible lid, optional B240 battery) — PURCHASED July 2026 direct from bougerv.com (New Rocky V3.0 41QT, JULY7 coupon; the 30-Qt Amazon unit ordered by mistake is cancelled)	1	\$400–500 (verify invoice)	\$400–500
Heavy-duty 24" full-extension drawer slide pair — VADANIA #D76 locking, 379 lb, PURCHASED July 2026 (locks closed AND extended; supersedes the original 200 lb non-locking spec; loaded fridge can realistically hit 60–90 lb). Rails mount VERTICALLY on the tray's sides — never under it (see the fridge slide detail)	1 pair	\$79	\$79
Steel riser angles for the fridge slides, ~2"x2"x3/16" x 24" (1 per fixed rail, drilled to match — through-bolted to the E-track anchors, the rail screws to the vertical face)	2	\$12	\$24
1x3 pine, 6 ft (rip the fridge tray's two 28¾" side aprons from it)	1	\$6	\$6
JAGAHABA wooden slide-out camp kitchen , right-side variant (kitchen faces out the passenger side), built for a 2-burner stove (confirmed product link — no listed price found in research; treat as an UNVERIFIED estimate until you check the live listing)	1	\$300–350	\$300–350
COOKTRON Portable Induction Cooktop 2 Burner w/ Removable Iron Cast Griddle Pan — confirmed exact product, 18.1"x9.1"x4.3" (fits the JAGAHABA's 23"x15.7"x5.7" stove tray with margin on every axis); see Section 7 for why the Duxtop 9620LS was dropped	1	\$189.99	\$189.99
120mm 12V fan + PWM temperature controller w/ NTC probe (W1209-style, fridge-bay cooling)	1	\$15–20	\$15–20
Snap-in louvered RV vents — 1 low intake (front wall, cool-air scoop) + 1 low exhaust (cabinet door)	2	\$6	\$12
12V fused distribution block (control panel) — PURCHASED July 2026: Nilight 6-way blade fuse block w/ negative bus, waterproof cover, label stickers, fuse assortment included (no separate ATO fuse pack needed)	1	\$17.98	\$17.98
Illuminated toggle switches (SW1 fridge, SW2 fans, SW3 spare — the old "cooktop" label predates the verified-outlet round; the cooktop is AC, switched at Power strip 2)	3	\$5	\$15
Small electrical project enclosure (control panel housing)	1	\$10–15	\$10–15
Windmill Smart Fan 2-in-1 air circulator (personal comfort, Power Strip 1) — PURCHASED July 2026 , swapped in for the planned Claymore V600+	1	\$69	\$69
Snap-Loc E-Track anchors, 1000lb WLL / 3000lb break strength each, bolt-on (4 for the fridge slide + 4 for the kitchen unit — see "Securing heavy components," Section 8; the Sienna's factory cargo hooks are rated for cargo nets only, not this)	8	\$6.99	\$56
5/16" stainless carriage bolts + nylon-insert lock nuts + fender washers (2 per E-track anchor, through the floor pan)	16	—	\$12
Blue medium-strength threadlocker (Loctite 242 or equivalent — on the floor-pan bolts, in addition to the lock nuts)	1 bottle	\$8	\$8
Zinc-rich cold-galvanizing compound, brush-on or spray (bare cut-edge rustproofing at all 16 drilled holes, before sealant)	1 can	\$12	\$12
Rubberized undercoating spray (2nd rustproofing layer over the anchor footprints, underside)	1 can	\$10	\$10
Erickson ratchet straps (01415), 400 lb WLL / 1,200 lb break, 1" x 10' (kitchen unit, criss-crossed over the top to the E-track anchors)	1 pack of 4	\$32	\$32
Fridge hold-down — 1 low-profile cam strap + 2 screw-eye D-rings (hooks to the fridge's 2 end handles, down to the tray's side apron — keeps the fridge from lifting off the tray in a hard stop)	1 set	\$10	\$10
Cable clips for the fridge DC line's slide-travel slack (3, screwed to the slide's fixed outer rail — same VIPMOON-type clip as the cooktop run, buy links below)	3	\$1	\$3
Tension rod + blackout curtain fabric	1	\$40	\$40
Wood sealant/varnish	1	\$20	\$20

Item	Qty	Est. Unit Cost	Est. Total
Sandpaper, misc finishing supplies	—	\$15	\$15
6-outlet power strip, individual switches (Power strip 1 + Power strip 2) — CRST metal, PURCHASED July 2026	2	\$25	\$50
UMETRE 9-Piece Detachable-Handle Induction Cookware Set — nests flat, its 11x11 box drops into the pot crate (Component 1); induction-compatible, dishwasher-safe — PURCHASED July 2026 (bought in place of the Cook N Home stainless set)	1 set	\$45	\$45
PeaceOut Toyota Sienna Sliding Doors Bug Nets — Sienna-specific, sold as a pair (driver + passenger sliding doors), no-see-um mesh, magnetic + hook-and-loop attachment (temporary, no screws), carry bag included — lets both side doors stay open for ventilation while sleeping without bugs getting in. Real listed price is in CAD; \$ figure here is an approximate USD conversion — confirm current exchange rate before ordering.	1 pair	~\$197 (CAD \$269.99)	~\$197
DELTA 3 drawer hardware: 1x1 pine locating cleats, 2 screw-eye D-rings + cam strap, 1" cable grommet (Panel A right drawer — see Renders)	1 set	\$15	\$15
WAVE 3 hose/cord storage hook, inside the utility cabinet (kitchen-side wall — see Renders)	1	\$4	\$4
Non-slip mat, WAVE 3's point-of-use surface (Panel C's deck or the front seat — not the Panel A storage bay, see Renders)	1	\$12	\$12
FOUND STORAGE — DELTA 3 drawer top tray (reclaims ~2.2" of dead headroom above the DELTA 3 stack — was ~3.3" before the deck recess: cables, the DELTA 3's own cords, dongles) — shallow lift-out bin	1	\$8	\$8
FOUND STORAGE — WAVE 3 bay overhead shelf (reclaims ~2.2" above the WAVE 3 — was ~2.9" before the deck recess: hoses, remote, flat soft goods; the unit still slides out beneath it) — 1/2" ply on 1x1 cleats, from offcut/scrap	1	\$5	\$5
FOUND STORAGE — utility-cabinet bins (the cabinet's spare volume beside the control panel: dish soap, sponges, utility odds)	2	\$4	\$8
EcoFlow WAVE Series Car Vent Kit — official accessory, WAVE 2/3 compatible, velcro window seal + duct pass-throughs, no permanent modification (no-tent sleeping configuration, Section 1) — PURCHASED July 2026 (order EFUS-426448, \$40)	1	\$40	\$40
SRS airbag emulators, Sienna 2nd row — PURCHASED July 2026 : 0651 Round x2 + 5522 "Square" x2 (shipped). Click into the van-side yellow floor plugs when the seats are out so the airbag system reads normally (Section 9). VERIFY before seat-removal day that the 5522 mates with the Sienna's rectangular floor plug — the original spec called for a 6134 Rectangle	1 set	~\$60	~\$60

EcoFlow DELTA 3 Plus + Smart Extra Battery and WAVE 3 (already owned, not priced here) — see the DELTA 3/WAVE 3 stowage detail in Renders and Section 1.

Recommended purchase links — slides + electrical (checked July 2026)

- **Rear pantry (prefab):** [IRIS USA 12"W stackable drawer 3-pack, Home Depot #500163](#) (buy 2 packs; 2x2 cluster + 2 spares) + a [1"x6' cam-buckle strap 4-pack + flush deck D-rings + felt tape + VELCRO ONE-WRAP 8"x1/2"](#) ties.
- **Panel B deep-storage totes:** [Sterilite 28-Qt under-bed lidded tote](#) x2 — plain lidded totes on purpose (Panel B has no side access, so slide-drawer versions would waste money).
- **Spare tire:** [RJ-MODINI kit, 2011-2026 Sienna incl. Hybrid](#) (\$349.95) — T155/85R18 on an 18x4 steel wheel with the factory 60.1mm hub-centric bore; at **28.5" rolling diameter it's the closest match to the ~29.1" OE tires** (~2%, vs ~4.8% for the T145 kits — gentlest on the AWD systems). Includes a model-specific 2-ton jack, lug + ratchet wrench, 4 sockets, gloves, and cases (the tool case nests inside the wheel barrel). Skid + liner come from offcuts already in the build. (Alternatives compared: ValueSpare ~\$270-385 steel/27.7", Modern Spare ~\$350-460 alloy/27.7".)
- **Spare hold-down hardware:** [NVAHV 1" stainless footman loops, 4-pack w/ screws](#) (~\$10, need 2) + [Cartman 1" x 12 ft cam-buckle lashing straps, 6-pack — PURCHASED July 2026](#): footman loops (2 packs) + a Masterwise 6-ft x 1" cam-strap multi-pack bought in place of the Cartman 12-footers (the spare's over-stack run is ~5.5 ft, so 6 ft reaches; spares cover the pantry + DELTA 3 drawer straps).
- **Leveling blocks:** [Lynx Levelers 10-pack](#) — the "legos"; pair with the [Sienna Block Calculator](#).
- **Bubble levels:** **PURCHASED July 2026** — Larbeti stick-on 2+2 pack (bar + T-shape, self-adhesive): PITCH bar on the platform rail edge, ROLL on the rear-pantry deck edge, 2 spares. (Replaces the planned RV Designer E409 screw-ons — the adhesive mount skips two screw holes in the poplar rail; degrease the surfaces first.)

Specific products verified against this plan's specs, full URLs shown for copy-paste. Quantities refer to what THIS build needs; several listings are multi-packs. The AITRIP W1209 3-pack originally recommended went **Currently unavailable** — the HiLetgo 2-pack below is the same W1209 board with case, in stock. The low-level CO monitor is owner-supplied (battery-powered, see the BOM note above) and deliberately absent here.

Item (plan spec)	Product	Link
Panel drawer slides — only 1 pair needed now (Panel A's right/DELTA 3 drawer; Panel B has no drawers — the side doors don't reach it — and Panel A's left bay is WAVE 3 open storage, Section 1), 20" full-extension, 100 lb class — PURCHASED (July 2026)	GlideRite 20" 100 lb ball-bearing slides, 5-pair pack (\$46.99; 4 spares now — one could serve as the kitchen drawer's pair if you go 20" instead of 24" there)	https://www.amazon.com/20-inch-Extension-Ball-Bearing-Drawer-Over-Travel/dp/B07KFLS2C9
Fridge slide — 1 pair, 24" — PURCHASED (July 2026)	VADANIA #D76 (VD2576) 24" industrial heavy-duty WITH LOCK — 379 lb, 3" (76mm) rail, 3-fold full extension, locks both closed (transit) and extended (loading), 1 pair (\$79.20). The lock is an upgrade over the original non-locking 200 lb spec. INSTALL NOTE: the 76mm rail wants ~3" of flat vertical face — the rails stand VERTICALLY, one flanking each side of the tray: the moving member screws to a 1x3 apron glued+screwed along each tray edge, and the fixed member screws to a steel riser angle through-bolted to the E-track anchors. NEVER mount them flat under the tray — undermount adds ~1.2" of height the 17" void doesn't have, and the fridge would hit Panel C's end rail (the mounted stack clears it by 0.33").	https://www.amazon.com/VADANIA-Industrial-Extension-Bearing-Wide-ning/dp/B08C56Z6GF
Fridge slide, premium alternate	Hettich 24" full-extension, 500 lb (~\$70+)	https://www.amazon.com/Drawer-Slide-Extension-Capacity-Hettich/dp/B0016LEBBG
120mm 12V fans — need 2 (intake + exhaust)	GDSTIME 120mm x 25mm 12V dual-ball-bearing fan, ~\$9 — sold singly, ORDER QTY 2. (The UMLIFE 2-pack link originally here started redirecting to a 60mm 5V USB variant — verify 12V / 120x120x25mm on the spec table before buying any fan listing.)	https://www.amazon.com/GDSTIME-Bearings-Brushless-Cooling-Exhaust/dp/B00N1Y4BMA
W1209 temp controller + NTC probe (need 1; 2nd is a spare)	HiLetgo 2pcs W1209 12V with case + waterproof probe (~\$10)	https://www.amazon.com/HiLetgo-Temperature-Controller-Thermostat-One-Channel/dp/B07VDWRZKB
Fused 12V distribution block — PURCHASED (July 2026)	Nilight 6-way blade fuse block w/ negative bus, waterproof cover, label stickers + fuse assortment included (\$17.98 — replaces the Blue Sea 5025 pick and the separate ATO fuse pack)	https://www.amazon.com/Nilight-Negative-Standard-Waterproof-Automotive/dp/B09NPQBXCXG
Illuminated toggle switches — need 3 — PURCHASED (July 2026)	Ampper 12V 20A illuminated round rockers, 10-pack (\$8.99)	https://www.amazon.com/Illuminated-Rocker-Switches-Ampper-Terminals/dp/B08ZPY5D9L
Control panel enclosure	LMioEtool IP65 hinged ABS junction box, 5.9" x 3.9" x 2.8" (~\$12)	https://www.amazon.com/LMioEtool-Waterproof-Dustproof-Universal-Electrical/dp/B0CJCKXK3
16 AWG AC cords — cooktop → REAR outlet + Power strip 1 → REAR outlet (both short, no seams) + DELTA 3 charging → front console	DEWENWILS 3ft 16AWG SJTW indoor/outdoor extension cord, ETL listed, 2-pack (~\$13) — 1 pack covers the two short rear-outlet hops; add a 2nd cord for the DELTA 3 charging line (or size one to your console distance)	https://www.amazon.com/DEWENWILS-Extension-Weatherproof-Outdoor-Grounded/dp/B0891VDLV5
16 AWG DC cord run + 2 seam disconnects (fridge line — this one really is 12V DC, DELTA 3 to fridge, so the SAE connector IS the right part here)	OYMSAE 12 ft 16AWG SAE-to-SAE quick-disconnect cables, 2-pack — the SAE plugs ARE the seam disconnects (~\$14)	https://www.amazon.com/OYMSAE-Extension-Disconnect-Connector-Automotive/dp/B082JLGJCR
16 AWG cord, ~3-4ft (DELTA 3 AC charging line, front console to Panel A — household AC-rated, no seam crossing)	DEWENWILS 3ft 16AWG SJTW indoor/outdoor extension cord, ETL listed, 2-pack (~\$13) — same product as the cooktop line above, 1 pack covers this with a spare	https://www.amazon.com/DEWENWILS-Extension-Weatherproof-Outdoor-Grounded/dp/B0891VDLV5

2-way AC outlet tap (REAR outlet — Power strip 1 + the cooktop share it; the front console outlet is the DELTA 3's alone)	GE Outlet Extender Wall Tap, UL listed, 125VAC (~\$5-13)	https://www.amazon.com/GE-Adapter-Grounded-Outlets-52203/dp/B00006IBFC
Leg leveling feet — 12 needed (buy 3 four-packs); 3/8-16 leveling feet WITH T-nut kit, 330 lb per foot	Heavy Duty Furniture Levelers w/ T-Nut Kit, 4-pack (~\$12/pack)	https://www.amazon.com/Furniture-Levelers-Adjustable-Leveling-Cabinets-Sofa/dp/B081ZT4Q4G
Foot hand-grip knobs — 12 needed (buy 3 four-packs), jam-nutted onto each foot bolt as the easy hand grip	Peachtree PW6103 Star Thru-Hole Knob 3/8-16, 4-pack (~\$12/pack) + 12x 3/8-16 jam nuts	https://www.amazon.com/Star-Thru-Hole-Knob-Woodworking/dp/B000UHY7Y84
1" cable grommets — need 7 (the 20-pack covers all pass-throughs) — PURCHASED (July 2026)	EASIEAH 1" rubber grommets, 20-pack (\$9.99)	https://www.amazon.com/Diameter-Hole%E2%8C%99ber-Synthetic-Protection-Double-Sided/dp/B08556S6KH
6-outlet power strips, individual switches — need 2	CRST 6-outlet metal strip, individual switches, 1200J (~\$25 each)	https://www.amazon.com/CRST-Individual-Protectors-ECO-Friendly-Protector/dp/B097JH3W3W
Cord clips — ~10-12 along the cooktop cord run	VIPMOON 100x 1/4" R-type nylon screw-mount clamps w/ screws (~\$9) — screw-mount, NOT adhesive: stick-on clips let go under vehicle vibration and temperature swings. Size up to 3/8" if the SAE cable measures over ~0.28"	https://www.amazon.com/VIPMOON-Mounting-Fastener-Electrical-Management/dp/B07HGGZ83JB


Slides + electrical together run **~\$290-305**. These links satisfy the corresponding BOM rows above — don't double-count.

Estimated total (summing the BOM table above): ~\$3,370–3,740 with the fridge + kitchen included, or ~\$2,670–2,890 if you already own equivalents — the owner-supplied CO monitor and fire extinguisher aren't priced here. The itemized BOM table is the authoritative figure; the breakdown below traces where the money goes and how the design's cost evolved. It includes ~\$111 for the bed platform and its leveling — six 1x4 boards (~\$30, weight swap dropped it from seven), 12 leg leveling feet w/ T-nuts (3 four-packs, ~\$36), 12 star-knob grips + jam nuts (~\$36), and the Larbeti stick-on bubble-level 2+2 pack (~\$10, purchased: pitch on the rail edge, roll on the rear-pantry deck edge); ~\$19 for the kitchen drawer hung above the kitchen unit (slide pair + catch — its box and cheeks come out of the plywood sheets' spare area); ~\$24 for Panel A/B's diagonal corner braces, added to recover some of the racking rigidity lost when their tops came off, ~\$60 (purchased) for the SRS airbag emulators (Section 9), ~\$43 that Power strip 1's old full-length cord run used to add (8ft cord + 2 grommets + 2 inline connector pairs — since deleted by the verified-outlet round below), and ~\$52 that the old plywood pantry's retention system used to add (fiddle lips, lash straps, bins, liner, pins, net) — since removed with the prefab-drawer swap below. The July-18 round adds ~\$191: a Lynx-style leveling-block 10-pack + chock (+\$40 — per-site leveling moves to the wheels, driven by the Block Calculator), Kipp cam levers replacing the old plywood pantry's hex bolts and wing nuts (+\$60 — later removed entirely by the prefab-drawer swap), three extra 2x2 boards for the cube-frame bottom rails (+\$24 mid-range), cable grommets (a \$10 20-pack covers all 7 pass-throughs), two passive louvered cooling vents — a low cool-air intake scoop in the front wall and a low exhaust louver in the cabinet door (+\$12), a pantry upgrade — an adjustable bottom-bay shelf plus the fiddle-lip/lash-strap/bins/liner retention system replacing the old nets-everywhere approach (a single soft-goods net stays) (+\$33 net over the old \$12 net), and 4 over-center seam draw-latches that clamp the three modules into one rigid beam (+\$16); Panel B losing its drawers entirely (owner-confirmed: the side doors don't reach it — its bay is top-loaded deep storage now) saves ~\$86: two slide pairs, two catches, and a whole 1/2" plywood sheet, less ~\$8 for Panel C's new front wall hardware coming out of that freed sheet. Panel A's left bay going to WAVE 3 open storage instead of a 4th drawer nets out close to a wash: ~\$19 (one less drawer slide pair, one less catch, no more plywood tray) offset by the glide strips and a non-slip mat. Moving the fridge and fan system onto the DELTA 3 stack (instead of the van's rear outlet) adds ~\$79: a 2nd cord (fridge DC line, Panel A to Panel C) and its own charging cord (front console to Panel A), the grommets and disconnects both need, and a 3-way splitter when 3 lines wanted the console's power (later downsized to a 2-way rear-outlet tap). Relocating the old plywood pantry onto Panel C's deck instead of its own module saved ~\$20-34: one fewer module's worth of frame lumber (2 fewer 2x2 boards) and corner brackets, since it no longer needs a frame of its own. This is above the old built-from-plywood design's ~\$1,245–1,452 mainly because of three swaps that trade DIY labor (or an inadequate factory feature) for bought reliability: a real BougeRV Rocky 40 + JAGAHAAH kitchen (~\$700–850 combined, Rocky price UNVERIFIED) instead of building fridge/kitchen boxes from the same plywood as the panels, the fridge cooling/control electronics (2 fans, controller, sensor, surge protector — new this redesign, ~\$85–120 combined), and real E-track floor anchors + rated straps (~\$100) replacing the factory cargo hooks once those turned out to be rated for cargo nets only, not securing a 45-90lb item. The mattress is now a bought HEST Dually Long (~\$530–590, cover included) — the DIY 2-layer fallback (~\$185–255) stays in the BOM as the budget swap. The plywood was ~\$115 across 2 sheets (one 3/4", one 1/2") after Panel A/B lost their tops, Panel B its drawers, and the pantry moved onto Panel C's deck — down from 4 sheets earlier. The July-2026 **weight swap** then thinned the non-critical panels to 1/2"/3/8" (~21 lb off the structure, Appendix E) and the bed to 8 slats: it shaves ~\$5 on the 1x4s but adds a 3/8" half-sheet (~\$25), so plywood is now ~\$140 across a 3/4" sheet (lightly used), a 1/2" sheet (full), and a 3/8" half-sheet — a poor cost-per-pound, but the owner prioritized easier module lifts. A later review round also adds the per-module surface wire raceway — a CordMate II kit for the AC lines + an open-slot kit for the DC line, AC/DC separated (~\$46, Section 5) — replacing the loose cord clips for cleaner, serviceable runs. Two optional material upgrades are documented but NOT in the total above — poplar top-rails (~\$25–40) and aluminum corner braces (~\$10–15),

see Section 3's "Material options & upgrades." A verified-outlet round (the van has exactly **2 AC outlets: 1 front console + 1 back passenger area**) moves the cooktop and Power strip 1 onto the REAR outlet — deleting all 4 inline AC seam connectors (–\$32), shortening both AC cords (–\$14), downsizing the splitter to a 2-way tap (–\$3), and dropping 3 grommets (–\$18): **~~\$65 and two fewer failure points per lift-out**. A later round then **swaps the plywood pantry for a prefab drawer cluster** (Component 1): out go ~\$137 of pantry mounting + retention hardware (cam levers, 2 steel braces, fiddle-lips/straps/net, half-round edging) and ~42 lb of plywood/hardware; in come 4 IRIS 12"W stackable drawers + a cleat/strap hold-down + a pot crate (~\$115, ~15 lb) — roughly cost-neutral and ~27 lb lighter, with nothing to build. A companion change containerizes Panel B with Sterilite 28-Qt lidded under-bed totes so its top-loaded bay unloads as whole labeled boxes. Finally, an **RJ-MODINI spare kit** (+\$350, +~40 lb — 28.5" diameter, the closest OE match of the kits compared) stows flat in Panel B at the axle — chosen over a hitch basket (which would cost ~\$180-400, add its own 30-60 lb, and lever ~130+ lb onto the rear axle) — displacing 2 of the 4 totes (–\$24, –4 lb) (Appendix E).

5. Power Cord Routing

Every purchased electrical component at its real position — icon-based top-down layout, the control-cluster mounting elevation, and the fan installation detail (screw pattern + airflow direction):

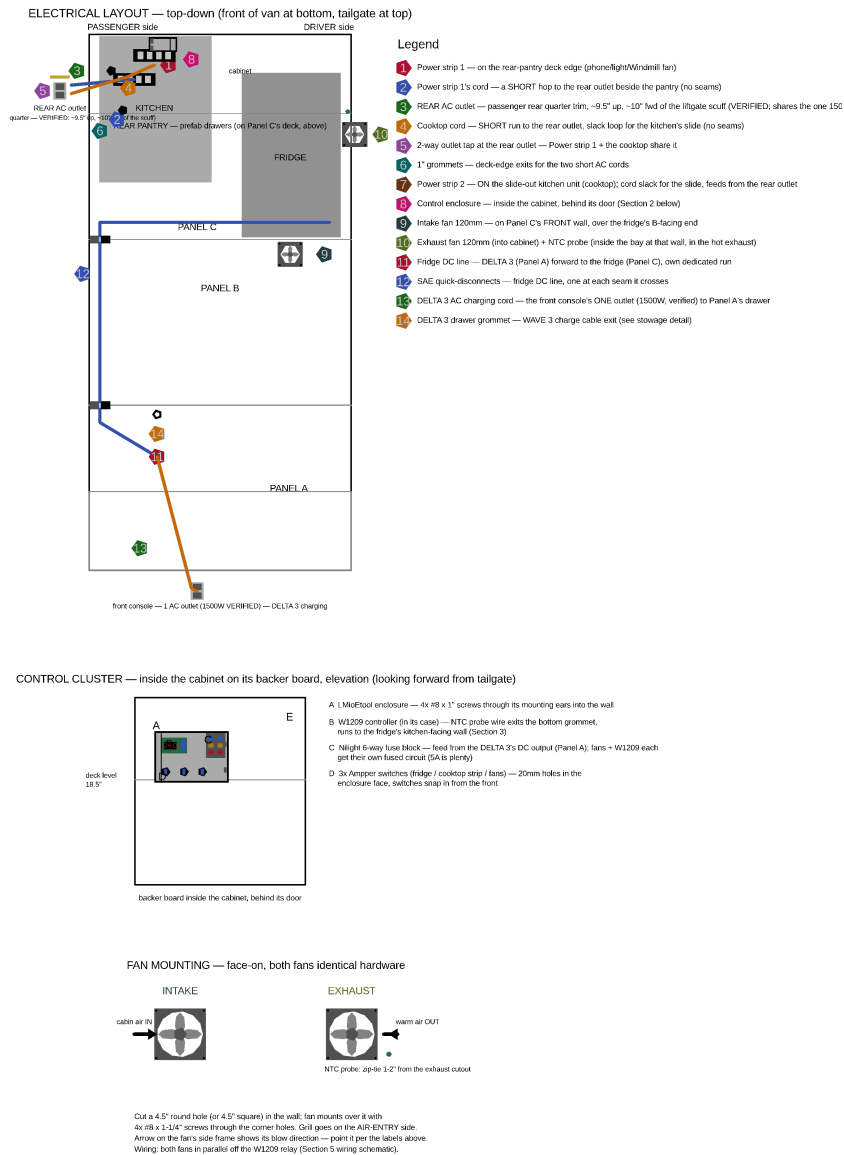

Electrical layout

The fridge (and its fan system) now runs off the DELTA 3 stack, not the van's rear outlet — see the "Why the fridge and fan system now run off the DELTA 3 stack" note in Section 1 for the full reasoning (reliability while people are away from the vehicle, backed by real runtime/recharge numbers). This does mean the fridge needs a cord after all, unlike the previous design's direct-plug simplification — a DC line from the DELTA 3 (Panel A's right drawer) forward to the fridge (Panel C), crossing the same 2 module seams the cooktop's cord does. The Sienna's rear 12V accessory outlet is simply unused now — nothing in this design plugs into it, so it's free for anything else later.

Cord management — run each module's cords in a surface raceway, not loose clips (owner, July 2026). Instead of loose zip-tied/clip-covered runs, route the cords through a **segmented plastic surface raceway (wire duct / Wiremold-style)** — a short length screwed to the inside of each module's frame, one channel per panel, meeting at the existing seam disconnects. Two rules keep it correct: (1) the raceway must stay **segmented per module** (a separate length in A, B, and C) — NOT one continuous conduit spanning the seams, or a panel can't be lifted out; the inline AC connectors / SAE DC disconnects still live at each seam. (2) Keep the **120V AC and 12V DC lines in separate channels** (a divided duct, or two small ducts side by side) — don't bundle them together. This protects the cords from abrasion, makes every run traceable, and lets you pull or add a wire later without fishing it through the frame — a real serviceability win over clipped cords for a small added cost (see the raceway line in Section 4's BOM). Where a run has to cross into a module's interior bay, a snap-cover raceway lifts open without unscrewing.

The van has exactly 2 AC outlets (VERIFIED): 1 in the front center console (1500W) + 1 in the back passenger area. That rear outlet transforms the routing: the two tailgate-end AC loads (the cooktop and Power strip 1) plug into it with **short cords and ZERO seam crossings** — the old full-length runs with their inline seam connectors are gone. The front console outlet is dedicated to the DELTA 3's charging cord. **Four cords need routing in total, each on its own independent line:**

Cooktop line (Power strip 2 → REAR outlet) — short

Power strip 2 rides the slide-out kitchen unit so it travels to wherever you're actually cooking — the JAGAHABA extends to ~70" out the tailgate in use. Its cord now just hops to the rear AC outlet in the back passenger area, a few feet away. This is a full 120V AC household circuit, so use a household-rated extension cord.

- 1. Drill one 1" grommet hole in the frame rail at the kitchen unit's corner post nearest the rear outlet.
- 2. Run the short cord from the strip, through the grommet, to the rear outlet's 2-way tap (shared with Power strip 1 — below).
- 3. Leave a **slack loop** sized to the kitchen's full ~70" slide extension, coiled near the stowed position, so the cooktop keeps power at the cook position without strain.

Power strip 1 line (rear pantry deck edge → REAR outlet) — short

Power strip 1 (phone/device charging, reading light, the Windmill fan) mounts at the rear pantry's deck edge in the open bay (Component 1) — which sits directly beside the rear outlet. One short 120V AC cord:

- 1. Drill a 1" grommet at the deck edge where the cord drops off the pantry bay.
- 2. Run it to the rear outlet's 2-way tap. Leave ~1 ft of slack so lifting the pantry's drawer units never requires unplugging anything.

Fridge DC line (DELTA 3 → Panel C fridge bay)

The fridge's DC line runs from the DELTA 3 Plus's DC output (Panel A's right drawer) back toward the tailgate, through Panel B, into Panel C's fridge bay. Unlike the cooktop and Power strip 1's lines, this one really is 12V DC, so an automotive/solar SAE quick-disconnect is the right connector type here. Like the cooktop's line, it crosses the same 2 remaining module seams (Panel A → Panel B, Panel B → Panel C), so it needs its own quick-disconnects too. This is the trade-off Section 1 already flagged: reintroducing a long cord run in exchange for the fridge no longer depending on the van's ignition state.

- 1. Drill a 1" grommet hole in Panel A's frame rail near the DELTA 3 drawer, and one more at each of the 2 seams it crosses (Panel A → B, Panel B → C) — 3 total, reusing the same rail-channel approach as the cooktop line (a dado groove or a zip-tied cord under a clip-cover strip both work).
- 2. Install a quick-disconnect connector at each of the 2 seams so Panel A and Panel B still lift out independently.
- 3. Terminate the cord at the fridge's DC input inside Panel C's void, near the control enclosure (Component 7).
- 4. Leave a few inches of slack at the DELTA 3 end so opening/closing that drawer doesn't strain the connection.
- 5. **At the fridge end, clip the slide-travel slack loop to the slide's FIXED outer rail — not the tray, and not left loose** — 2-3 screw-mount cable clips (same VIPMOON-type clips as the cooktop line, Section 4 BOM) along the rail's inside face. The outer rail never moves, so the clipped loop stays out of the pinch point between the tray and the rail as the tray slides home; a loose coil left to dangle can get caught under the tray or crushed against the rail on the way in.

Every connection point, P1–P12 (matches the numbered markers on the wiring diagram, Renders)

The ONE 16AWG SAE line runs DELTA 3 → fuse block; **both** circuits branch at the Nilight block, and every black (–) return lands on its negative bus:

#	Where	What lands there — terminal, connector, crimp
P1	DELTA 3 Plus 12V car-power outlet (Panel A right drawer)	Fused (15A) male car-plug → SAE adapter — hand-plug, no tools. That fuse is the whole line's upstream protection
P2	Panel A/B seam	SAE quick-disconnect #1 — the OYMSAE cord ends mate; zip-tie a strain-relief loop each side of the seam
P3	Panel B/C seam	SAE quick-disconnect #2 — same part; both disconnects hang slack, never taut
P4	Panel C front wall, low driver side	1" grommet — the cord just passes through into the fridge bay/cabinet, no termination
P5	Nilight 6-way fuse block, main studs (inside the cabinet)	Red → +IN stud, black → –IN stud: strip 3/8", crimp #10 heat-shrink ring terminals, M5 nuts snug. F1 = 10A ATO (fridge), F2 = 3A ATO (fans), F3–F6 spare
P6	SW1 "FRIDGE" — Ampper rocker, 3 spade tabs	F1's 16AWG red → PWR tab; LOAD tab → pigtail red; GND tab → neg bus (powers the glow ring). 0.25" female spade crimps on all 3
P7	SAE → female 12V socket pigtail	SAE end mates toward SW1's LOAD side; the socket zip-ties inside the cabinet near the fridge's kitchen-facing wall
P8	Fridge DC input jack	The fridge's OWN 12V cord: plug → socket, plug → fridge. Slack loop for the 24" slide, clipped to the FIXED rail (step 5 above)
P9	SW2 "FANS" — Ampper rocker	F2's 18AWG red → PWR tab; LOAD tab → W1209 "+12V"; GND tab → neg bus
P10	W1209 controller — 4 screw terminals	+12V ← SW2 LOAD; GND ← neg bus (18AWG black); K0 ← short jumper from +12V; K1 → fan feed wire. Strip 1/4", screws snug. Settings: P0 = H mode, fans ON ~95°F / OFF ~85°F
P11	W1209 2-pin probe header	NTC probe plug clicks on; the probe TIP zip-ties inside the bay at the fridge's kitchen-facing wall, next to the exhaust fan
P12	WAGO 221-413 lever nuts (×2)	Nut A: K1 feed → both fan REDS. Nut B: both fan BLACKS → one 18AWG black → neg bus. Levers fully closed, tug-test every wire

Wire + termination spec: main run = the OYMSAE cord's own 16AWG; in-cabinet branches = 18AWG red/black hookup wire. Crimps: heat-shrink #10 rings (block studs) and 0.25" female spades (switch tabs) — crimp, tug-test, then shrink. SW3 is a spare on the panel (its old "cooktop" BOM label predates the verified-outlet round — the cooktop is 120V AC, switched at Power strip 2's own outlet switch).

The fan system's own wiring (fuse/switch/PWM controller/fans, Section 1) taps off this same DELTA 3 source rather than a separate line — see the fridge wiring schematic in Renders. The rail-channel routing is illustrated in the [Step 8 diagram](#) — it now carries only this DC line, since both AC loads plug into the rear outlet instead.

DELTA 3 AC charging line (front console → Panel A drawer)

A second, independent cord charges the DELTA 3 stack itself from the front console's AC outlet while driving — this is what makes the fridge's long runtime (Section 1) actually sustainable trip after trip, instead of draining down with no way to recharge until you're back home. Like the cooktop and Power strip 1's lines, this is a 120V AC household cord (charging the DELTA 3's AC input), not a DC connector. Panel A is now the module closest to the front seats (the pantry sits at the opposite end, on Panel C — Section 1), so this cord **crosses zero panel seams**, just a short run through the open floor gap in front of Panel A.

1. Drill a 1" grommet hole in Panel A's front end rail, near the DELTA 3 drawer.
2. Run the cord forward, through the open floor gap (nothing built there — Section 1), to a grommet hole near the front of the platform.
3. Continue along the van floor track to the front console AC outlet — same routing as the other two forward-running lines.
4. Leave enough slack at the Panel A end that pulling the DELTA 3 drawer open doesn't strain the connection.

Outlet facts (VERIFIED): 2 AC outlets total, both fed by the van's single 1500W inverter. The rear outlet sits on the **passenger-side rear quarter trim: ~9.5" above the cargo floor, ~10" forward of the liftgate scuff plate**, socket center ~16" laterally in from the right sidewall (the trim curves), directly above the 12V battery access panel and below the rear cup holders. That places it **below deck level (18.5")**, **in the gap between the kitchen unit's outer face and the van wall** — the cooktop's cord reaches it inside the bay, and Power strip 1's cord drops off the deck edge down that gap. Plug access is easy with the kitchen slid out.

Serviceability note: the 12V battery access panel sits under/behind the kitchen's passenger rear corner — keep it clear: no E-track anchor over it, and battery service = unstrap + slide the kitchen out (Component 7).

Shared-inverter wattage: every AC load shares one 1500W pool (confirmed — both outlets ride the same inverter). Plugging the cooktop + Power strip 1 into the rear outlet and the DELTA 3 charger into the front one cleans up the *cords*, but not the *budget*: the DELTA 3's AC input alone (up to 1500W at full X-Stream speed) can consume the entire rated capacity. Running the induction cooktop while fast-charging the DELTA 3 could oversubscribe the inverter. In practice this rarely collides — cooktop use happens at camp with the engine off, DELTA 3 charging while driving — but if you ever want both at once (e.g., cooking at a rest stop with the engine idling), cap the DELTA 3's AC charge rate in its app (EcoFlow lets you limit input wattage) to leave headroom.


The WAVE 3 is the one thing still fully self-contained. It draws from the DELTA 3 Plus (in Panel A's drawer) via its own charge cable, and isn't wired to any van circuit at all.

6. Illustrated Build Manual — By Component

Everything from Sections 3-4 reorganized around **10 self-contained components**, in the order you'd actually build them. Each component lists its parts, then walks through numbered steps in instruction-manual format: **the new parts for that step on the left, an exploded assembly view showing how they go in on the right** — drawn as woodworking-plan line art (white parts, black edges, letter labels keyed to the parts list, arrows showing insertion direction). Every piece dimension traces back to the cut list (Section 3) and every hardware item to the BOM (Section 4). Panels A and B share identical frame/divider/drawer construction, so those steps intentionally reuse the same diagrams in both components.

Cut every piece for every component up front, per Section 3's cut list, before starting Component 1 — sand all edges once cut.

Component 1: Rear Pantry — Prefab Drawer Cluster + Pot Bay

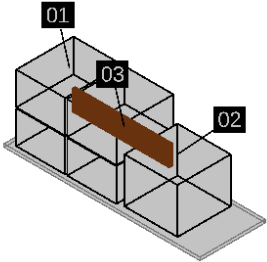
COMPONENT 1 — REAR PANTRY (PREFAB DRAWER CLUSTER + POT BAY)																	
FINISHED COMPONENT 	ACCESSORY LIST <table border="1"><tr><td>A IRIS IRIS drawer x4</td><td>B crate pot crate x1</td><td>C pine cleat x3</td><td>D cam strap x1</td></tr><tr><td>E flush D-ring x2</td><td>F felt tape x1</td><td>G velcro tie x8</td><td>H bubble level x1</td></tr><tr><td>I strip power strip x1</td><td colspan="3"></td></tr></table>	A IRIS IRIS drawer x4	B crate pot crate x1	C pine cleat x3	D cam strap x1	E flush D-ring x2	F felt tape x1	G velcro tie x8	H bubble level x1	I strip power strip x1				PART LIST <table border="1"><tr><td>01  IRIS unit 4x</td><td>02  pot crate 1x</td><td>03  pine cleat 3x</td></tr></table>	01  IRIS unit 4x	02  pot crate 1x	03  pine cleat 3x
A IRIS IRIS drawer x4	B crate pot crate x1	C pine cleat x3	D cam strap x1														
E flush D-ring x2	F felt tape x1	G velcro tie x8	H bubble level x1														
I strip power strip x1																	
01  IRIS unit 4x	02  pot crate 1x	03  pine cleat 3x															

SWAPPED (owner, July 2026): the custom plywood pantry is replaced by bought prefab drawer units — no shelving to build, and ~27 lb lighter (out goes ~42 lb of plywood + mounting hardware; in comes ~15 lb of drawers + hold-down). A 2x2 array (2 wide x 2 high) of **IRIS USA 12"W stackable storage drawers** (Home Depot #500163, two 3-packs — use 4, keep 2 spares) sits on the **tailgate end of Panel C's deck** — the same last-14" footprint the plywood pantry used, so the **80" sleeping run is unchanged** (the 14.3" unit depth sits 0.3" proud of the deck edge, inside the 2" hatch reserve). The cluster is **24.2" W x 14.3" D x 16.8" H**, which leaves **~21.8" of open deck on the passenger side** for a **pot/pan crate** plus the relocated power/wiring. Nothing is screwed into the units — a **cleat pocket + one cam strap** hold them, so each drawer unit **lifts straight out** (removable, clears the ~48" liftgate). **Deleted with the plywood pantry:** the 4 cam-lever clamps, the 2 steel L-angle sway braces + their bolts, the base cleats, the adjustable shelf, and the entire fiddle-lip/lash-strap/bin/liner retention kit — the drawers now contain their own contents. **The enclosed bed cubby is gone too**, so **Power strip 1 and the ROLL bubble level relocate to the deck edge** in the 19" bay (still reached and read from the bed). Build Panel C (Component 4) first — the cluster just sits on its finished deck.

Parts needed:

- **IRIS USA 12"W stackable storage drawers** (Home Depot model #500163, gray, sold as 3-packs at ~\$30.29 — buy 2 packs) — **use 4 units**, 12.1" W x 14.3" D x 8.4" H each, stacked 2 wide x 2 high (2 spares for swap-in). The 14.3" depth sits 0.3" proud of the deck edge — inside the 2" hatch reserve
- Hold-down cleats — ~1" x 1" birch strips (from the 3/4" sheet offcut), ~3–4 ft, screwed to the deck around the **cab side + both sides** of the cluster (tailgate side left open)
- Cam-buckle tie-down strap — 1, ~1" nylon, across the drawer fronts to the deck D-rings (holds the drawers shut + snugs the stack)
- Flush-mount deck D-rings — 2 (or a short E-track offcut), screwed to the deck flanking the cluster
- Anti-rattle felt/cloth tape — for the interlocking rails between the stacked units; + 2 small Velcro ties linking the top units to the bottom
- Pot/pan bay — 1 rigid ~11" x 11" bin or crate (the pots' own cardboard box works short-term, but a rigid bin takes a strap and won't crush) + a corner cleat + a bungee
- Power strip 1 + the ROLL bubble level — relocated to the deck edge in the 21.8" bay (Power strip 1's cord run is Component 6; the PITCH bubble level still goes on the bed platform, Component 2)

Build it (mostly placement + hold-down — there's no shelving to make):

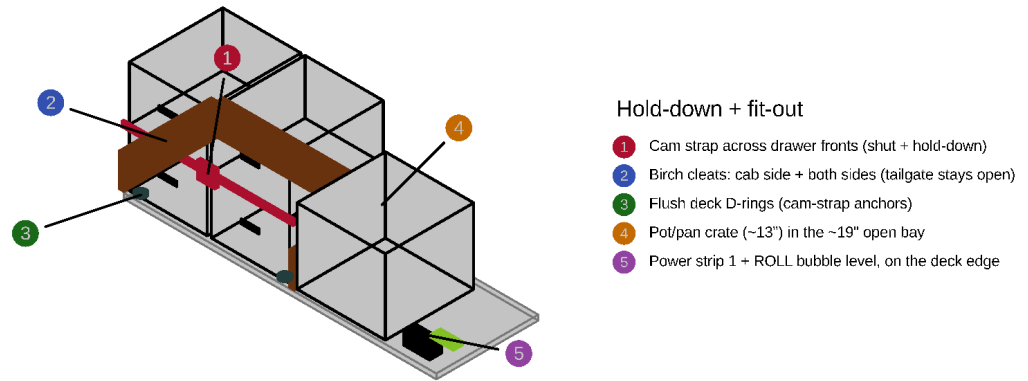

REAR PANTRY — prefab 2x2 IRIS drawer cluster (24.2" x 16.8") + pot crate, on Panel C's deck (Component 1)

Replaces the plywood pantry — ~27 lb lighter, nothing built. Each drawer unit lifts straight out once the cam strap is loosened.
Canned goods LOW, boxed dry goods UP. Cab-side cleat stops the forward slide under braking; the strap doubles as drawer-shut + hold-down.

Rear pantry layout

- Set the cluster.** Stack the 4 drawer units 2 wide x 2 high on the tailgate end of Panel C's deck, drawers facing the tailgate. Felt-tape the interlocking rails between the stacked units, and add a Velcro tie linking each top unit to the one below so the top row can't creep off under braking.
- Cleat pocket.** Screw ~1" birch cleats to the deck hugging the cluster's **cab-facing side and both sides** — leave the **tailgate side open** for drawer access. The cab-side cleat is the critical one: it stops the cluster sliding forward under braking.
- Strap the fronts.** Screw 2 flush D-rings to the deck flanking the cluster and run one cam-buckle strap across the drawer faces. Double duty — it keeps the drawers from sliding open under acceleration AND snugs the whole stack down. Unclick one end to open the drawers.
- Pot/pan bay + power.** In the ~21.8" of open deck beside the cluster, set a rigid ~13" crate for pots/pans (their 11x11 box drops inside), held by a corner cleat + a bungee. Route Power strip 1's cord and the 12V/wiring along the deck's back edge behind the bin, and mount Power strip 1 + the ROLL bubble level on the deck edge where you can reach and read them from the bed.
- Load it.** Dense/heavy items (canned goods) in the bottom drawers, boxed dry goods up top, pots in the bin — then cinch the front strap before driving.

Component 2: Panel A & Bed Platform

COMPONENT 2 — PANEL A & BED PLATFORM		
FINISHED COMPONENT	ACCESSORY LIST	PART LIST
	A corner bkt 1" x4 B sling brace x2 C wood screw 2" x16 D leveling foot x4	01 end rail 46" 2x 02 side rail 26" 2x 03 leg 4" 4x 04 btm rail 46" 2x
	E 3/8-16 insert x4 F slide 26" pr x1 G flange patch x1 H D-ring x2	05 divider 26" 1x 06 drawer box 1x 07 1/2 dia strip 2x 08 bot rail 66" 2x
	I cam strap 1" x1 J grommet 1" x1 K pocket scr 1 1/4 x16 L biscuit R1 x4	09 end slot 45" 8x
	M pine cleat x1 N LVL bubble level x2	



Panel A and Panel B share the same frame construction — neither has a top of its own anymore; the one-piece slatted bed frame caps both at once (see Steps 6-7 below, and the Bed Frame Detail render). They diverge at the drawers: **Panel A's left (driver-side) bay is WAVE 3 open storage, not a drawer** — the WAVE 3 (20.4" wide) is too wide for a boxed drawer's 19" clear interior, so it rests directly on the bay floor instead, reached by hand through the driver's side door. Panel A ends up with only ONE actual drawer (right side, DELTA 3).

Parts needed:

- Long rails — 2, 29" cut, 2x2 pine
- End rails — 2, 46" cut, 2x2 pine
- Legs — 4, cut to 16", 2x2 pine (1.5" x 1.5" actual — plenty for this load); the leveling foot brings each back to an effective 17"
- Leg leveling feet — 4 (3/8-16 screw-in insert in the leg's bottom end grain + leveling stud + 2" star knob jam-locked on the shaft above the stud's fixed hex collar), one per leg (Leg Leveling Foot Detail render)
- Bottom rails — 2, 46" cut, 2x2 pine (END faces only — the side faces stay open for the drawer/WAVE 3)
- Center divider — 1, 26" cut, 2x2 pine

- Corner brackets — 4
- Diagonal corner braces — 2 (recovers racking rigidity lost without a top)
- Drawer box — 1 (right/DELTA 3 side only), 5 pieces: bottom 20"x25" (1/2" ply), 2 side walls 25"x14.5" + 2 front/back walls 20"x14.5" (3/8" ply) — weight swap: walls 1/2" → 3/8", glue + biscuit the corners since it carries the 48 lb DELTA stack
- Drawer slide — 1 pair, 20" full-extension
- Drawer catch — 1, friction catch or small turn latch
- DELTA 3 drawer hardware (right drawer) — 1x1 pine locating cleats, 2 screw-eye D-rings + cam strap, 1" cable grommet
- WAVE 3 glide strips (left bay floor) — 2, UHMW or laminate scrap, cuts friction sliding the unit in/out by hand
- Bed platform lumber — six 1x4 x 8ft pine boards: two 58" side rails + eight 45" slats, two per board (Bed Platform Detail render)
- RV bubble levels — Larbeti stick-on 2+2 pack (PURCHASED): PITCH bar mounts here, ROLL one goes to the rear-pantry deck edge (Component 1)



1

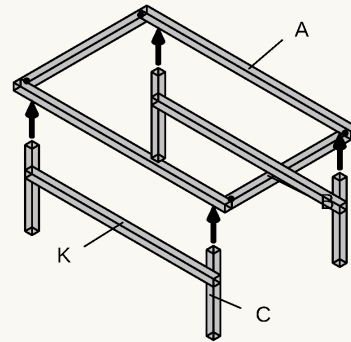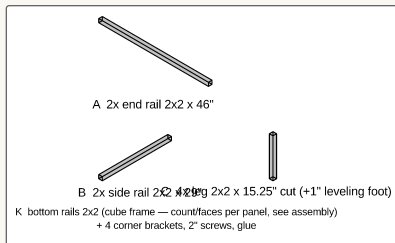

K: bottom rails (2x2, underside at 1") close the frame into a box — both end faces only (drawer + WAVE 3 exit the sides)



Build the frame: 2 side rails (B) + 2 end rails (A) joined with corner brackets and 2" screws, then the 4 legs (C) — CUT to 15.25" (Panels A/B run 3/4" shorter than Panel C: deck recess), drilled in the bottom end grain (1/2" dia x 7/8" deep, centered — maker's spec; test-fit in offcut) for the 3/8-16 screw-in threaded insert, so the leveling foot brings each leg back to an effective 16.25" (Leg Leveling Foot Detail render). Much easier to drill before assembly. Legs inset 2.5" from the deck's side edges to clear the floor-level vent intrusion. Then close the bottom: 2 END-face bottom rails (K, 46", underside 1" up at the leg bottoms — Panel A's SIDE faces stay open so the drawer and WAVE 3 can exit) plus 2 diagonal corner braces up top — the part-cube racks far less than rails + brackets alone. (Panel B's frame differs only at the bottom rails: it closes all 4 faces.)

2

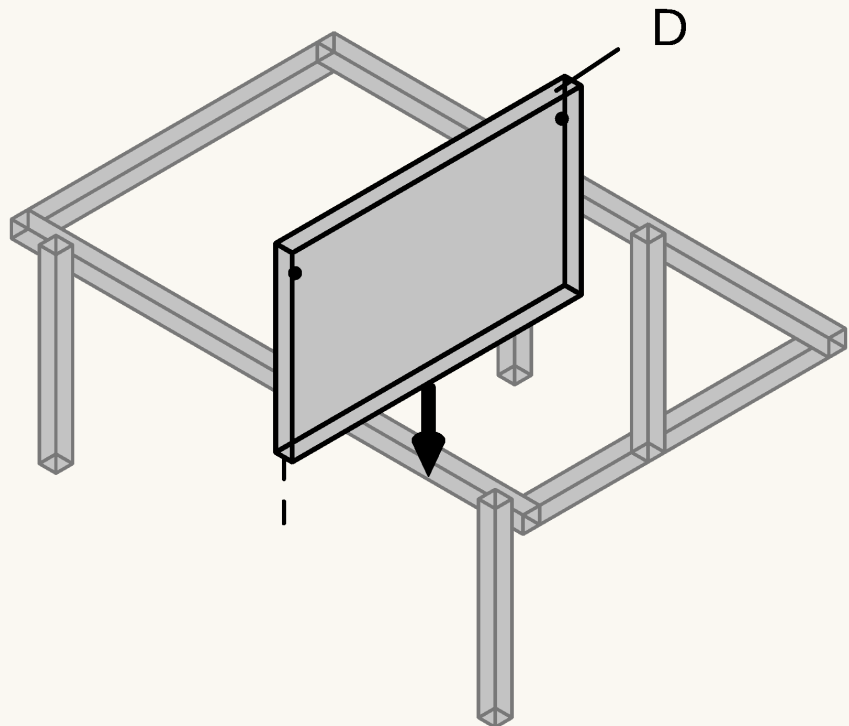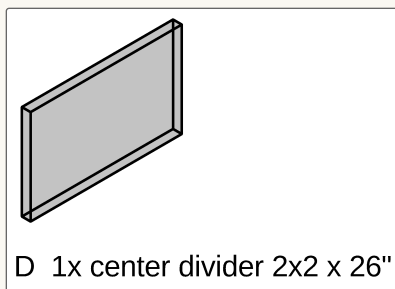

Drop the center divider (D) into the bay, centered on the panel's width — it splits the void into a left and right bay and carries one side of the right bay's drawer slide.

3

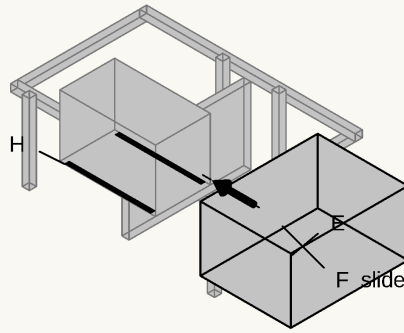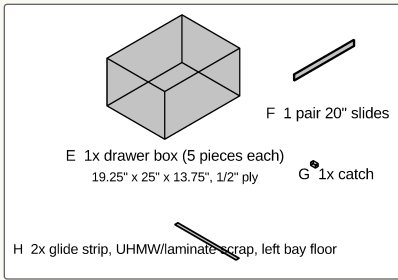


F slide: box-to-rail + box-to-divider

Left bay: WAVE 3 open storage (shown in place for reference) — no box, no slide

Build the right (DELTA 3) drawer box (E, 5 pieces, open top) — biscuit the corners with 2x R1 biscuits each + glue, bottom in a glued rabbet (Joinery & Fastener Guide) — and slide it onto its pair of 20" full-extension slides (F) — one slide side on the frame's outer rail, the other on the center divider. Add a catch (G) so it doesn't slide open in transit. On the LEFT bay, skip the drawer entirely: glue/screw down the 2 glide strips (H) along the floor instead — that's the WAVE 3's storage spot (Component 8).

4

DELTA 3 drawer hardware (parts list above): pine cleats, 2 D-rings + cam strap, 1" grommet

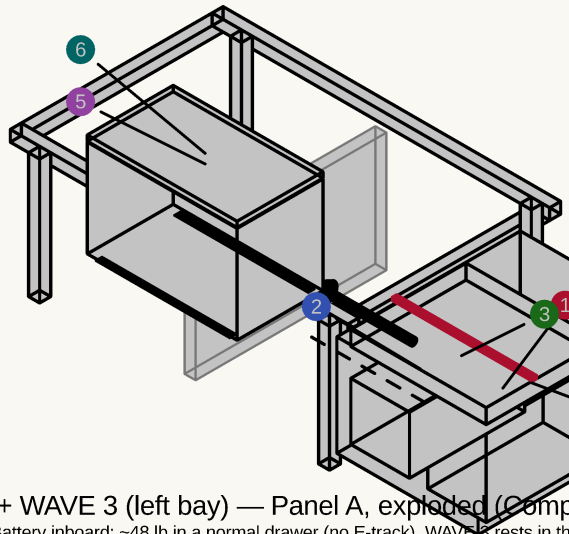

Component


- 1 DELTA 3 outboard (pull wall), the
- 2 Smart Extra Battery inboard —
- 3 Lift-out tray for cables, the
- 4 Cam strap over the
- 5 WAVE 3 raw bay, 0
- 6 Overhead flat soft grommet

: drawer) + WAVE 3 (left bay) — Panel A, exploded (Components 2 & 8) into it), Extra Battery inboard; ~48 lb in a normal drawer (no E-track). WAVE 3 rests in the raw bay on 2 glide strips. 6" lift-out tray tops the DELTA stack; a shelf @ 13.7" tops the WAVE 3 (it still slides out beneath).

In the right drawer, add the DELTA 3 fixtures: locating cleats glued/screwed to the drawer floor, D-rings + cam strap to hold the stack down in transit, and a cable grommet for the WAVE 3's charge cable. DELTA 3 Plus outboard (pull wall), Smart Extra Battery inboard — see Component 8.

5

six 1x4 boards: 2 rails + 8 slats + pocket screws (parts list above)

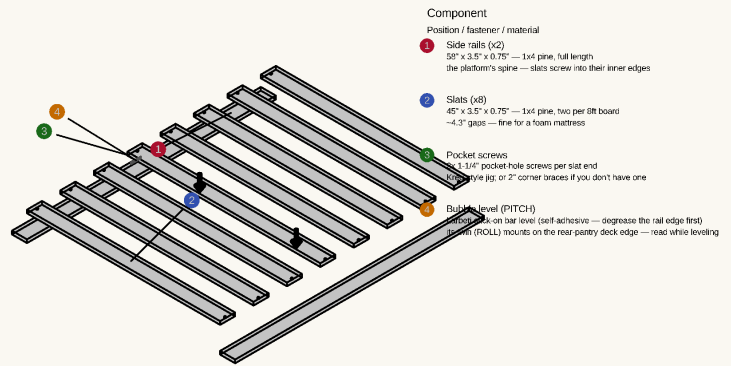

BED PLATFORM — flush ladder, exploded (Component 2, 58" x 52", 8 slats, 0.75" thick total)


One 3/4" plane: slats sit BETWEEN the two full-length side rails, pocket-screwed — no battens below, nothing above.
Rests DIRECTLY on Panel A/B's top rails and ENDS at the B/C seam, flush with Panel C's deck (the mattress's last ~20" rides that deck).

Cut two 58" side rails and eight 45" slats from six 1x4 x 8ft pine boards (slats two per board; rails one per board). Lay the rails on edge-guides 52" apart outside-to-outside, space the slats evenly between them (~4.3" gaps — fine under the solid-foam HEST mattress), and pocket-screw each slat end into the rails' inner edges (2x 1-1/4" pocket screws per end; 2" corner braces work if you don't have a pocket-hole jig). Everything sits in one flush 3/4" plane that ENDS at the B/C seam — Panel C's own deck is at the same height, so the sleeping surface stays flush and the mattress's last ~20" rides that deck. The platform adds only 3/4" to the stack. Last, stick one Larbeti bar level (self-adhesive — degrease the surface first) on the driver-side rail's outer edge at mid-span (the 3/4" face fits it exactly) — it reads fore-aft PITCH from the slider door while you turn the leg-foot knobs; its twin reads ROLL from the rear-pantry deck edge (Component 1).

Component

Position / fastener / material

- 1 Leg (bottom end shown)
2x2 pine (1.5" x 1.5" actual), cut to 16"
drill centered, 1/2" dia x 7/8" deep for the insert
- 2 3/8-16 threaded insert
driven UP into the leg's end grain
screw-in style, 7/16" OD coarse outer thread
- 3 Star knob, ~2" dia (hand grip)
3/8-16 thru-hole knob + jam nut on the bolt shaft
the adjustment — big enough to turn with the box tipped
- 4 Leveling glide bolt + pad
1.375" floor pad, +/-0.5" travel around 1" nominal
threads into the insert — leveling only, not height changes

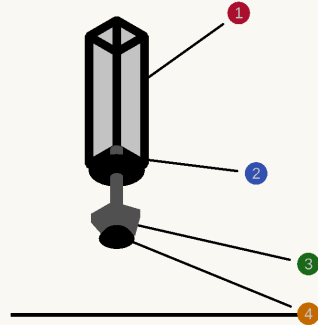

LEG LEVELING FOOT — shown 3x actual size (12 total: 4 per panel x 3 panels)

Legs are CUT to 16" (Panel C) / 15.25" (A/B — deck recess) — the foot makes up the last 1".


To level: kneel at the side door, tip that corner of the box slightly, spin the star knob. Every leg is exposed at floor level — nothing boxes it in. The platform above rests DIRECTLY on the box rails (no adjusters up top anymore).

LEG LEVELING FOOT — engineering drawing (parts as purchased, July 2026)

12 feet total (4 per panel x 3 panels): 3x Anwenk leveler 4-packs + 3x Peachtree PW6103 knob 4-packs + 12x 3/8-16 jam nuts

6

no new parts — the assembled platform from Step 5
(leveling feet already on the legs, Step 1)

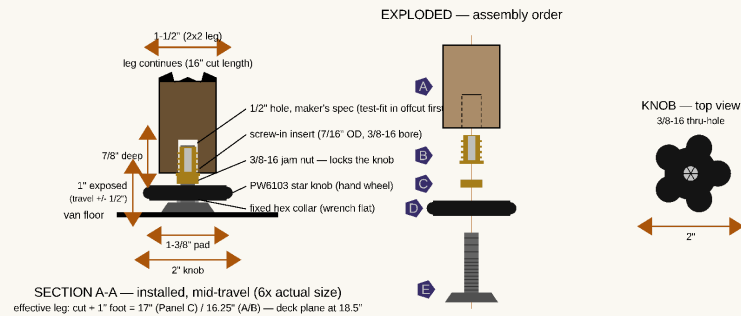

ASSEMBLY


- A drill the leg's end grain: 1/2" dia x 7/8" deep, centered
 - B screw the insert in flush (drive it on a spare bolt + jam nut)
 - C spin a 3/8-16 jam nut ~1" up the stud
 - D thread the knob up to it: wrench the nut DOWN to lock them
 - E screw the stud into the insert to 1" exposure
- Locked together, knob + nut drive the stud: tip the corner, spin, done.
WHY the nut jammed on the fixed collar instead, the knob locks one way only and unscrews when reversed. The collar = wrench flat for a seized foot.

Rating: 1,320 lb per foot (Anwenk) — 4 feet under the heaviest panel = ~5,280 lb capacity vs ~450 lb actual load.
NOTE: skip the kit's stick-on felt pads — the bare nylon pad grips the van floor better and doesn't shed.

Set the finished platform down directly on Panel A + B's top rails and Panel C's mattress zone, centered so it overhangs the boxes 3" per side — nothing fastens it, it rests there and lifts straight off for drawer-bay access (it enters/exits the van tilted diagonally through the liftgate). Then LEVEL the boxes at the floor: with a level on the platform, tip each box corner slightly and spin that leg's star-knob foot until the bubble centers along both axes. Re-check after the van is parked on level ground. **Foot-assembly rule (engineering drawing above): lock the knob with the JAM NUT** **wrenched down on TOP of it — never by jamming the knob against the stud's fixed hex collar.** Jammed on the collar, the knob only locks in the tightening direction — the first time you spin it the other way to lower a corner, it unscrews itself off the stud instead of driving it. Knob + jam nut locked together grip in BOTH directions, so one knob raises and lowers the leg. The hex collar's actual job: a wrench flat to break the foot loose if it ever seizes.

Component 3: Panel B


COMPONENT 3 — PANEL B

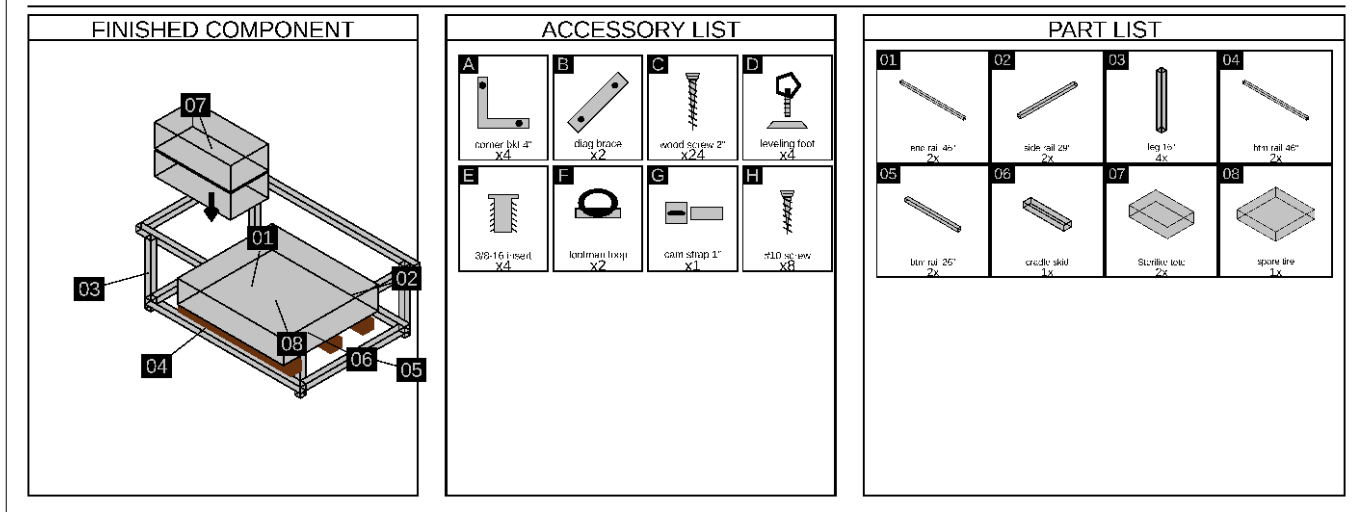

Same frame construction as Panel A — and that's the whole build. **Panel B has no drawers, no divider, and no skirts:** the sliding-door openings sit over Panel A's footprint, not Panel B's (owner-confirmed), so nothing pulled sideways from this panel could ever clear a door. Its bay is deep storage instead — lift the platform + mattress and load it from above. **The SPARE TIRE lives here** (RJ-MODINI kit, flat on 3" cleats at the axle — see the Spare Tire Stowage render), with **2x Sterilite 28-Qt lidded totes restacked on top** and the jack kit strapped beside it, so whole labeled boxes lift out instead of loose items. The Panel B detail render dimensions **every hole in the panel:** the 4 leg-bottom leveling-insert holes (1/2" dia x 7/8" deep, dead center of each leg's end grain) and the alignment-pin holes on both seam faces (2x 3/8" dia x 3/8" deep, 3" in from each side edge).

Parts needed:

- Long rails — 2, 29" cut, 2x2 pine
- End rails — 2, 46" cut, 2x2 pine
- Legs — 4, 16" cut, 2x2 pine (leveling feet make up the inch)
- Bottom rails — 4: 2x 46" + 2x 26" (all four faces — the full cube)
- Corner brackets — 4
- Diagonal corner braces — 2
- Deep-storage totes — 2x Sterilite 28-Qt under-bed lidded (23.5" x 16.9" x 5.9"), restacked ON the spare (plain lidded, NOT slide-drawer — no side access to use a drawer front)
- SPARE TIRE — RJ-MODINI kit for the 2011-2026 Sienna incl. Hybrid (T155/85R18 steel wheel, 28.5" dia x ~6.4" stored, ~40 lb incl. 2-ton jack/wrenches/cases — VERIFY weight + dims on arrival). Stows FLAT in this bay at the AXLE, on a **cradle skid**: 3x ~3" cleats screwed (glue + 1.25" screws) to 2x 1x3 battens, all from the 3/4" offcut — one piece, so the cleats can't wander, and tall enough to clear the 2.5" bottom-rail curb. NOTHING screws into the van floor: the skid just sits on a non-slip liner offcut (same roll as the drawer liner)
- SPARE INSTALL (once — see the exploded view on the Spare Tire Stowage render): (A) lay the liner offcut on the van floor mid-bay, (B) set the skid on it, (C) spare FLAT on the skid, **valve stem UP** (pressure checks without unloading), tool case nested in the wheel barrel, (D) 2 Sterilite totes restacked on top, (E) 1" cam-buckle strap OVER the whole stack, hooked to **2x 1" footman loops screwed (#10 x 3/4") to the inside faces of Panel B's bottom rails**
- SPARE ACCESS (emergency-only, no tools — 4 steps on the render): 1. lift the mattress + platform slats off; 2. lift out the 2 totes, still packed; 3. pop the cam buckle, lift out the tool case; 4. tilt the spare upright and roll it over Panel C's deck, out the gate
- NOTE: the spare does NOT fit above the kitchen (28.5" disc vs ~24" before the fridge blocks it) — Panel B is the only interior spot, and it's the best one: ~40 lb at the axle beats any hitch basket (which would lever ~130+ lb onto the rear axle)

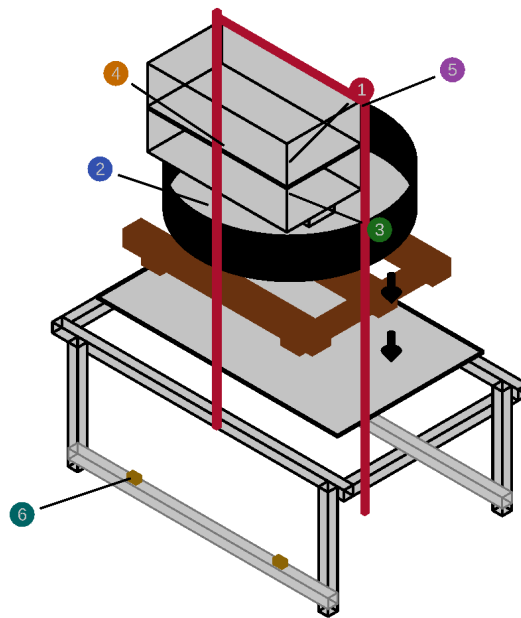

Exploded stack (top -> bottom)

- 1 Spare, FLAT, valve stem UP (pressure checks in place)
- 2 Cradle skid: 3x 3" cleats on 2 battens (offcut), one piece
- 3 Tool case (2-ton jack + wrenches) nested in the wheel barrel
- 4 2x Sterilite totes restacked on top
- 5 1" cam strap over the whole stack
- 6 2x footman loops, #10x3/4" into the bottom rails (strap anchors)

Access (emergency-only, no tools)



- 1 Lift the mattress + platform slats off
- 2 Lift out the 2 totes (they stay packed)
- 3 Pop the cam buckle, lift out the tool case
- 4 Tilt the spare upright, roll it over Panel C, out the gate

SPARE TIRE — flat in Panel B's bay at the AXLE (Component 3), exploded stack

Best weight placement in the van — no hitch basket needed. NOTHING screws to the van floor: the skid sits on the liner, the strap ties to footman loops on the bottom rails.

Height stack: cleats 3" (clear the 2.5" curb) + spare 6.4" + tote 5.9" — fits under the 17.75" deck. Kitchen-drawer slot does NOT fit the 28.5" disc; the drawer stays.

Spare tire stowage

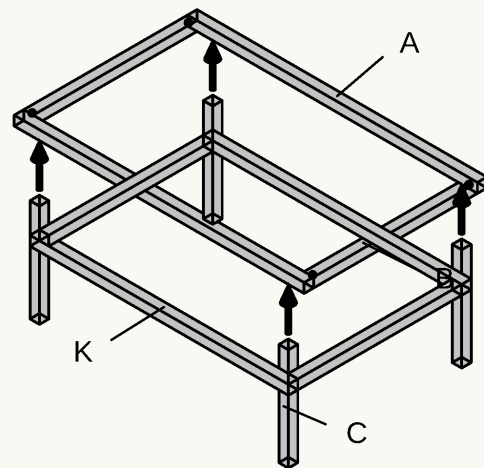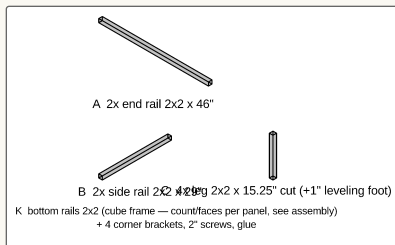


K: bottom rails (2x2, underside at 1") close the frame into a box — all 4 faces (full cube)

Build the frame — like Panel A's step 1: side rails (B), end rails (A), corner brackets, 4 legs (C) inset 2.5" from the deck edges (drilled for their leveling inserts BEFORE assembly), the 2 diagonal corner braces, and bottom rails on ALL FOUR faces (2x 46" + 2x 26", underside 1" up at the leg bottoms) — ****the full cube****: nothing exits Panel B sideways, so every face can close, and this is the stiffest frame of the three. That's the entire panel — no divider, no drawers, nothing else. Drill the alignment-pin holes when mating it to its neighbors (Component 5).

Component 4: Panel C

COMPONENT 4 — PANEL C


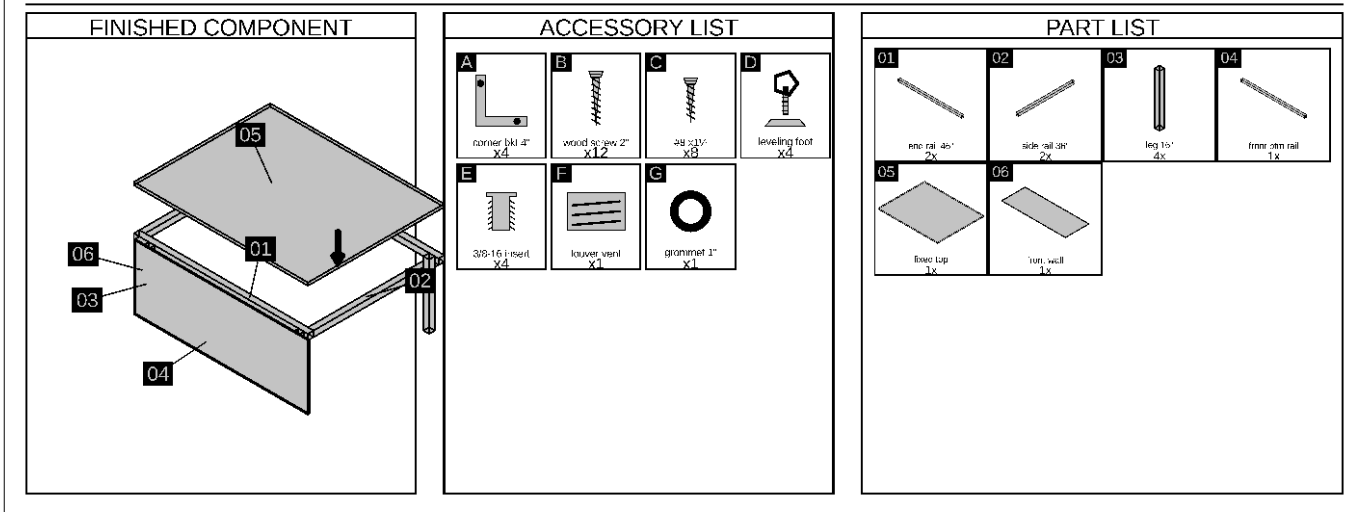


Build this one before Component 1 (Rear Pantry) — the prefab drawer cluster sits on this panel's finished deck at the tailgate end (cleat pocket + cam strap — no fasteners into the units), with no frame or top of its own.

Parts needed:

- Panel C top — 1, 33" x 43", 3/4" ply (drops BETWEEN the rails) + 4 bearer cleats (3/4" x 3/4": 2 x 33" + 2 x 40", from the offcut)
- Long rails — 2, 36" cut, 2x2 pine
- End rails — 2, 46" cut, 2x2 pine
- Legs — 4, 16" cut, 2x2 pine (leveling feet make up the inch; REAR pair at the true corners)
- Bottom rail — 1, 46" cut, 2x2 pine (FRONT face only)
- Corner brackets — 4
- Front wall — 1, 46" x 17", 3/8" ply, with the 120mm fan hole + two 1" grommet holes + the 7" x 2.5" low intake louver pre-cut (Panel C Front Wall render — every opening dimensioned)
- Louvered RV vents — 2 snap-in (1 low intake in the front wall, 1 low exhaust in the cabinet door)
- No divider, no drawers — the void stays fully open for Component 7 (Fridge & Kitchen Install)



1

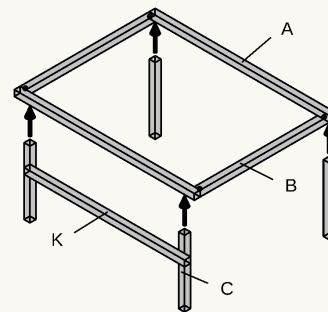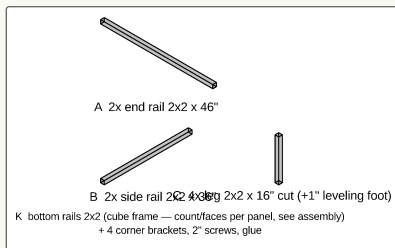

K: bottom rails (2x2, underside at 1") close the frame into a box — front face only (appliances exit the tailgate; rear legs at the TRUE corners)

Build the frame — same construction as Panels A/B, with 36" side rails (B): end rails (A), corner brackets, 4 legs (C) — FRONT pair inset 2.5", REAR pair at the TRUE corners (the fridge/kitchen slide paths pass exactly where inset rear legs would stand; verify the vents don't reach those corners, Section 0). Add the FRONT-face bottom rail (46", underside 1" up at the leg bottoms) — the tailgate face stays open for the appliances.

2

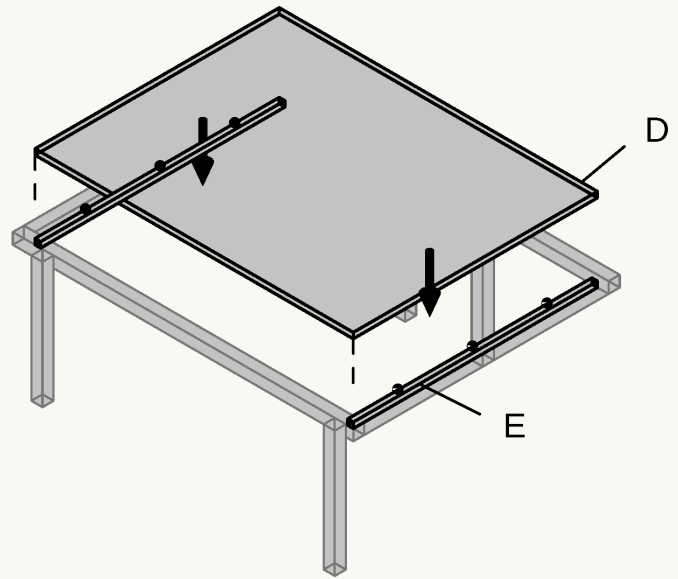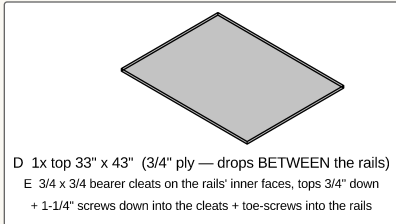


no divider — void stays open for the fridge + kitchen unit

Screw the bearer cleats (E) to the rails' inner faces — cleat tops exactly 3/4" below the rail tops — then drop the top (D) BETWEEN the rails onto them, flush with the rail tops (the deck recess: 3/4" more headroom), and screw it down into the cleats + toe-screw into the rails. NO divider, since the fridge and kitchen unit need the full width of the void underneath.

3

front wall: 46" x 17" 3/8" ply, holes pre-cut per the Panel C Front Wall render

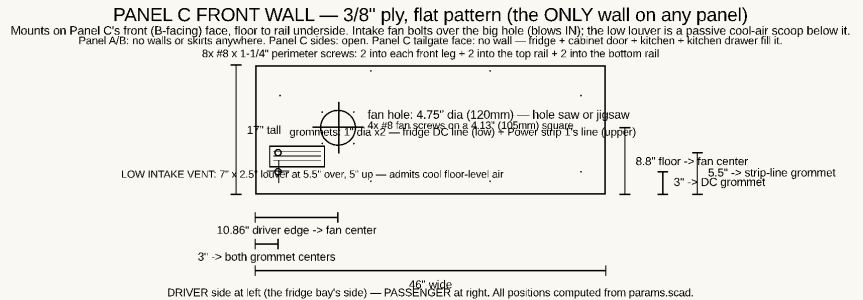


Cut the front wall and its openings to the render's dimensions — the 4.75" (120mm) fan hole centered on the fridge bay (10.86" from the driver edge, 8.4" up), one 1" grommet hole at 3" in, 3" up (fridge DC line — Power strip 1 feeds off the rear outlet, so this wall no longer passes its line), and the 7" x 2.5" LOW INTAKE LOUVER in the driver-side corner (5.5" over, 5" up) — a passive cool-air scoop that feeds the fridge the coolest floor-level cabin air, screened with a snap-in RV louver vent — then screw it to the front (B-facing) face: 2x #8 x 1-1/4" into each front leg + 2 into the top rail + 2 into the bottom rail (8 total). This is the ONLY wall on any panel; the intake fan bolts over the fan hole in Component 7. Panel C's sides stay open and its tailgate face is fully occupied by the fridge, cabinet door, kitchen unit, and kitchen drawer.

Component 5: Anti-Rattle Bumpers, Alignment Pins & Seam Draw-Latches

COMPONENT 5 — BUMPERS, ALIGNMENT PINS & SEAM DRAW-LATCHES

FINISHED COMPONENT

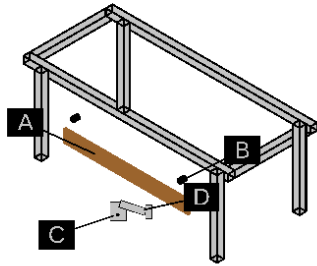

ACCESSORY LIST

A  bumper strip x2	B  dowel pin 3/8 x4	C  draw latch x4	D  mount screw x16
---	--	---	--

PART LIST


(no cut parts)
hardware mounts to existing panels

Parts needed:

- Anti-rattle bumper strips — 2 (adhesive-backed felt or closed-cell foam weatherstrip), one per seam
- Alignment dowel pins — 4 (2 per seam), 3/8" dowel rod, ~3/4" long
- Over-center draw latches — 4 (2 per seam × 2 seams), stainless/zinc, with their keepers and mounting screws

1

1 bumper strip + 2 dowel pins per seam (A/B seam and B/C seam)




Bumper strip + 2 alignment pins

at every module seam (A/B shown)

At each seam, apply an adhesive bumper strip across the full seam face on one side of the joint, then drill matching 3/8" holes and friction-fit 2 alignment dowel pins — the panels register in the same spot every time they're lifted out and reinstalled, and don't rub or squeak in transit.

2

2 over-center draw latches per seam (one each side),
mounted low on the bottom-rail band

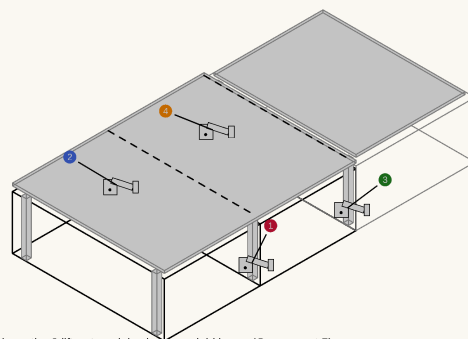

DETAIL — one latch, two legs, bumper between
base plate on one leg, hooked ball + lever on the other.
Flip to clamp. Flip to release (no tools)

SEAM DRAW-LATCHES — clamp the 3 lift-out modules into one rigid beam (Component 5)
4 latches total: one each side of BOTH the A/B and B/C seams, low on the bottom-rail band (~1.75" up, hand-reach).
Alignment pins LOCATE the modules; the latches PULL them tight against the bumper strip. Hand-released — panels still lift out in seconds.
(front seats upper-left, tailgate lower-right the bed platform already ties the Panel A + B tops)

The alignment pins only *locate* the modules; the draw latches *clamp* them together. Mount one over-center draw latch on each SIDE of each seam (4 total: both sides of A/B and B/C), **low on the bottom-rail band (~1.75" up), over the inset leg line** — hand-reachable from the side door / tailgate. The base plate screws to one module's leg/rail, the hooked ball + lever to its neighbour's; flip the handle to pull the two modules tight against the bumper strip, flip to release. This ties the three boxes into one rigid beam: the bed platform already couples the Panel A + B tops, and a low latch completes a top-and-bottom couple that kills sway and rattle. It stays fully modular — the latches are hand-released, so any panel still lifts out in seconds. **Honest scope:** this buys rigidity and quiet, not a higher weight rating — the cube-framed boxes are already strong (5× margin at the feet). Don't rely on the latches to carry more load; their job is to stop relative motion between modules.

Component 6: Cord Runs — Cooktop, Power Strip 1, Fridge DC & DELTA 3 Charging

COMPONENT 6 — CORD RUNS (COOKTOP / STRIP 1 / FRIDGE DC / DELTA 3)										
FINISHED COMPONENT	ACCESSORY LIST <table border="1"> <tr> <td>A grommet 1" x7</td> <td>B SAE disconnect x2</td> <td>C 2-way tap x1</td> <td>D raceway kit x1</td> </tr> <tr> <td>E strip power strip x1</td> <td colspan="3"></td> </tr> </table>	A grommet 1" x7	B SAE disconnect x2	C 2-way tap x1	D raceway kit x1	E strip power strip x1				PART LIST (no cut parts) cords, grommets & connectors only
A grommet 1" x7	B SAE disconnect x2	C 2-way tap x1	D raceway kit x1							
E strip power strip x1										

Parts needed:

- 16 AWG extension cord (household AC-rated), short (cooktop → REAR outlet, + slack loop for the slide)
- 16 AWG extension cord (household AC-rated), short (Power strip 1 → REAR outlet beside the pantry)
- 16 AWG DC cord (automotive/solar SAE-rated), ~8ft (fridge line — DELTA 3 in Panel A back to the fridge in Panel C)
- 16 AWG cord (household AC-rated), ~3-4ft (DELTA 3 AC charging line — front console to Panel A)
- Cable grommets — 7, 1" diameter (1 cooktop line, 1 Power strip 1 line, 3 fridge DC line, 2 DELTA 3 charging line)
- SAE quick-disconnect connectors — 2 (DC-rated, for the fridge DC line's 2 seams — the ONLY line that still crosses seams; both AC tailgate loads plug into the rear outlet)
- Fused (15A) car-plug → SAE adapter (P1, DELTA 3 end) + SAE → female 12V socket pigtail (P7, fridge end)
- 18AWG red/black hookup wire ~10 ft, crimp assortment (#10 heat-shrink rings + 0.25" female spades), 2× WAGO 221-413 lever nuts
- Per-module surface wire raceway (AC + DC separated) + screw-mount cord clips — 1 set
- 2-way AC outlet tap — 1 (REAR outlet: Power strip 1 + the cooktop share it — see Section 5)

cooktop's short cord + 1 grommet + slack loop (parts list above)



(large circles = quick-disconnect at each panel seam)

Drill the single grommet at the kitchen unit's corner post and run the cooktop's short cord to the REAR AC outlet in the back passenger area (a few feet — no seams, no inline connectors). Coil a slack loop sized to the kitchen's full ~70" slide extension near the stowed position so the cooktop keeps power at the cook position. Power strip 2 rides ON the slide-out unit. The outlet is at ~9.5" up, ~10" forward of the liftgate scuff on the passenger quarter trim (verified) — position the grommet to line up with it.

- 1 Power strip 1 — ON the rear-pantry deck edge (phone/light/Wireless fan)
- 2 Power strip 1's cord — a SHORT hop to the rear outlet, behind the pantry (no seams)
- 3 REAR AC outlet — passenger rear quarter trim, -9.5 up, -18R of the litgate scull (VERIFIED; shares the one 150)
- 4 Cooktop cord — SHORT run to the rear outlet, slack loop for the kitchen's slide (no seams)
- 5 2-way outlet tap at the rear outlet — Power strip 1 + the cooktop share it
- 6 1" grommets — deck-edge exits for the two short AC cords
- 7 Power strip 2 — ON the slide-out kitchen unit (cooktop); cord slack for the slide, feeds from the rear outlet
- 8 Control enclosure — inside the cabinet, behind its door (Section 2 below)
- 9 Intake fan 120mm — on Panel C's FRONT wall, over the fridge's B-facing end
- 10 Exhaust fan 120mm (into cabinet) + NTC probe (inside the bay at that wall, in the hot exhaust)
- 11 Fridge DC line — DELTA 3 (Panel A) forward to the fridge (Panel C), one dedicated run
- 12 SAE quick-disconnects — fridge DC line, one at each end of the crossover
- 13 DELTA 3 AC charging cord — the front console's ONE outlet (1500W, verified) to Panel A's drawer
- 14 DELTA 3 charge grommet — WAVE 3 charge cable exit (see stowage detail)

Power strip 1's short cord + 1 grommet + the rear outlet's 2-way tap (parts list above)

A diagram showing a control panel with a backboard. The panel is labeled 'A' and has a 'deck level 18.5\"

- A. LMI/Etol enclosure — 4x #8 x 1" screws through its mounting ears into the wall
- B. W1209 controller (in its case) — NTC probe wire exits the bottom grommet, runs to the fridge's kitchen-facing wall (Section 3)
- C. Nightlight 6-way fuse block — feed from the DELTA 3's DC output (Panel A); fans + W1209 each get their own fused circuit (5A is plenty)
- D. 3x Ampper switches (fridge / cooktop strip / fans) — 20mm holes in the enclosure face, switches snap in from the front


INTAKE **EXHAUST**

cabin air IN warm air OUT

NTC probe: zip-tie 1-2" from the exhaust cutoff

Power strip 1 mounts on the rear pantry's deck edge in the open bay (Component 1) — directly beside the REAR AC outlet. One grommet at the deck edge, one short cord to the outlet's 2-way tap (shared with the cooktop), ~1 ft of slack so lifting the pantry's drawer units never needs an unplug. The old full-length run to the front console — and its 2 inline seam connectors — are gone.


ELECTRICAL LAYOUT — top-down (front of van at bottom, tailgate at top)

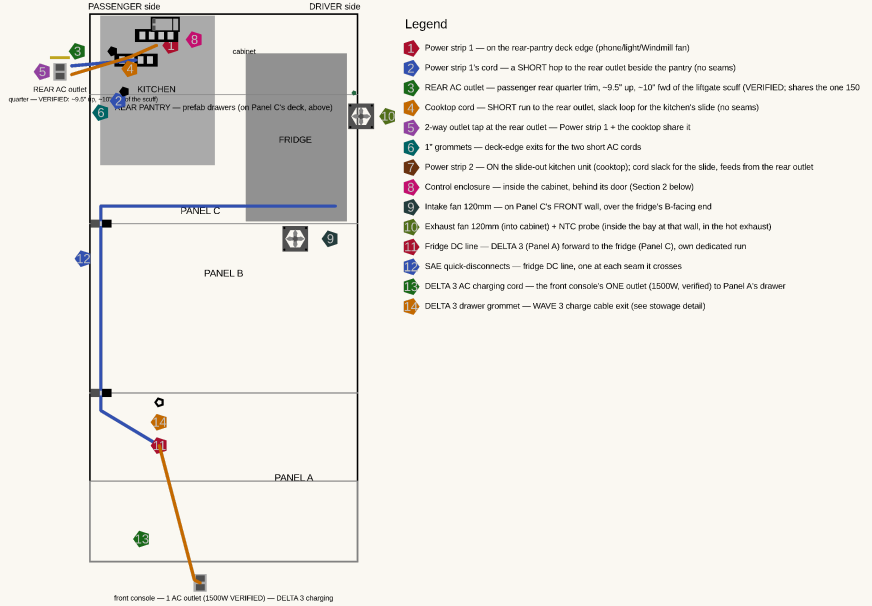

3

fridge DC cord + fused car-plug → SAE adapter + SAE → 12V-socket pigtail + 3 grommets + 2 SAE disconnects (parts list above)

CONTROL CLUSTER — inside the cabinet on its backer board, elevation (looking forward from tailgate)

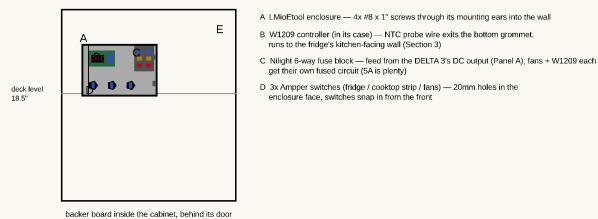

FAN MOUNTING — face-on, both fans identical hardware



Cut a 4.5" round hole (or 4.5" square) in the wall; fan mounts over it with 4x #8 x 1-3/4" screws through the corner holes. Grill goes on the AIR-ENTRY side. Arrow on the fan's side frame shows its blow direction — point it per the labels above. Wiring: both fans in parallel off the W1209 relay (Section 3's wiring schematic).

The fridge now runs off the DELTA 3, not the van's rear outlet (Section 1) — route its DC line from the DELTA 3's output (Panel A's right drawer) back through Panel B into Panel C, with an SAE quick-disconnect at each of the 2 seams it crosses, landing on the Nilight fuse block's main studs inside the cabinet and branching from there to the fridge's DC input — every wire landing is numbered P1–P12 on the wiring diagram and in Section 5's connection-point table.

4

DELTA 3 charging cord + 2 grommets (no disconnect needed)

Run the DELTA 3's own AC charging cord from Panel A's drawer forward, through the open floor gap, to the front console's ONE outlet (1500W verified) — zero seams. It has that outlet to itself now; the cooktop and Power strip 1 live on the rear outlet. All AC loads still share the van's single 1500W inverter budget (Section 5).

Component 7: Fridge & Kitchen Install

COMPONENT 7 — FRIDGE & KITCHEN INSTALL

FINISHED COMPONENT

ACCESSORY LIST

A  E-track anchor x8	B  carriage bolt x16	C  ratchet strap x4	D  120mm fan x2
E  PWM controller x1	F  toggle switch x3	G  fuse block x1	H  ridge x2
I  magnetic catch x2	J  louvre vent x1	K  sl de 24" pr x2	L  wood screw x16

PART LIST

01  fridge tray 1x	02  kitchen drawer 1x	03  drawer cheek 2x	04  cab net door 1x
05  control bucket 1x	06  Rocky 40 fridge 1x	07  kitchen unit 1x	08  cooktop 1x

Parts needed:

- BougeRV Rocky 40 (41QT dual-zone) + fridge tray (3/8" ply + glued 3/4" edge frame, 17.72" x 28.74")
- Heavy-duty 24" full-extension drawer slide pair — VADANIA #D76 locking, 379 lb (purchased)
- JAGAHAAHA slide-out camp kitchen + COOKTRON induction cooktop
- 120mm 12V fan + PWM temperature controller w/ NTC probe
- 12V surge protector/fused distribution block, 3 illuminated toggle switches, small electrical enclosure
- 8 Snap-Loc E-Track anchors, 16 5/16" carriage bolts/nuts/fender washers
- 4 Erickson 500lb ratchet straps
- 1 low-profile cam strap + 2 screw-eye D-rings (fridge hold-down, hooks to its 2 end handles)
- 3 screw-mount cable clips (fridge DC line slack, clipped to the slide's fixed outer rail)
- Utility cabinet door hardware — 2 small hinges + 1 magnetic catch + 1 low louvered vent (3" x 4")
- Kitchen drawer — box (1/2" ply, 16" x 26" x 4.5") + 2 hanging cheeks (1/2" ply, 26" x 5.45" — weight swap: was 3/4") + 24" full-extension slide pair (100lb) + magnetic catch

1

no parts — inspection only


Before drilling anything, get under the van and confirm the anchor locations are clear of the fuel tank/lines, brake lines, and wiring harnesses. **ALSO:** the hybrid's 12V battery access panel sits at the passenger rear corner (under the rear AC outlet) — keep every anchor clear of it so the panel stays serviceable.

2

8 E-Track anchors + 16 carriage bolts/nuts/fender washers + sealant

(4 is INSIDE the cabinet behind the door — 2 in the list, CO monitor + fire extinguisher; corner-placed, not located here)

PANEL C — 46" wide x 36" deep, looking down from above

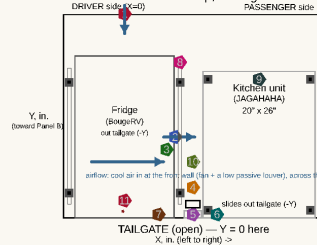

Component
Position / fastener

- Intake fan (120mm) — Mount IN
X=10.86 Y=36 (Panel C's FRONT wall) Z=8.8
4x M4x20 machine screws over the wall's fan hole (Front Wall under)
- Exhaust fan (120mm) — blows INTO the cabinet
X=18.72 Y=14.4 Z=8.8
4x M4x20 machine screws, 105mm ball circle, into a plywood fan ring
- NTC temp sensor
X=18.22 Y=12.2 Z=8.8
Use the thermal pad or 3x 10 screws through to backstop tab
- Control panel enclosure
X=21.5-24.3 Y=2-2.6 S=12.5 — INSIDE the cabinet
backdoor board (3/4" offcut) hung from the deck, 4x #6x1" screws
- Cabinet door
X=21.2-24.5 Y=0-1.5
1/2" ply panel, closes the kitchen/fridge gap (not airtight — by design)
- Door hinges (x2)
on the kitchen-side (high-X) edge
2x small butt hinges, 4x #6x1" screws each
- Door catch
on the fridge-side (free) edge
1x magnetic or roller catch, 2x #6x1" screws
- Fridge slide floor anchors (x4)
E-track, 2 per slide rail, front-back of each rail line BESIDE the tray (side-mount)
1000lb WLL each — 2x 5/16" carriage bolts through the floor per anchor
- Kitchen floor anchors (x4)
E-track, one per corner
1000lb WLL each — 2x 5/16" carriage bolts through the floor per anchor
- WAVE 3 hose/cord hook
inside the cabinet, kitchen-side wall
1x heavy-duty wall hook, #8x1.5" screw — stows hoses+cord when not in use
- Fridge hold-down strap D-rings (x2)
tray side apron, near the tailgate end — hooks to the fridge's 2 end handles
cam strap, snug not tight — secures fridge TO its tray (E-track anchors secure the tray to the van), side profile in fridge-slide-detail


All coordinates measured from Panel C's tailgate-facing left corner, floor level (see file header).
Floor-anchor bolts go THROUGH the van's floor pan — inspect underneath for fuel/brake lines and wiring
before drilling any hole (Section 8).

Mark and drill 8 holes (2 per anchor: 4 under the fridge's slide zone, 4 under the kitchen unit's footprint), bolt the anchors through the floor pan — washers on the underside — and seal each hole with butyl or silicone before and after bolting.

CLOSED (solid) vs fully OPEN (dashed) — pulled out through the tailgate for top-lid access



4 2 fans + controller/NTC probe + control enclosure

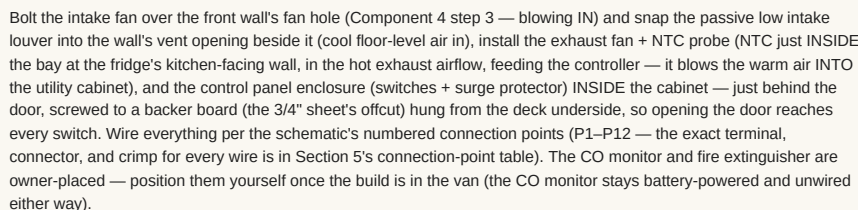

Build and hang the utility cabinet door over the gap between the kitchen unit and the fridge — 2 small hinges on the kitchen-side edge, magnetic catch on the fridge-side edge, and a 3" x 4" LOW LOUVER (5" up, centered) so the exhaust fan's warm air exits low toward the tailgate instead of only bleeding around the door edges.

Slide the JAGAHABA kitchen unit into place against Panel C's passenger-side rear corner leg (1.5" in from the edge) — its shelves swing out on that side — and strap it down: 4 Erickson 500lb ratchet straps, criss-crossed over the top, hooked to its 4 E-track anchors.



Set the cooktop into the JAGAHABA's built-in 2-burner stove space and connect its cord into Component 6's power channel.

8

kitchen drawer box + 2 hanging cheeks + 24" slide pair
+ magnetic catch

KITCHEN DRAWER — hung under Panel C's deck, above the kitchen unit (Component 7)

Box: 1/2" ply, glue + 1-1/4" screws, ~3.5" clear inside — utensils / cutting board / flat dry goods / griddle plate.
Face matches the utility-cabinet door look, with the same magnetic catch so nothing rattles in transit.

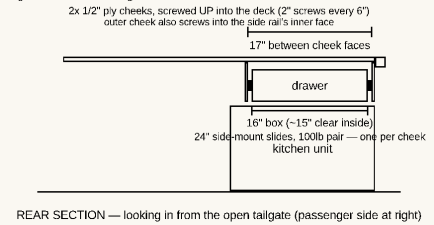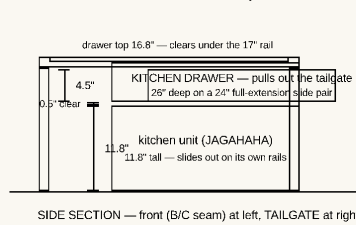


Hang the kitchen drawer in the dead air above the kitchen unit (Kitchen Drawer Detail render): screw the two 1/2" ply cheeks UP into Panel C's deck — 2" screws every 6", the outer cheek also screwed into the side rail's inner face — biscuit the box corners (2x R1 each + glue, Joinery & Fastener Guide), mount the 24" slides inside the cheeks, and hang the 16" x 26" x 4.5" box (~3.5" clear inside). It clears the kitchen's lid by 1/2", passes under the tailgate-face rail, and pulls out the open tailgate like everything else in Panel C. Give its face the same look and magnetic catch as the utility-cabinet door so nothing rattles in transit. Utensils, cutting board, flat dry goods, the cooktop's griddle plate.

Component 8: EcoFlow Stowage (DELTA 3 + WAVE 3)

COMPONENT 8 — ECOFLOW STOWAGE (DELTA 3 + WAVE 3)

FINISHED COMPONENT

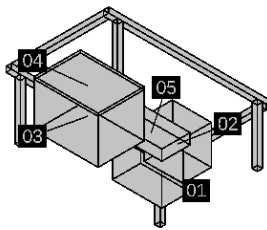

ACCESSORY LIST

A hook hose/cord hook X1	B mat non-slip incl. X1	C vent Car Vent Kit X1	D cleat 1x1 cleat X2
E bin utility bin X2			

PART LIST

01 DELTA 3 Plus 1x	02 extra battery 1x	03 WAVE 3 1x	04 overhead shelf 1x
05 drawer tray 1x			

Parts needed:

- EcoFlow DELTA 3 Plus + Smart Extra Battery, EcoFlow WAVE 3 (already owned, not priced)
- WAVE 3 hose/cord storage hook
- Non-slip mat (camp-use point of use — Panel C's deck or the front seat, not the storage bay)
- EcoFlow WAVE Series Car Vent Kit (no-tent sleeping configuration only)
- FOUND STORAGE: DELTA 3 drawer top tray (shallow lift-out bin) + WAVE 3 overhead shelf (1/2" ply + 1x1 cleats, from offcut) + 2 utility-cabinet bins

Battery placement — low and counterbalanced (owner review, July 2026). Heavy batteries want to sit **low and centered**, and this design already gets both most of the way there: the DELTA 3 stack (~48 lb) rides in Panel A's floor-level under-deck drawer — about as **low** as it can go. On the **lateral** axis it looks off to one side (passenger), but the ~34 lb WAVE 3 sits in the **opposite** (driver) bay of the same Panel A, so the two heaviest movable items counterbalance each other — the whole build's lateral center of mass ends up only **~1.1" off centerline** (Appendix E), which is trivial on a ~4,500 lb van. So the "get it centered" concern is effectively already answered. A longer drawer sliding the DELTA to the true centerline was considered and **not adopted**: a 48 lb load cantilevered at the end of a long slide is tippy when open and hard on the hardware, it fouls the bed-platform cantilever near Panel B, and it wouldn't free clean storage (the drawer sweeps its own travel path). If you still want to nudge it inboard for free, shift Panel A's center divider a couple inches toward the driver side to re-center the DELTA bay. See **Appendix E** for the full weight-distribution analysis.

1

uses Panel A's right-drawer fixtures (Component 2, step 4)

2

uses Panel A's left-bay glide strips (Component 2, step 3) + storage hook

3

tent config: non-slip mat only · no-tent config: non-slip mat + WAVE Car Vent Kit

Component

1 DELTA 3 Plus outboard unit

2 Smart Extra Battery inboard unit

3 Lift-out tray

4 Cam strap over

5 WAVE 3 raw bay unit

6 Overhead flat soft goods

DELTA 3 Plus (right drawer) + WAVE 3 (left bay) — Panel A, exploded (Components 2 & 8)

into it), Extra Battery inboard; ~48 lb in a normal drawer (no E-track). WAVE 3 rests in the raw bay on 2 glide strips. 5" lift-out tray tops the DELTA stack; a shelf @ 13.7" tops the WAVE 3 (it still slides out beneath).

Stow the DELTA 3 Plus outboard (pull wall — it's what the WAVE 3 plugs into) and the Smart Extra Battery inboard, side by side over the locating cleats, cam strap over both. Connect the fridge DC line (via its fused car-plug — SAE adapter — connection point P1) and the AC charging cord (both routed in Component 6) to the DELTA 3 Plus's 12V car-power outlet and AC input port — it now powers the fridge/fans continuously and gets charged from the front console while driving (Section 1).

Slide the WAVE 3 into Panel A's left bay, resting on the 2 glide strips — no box, no slide hardware, just reach in through the driver's side door. Mount the hose/cord hook inside the utility cabinet (kitchen-side wall) for when the unit is carried off to run at camp. **Found storage** (DELTA 3/WAVE 3 detail render, side sections): the DELTA 3 stack is only 11.16" tall in a 13.75" drawer, so drop a shallow lift-out tray in the ~2.2" of dead air on top for cables/cords; and the WAVE 3 is 13.2" in the 16.25" bay, so screw a thin shelf onto 1x1 cleats at ~13.7" — flat soft goods and the WAVE 3's own hoses ride up there while the unit still slides out beneath it. Neither touches the frame or the units' function.

Tent (tailgate open): carry the WAVE 3 from Panel A's bay to Panel C's deck, just forward of the rear-pantry cluster (which occupies the tailgate-most 14"), on the non-slip mat, and route its hoses past the pantry and through the open tailgate gap — no window seal needed. **No tent** (tailgate closed): carry it instead to the front passenger seat, on the same mat, and install the Car Vent Kit over a cracked front window for the hoses.

Component 9: Mattress

COMPLEMENT 9 — MATTRESS

FINISHED COMPONENT

03

02

01

ACCESSORY LIST

A

glue

spray adhesive

x1

B

cover

waterproof cover

x1

PART LIST

01

HEST Dually Long

1x

02

limb hose (DIY)

1x

03

memory top (DIY)

1x

Primary path — BUY, no build: the HEST Dually Long (78" x 50" x 4") drops onto the platform as-is: solid foam, no inflation, washable waterproof cover included. Heads go at the rear-pantry end. Done.

Budget fallback — DIY 2-layer build (the steps below): same 50" x 78" footprint, ~\$185–255 all-in, 5.5" thick (costs ~1.5" of the headroom the HEST keeps).

Fallback parts needed:

- Queen 4" firm high-density foam base + queen 1"-2" memory foam topper
- Spray adhesive (or large fabric strips)
- Waterproof mattress cover

1

A 1x queen 4" firm foam base

B 1x queen 1.5" memory topper

all 3 blanks 60" x 78" before trimming

2

the 2 trimmed layers from step 1
+ spray adhesive (or wide fabric strips)
+ waterproof cover, fitted after gluing

FALLBACK ONLY (skip if you bought the HEST). Buy both foam layers at queen size (60" x 80") and trim to 50" wide x 78" long with a long serrated or electric knife; the offcut strips work as a pillow topper or spare cushion.

FALLBACK ONLY. Stack the firm base (A) with the memory-foam topper (B) on top; bond face-to-face with spray adhesive, fit the waterproof cover, and lay it on the platform.

Component 10: Final Assembly, Curtain & Test Fit

COMPONENT 10 — FINAL ASSEMBLY, CURTAIN & TEST FIT

FINISHED COMPONENT

ACCESSORY LIST

A

tension rod

x1

B

curtain

blackout curtain

x1

C

varnish

wood spacers

x1

D

sand

sandpaper

x1

PART LIST

(no cut parts)

finishing + test-fit only

Parts needed:

- Tension rod + blackout curtain fabric
- Wood sealant/varnish, sandpaper/misc finishing supplies

Steps:

1. Sand and apply 2 coats of wood sealant/varnish to all plywood surfaces (especially edges) to prevent moisture damage.
2. Install the curtain rod (tension rod + blackout fabric) between the front seats and the platform area for privacy.
3. Test fit everything: confirm the cooktop's and Power strip 1's cords reach the REAR outlet, the DELTA 3's charging cord reaches the front console outlet, confirm the fridge's DC line reaches the DELTA 3 in Panel A with its disconnects seated at both seams, and confirm the tailgate closes with everything loaded.
4. Do a full lift-out/reinstall dry run on Panel A, Panel B, and Panel C — gripping each by its exposed top rails, each should come free and drop back in without binding, rubbing, or forcing a bumper/pin out of place. For **Panel A and Panel B specifically**, also test lifting the one-piece bed platform off the box rails first (they no longer have a top or lid of their own — the platform is the only thing capping them), then confirm each panel's drawers pull smoothly once it's clear. For **the rear pantry specifically**, loosen the cam strap and confirm each drawer unit lifts off Panel C cleanly and drops back into its cleat pocket.

No diagram — finishing and test steps, not new construction.

7. Induction Cooktop & Power Strip Design

Recommended cooktop: COOKTRON Portable Induction Cooktop 2 Burner w/ Removable Iron Cast Griddle Pan

- **Real measurements confirmed from the JAGAHABA's own listing photos:** the stove tray is **23"L x 15.7"W, with 5.7" of clearance** when pulled out.
- The **JAGAHABA kitchen unit is built for a 2-burner stove** (per its own listing) — a single-burner cooktop would leave half its designed stove space unused.
- An earlier draft of this plan recommended the **Duxtop 9620LS dual burner** — its manufacturer manual gives its actual footprint as **23.9"L x 14.2"W x 2.4"H**, which is **0.9" too long for the 23" tray**. Dropped in favor of the option below.
- **Confirmed exact product** (real listing photos with dimension callouts): **18.1"L x 9.1"W x 4.3"H** (briefcase-style unit with a fold-down handle) — fits the tray with real margin: ~4.9" of length, ~6.6" of width, ~1.4" of height to spare. Two 6.3"-diameter induction zones, 1800W total, plus an included removable non-stick cast-iron griddle pan that lays across both zones — a direct match for "two burner or griddle" in one unit.
- **Price: \$189.99** (confirmed current listing price).
- Requires magnetic (induction-compatible) cookware — test with a magnet before buying pots/pans if you don't already own compatible ones (the included griddle pan is already induction-ready). See the cookware recommendation below.

Power check — confirmed: the front console AC outlet is rated at **1500W (verified against the real van, Section 0)**, and a second AC outlet exists in the **back passenger area** (the cooktop + Power strip 1 plug in there — Section 5). Both outlets are **CONFIRMED** to share the van's single 1500W inverter — treat 1500W as the TOTAL AC budget across everything at once.

Cookware: UMETRE 9-Piece Detachable-Handle Induction Set (PURCHASED July 2026)

Bought in place of the planned Cook N Home stainless set. The detachable-handle design is what won: the whole set nests flat and ships in an **11" x 11" box that drops straight into the rear pantry's ~13" pot crate** (Component 1) — the Cook N Home set's fixed handles never would have. Induction-compatible (verified against the COOKTRON), dishwasher-safe. Trade-off, noted honestly: it's a nonstick coating rather than bare stainless, so pack silicone/wood utensils and expect to re-buy pans in a few seasons of camp abuse.

Kitchen unit: bought product, no slide-out tray to build

Unlike the earlier design (a plywood box with a built-in drawer slide for the cooktop), the JAGAHABA kitchen unit is a standalone product with its **own** slide-out mechanism and stove space already built in — there's no cooktop tray to build. Set the COOKTRON cooktop into that built-in space and run its cord through a grommet at the back of the unit, then a **SHORT** hop to the **REAR** outlet right beside the tailgate (Section 5 — no seam crossings; the front console outlet is the DELTA 3's alone). No plumbing, no water lines, no sink.

Multiport AC power strips (2 total)

Location	Purpose
Power strip 1 — mounted on the rear pantry's deck edge (relocated from Panel A — Component 1/6)	Phone/device charging, reading light, and the Windmill Smart fan — easy reach from the sleeping area, right by where your head/torso would be
Power strip 2 — mounted ON the slide-out kitchen unit (travels to the cook position; cord has a slack loop for the slide)	Powers the induction cooktop and any other small kitchen appliance (kettle, blender)

Each strip runs on its own short cord to the REAR outlet's 2-way tap (Section 5) — Power strip 1 no longer taps onto the cooktop's line, and neither runs forward anymore. They're still not unlimited: a 6-8 outlet power strip is for convenient access to the inverter's one 1500W budget, not for adding capacity — don't run the induction cooktop and multiple other high-draw devices at the same time, and remember the DELTA 3's charging cord (front console) draws from the SAME inverter pool.

Recommended power strip: a compact 6-outlet strip with individual switches (e.g., a basic surge-protected strip, ~\$15-20 each) — the individual switches let you kill power to specific outlets without unplugging everything, useful for lights left on overnight.

All cooktop and power strip hardware costs are already folded into the master BOM in Section 4.

8. Modular Lift-Out Design & Weight

Panel A, Panel B, and Panel C each rest unbolted on the van floor — nothing is fastened down, and no module shares a frame rail with its neighbor. Pull the bumper strips free, lift any of the three out by their exposed 2x2 top rails (no tops or skirts in the way — the old routed hand-holds are gone), and the sleeping deck is gone for normal minivan use; drop them back in and the alignment pins register everything in the same spot every time. The rear pantry is not one of these three lift-out modules — its prefab drawer units just sit on Panel C's deck behind the cleat pocket and strap (loosen the one cam strap, no tools, Component 1) — lift the drawer units out first and its deck is clear. **The fridge and kitchen unit are the one deliberate exception to "nothing is fastened down"** — see below.

Securing heavy components (fridge + kitchen unit)

The "rests unbolted, lifts out" design that works fine for the lightweight sleeping panels is not safe for the fridge (up to ~90lb loaded) or the kitchen unit (45lb). In a hard stop or collision, an unsecured item that heavy becomes a projectile — this is the one place in the whole build where "modular and non-invasive" has to give way to "actually bolted to the vehicle."

The Sienna's factory cargo hooks are not adequate for this. Toyota's own documentation is explicit that they're for hanging a cargo net, not for restraining loose cargo — confirmed by checking the owner's manual guidance, not an assumption. Do not use them to anchor the fridge or kitchen unit.

What this plan uses instead: [Snap-Loc E-Track anchors](#) — bolt-on, stainless steel, 1000lb safe working load / 3000lb break strength each, \$6.99 apiece. Eight of them, through-bolted into the van's actual floor pan (not just resting on the folded 3rd row):

- **4 anchors on the fridge's 2 rail lines** (2 per slide rail — BESIDE the tray, on the rail lines flanking it, never under it) — each fixed rail's steel riser angle bolts directly to these, independent of Panel C's own lift-out frame. Panel C's frame/legs never touch the fridge or its slide, so this doesn't compromise Panel C's own lift-out design at all — it was never structurally connected to the fridge in the first place.
- **4 anchors under the kitchen unit**, one per corner, with 4 [Erickson 500lb-rated ratchet straps](#) criss-crossed over the top.

The E-track anchors above secure the tray to the van — they don't secure the fridge to the tray. As built, the fridge just sits on the plywood tray behind its 1x3 side aprons' lip; nothing stops it lifting or shifting off the tray itself in a hard stop, the way the kitchen unit's own top straps stop it lifting off its footprint. The BougeRV Rocky 40 has a carry handle at each end (visible in the manual photos) that doubles as a tie-down point: add **1 low-profile cam strap over the top, hooked to the fridge's 2 end handles and down to 2 small D-rings screwed into the tray's side apron** (same pattern as the DELTA 3 drawer's own hold-down, Component 8). Snug it enough to stop vertical lift, but loose enough that it doesn't bind the reversible lid when the tray's pulled to its fully-open position — check that clearance once installed (Component 7, step 3).

Why this margin is enough: DOT commercial cargo securement rules (49 CFR 393, Subpart I) require tie-downs rated for 0.435g forward / 0.5g rearward / 0.25g lateral deceleration, with combined working load at least 50% of the cargo's weight. A single 1000lb-WLL E-track anchor is roughly 11x the fridge's loaded weight (90lb) and 22x the kitchen unit's (45lb) — this plan uses 4 anchors per item, not 1, for a wide margin over that commercial-vehicle baseline, even though a DIY conversion isn't held to DOT's certification process.

Before you drill anything — actually, before you even buy the anchors: it is NOT yet verified that drillable structural floor pan exists at these 8 positions at all. The rearmost stretch of the Sienna is the 3rd-row stowage area — a deep well the folded seatbacks drop into — so much of the surface under Panel C's footprint may be folded seatback or well liner over a void, not sheet metal. **Work through the "rear floor under Panel C" checklist at the bottom of Section 0 (F1–F7) first;** if solid pan isn't where these anchors want to be, the securing plan changes before anything else proceeds. Then, at the spots that checklist approves: the E-track bolts go all the way through the van's floor pan. Get underneath the van and physically confirm each of the 8 locations (see the fridge install detail diagram, Section 2, for exact X/Y) is clear of the fuel tank, fuel lines, brake lines, and wiring harnesses before drilling — reposition an anchor if it isn't. Seal each hole with butyl or silicone sealant on both sides of the bolt to prevent water intrusion and rust. **And keep the passenger rear corner clear: the hybrid's 12V battery access panel lives there (directly under the rear AC outlet) — no anchor over it.**

Warranty note (not legal advice — verify against your own paperwork before drilling): drilling 16 permanent holes through the factory floor pan is a real, non-reversible modification, and it's worth understanding what it does and doesn't put at risk before you commit. In the US, the Magnuson-Moss Warranty Act prevents a manufacturer or dealer from voiding your *entire* vehicle warranty just because you added an aftermarket modification elsewhere — they can only deny a specific claim if they can show the modification actually caused that specific failure. So drilling into the floor pan at the rear cargo area is very unlikely to void coverage on, say, the engine, transmission, or infotainment system. **What it most likely DOES affect is the corrosion/rust-perforation warranty specifically** — most manufacturers' corrosion warranties cover rust-through of factory-sealed body panels, and a self-drilled, non-factory penetration in that same panel is exactly the kind of thing a dealer can point to if rust later develops at or near that hole. If the van is still under a corrosion warranty you care about, call your dealer's service department (not sales) and ask directly how they'd treat an owner-drilled, sealed E-track anchor hole in the cargo floor before you drill — get the answer in writing/email if you can, since "the tech at the counter said" isn't worth much if a claim is denied later.

Drill spec for the 16 floor-pan holes (2 per anchor × 8 anchors): the bolt is 5/16" (0.3125"), but don't chuck a 5/16" bit straight into sheet steel — it will walk on the crowned/curved floor pan surface and the hole will end up off-center from the anchor's own mounting slots. Step drill instead:

1. **Center-punch** each hole location first (mark through the anchor's own mounting holes once it's positioned and clamped/taped in place) — this alone stops most bit walk.
2. **Pilot with a 1/8" bit**, then step up to **3/16"**, then to the final **11/32" (0.344") clearance hole** — one size over the 5/16" bolt shank, not an exact match. A carriage bolt through sheet metal (unlike into wood) has nothing for its square neck to bite into, so there's no anti-rotation benefit to a tight hole; the extra 1/32" just gives you slop to align the floor-side washer/nut without fighting the hole, which matters more here since you're working blind, on your back, underneath the van.
3. **Use cutting oil (or equivalent) on every pass** — the floor pan is sheet steel, not wood; drilling dry work-hardens the edge and dulls bits fast, and a lubricated bit cuts a cleaner, less-burred hole.
4. **Deburr both faces** (top and underside) with a deburring tool or a larger bit hand-turned over the hole — burrs left in place will cut into the butyl/silicone seal and give water/rust a head start exactly where you're trying to seal it out.
5. **Test-fit the bolt through both layers dry** (no sealant yet) before you commit — confirm the anchor sits flush and the bolt isn't binding, then remove it, apply sealant per the step above, and do the final bolt-up.

This step-drilling sequence applies to all 16 holes (both fridge rail lines and all 4 kitchen-unit corners) — the floor pan gauge doesn't vary enough across those 8 locations to change the approach.

Rustproofing the holes — the sealant alone isn't the whole job. A freshly-drilled edge is bare steel with any factory coating (paint, e-coat, galvanization) cut straight through — that raw edge, not the surrounding painted floor, is where rust actually starts. Before any sealant goes on:

1. **Degrease before you treat anything** — the cutting oil from the drill-spec steps above is still on and around the hole, and no primer, galvanizing compound, or sealant bonds well over oil residue. Wipe the whole area (both faces) down with brake cleaner or a wax-and-grease remover and let it flash dry first.
2. **Treat the bare cut edge**, on both the top (inside the van) and underside faces — a zinc-rich cold-galvanizing compound (brush-on or spray, e.g. a ZRC-type or Rust-Oleum Cold Galvanizing Compound — any COLD-GALV product labeled for bare/cut steel edges works) applied right onto the exposed metal ring around each hole. This is the step that actually stops corrosion from starting; sealant alone just keeps water out, it doesn't replace the coating you cut through. **Let it cure fully per the can's label** (typically an hour or more, longer in cold/humid conditions) before doing anything else to the hole.
3. **Then butyl (not just silicone) as the water barrier** — butyl tape/sealant stays flexible and keeps gripping through the van's temperature swings and road vibration better than plain silicone, which can harden and crack loose from bare metal over a few seasons. Apply it both under the anchor's mounting plate (as a gasket, so water can't wick in sideways under the plate) and around the bolt shank itself on both faces.
4. **Follow up with a rubberized undercoating spray** over the whole repaired area from underneath, once the sealant has cured — this is the same product/approach used for stone-chip and rust protection on factory floor pans, and it gives a second sacrificial layer over the anchor's footprint, not just the bolt holes themselves. Mask off the anchor's own bolt heads/nuts first if you want them serviceable later without scraping through overspray.
5. **Re-inspect yearly**, especially after driving through winter road salt — surface rust starting at one of these 16 points is far easier to catch and treat early than after it's spread under the anchor plate. The **underside** is the priority check: it's the face actually exposed to road spray and salt, while the topside (inside the van, under the anchor) mostly just needs to stay dry.

Getting underneath, and actually threading the nuts on (this is the part most first-time installers underestimate): drive the van onto a rated pair of automotive ramps on flat, hard ground, set the parking brake, and chock a wheel that's still on the ground — don't rely on a floor jack alone as your only support while you're underneath it; add jack stands at the Sienna's specified lift points (owner's manual) if you need more working clearance than the ramps give.

The nut-threading problem: a 5/16" **carriage bolt** is designed so its square shoulder (just under the domed head) bites into a squared pilot hole in *wood*, stopping it from spinning while you tighten the nut from the other side — but the anchor is going into **sheet metal**, where the round clearance hole gives that square shoulder nothing to grip. Unless the Snap-Loc anchor's own mounting plate has a stamped hex/square recess that captures the bolt head (check this against the actual product before you buy, not assumed here), the bolt will just spin in place the moment you try to run a nut up from underneath. Three ways to actually get it done:

- **Two-person (simplest)**: one person holds the bolt head steady from inside the van with a wrench or locking pliers on the shank just under the head, while the other threads the nut on from underneath with a socket and ratchet.
- **Solo, using friction**: drop the bolt through from above so the anchor plate's own weight roughly seats it, then from underneath, thread the nut on by hand first with light upward pressure — that's usually enough to keep the bolt from spinning for the first several turns; once a few threads are engaged it self-jams enough to finish with a ratchet.
- **Use a nylon-insert lock nut, not a plain nut, either way** — the added friction means once it's hand-tight, it won't back out or spin loose later from the van's own road vibration, which matters here since you can't easily re-check these 16 nuts once the panels and appliances are installed over them.

Add threadlocker on top of the lock nut, not instead of it — belt-and-suspenders is worth it for 16 fasteners you won't be able to see or reach again without pulling Panel C, the fridge tray, or the kitchen unit back out. Use **blue, medium-strength threadlocker (Loctite 242 or equivalent)**, not red: red (Loctite 271-class) is rated near-permanent and typically needs a heat gun to break the bond for removal, and heat plus "underneath the van, near the fuel tank/lines you already had to check clearance around" is exactly the combination to avoid. Blue holds fine against vibration and still lets you break a nut free with a wrench if you ever need to unstrap/service the fridge slide or the kitchen unit's E-track mounts.

One real interaction to know about: threadlocker cures anaerobically — it needs the threads clean, dry, and oil-free to set up at all, so the cutting oil from drilling (and any residue left on the bolt itself) has to be wiped off with brake cleaner or a similar degreaser immediately before you apply it, same as the degreasing step above for the rustproofing. Apply a drop or two to the bolt's threads right before threading the nut on (working time is only a few minutes on most blue threadlockers), then let it cure the label's stated time — usually 24 hours — before you put full load on that anchor (i.e., before you strap the fridge/kitchen down and drive on it).

Final torque is snug plus a firm quarter-turn past hand-tight — a 5/16" bolt into thin floor-pan steel strips more easily than it under-tightens, so don't chase it with a long breaker bar.

Approximate weight per module (plywood + frame + legs only, rough estimates — excludes mattress and small hardware):

Module	Est. weight
Rear pantry — 4× prefab drawer units + pot bin (each unit lifts out on its own at ~3.2 lb)	~15 lb total
Panel A (incl. divider + 1 drawer box/slide + corner braces + 2 bottom rails + glide strips + WAVE 3 overhead shelf, no top)	~40 lb (pull the DELTA 3 drawer box off its slides first and it drops to ~18 lb)
Panel B (bare cube frame — bottom rails on all 4 faces + corner braces; no top, no divider, no drawers)	~15 lb
Panel C (frame + front bottom rail + deck + front wall + kitchen drawer & cheeks + control enclosure — the fridge TRAY + slides stay bolted to the van floor, and the fridge/kitchen units are tracked separately below)	~61 lb — the heavy one (unclip the kitchen drawer box from its slides first: ~48 lb)
BougeRV Rocky 40 fridge (empty weight, manual spec)	40.6 lb / 18.4 kg (realistically 60-90 lb loaded — why it's on a 379 lb locking slide, not a lift-out module)
JAGAHABA kitchen unit (real product weight)	45 lb
EcoFlow DELTA 3 Plus + Smart Extra Battery (Panel A right drawer, included in that drawer's own weight above)	~48 lb
EcoFlow WAVE 3 (Panel A left bay, stored in place — unlike the old tailgate tray, it doesn't need removing for driving)	33.7 lb

Panel A (~40 lb) and Panel B (~15 lb) are comfortable one-person lifts; Panel C (~61 lb) is the outlier — unclip its kitchen drawer box from the slides first (2 minutes, drops it to ~48 lb) or make it a two-person lift. Losing the tops — and, for Panel B, all its drawers and divider — still puts A and B well under the ~50 lb rule of thumb for a solo carry (weights in the table above): **Panel B is a bare cube frame at ~33 lb, Panel A is ~43 lb** (one right-side drawer + the WAVE 3 open bay + the overhead shelf), and **Panel C is ~49 lb** (frame, deck, front wall, fridge tray, kitchen drawer, and the small control enclosure). The heaviest single lift is Panel C at ~49 lb, still a solo carry. The rear pantry's ~15 lb of prefab drawer units ride on top of Panel C when installed but lift out one at a time (~3.2 lb each — loosen the strap); each is a trivial one-hand lift even loaded.

Fit and quiet-in-transit checklist:

- Each panel is lifted by gripping its exposed 2x2 top rails (no tops or skirts in the way) — the old routed hand-holds were removed; a two-hand, centered grip keeps the lift balanced.
- Bumper strips + alignment pins + seam draw-latches (hardware in Section 3, installed in Section 6, Component 5) go at the Panel A/B and Panel B/C seams. The bumpers stop the panels rubbing/rattling, the pins register them in the same spot each time, and the 4 over-center draw latches (both sides of each seam, low on the bottom-rail band) clamp the three modules into one rigid beam so they can't creep or rock relative to each other — with the bed platform tying the A/B tops, the low latches complete a top-and-bottom couple. All hand-released, so any panel still lifts out in seconds.
- Do the full lift-out/reinstall dry run in Section 6, Component 10 before you consider the build done — that's the real test of whether the modular fit is tight enough to stay quiet but loose enough to lift easily (with a second person, given the weight note above).

Test the well depth, fridge dimensions, and drawer weight against your actual van and materials before cutting — the numbers above are solid starting estimates but real-world results vary by trim year and exactly what plywood you source.

9. Seat Removal & Reinstall (Camper ↔ Passenger Mode)

The 2nd-row seats come out entirely for camper mode (Section 1) and go back in for passenger use. The Sienna's 2nd-row seats carry SRS (airbag/occupancy) wiring, so pulling them without the right procedure leaves airbag warning lights on the dash — this build uses **SRS airbag emulators (0651 Round x2 + 5522 "Square" x2 — purchased July 2026; VERIFY the 5522 mates with the rectangular plug)** plugged into the vacated van-side floor connectors so the airbag system reads normally with the seats out.

The 30-minute battery wait is a safety step, not a convenience step — the airbag computer holds backup electrical power in capacitors that must fully drain before any SRS connector is touched. Do not skip or shorten it in either direction of the transition.

Transitioning to Camper Mode (Removing Seats)

1. **Turn off the vehicle** completely and open the rear trunk hatch.
2. Locate the 12V battery in the right rear trunk wall panel and **disconnect the negative terminal**.
3. **Wait exactly 30 minutes**. Do not skip this; the airbag computer holds backup electrical power in capacitors that must drain completely.
4. Unbolt the seats and **unplug the floor harnesses**.
5. Firmly click the **0651 Round** and **5522 "Square"** emulators (purchased July 2026 — verify the 5522 mates with the rectangular plug; the original spec said 6134 Rectangle) into the van-side yellow floor plugs. Give them a light tug to verify they are locked.
6. Reconnect the negative 12V battery terminal and tighten it. Start the van; the dashboard lights will clear normally.

Transitioning to Passenger Mode (Reinstalling Seats)

1. Turn off the vehicle and **disconnect the negative 12V battery terminal** again.
2. **Wait 30 minutes** to de-energize the SRS system.
3. Unplug the Ling Labs dongles and store them safely in your glovebox or center console for the next trip.
4. Bolt the captain's chairs back down securely and **plug the factory seat harnesses back into the floor**.
5. Reconnect the negative 12V battery terminal.

Storage Tip

When in camper mode, the vehicle-side plugs sit flat on the floor. Use a small piece of plastic wrap or a ziplock bag secured with a rubber band around the emulators to prevent dirt, dust, or spilled camping liquids from getting into the electrical contact points.

Appendices — Working Sheets

These references consolidate the plan into sheets you actually work from. Four are **also a live web page** (interactive check-off boxes, or a calculator; all printable); the weight budget is also a spreadsheet file:

- **Shopping List** — <https://claude.ai/code/artifact/24d09bf4-2f51-42d5-879d-003ab1c65326>
- **Cut List** — <https://claude.ai/code/artifact/fc8fa178-40f9-40dc-9ecf-f8dc181ad479>
- **Build Sequence** — <https://claude.ai/code/artifact/eff00cab-1e69-4a54-8eec-2d9346072e92>
- **Leveling Block Calculator** — <https://claude.ai/code/artifact/149333c6-8f02-47a2-915f-52d26d9059d9>
- **Weight Budget** — spreadsheet in the repo as `weight_budget.csv`

Appendices B and C consolidate Sections 4 and 3; Appendix A (build order), Appendix D (leveling calculator), and Appendix E (weight budget) are new here.

Appendix A — Build Sequence & Assembly Order

The order to build in — **dependency-first, not the Component numbering**. Work top to bottom; the "needs" is what must be finished before each phase.

Phase 0 — MEASURE & PREP, before any cutting (Section 0, 9) — *critical* 1. Measure the real van and update `params.scad`: interior length (96" est.), liftgate (48×36"), both side-door openings, floor-to-wall width at ~18.5" and ~22.5" up (need ≥53" for the 52" platform). *UNVERIFIED* — *a bad number breaks an assert*. 2. Confirm the rear-corner floor vents don't reach the last ~4" (Panel C's rear legs sit there). *UNVERIFIED*. 3. Remove the 2nd-row seats; install the Ling Labs SRS emulators (Section 9). 4. Buy & verify materials (Appendix B); verify the Rocky 40 + JAGAHAAHA dimensions on arrival (both purchased July 2026).

Phase 1 — Cut all plywood & lumber (Section 3 / Appendix C) 1. Cut both sheets + all boards. The ½" sheet nests to ~95% — lay it out before cutting. 2. Drill the leg leveling-insert holes now (far easier before assembly). 3. Pre-cut the Panel C front-wall openings (fan hole, 2 grommets, louver — Front Wall render).

Phase 2 — Build the three frames (Components 2/3/4, step 1) 1. Panel A frame: rails + 4 legs + divider + 2 END-face bottom rails (underside 1") + 2 diagonal braces. Corners: 2× 2" screws + bracket + glue. 2. Panel B frame — the full cube: bottom rails on ALL 4 faces, no divider/drawers. 3. Panel C frame: front pair inset 2.5", REAR pair at the true corners; FRONT-face bottom rail only. 4. Install the 12 leveling feet + star knobs.

Phase 3 — Panel C build-out (fridge / kitchen / cooling) (Components 4 + 7) 1. Set the fixed top between the rails on its bearer cleats (flush with the rail tops — deck recess) and screw it down; add the front wall (mount the low intake louver). 2. Drill & bolt the 8 E-track floor anchors — **this is IN-VEHICLE work: set Panel C's frame in place in the van first and inspect underneath for fuel/brake lines first**, seal each hole. *Verify. The hybrid's 12V battery access panel is at the passenger rear corner (under the rear outlet) — do NOT place an anchor over it, and keep it reachable by unstrapping/sliding the kitchen out*. 3. Fridge on its tray + locking slide (driver corner); kitchen unit strapped down (passenger corner). Let the fridge stand 12h before first power-up. 4. Hang the kitchen drawer + cabinet door (with its low exhaust louver). 5. Cooling + control cluster: intake fan (blows IN), exhaust fan + NTC on the fridge's kitchen-facing wall, W1209 + fuse block + switches on the backer board inside the cabinet.

Phase 4 — Rear pantry (prefab) (Component 1 — *needs Panel C's finished deck; nothing to build*) 1. Stack the 4 IRIS drawer units 2×2 on the deck's tailgate end (felt tape + Velcro ties between rows). 2. Screw the cleat pocket to the deck (cab side + both sides) + 2 flush D-rings. 3. Run the cam strap across the drawer fronts; set the pot bin + corner cleat + bungee in the open bay. 4. Mount Power strip 1 + the ROLL bubble level on the deck edge; route the cord.

Phase 5 — Panel A build-out (EcoFlow bays) (Components 2 + 8) 1. Right bay: R1-biscuited drawer box on a 20" slide + catch; DELTA 3 cleats + D-rings + a cable tray. 2. Left bay: 2 glide strips + an overhead shelf on 1×1 cleats at ~13.7" (WAVE 3 slides out beneath it).

Phase 6 — Bed platform (Component 2 — *needs Panel A & B built*) 1. Assemble 2× 58" rails + 8× 45" slats (pocket screws or R2 biscuits), ends flush at the B/C seam. 2. Screw the PITCH bubble level to the driver-side rail edge.

Phase 7 — Seam hardware (Component 5): bumper strips + 2 alignment pins at the A/B and B/C seams.

Phase 8 — Cord runs (Component 6): cooktop + Power strip 1 → SHORT cords to the REAR AC outlet (2-way tap, no seams); DELTA 3 charging → front console outlet (no seams); fridge DC → the one long run, Panel A → C with 2 SAE seam disconnects.

Phase 9 — Install in the van (Components 10 + 8) 1. Set Panel A → B → C; register the alignment pins. 2. Connect power + stow the DELTA 3 stack and WAVE 3; load Panel B — RJ-MODINI spare flat on its skid (liner under), valve up, tool case in the wheel, 2 totes on top, cam strap to the footman loops. 3. Lay the platform → HEST mattress → tension-rod curtain.

Phase 10 — Commission & test (Component 10) — *critical* 1. Lift-out / reinstall dry run (each panel by its top rails; pantry drawer units by loosening the cam strap). 2. Level the van at the WHEELS (Appendix D) + set the interior feet once. 3. Power-up + cooling test (fridge stood 12h; fans ramp off the NTC); pull every drawer/slide. 4. Owner-place the low-level CO monitor + fire extinguisher.

Appendix B — Materials Shopping List

Consolidates Section 4's BOM into a shopping order with links. Prices are estimates; items marked **UNVERIFIED** need a live-listing check. **Purchased** = already bought (July 2026); **owned** = existing gear, not priced.

Lumber & Plywood — 3/4" Baltic birch sheet (\$65), 1/2" Baltic birch sheet (\$50), 3/8" Baltic birch half-sheet (\$25, weight swap), 12× 2×2 pine 8ft (\$96–180), 6× 1×4 pine 8ft (\$30).

Frame / fasteners — rear pantry: 2× IRIS 3-packs, Home Depot #500163 (\$61) + cam strap/D-rings/felt/Velcro hold-down (\$26) + pot crate (\$15) + 2× Sterilite 28-Qt Panel B totes (\$24) + spare hold-down hardware: footman loops + cam-strap 6-pack (\$24) + the RJ-MODINI spare kit (\$350 — stows in Panel B at the axle); corner brackets ×12 (\$12); diagonal corner braces ×8 (\$24); seam draw-latches ×4 (\$16); wood screws (\$20); wood glue (\$8); [Ryobi R-series biscuit assortment](#) (\$12); alignment dowel pins (\$3); anti-rattle bumper strip (\$10).

Drawers & slides — Panel A drawer slides (GlideRite 20" 100lb 5-pack, *purchased*, \$47); drawer catch (\$3); kitchen-drawer slide 24" (\$16) + catch (\$3); fridge slide 24" heavy-duty locking (VADANIA, *purchased*, \$79).

Leveling — leg leveling feet (3 four-packs, \$36); star-knob grips (3 four-packs, \$36); Larbeti stick-on bubble levels 2+2 (\$10, **PURCHASED**); [Lynx leveling blocks 10-pack](#) + chock (\$40).

Fridge & kitchen — [BougeRV Rocky 40](#) (\$400–500 less JULY7 coupon, **PURCHASED**); [JAGAHABA slide-out kitchen](#) (\$300–350, **PURCHASED**); [COOKTRON induction cooktop](#) (\$190); UMETRE 9-piece detachable-handle cookware set (purchased in its place) (\$65–90).

Electrical & cooling — 120mm 12V fans ×2 (\$18–20); W1209 controller + probe (\$10); Nilight fuse block (*purchased*, \$18); Ampper switches 10-pack (*purchased*, \$9); enclosure (\$12–15); snap-in louver vents ×2 (\$12); grommets (EASIEAH 20-pack, *purchased*, \$10); power strips ×2 (\$50); AC cords (\$24 — two short rear-outlet hops + the DELTA 3 charging line); fridge DC cord + SAE seam disconnects (one OYMSAE 2-pack does both, *purchased*, \$22); 2-way rear-outlet tap (\$5); cord clips (\$9); fused car-plug → SAE adapter + SAE → 12V-socket pigtail (\$18); 18AWG hookup wire, crimp assortment + WAGO lever nuts (\$30).

Anchoring — E-track anchors ×8 (\$56); 5/16" carriage bolts ×16 (\$12); ratchet straps 4-pack (\$32); fridge-slide steel riser angles ×2 (\$24) + 1x3 apron stock (\$6).

Comfort & interior — [HEST Dually Long mattress](#) (\$530–590); Windmill Smart fan (\$69, **PURCHASED**); tension rod + blackout curtain (\$40); [PeaceOut Sienna bug nets](#) (~\$197); [EcoFlow WAVE vent kit](#) (\$39); non-slip mat (\$12); WAVE 3 hose hook (\$4); WAVE 3 glide strips (\$6); DELTA 3 drawer hardware (\$15).

Found storage — DELTA 3 drawer tray (\$8); WAVE 3 overhead shelf, from offcut (\$5); utility-cabinet bins ×2 (\$8).

Finishing / vehicle — utensil bins + non-slip liner (\$12); wood sealant (\$20); sandpaper/misc (\$15); SRS airbag emulators — 0651 Round x2 + 5522 Square x2 (~\$60, **PURCHASED**; verify the 5522 fits the rectangular plug).

Already owned (not priced): EcoFlow DELTA 3 Plus + Smart Extra Battery, EcoFlow WAVE 3.

Total: ~\$3,370–3,740 with the fridge + kitchen, or ~\$2,670–2,890 if you already own equivalents (see Section 4 for the full itemized BOM and every purchase link).

Appendix C — Cut List (consolidated)

Finished sizes; add saw kerf. Full context in Section 3.

3/4" Baltic birch plywood — 1 sheet (4×8): Panel C deck 1× 36×46"; rear-pantry hold-down cleats ~4× 1×1×12–14" (ripped from the offcut) — the rest is spare stock.

1/2" Baltic birch plywood — 1 sheet (4×8): kitchen-drawer box (bottom 1× 16×26"; sides 2× 26×4"; front/back 2× 15×4") + hanging cheeks 2× 26×6.2"; battery-drawer bottom 1× 20×25". **3/8" half-sheet:** battery-drawer walls (2× 25×14.5", 2× 20×14.5"); fridge tray 1× 17.72×28.74"; Panel C front wall 1× 46×17".

2×2 pine — 12 boards (8ft), 964" total: Panel A long rails 2× 29"; Panel B long rails 2× 29"; Panel C long rails 2× 36"; end rails 6× 46"; center divider (Panel A) 1× 26"; legs 12× 16" (cut 1" short); bottom rails 5× 46" + 2× 26".

1×4 pine — 6 boards (8ft), bed platform: side rails 2× 58"; slats 8× 45".

Trim / cleats / scrap: WAVE 3 overhead shelf 1× ~20.75×14" (½" ply offcut); WAVE 3 glide strips 2× 20×1" (UHMW/laminate); DELTA 3 locating cleats 4× 1×1 blocks.

Appendix D — Leveling: Block Calculator

Per-site leveling is done at the **wheels** with the [Lynx blocks](#), driven by the phone [Sienna Block Calculator](#) (open it in Chrome and *Add to Home screen*, or use the offline copy [sienna_block_calculator.html](#)). The interior leg feet are then a **one-time** set against the van's own floor.

Using it: park (engine off, brake on) → read the two bed-mounted bubble levels (pitch on the platform rail, roll on the rear-pantry deck edge) in degrees → enter both readings + which end/side is low → it returns blocks-per-tire. Set the one-time van settings once (wheelbase 120.5", track ~68", and *your measured* block height, Lynx ≈ 1.5"). Stack ahead of the low tires, drive up slowly, chock, re-check; if any tire needs >4 blocks, re-park.

The math (so it's not a black box): a low END needs $\tan(\text{pitch}^\circ) \times \text{wheelbase}$ of lift; a low SIDE needs $\tan(\text{roll}^\circ) \times \text{track}$. Blocks per tire = $\text{round}(\text{that deficit} \div \text{block height})$. One 10-pack (1.5"/block over the 120.5" wheelbase) covers about 2.9° of pitch correction.

Appendix E — Weight Budget & Weight-Distribution Analysis

Every component's weight, computed from the real material dimensions (Baltic birch at 42.5 lb/ft³, pine at 28 lb/ft³) plus manufacturer specs for the appliances/power gear. The live spreadsheet is in the repo as `weight_budget.csv` (open it in any spreadsheet app; regenerate with `weight_budget.py` if you change materials). Figures marked *est.* are estimates to confirm.

Component	Category	Weight (lb)	Zone	Notes
Panel A frame (2×2 pine)	Structure	12.0	front	rails+legs+divider+bottom rails (16.25" legs — deck recess)
Panel A drawer box + slides (¾" birch, ½" bottom)	Structure	22.2	front	holds the DELTA 3 stack
Panel B frame (2×2 pine, full cube)	Structure	12.9	mid	bare-frame deep-storage box (16.25" legs — deck recess)
Panel C frame (2×2 pine)	Structure	10.0	rear	rails+legs+front bottom rail
Panel C deck (¾" birch, 33×43 recessed + cleats)	Structure	27.2	rear	drops between the rails onto bearer cleats, flush (deck recess)
Panel C front wall (¾" birch)	Structure	7.2	mid	intake fan + grommets
Fridge tray (¾" birch + 2 1×3 side aprons)	Structure	6.4	rear	hangs between the side-mount slide rails
Kitchen drawer + ½" cheeks (birch)	Structure	13.1	rear	hung over the kitchen unit
Rear pantry: 4× IRIS 12"W drawer cluster + hold-down	Structure	15.0	rear	prefab 2×2 drawers (est.) + cleats/strap — replaces the ~42 lb plywood pantry
Panel B: 2× Sterilite 28-Qt under-bed totes	Hardware/misc	4.0	mid	restacked ON the spare (2 of the original 4)
RJ-MODINI spare kit + jack (Panel B, flat at the axle)	Hardware/misc	40.0	mid	T155/85R18 steel-wheel kit + cleats/strap — VERIFY kit weight
Bed platform (1×4 pine, 2 rails + 8 slats)	Structure	20.2	front	flush slat deck over A+B
Fridge (BougeRV Rocky 40, empty)	Appliances	40.6	rear	manual spec; +20–40 lb loaded
Kitchen unit (JAGAHABA)	Appliances	45.0	rear	listing spec
EcoFlow DELTA 3 Plus + Extra Battery	Power/climate	48.0	front	Panel A passenger drawer
EcoFlow WAVE 3 A/C	Power/climate	33.7	front	Panel A driver bay
Mattress (HEST Dually Long)	Bedding	35.0 est.	mid	solid foam + waterproof cover
Fridge + kitchen-drawer slides (heavy)	Hardware/misc	8.0	rear	24" heavy-duty pairs
Fridge-slide steel riser angles (2)	Hardware/misc	9.8	rear	2×2×3/16" × 24" steel, fixed rails → E-track anchors (aluminum angle saves ~6 lb)
12 leveling feet + star knobs + inserts	Hardware/misc	5.0	mid	4 per panel
E-track anchors (8) + ratchet straps	Hardware/misc	8.0	rear	floor tie-downs at Panel C
Corner brackets, braces, screws, glue	Hardware/misc	6.0	mid	spread across all modules
Seam draw-latches (4) + pins + bumpers	Hardware/misc	1.5	mid	at the A/B + B/C seams
Electrical (2 fans, controller, fuse, 2 strips, cords)	Hardware/misc	6.0	mid	cooling + power runs
Cooktop + cookware (stowed)	Hardware/misc	12.0	rear	induction top + pots in the kitchen

Subtotals: Structure **146.2** · Appliances **85.6** · Power/climate **81.7** · Bedding **35.0** · Hardware/misc **100.3** **Build total (added): ≈ 449 lb** — after the lighter-wood swaps, the deck recess and the prefab-drawer pantry swap, plus Panel B's 2 storage totes (~4 lb) and the **RJ-MODINI spare kit stowed at the axle (~40 lb)** — carried inside deliberately instead of on a hitch basket, which would have added its own 30–60 lb of carrier plus a ~1.4× lever on the rear axle.

But the 2nd-row seats come OUT (Section 9), so the conversion *removes* weight too:

	Weight
Build (added)	+449 lb
2nd-row seats removed (2 × ~48–70 lb) <i>est.</i>	–120 lb
NET permanent weight added vs. stock	≈ 329 lb

So the van, converted and empty, weighs only about **329 lb more than a stock seatless curb** — and because the seats were part of the factory curb weight, pulling them **frees ~120 lb of payload** for your gear. **Weigh your actual seats to confirm** — captain's chairs vary; 120 lb is an estimate.

Loaded scenarios (payload = everything you add to the van — build + people + cargo):

Scenario	Weight
Net build (added – seats removed)	≈ 329 lb
+ provisions (food, water, cookware, bedding ~120 lb)	≈ 449 lb
+ 2 occupants (~340 lb, in the front seats while driving)	≈ 789 lb

Weight distribution

- **Fore–aft:** the build's own center of mass sits ≈ **51.3" back** from the front seatbacks — just aft of the 47" geometric center (the prefab pantry and the axle-stowed spare both pulled it forward). Breaking it into thirds: **front 30%** (136 lb — Panel A + the DELTA 3/WAVE 3 stack + the bed platform), **middle 26%** (118 lb — Panel B now carries the spare + totes at the axle), **rear 43%** (195 lb). That rear share is the **tailgate cluster** — the prefab drawer pantry (~15 lb), the fridge (41 lb), the kitchen unit (45 lb), and Panel C's own structure — most of which has to live at the back for slide-out access.
- **Lateral:** ≈ **0.8" toward the passenger side** — trivial (the fridge-slide steel risers on the driver side pulled it in a bit more). This is by design: the DELTA 3 stack (48 lb, passenger) and the WAVE 3 (34 lb, driver) sit in opposite bays of Panel A, and the fridge (driver) and kitchen (passenger) also cross-balance in Panel C. The reviewer's "heavy battery off to one side" concern is effectively cancelled by the WAVE 3 on the other side.
- **Height:** everything is low (floor-level bays) except the 16.8" pantry cluster at the rear and, when parked, the sleeping load on the ~20–27" platform. Overall CG stays low — no rollover concern beyond a stock minivan.

Effects on drivability

- **Payload headroom:** loaded for travel (net build + provisions + 2 people, with the seats out) is ≈ **789 lb** — and that already includes the spare tire + jack. A 4th-gen Sienna's payload is roughly **1,100–1,300 lb** (the AWD Woodland is at the lower end), so there's a **~310–510 lb margin** — the removed seats buy back ~120 lb of that. Comfortable, but not unlimited once you add lots of water and gear. **VERIFY the exact figure on the driver door-jamb sticker** — that number, and the **rear GAWR**, are the hard limits.
- **Rear bias:** with 43% of the build mass in the rear third (much of it at/behind the rear axle), the fixed build alone loads the rear axle and slightly lightens the front — which reads as lighter steering, a bit more rear squat, and a raised headlight aim. **But while driving, the two occupants (340 lb) sit up front and more than offset that**, so the *loaded* vehicle is reasonably balanced. The rear bias matters most when driving **solo with a full rear and no front passenger**.
- **Lateral / height:** negligible effect — the ~1.1" lateral offset is unnoticeable, and the low CG keeps handling stock-like.

Recommendations

1. **Verify payload + rear GAWR** on the door-jamb sticker before loading, and stay under both. The Woodland AWD has the least payload — treat ~1,100 lb as the working assumption until you read the sticker.
2. **Stow heavy movable cargo forward/mid, not at the tailgate.** Water, canned food, and tools belong in **Panel B** (middle, near the axle) — that offsets the fixed rear cluster. Water is the big one: **8.3 lb/gal**, so a 6-gal jug is ~50 lb — keep it low and mid/forward.
3. **Re-aim the headlights** after the build is in and loaded — rear squat raises the beam.
4. **Set tire pressures to the door placard** (consider the upper end for the rear given the bias) and re-check with the van loaded.
5. **Driving solo?** Expect a slightly lighter front end with a full rear — nothing unsafe at these weights, just drive to it.
6. **Leg-foot load is not a concern:** ~441 lb + occupants + cargo (~1,000 lb worst case) over 12 feet is well under the feet's 330 lb-each rating (~85 lb/foot worst case, a quarter of capacity).
7. **If you add heavy items later** (second battery, water tank, awning), re-run `weight_budget.py` and re-check the rear axle before a trip.

Appendix F — Nighttime Van + Tent Cooling Setup

A **night-only** cooling arrangement for hot-weather campsites (worked out for a Texas-summer trip, but applies anywhere overnight lows still run warm): condition the van and an attached tailgate tent as one shared air volume with the WAVE 3 alone, and skip the factory AC overnight entirely. This builds directly on the WAVE 3 "with a tent" configuration already described in Section 1 — this appendix just adds the setup diagram and the night-specific hints.


Sienna interior envelope
FRONT


Panel A



Panel B

Panel C

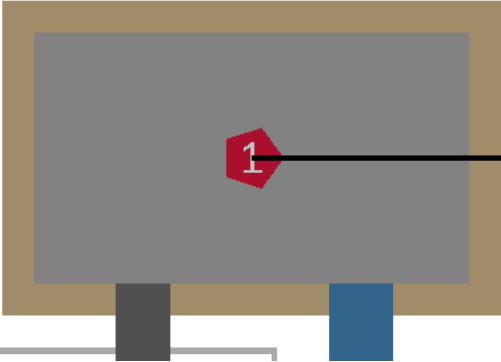

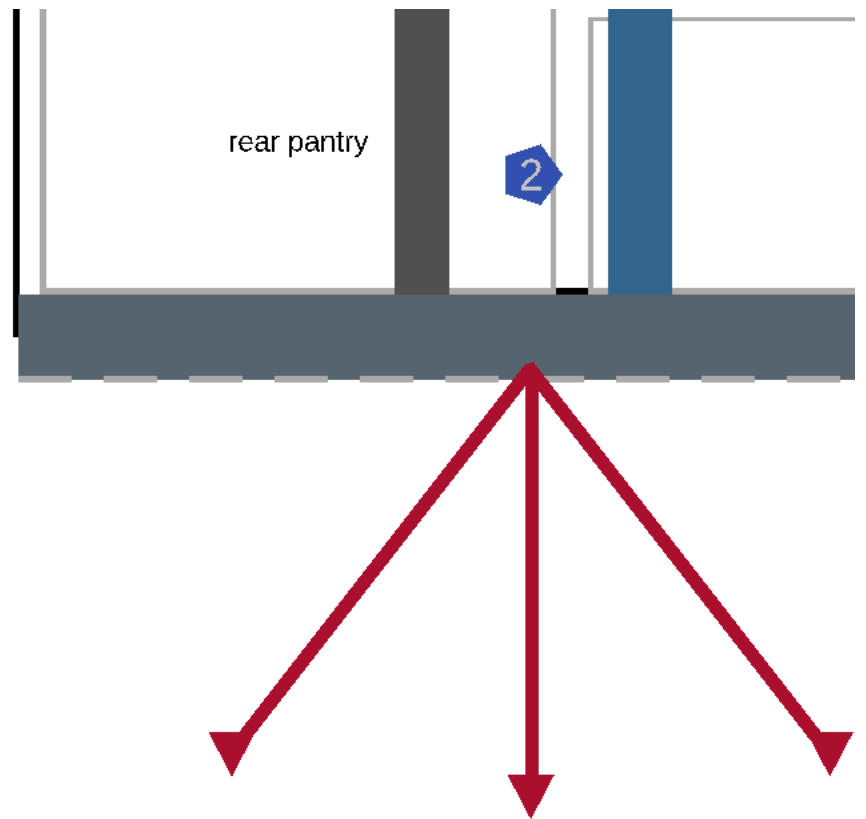

5

TENT — EXAMPLE FOOTPRINT (swap for your tent)
127" x 96" — VEVOR SUV tailgate tent



Night-only setup: skip the factory AC here — it needs the van (doors/tailgate shut) to run efficiently, which conflicts with the tent sleeve needing the tailgate open. Seal the tent's own m vents shut and add a small circulation fan inside the tent to p the WAVE 3's output to the tent's far end — see Section 1.

Why no factory AC at night: the Sienna Hybrid's electric AC compressor cools the cabin well, but it needs the van **sealed** (tailgate/doors shut) to work efficiently, and it cycles the gas engine on and off to keep the hybrid battery fed — noisy, intermittent, and it burns fuel right through the park's quiet hours. A tailgate-attached tent needs the opposite: the tailgate **open** so the connection sleeve has something to wrap around. Trying to run both at once means either the AC fights a leaky open tailgate (worse cooling, more engine cycling) or the tent's connection collapses — there's no clean way to combine them. The WAVE 3 has neither problem: it's silent-ish, battery-only, and its whole design point (Section 1) is blowing straight through the open tailgate into the shared van+tent space.

Setup steps (matches the numbered callouts in the diagram):

1. Carry the WAVE 3 from its Panel A storage bay back to Panel C's deck, just forward of the rear-pantry cluster, on a non-slip mat — facing the open tailgate.
2. Route its intake/exhaust hoses past the pantry and out through the open tailgate gap to true outside air. No window seal needed — the open tailgate is the vent path.
3. Leave the DELTA 3 Plus + Smart Extra Battery in Panel A's right (passenger) drawer — that's the WAVE 3's power source. Run its cord the length of the van (Panels A → B → C) to reach the unit.
4. Attach the tent's elastic connection sleeve around the open tailgate/liftgate opening.

5. Pitch the tent in its normal footprint just beyond the tailgate (swap in your own tent's dimensions — the diagram uses an example ~127" x 96" SUV tent as a stand-in).
6. Zip every one of the tent's own mesh windows/vents shut except the one facing the van — every extra opening is cool air leaking out into the Texas night air.
7. Turn the WAVE 3 on and let it condition the shared van+tent volume; hoses keep dumping heat/moisture out the tailgate gap the whole time.

Hints:

- **Add one small low-power circulation fan inside the tent**, aimed to push the WAVE 3's output toward the tent's far end — its own airflow may not reach that far unassisted, and a clip fan costs only a few watts against the 2048Wh bank.
- **If you want the factory AC's extra cooling power too**, use it for a short **pre-bed knockdown** only: seal the van fully (tailgate shut, tent not yet attached) and run the AC 10-15 minutes before quiet hours to clear the day's heat soak, then switch to the WAVE 3 + tent setup above for the actual overnight run.
- **Battery budget**: expect roughly 7-10 hours of overnight runtime from a full DELTA 3 stack in this configuration (nighttime ambient is far easier to hold than a daytime load) — plenty for one night; plan a solar/shore-power top-up if running it multiple nights back to back.
- **If you need two independently-cooled sleeping zones instead of one shared space** (e.g., people sleeping in both the van and the tent), the WAVE 3 can't do both — the alternative is to seal the van and run the factory AC there while pitching the tent as a **fully stand-alone** shelter (its own door, sleeve not attached to the tailgate) with its own separate cooling. That trades the shared-air convenience for two independently sealed zones.
- **Safety note carries over from Section 1/4**: this configuration doesn't run the engine overnight, so it doesn't add to the CO-monitor concern that a factory-AC-all-night approach would — but keep the low-level CO monitor active regardless if you ever do run the engine near the sleeping area.

License

This build plan, its diagrams, and all accompanying project files (the "Materials") are © 2026 JJJJJ Enterprises, LLC and are provided free of charge for **personal, non-commercial use only**.

- You may view, copy, print, and build from the Materials for your own personal project.
- You may **not** sell, license, rent, or otherwise use the Materials — or derivatives of them — for any commercial purpose without prior written permission from JJJJJ Enterprises, LLC.
- All rights not expressly granted above are reserved by JJJJJ Enterprises, LLC.

No Warranty

THE MATERIALS ARE PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT. JJJJJ Enterprises, LLC makes no representation or warranty that the Materials are accurate, complete, or suitable for your specific vehicle, situation, or use case — dimensions, weights, and procedures are estimates that must be independently verified against your own vehicle before you rely on them. This is a personal DIY project, not professional engineering or automotive advice; the build involves woodworking, electrical wiring, and modifications that can affect vehicle weight distribution, payload, and safety systems (including SRS airbag components), and you undertake it at your own risk. IN NO EVENT SHALL JJJJJ ENTERPRISES, LLC BE LIABLE FOR ANY CLAIM, DAMAGES, INJURY, OR OTHER LIABILITY ARISING FROM OR IN CONNECTION WITH THE MATERIALS OR THEIR USE.