Home

Projects

Arduino

MAX7219 8x8 Matrix

MCP23017 I/O Expander

BMP280 Pressure Sensor

Humidity DHT22/11

Rotary Encoder

MAX6675 0 to 1024 DegC

Battery Charger

SSD1306 OLED

74HC595 I/O Expander

Hitachi HD44780

Logic Level Converter

Ebooks

Digital download eBooks

PIC

LED Dot Matrix 8x8 Direct drive

Serial LCD

LCD Keypad

Frequency Counter LCD

Frequency Counter 7seg

DS1307 Clock

Binary Clock 8x8 matrix

Infrared Receiver

A PIC 12F675 tutorial.

LCD Volt Meter

PIC Sonar

PIC Projects

Project Ideas

Interfaces

SPI Interface

I2C Interface

PIC Resources

PIC Introduction

Subscribe to the MicroZine Newsletter and collect your free microcontroller Ebooks, download project code and more...

Email	
First Name (optional)	
☐ I am at least 16 years of age.	
☐ I have read and accept the <u>privacy policy</u> .	
■ I understand that you will use my information to send me a newsletter and occasional special offers from this site.	
Subscribe	

I2C tutorial.

This I2C tutorial shows you how the I2C protocol or more correctly written I²C (sometimes written as IIC) stands for Inter IC Communication and is intended for very short distance communication between ICs on a single PCB. It gives you a fully defined protocol for data transfer between multiple devices over two wires.

The great strength of the protocol is that it only requires two wires yet can have many connected devices and all of these can transmit and receive data at high speed. Unlike the SPI protocol the I2C protocol has an acknowledgement feature that means a sending device knows that a receiver has accepted the data. This means I2C is more robust when in a noisy environment. For SPI there is also no concept of multiple master devices but SPI is faster.

Usually a master device sends out data to slaves (that give the ACK signal - a single bit returned at the end of transmission) but you can have more than one master device in a system allowing great flexibility of use for I2C.

In this I2C tutorial you will learn all about the 2 wire I2C serial protocol; How easy it is to use, how it works and when to use it.

The I2C protocol is a very useful serial communication protocol. This popular system is used in a huge range of chips - just a few examples from this site include the DS1307 (RTC), SSD1306 (OLED Display), DS23017 (Serial expander). It allows you to connect many devices to a single set of two wires and then communicate individually with each device with which you can send and receive data.

Warning: The protocol is designed for single board communication it is not a long distance comms. system. You can find instances (horror stories) of people designing a multi drop inter office comms system with I2C extenders - just don't do it - it ends in tears!

This I2C tutorial shows you how the I2C protocol works at the physical bit level discussing single master mode (a single controlling device) which is the most common use for I2C in a small system.

Note: You can find Master mode soft I2C routines in the <u>DS1307 RTC</u> project.

Visit our Facebook Page:

Click Here

Search Site...

G+

Recent Articles



The TCS230 Color Sensing Chip: How it works and how to use it.



How to use the TCS230 (/TCS3200) Color detector chip and easily add it to any of your projects.


Read more

Arduino millis

How to use Arduino millis() for delays but still make the processor do work - Stop using delay()

Read more

[Arduino Tutorial] : How to use the 74HC595 shift register with shiftOut().

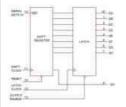

The Essential Guide to the 74HC595; What it is BACK and how you can easily

PIC ICSP

Programmer Types

Resources

Tips & Techniques

PIC Tutorials


Microcontroller Blog

Site map

Other

Articles

Books

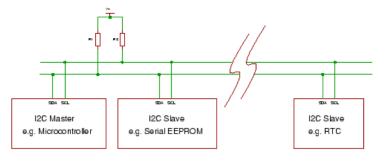

How I2C works - Open drain connections.

I2C works by using open drain connections. The two resistors above are the pull-up resistors that allow the whole system to work - when all devices are inactive then the "pullups" pull the signal wire to the supply voltage.

Warning: you must have one pullup resistor per signal wire (SCL and SDA) and not more!

At any time a master device can start a transmission by pulling SDA low while SCL is high (a unique specific condition that other I2C devices recognise as the start of a master transmission).

The slave device listens to the next 8 serial bits of the address to see if it matches its own address (each I2C must have a unique address built in). If it does recognise the next 8 bits as an address from the master device. The next bit tells the slave that it is to read or write data for the following packet. This is followed by the ACK bit that the slave must generate to indicate that it understood the address. The diagram further down shows this in graphical form.

When the ACK signal is to be generated the master device releases the SDA line and the open drain output is pulled high. This allows the slave device to generate the ACK signal by pulling it low (only for that specific bit period).

Note: Another protocol that uses the open - drain concept is the Dallas 1-wire protocol - but that is far slower. The advantage o the 1-wire protocol is that it allows powering of the device through the signal wire! The 1-wire protocol also allows transmission over very large distances unlike the I2C protocol. On this site this project (DS18B20) uses the 1-wire protocol.

Master and slave

The phillips I2C protocol defines the concept of master and slave devices. A master device is simply the device that is in charge of the bus at the present time and this device controls the clock and generates START and STOP signals. Slaves simply listen to the bus and act on controls and data that they are sent.

The master can send data to a slave or receive data from a slave - slaves do not transfer data between themselves.

Multi Master

Multi master operation is a more complex use of I2C that lets you have different controlling devices on the same bus. You only need to use this mode if you have more than one microcontroller on the bus (and you want either of them to be the bus master).

Multi master operation involves arbitration of the bus (where a master has to fight to get control of the bus) and clock synchronisation (each may a use a different clock e.g. because of separate crystal clocks for each micro).

Note: Multi master is not covered in this I2C tutorial as the more common use of I2C is to use a single bus master to control peripheral devices e.g. serial memory, ADC, RTC etc.

Data and Clock

The I2C interface uses two bi-directional lines meaning that any device could drive either line. In a single master system the master device drives the clock most of the time - the master is in charge of the clock but slaves can influence it to slow it down (See Slow Peripherals below).

use one in any of your projects.

Read more

Pic Programmer Types

Which pic programmer do you need? This page discusses PIC programmers and gives some essential information on choosing or building your own programmer.

Read more

Arduino Pulsein: an easy way to measure pulse periods in microseconds.



learn how to use Arduino pulseIn and pulseInLong to get the most accurate pulse measurement on an Arduino.

Read more

Multiple
MCP23017
Interrupt tutorial
for operating
multiple
interrupts from
multiple
MCP23017s.

This MCP23017 Interrupt tutorial shows you how to connect interrupt outputs from several MCP23017s to a single microcontroller interrupt pin.

Read more

Readers Comments

"I wanted to thank you so so so much for all the information you have provided in your site it's

SUPERB and FANTASTIC." $\overset{\text{BACk}}{\text{TO}}$

The two wires must be driven as open collector/drain outputs and must be pulled high using one resistor each (that is one resistor per I2C line i.e.for data and clock) - this implements a 'wired NOR function' - any device pulling the wire low causes all devices to see a low logic value - for high logic value all devices must stop driving the wire.

Note: If you use I2C you can not put any other (non I2C) devices on the bus as both lines are used as clock at some point (generation of START and STOP bits toggles the data line). So you can not do something clever such as keeping the clock line inactive and use the data line as a button press detector (to save pins).

You will often will find devices that you realise are I2C compatible but they are labelled as using a '2 wire interface'. The manufacturer is avoiding paying royalties by not using the words 'I2C'!


There are two wires (three if you include ground!, and four if you also include power!) - but power and ground are taken as given i.e. they are available on a PCB as needed so don't really count.

I2C Turorial: Signals

SDA : Serial Data SCL : Serial Clock

I2C Turorial: Typical signalling transaction

I2C Tutorial: Typical SDA and SCL signals

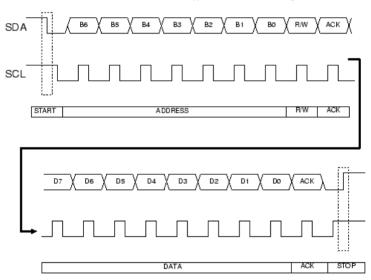

Speed

Standard clock speeds are 100kHz and 10kHz but the standard lets you use clock speeds from zero to 100kHz and a fast mode is also available (400kHz - Fast-mode). An even higher speed (3.4MHz - High-speed mode) for more demanding applications - The mid range PIC won't be up this mode yet!

Note: The low-speed mode has been omitted (10kHz) as the standard now specifies the basic system operating from 0 to 100kHz.

Note: Even if you run an I2C peripheral at a high speed the overall data rate depends on how fast you can push data into the internal I2C module and that depends on the processor speed.

A slow slave device may need to stop the bus while it gathers data or services an interrupt etc. It can do this while holding the clock line (SCL) low forcing the master into the wait state. The master must then wait until SCL is released before proceeding.

Data transfer sequence

A basic Master to slave read or write sequence for I2C follows the following order:

I2C Tutorial: I2C basic command sequence.

• 1. Send the START bit (S).

- Ranish Pottath

"This site really is the best and my favorite. I find here many useful projects and tips."

- Milan

bursach<at>gmail.com<

"Awesome site, very, very easy and nice to navigate!"

- Matt

matt_tr<at> wolf359.cjb.net

Learn Microcontrollers

"Interested in Microcontrollers?"

Sign up for The Free 7 day guide:

FREE GUIDE : CLICK HERE

"I am a newbie to PIC and I wanted to say how great your site has been for me."

- Dave

de_scott<at>bellsouth.net

"Your site is a great and perfect work. congratulations."

- Suresh

integratredinfosys<at>
yahoo.com

"I couldn't find the correct words to define yourweb site.

Very useful, uncovered, honest and clear.

Thanks so much for your time and works.

Regards."

- Anon

- 2. Send the slave address (ADDR).
- 3. Send the Read(R)-1 / Write(W)-0 bit.
- 4. Wait for/Send an acknowledge bit (A).
- 5. Send/Receive the data byte (8 bits) (DATA).
- 6. Expect/Send acknowledge bit (A).
- 7. Send the STOP bit (P).


I2C Tutorial: end of I2C basic command sequence.

Note: You can use 7 bit or 10 bit addresses.

The sequence 5 and 6 can be repeated so that a multibyte block can be read or written.

Data Transfer from master to slave


I2C Tutorial: Instruction sequence data from master to slave

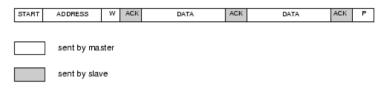

A master device sends the sequence S ADDR W and then waits for an acknowledge bit (A) from the slave which the slave will only generate if its internal address matches the value sent by the master. If this happens then the master sends DATA and waits for acknowledge (A) from the slave. The master completes the byte transfer by generating a stop bit (P) (or repeated start).

Data transfer from slave to master

I2C Tutorial: Instruction sequence data from slave to master

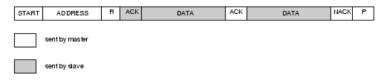

A similar process happens when a master reads from the slave but in this case, instead of W, R is sent. After the data is transmitted from the slave to the master the **master** sends the acknowledge (A). If instead the master does not want any more data it must send a not-acknowledge which indicates to the slave that it should release the bus. This lets the master send the STOP or repeated START signal.

Device addresses

Each device you use on the I2C bus must have a unique address. For some devices e.g. serial memory you can set the lower address bits using input pins on the device others have a fixed internal address setting e.g. a real time clock DS1307. You can put several memory devices on the same IC bus by using a different address for each.

Each device manufacturer is assigned a set of addresses so devices should not conflict with each other.

Note: The maximum number of devices is limited by the number of available addresses (and you need non-conflicting addresses) and by the total bus capacitance (maximum 400pF).

General call

The general call address is a reserved address which when output by the bus master should address all devices which should respond with an acknowledge. Its value is 0000000 (7 bits) and written by the master 0000000W. If a device does not need data from the general call it does not need to respond to it.

I2C Tutorial : Reserved addresses.

```
0000 000 1 START byte - for slow micros without I2C h/w
0000 001 X CBUS address - a different bus protocol
0000 010 X Reserved for different bus format
0000 011 X Reserved for future purposes
0000 1XX X Hs-mode master code
1111 1XX X Reserved for future purposes
1111 0XX X 10-bit slave addressing
```

BACK TO

I2C Tutorial: End of reserved addresses.

Most of these are not that useful for PIC microcontrollers except perhaps the START byte and 10 bit addressing.

START (S) and STOP (P) bits

START (S) and STOP (P) bits are unique signals that can be generated on the bus but **only** by a bus master.

Reception of a START bit by an I2C slave device resets its internal bus logic. This can be done at any time so you can force a restart if anything goes wrong even in the middle of communication.

START and STOP bits are defined as rising or falling edges on the data line while the clock line is kept high.

I2C Tutorial: text definition of START and STOP signals


START condition (S)	SCL = 1, SDA falling edge
STOP condition (P)	SCL = 1, SDA rising edge

I2C Tutorial: end of text definition of START and STOP signals

The following diagram shows the above information graphically - these are the signals you would see on the IZC bus.

I2C Tutorial: end of definition of START and STOP signals

I2C Tutorial: START (S) and STOP (P) bits.

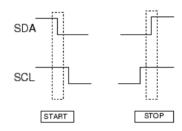

I2C Tutorial: end of definition of START and STOP signals

Note: In a single master system the only difference between a slave and a master is the master's ability to generate START and STOP bits. Both slave and master can control SDA and SCL.

Repeated START (Sr)

This seems like a confusing term at first as you ask yourself why bother with it as it is functionally identical to the sequence :

S ADDR (R/W) DATA A P

The only difference is that for a repeated start you can repeat the sequence starting from the stop bit (replacing the stop bit with another start bit).

S ADDR (R/W) DATA A Sr ADDR (R/W) DATA A P

and you can do this indefinitely.

Note: Reception of both S or Sr force any I2C device reset its internal bus logic so sending S or Sr is really resetting all the bus devices. This can be done **at any time** - it is a forced reset.

The main reason that the Sr bit exists is in a multi master configuration where the current bus master does not want to release its mastership. Using the repeated start keeps the bus busy so that no other master can grab the bus.

Because of this when used in a Single master configuration it is just a curiosity.

Data

All data blocks are composed of 8 bits. The initial block has 7 address bits followed by a direction bit (Read or Write). Following blocks have 8 data bits. Acknowledge bits are squeezed in between each block.

Each data byte is transmitted MSB first including the address byte.

BACK TO To allow START and STOP bit generation by the master the data line (SDA) must not be changed while the clock (SCL) is high - it can only be changed when the clock is low.

Acknowledge

The acknowledge bit (generated by the receiving device) indicates to the transmitter that the the data transfer was ok. Note that the clock pulse for the acknowledge bit is always created by the bus master.

The acknowledge data bit is generated by either the master or slave depending on the data direction. For the master writing to a slave (W) the acknowledge is generated by the slave. For the master receiving (R) data from a slave the master generates the acknowledge bit.

I2C Tutorial: Definition of ACK bits

Acknowledge	0 volts
Not acknowledge	High volts

I2C Tutorial: End of definition of ACK bits

ACK data master --> slave

In this case the slave generates the acknowledge signal.

When a not-acknowledge is received by the bus master the transfer has failed and the master must generate a STOP or repeated START to abort the sequence.

ACK data slave --> master

In this case the master generates the acknowledge signal.

Normally the master will generate an acknowledge after it has received data but to indicate to the slave that no more data is required on the last byte transfer the master must generate a 'not-acknowledge'. This indicates to the slave that it should stop sending data. The master can then generate the STOP bit (or repeated START).

General Call

The general call function is a specialised command that must be accepted by all devices on the bus. It allows a master device to communicate to all devices at the same time - giving them some data. Perhaps you would use this to command a software reset in the case of a watchdog timeout in the processor.

I2C Tutorial : Specifics for the 16F88

Pin configuration

To use the I2C mode in the 16F88 the SDA and SCL pins must be initialised as inputs (TRIS bit = 1) so that an open drain effect is created. By setting them as inputs they are not driving the wires and an external pull up resistor will pull the signals high.

16F88 Slave mode

The 16F88 fully implements all slave functions except general call.

Full slave mode

The general call function does not really matter as it is quite specialised commanding all devices on the bus to use some data.

A low output is generated by driving the signal line low and changing the pin direction to an output. A high output is generated by changing the pin direction to an input so that the external resistor pulls the signal high.

In slave mode this action is done for you by the SSP module (the outputs of the register at SDA and SCL are driven low automatically - regardless of the state of the register value).

16F88 Master mode

Basically there is very limited master mode functionality.

There are two elements that are provided:

BACk TO

- Interrupts
- · Pin control

16F88 Interrupts

There are two interrupts that activate on reception of either a START or STOP condition. These two interrupts are only useful in a multi master mode system where it is necessary for the non-master device to detect the start and stop conditions. So for a single master system they are of no use at all!

16F88 Pin control

Note When the SSP module is active SDA and SCL output are always set at zero regardless of the state of the register values. So all you have to do is control the port direction.

In master mode (16F88) SDA and SCL must be controlled using software.

I2C Tutorial: Specifics for 16F877A

It does it all for you!

- · Full master mode.
- · Full slave mode.
- · Full general call.

Note: If you want a chip with full master and slave mode operation look for the MSSP module in a PIC chip e.g. 16F877A - then you won't need more software - just enough to drive the module.

PIC Project Examples

DS1307 Real time clock (bit banged I2C).

Arduino Projects Examples

BMP280 Pressure sensor

MCP23017 IO expander.

Jump from <u>I2C Tutorial</u> to Best-microcontroller-projects home page

Privacy Policy | Contact | About Me

Site Map | Terms of Use

Copyright © 2005-20202018 Best-Microcontroller-Projects
All Rights Reserved.
No reprodction without permission.