OFFICIAL PRODUCT MANUAL

Ani-Grow™

Poultry & Livestock Farm Admin & Device Setup Guide

DOCUMENT REFERENCE

DOC-AG-MAN-2026

MANUAL REVISION

Version 2.5 (Print Ready)

APPLICABLE HARDWARE

AniFeed & AniWeigh Units (Poultry & Livestock)

SYSTEM PLATFORM

Web Farm Portal & Mobile App

MANUAL TABLE OF CONTENTS

1.0	Hardware Device Registration (Web Portal)	Page 2
2.0	Wi-Fi Setup & Network Connection (Mobile App)	Page 3
3.0	Automated Feed Scheduling for Poultry & Livestock	Page 4
4.0	Smart Poultry & Livestock Weighing (AniWeigh)	Page 5
5.0	Troubleshooting & Frequently Asked Questions	Page 5

1.0 Hardware Device Registration

Registering physical Ani-Grow poultry and livestock equipment to your online farm account using the Web Portal.

Before installing your **AniFeed** (automated feed dispenser) or **AniWeigh** (smart weighing scale) in your poultry coops or livestock pens, each device must be registered in your online farm account.

1.1 Finding Your Device Registration Code

Every physical Ani-Grow device features an official factory sticker on its enclosure or packaging. Look for the unique code printed on the sticker:

Equipment Type	Sample Sticker Code	Device Function Description
AniFeed Unit	`AF-8842-P1`	Automated feeding dispenser for poultry & livestock
AniWeigh Scale	`AW-3321-S4`	Smart weighing platform scale for poultry & livestock

Table 1.1 — Hardware equipment identification formats for poultry and livestock.

> **Note:** Write down your device code. You will need this code whenever managing hardware settings or transferring equipment across coops or pens.

1.2 Registering Equipment in the Web Portal

1 **Open the Devices Screen**

Log into your **Ani-Grow Web Portal** on your desktop computer. Click **Devices** from the main left navigation bar.

2 **Click "Link Hardware"**

Click the green **+ Link Hardware** button located at the top right of the screen.

3 **Enter Device Sticker Code**

Type the registration code found on your hardware sticker (e.g. `AF-8842-P1`) into the prompt field.

4 **Confirm & Save Link**

Click **Link Device**. The system verifies the code and binds the hardware to your farm account.

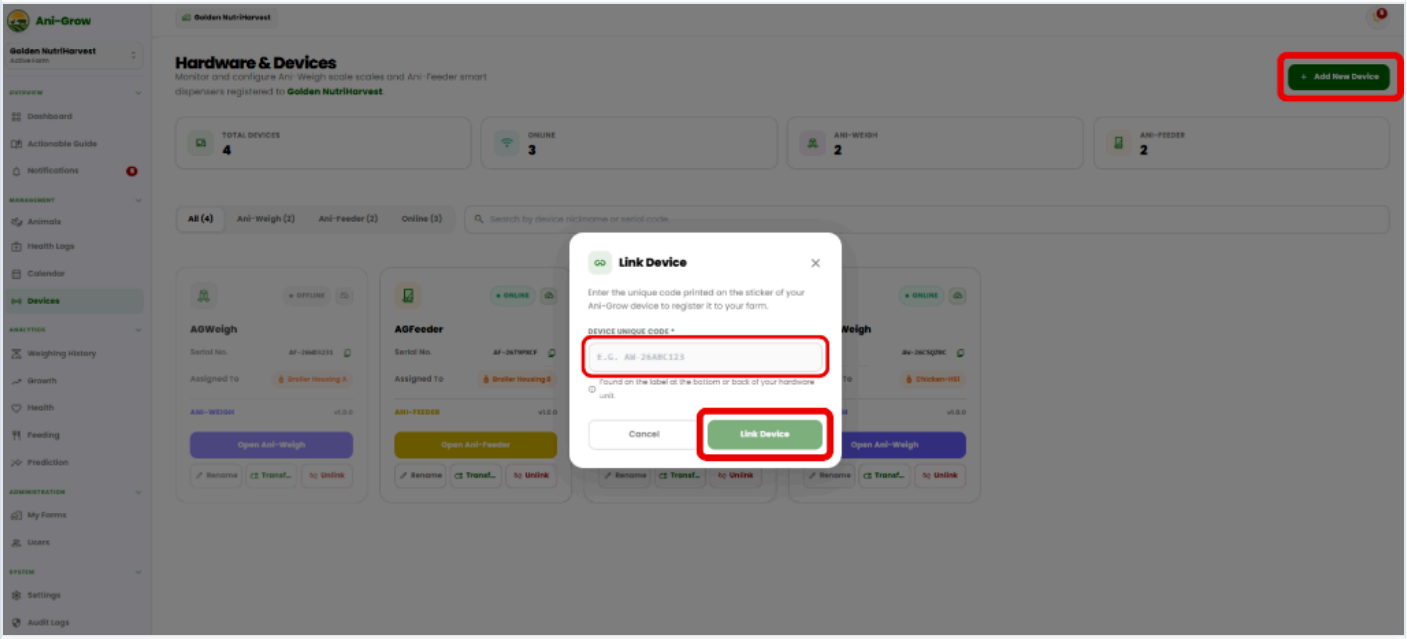


Figure 1.1 — Registering device code in the Web Farm Admin portal.

2.0 Wi-Fi Setup & Network Connection

Connecting physical poultry and livestock hardware to your farm Wi-Fi using the Mobile App.

After registering your device code in the Web Portal, you must connect the device to your local farm Wi-Fi network so it can operate online. Setup is performed using the **Ani-Grow Mobile App**.

⚠ **Pre-Setup Checklist (Required):**

- Turn **ON** the physical device power switch.
- Turn **OFF Mobile Cellular Data** on your phone (Prevents phone from dropping the setup network).
- Turn **OFF any active VPN** apps on your smartphone.

2.1 Mobile App Connection Workflow

1 **Open Mobile App & Go to Devices**

Launch the **Ani-Grow Mobile App** on your smartphone and tap **Devices** on the bottom menu.

2 **Start Setup**

Tap the **+ Add Device** button, or tap the offline Wi-Fi icon next to your device name.

3 **Connect Phone to Device Setup Wi-Fi**

Open your mobile phone's Wi-Fi settings. Select the temporary network broadcasted by your device:

Setup Network Name: `AniGrow_Setup_AF8842P1`

Tap to connect (No password required).

4 **Enter Farm Wi-Fi Credentials**

Return to the Ani-Grow Mobile App. Enter your local farm Wi-Fi **Network Name (SSID)** and **Password**, then tap **Send Wi-Fi Config**.

5 **Reconnect Phone & Name Equipment**

Switch your smartphone's Wi-Fi back to your regular farm Internet Wi-Fi. Return to the app, enter a nickname (e.g., *"Poultry Coop 1 Feeder"* or *"Pig Pen 1 Scale"*), and tap **Finish**.

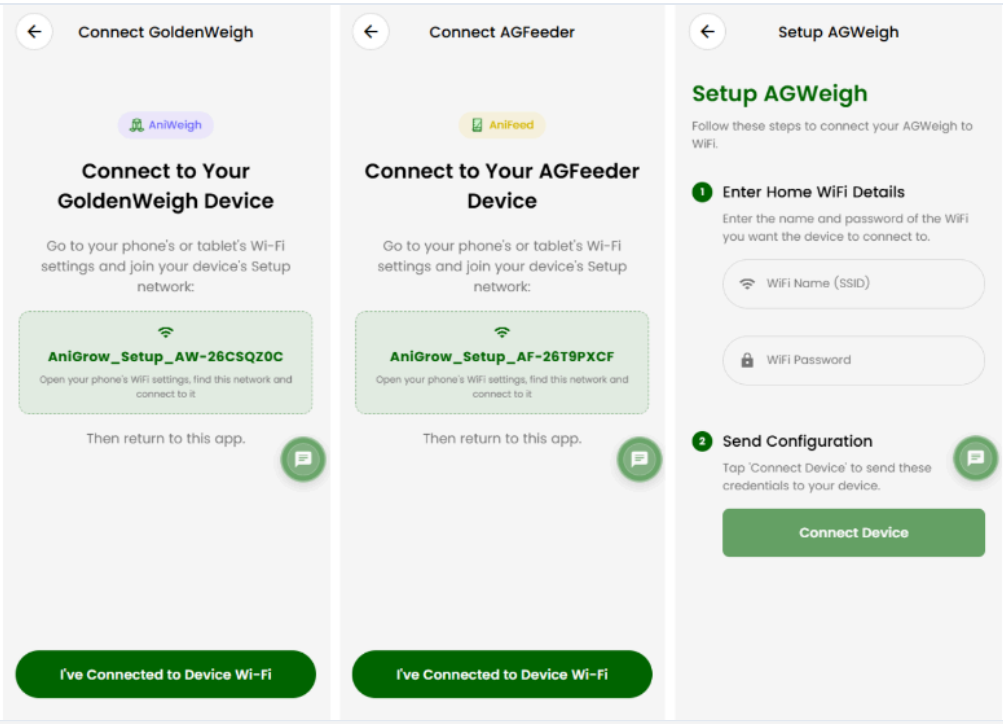


Figure 2.1 — Wi-Fi hotspot connection and credentials setup in the Ani-Grow Mobile App.

3.0 Automated Feed Scheduling for Poultry & Livestock (AniFeed)

Configuring feeding times, portion amounts, and coop or pen assignments for poultry and livestock.

The **AniFeed** system allows you to schedule exact feeding times and portion sizes (in grams) for each poultry coop or livestock pen. Feed is dispensed automatically according to your saved schedule.

3.1 Configuring a Feed Schedule

1 **Open Feed Schedule Manager**

From the Web Portal or Mobile App, navigate to **Devices**, select your **AniFeed** unit, and click **Feed Schedule**.

2 **Assign Housing (Coop / Pen)**

Select which housing unit (e.g. *Chicken-HS1* or *Pig Pen 1*) is connected to this feeder.

3 **Set Daily Frequency & Portion Grams**

Choose how many times feed should be served per day (1 to 12 times) and specify the amount per dispense in **grams (g)**.

4 **Set Feeding Hours & Save**

Specify the exact dispense hours (e.g., 08:00 AM, 12:00 PM, 06:00 PM) and click **Save Schedule**.

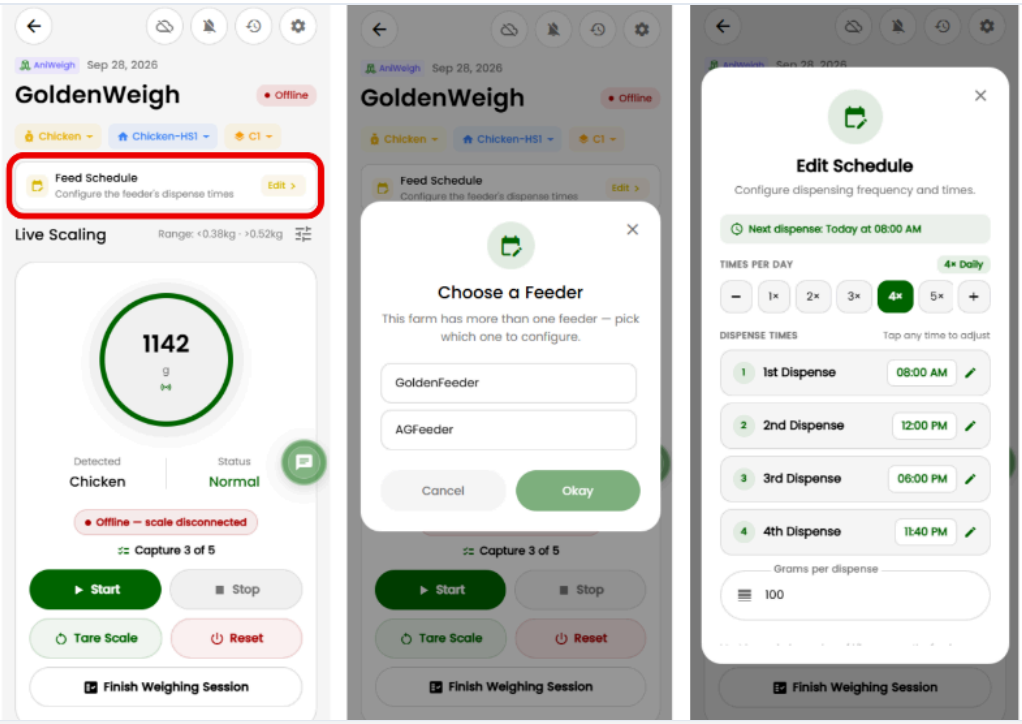


Figure 3.1 — Feed schedule selection and portion configuration in the Ani-Grow Mobile App.

3.2 Recommended Feed Schedule Examples (Poultry & Livestock)

Animal Category	Housing Location	Daily Frequency	Portion / Meal	Scheduled Feeding Times	Total Daily Feed
Broiler Chickens (Poultry)	Chicken-HS1	4 times daily	100 grams	08:00 AM, 12:00 PM, 06:00 PM, 11:40 PM	400g daily
Grower Pigs (Livestock)	Pig Pen 1	3 times daily	750 grams	07:00 AM, 12:00 PM, 05:30 PM	2,250g (2.25 kg)
Breeding Sows (Livestock)	Pen 4	2 times daily	1,200 grams	08:00 AM, 04:00 PM	2,400g (2.40 kg)

Table 3.1 — Recommended feeding schedules by animal category (Poultry & Livestock).

4.0 Smart Poultry & Livestock Weighing (AniWeigh)

Live weight scaling, animal type & housing selection, session controls, and weight categories for poultry and livestock.

4.1 Animal Type, Housing & Batch Selection

Before beginning a weighing session, set the exact animal details on the AniWeigh screen:

- **Animal Type Selector:** Choose between **Chicken (Poultry)** or **Pig (Livestock)** to load the appropriate target growth standards.
- **Housing Selection:** Assign the scale to your active coop or pen (e.g. *Chicken-HS1* or *Pig Pen A*).
- **Batch / Tag Selection:** Select the active animal batch (e.g. *Batch C1* or *Batch P4*) to log records under specific animal groups.

4.2 Weight Categories Breakdown (Poultry & Livestock)

Weight Category	Target Condition Rule	Poultry Setting (Chicken)	Livestock Setting (Pig)	Recommended Farm Action
UNDERWEIGHT	Below target minimum	Below 0.38 kg	Below 0.80 kg	Flag for extra feed & health check
NORMAL	Within healthy range	0.38 kg – 0.52 kg	0.80 kg – 1.50 kg	Continue standard feeding & growth plan
OVERWEIGHT	Above target maximum	Above 0.52 kg	Above 1.50 kg	Adjust portion size for balanced growth

Table 4.1 — Weight category classification for poultry and livestock.

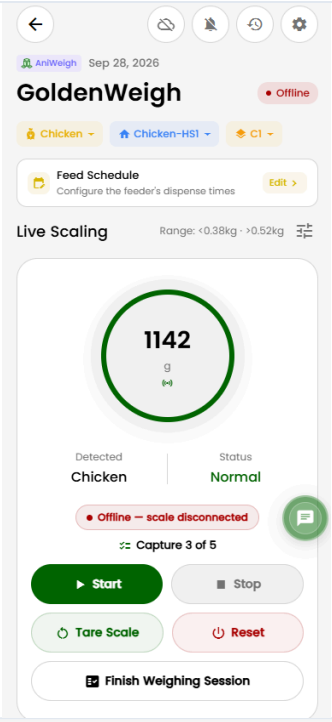


Figure 4.1 — AniWeigh live scaling, animal/housing/batch selection, and session controls.

4.3 Weighing Session Controls & Buttons

1 **START** **Start Button**

Activates the scale sensor to begin live weight readings and real-time animal weight scaling.

2 **STOP** **Stop Button**

Temporarily pauses continuous live scale readings during the weighing session.

3 **TARE SCALE** **Tare Scale Button**

Zeroes out platform offset (e.g. mud or bedding material on platform) to recalibrate scale baseline to 0.00 kg.

4 **RESET** **Reset Button**

Clears temporary unstable scale readings or resets sensor input calibration.

5 **FINISH SESSION** **Finish Session Button**

Finalizes session, records total animal counts (Underweight, Normal, Overweight), saves data to farm report database, and exports summary report.

5.0 Troubleshooting & Support

Quick operational guide for poultry and livestock farming questions.

Q: System reports "Device code not found" during web linking.

A: Verify the sticker letters and numbers carefully. Make sure not to mix up letter 'O' with number '0'.

Q: Phone cannot reach setup Wi-Fi network.

A: Ensure mobile cellular data is turned OFF on your smartphone before connecting to the device Wi-Fi.