

Step 8

Screw covers & Pocket covers

- Using the 3 screw covers see figure **See FIG #9** snap into 3 cavity of meeting rails.
- Install 2 Pocket covers, 1 for outside and 1 for inside, are snapped into Jamb pockets that are not receiving panels. See figure **See FIG #10**

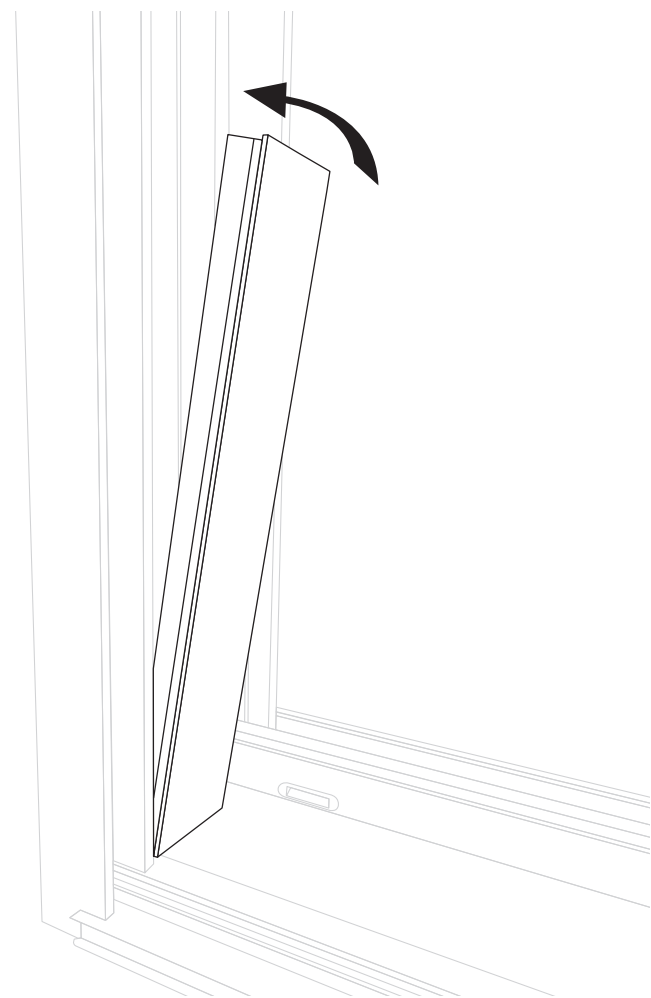


Fig #9

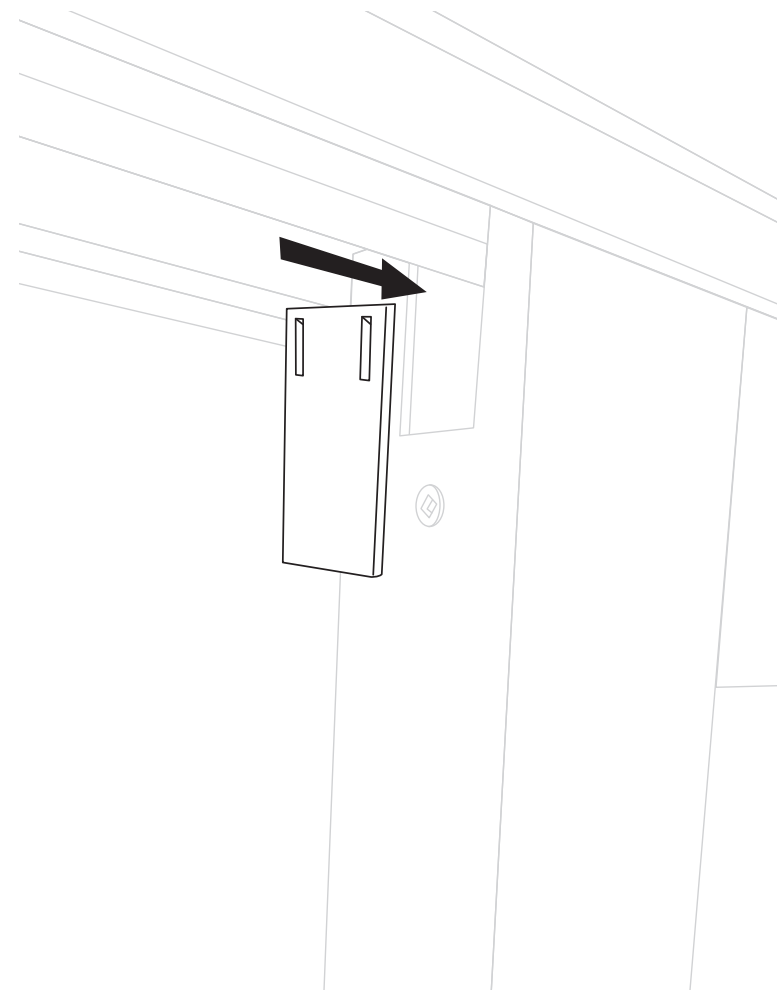


Fig #10

Step 9


Screen Installation

- Lift and tilt Screen into screen pocket and position onto screen roller track. Adjust rollers if necessary.
- Install screen keeper into pocket of jam and adjust if necessary


Installation Instructions Capri 3.0 (2 PANEL DOORS) SUCTION CUPS ARE REQUIRED FOR INSTALLATION

This kit contains:

2 Rollers
with 2 x #8 x 5/8" screws

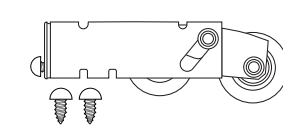


**20 x #8
2 1/2" screws**

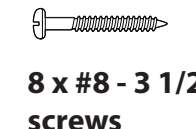


**8 x #8 - 3 1/2
screws**




2 Bumpers




**Fix Panel Support
Weather Stripping**
with 1 x #8
1 1/4" screw

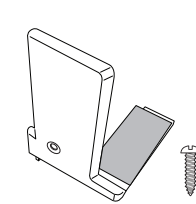


2 Jamb Clips
with 4 x #8
1 1/4" screws

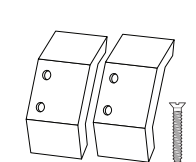


**3 Screw
Covers**



**Fixed Pane
Anti Lift**



Anti Lift
with 2 x #8
1 1/4" screws

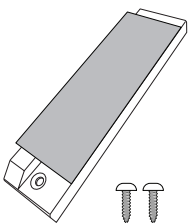

Step 1

Frame Assembly

(If you purchased an assembled Patio door please go to Section "Frame Installation")

- Lay the sill (bottom), Header (top), and Jambs (sides) on the ground with interior side facing down. (lay down drop sheets to protect frame from scratches during assembly)
- Install 5 #8 x 2 1/2" screws (found in hardware bag) into the pilot holes at each frame corner. Ensure that you tighten screws enough to fully compress foam gaskets at each corner.


Step 2

Frame Installation

- Apply a heavy bead of urethane caulking along the full width of the sill opening where sill of patio door will be placed. (Screws are NOT recommended to fasten sill to floor)
- Fasten the door frame to the opening using 8 -#8 -x 3 1/2 "screws (found in hardware bag). 3 screws on each side jamb and 2 screws in the Header. Using shims helps squaring up the frame.
- Ensure the door frame is square before installing panels.

Step 3

Fig #1

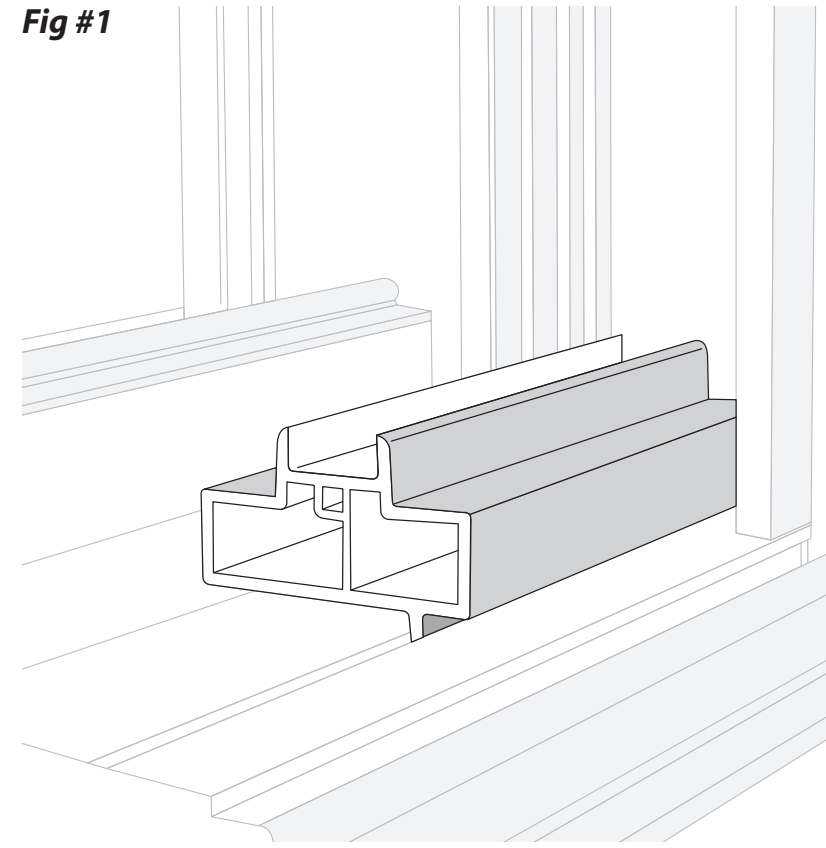

Fix Panel Support Assembly (not required if door is pre assembled)

- Apply Silicone along the SILL groove to receive the **FIX PANEL SUPPORT**.
- Slide the **FIX PANEL SUPPORT** tight against the Jamb **FIG #1**
- Install 2 - #8x1 1/2" screws (found in hardware bag) 4 to 6 inches from either end to secure **FIX PANEL SUPPORT** to SILL (do not over tighten)

Step 4

Fixed Panel installation (SUCTION CUPS REQUIRED)

- Install 2 Jamb Clips to the pre-drilled holes in the Jamb where fixed panel will be placed using 2 #8 x 1 1/4" screws per clip (found in hardware bag) **FIG #2**
- Insert Fix panel first into the Header pocket and lift onto **FIX PANEL SUPPORT**
- Slide Fixed panel about 1" from the jamb. Using the suction cup raise fixed panel up and in towards jamb pocket and lower panel onto the Jamb Clips just installed.
- Install the rubber fixed panel anti lift into top of fixed panel where meets jamb on interior side of panel **FIG #3**
- Install Fixed Panel support w/weatherstripping onto fix panel support using # 8 1 1/4" screws **FIG #4**
- **FIG #4 – SCREW IS UNDONE A BIT TO SHOW THAT IT MOVES IN**

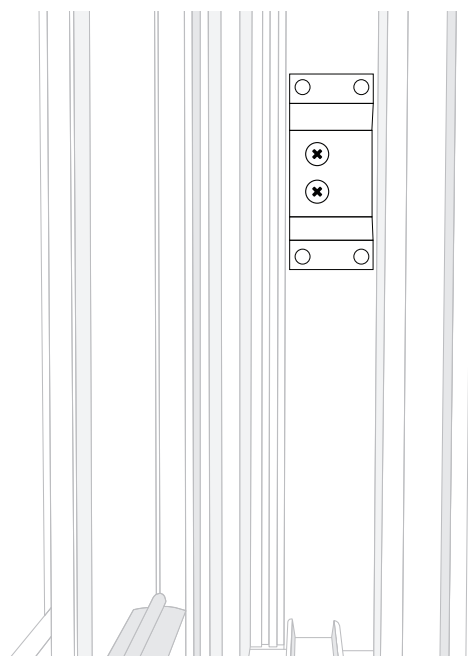


Fig #2

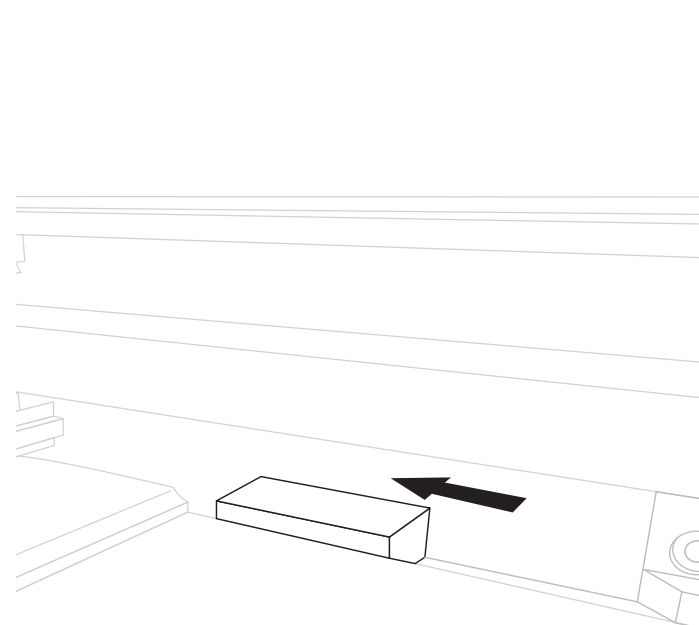


Fig #3


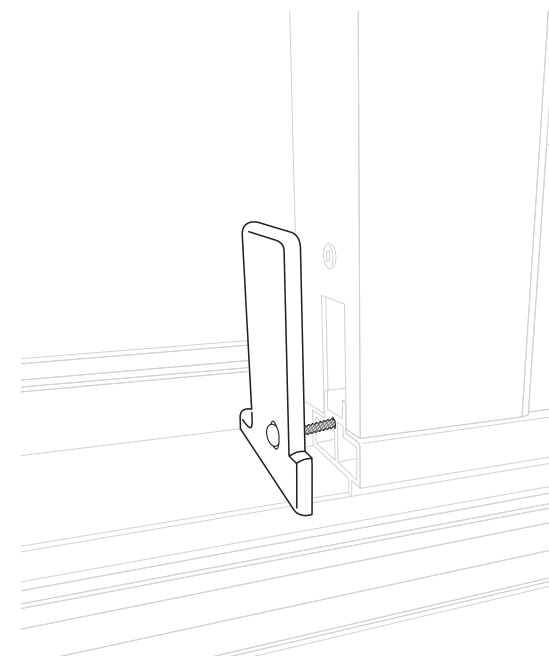


Fig #4

Step 5

Fig #5

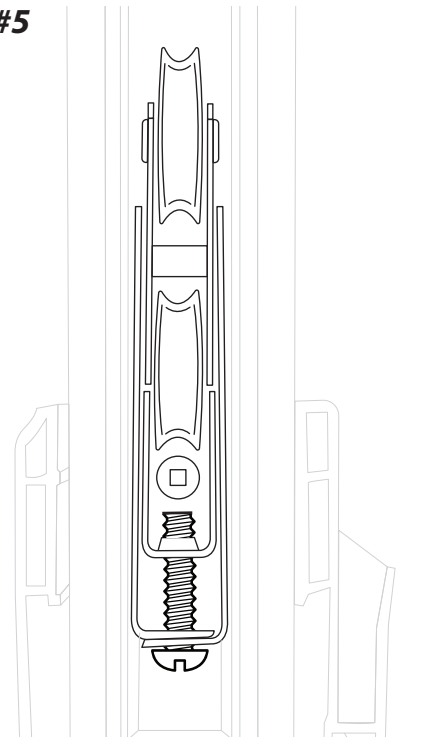

Moving Panel installation

- Install 2 Rollers into the pre-drilled holes on bottom rail **FIG #5**
- Lift panel into header pocket and lower onto roller track
- Adjust wheels if necessary to square up panel

Step 6

Hardware Installation

- Insert Mortise into routed cavity and secure using screws supplied in Hardware kit.
- Insert toggle lever and Fasten Handle (Use hand screwdriver ****DO NOT OVER TORQUE****)
- Fasten the keeper onto the Jamb using screws (found in hardware bag)

Step 7

Bumpers & Weatherstripping

- Install bumpers. 1 in the Head pocket and 1 in the Sill Pocket. **See FIG #6, 7**
- Install **ANTI LIFT** into Header pocket, using 2 #8x1", where Meeting rails meet so that half is visible from Outside and half visible inside. **See FIG #8**

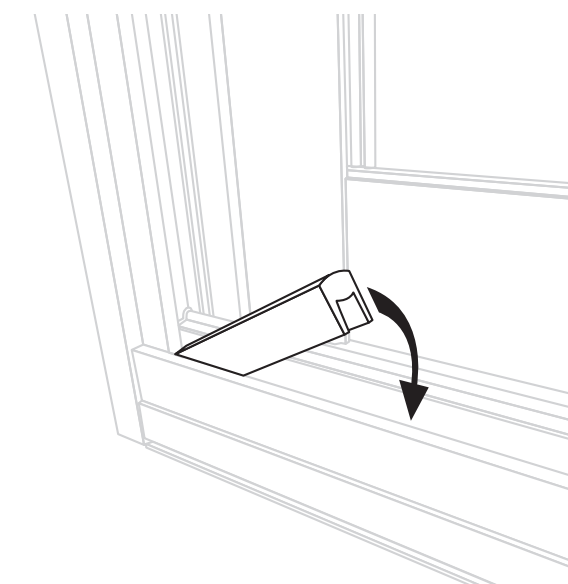


Fig #6

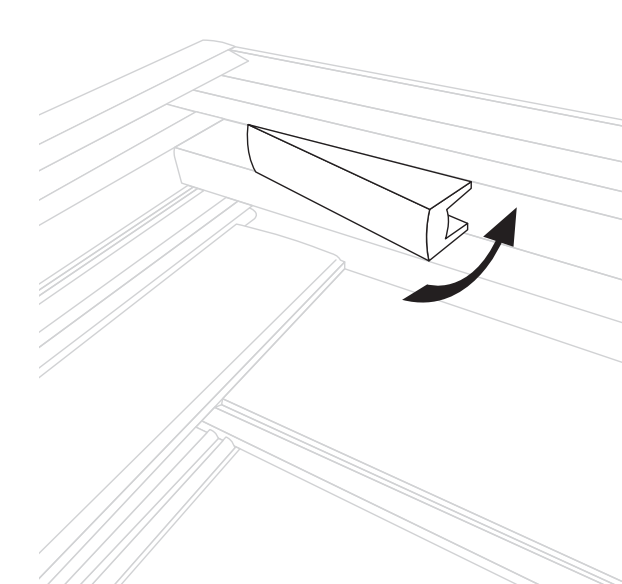


Fig #7

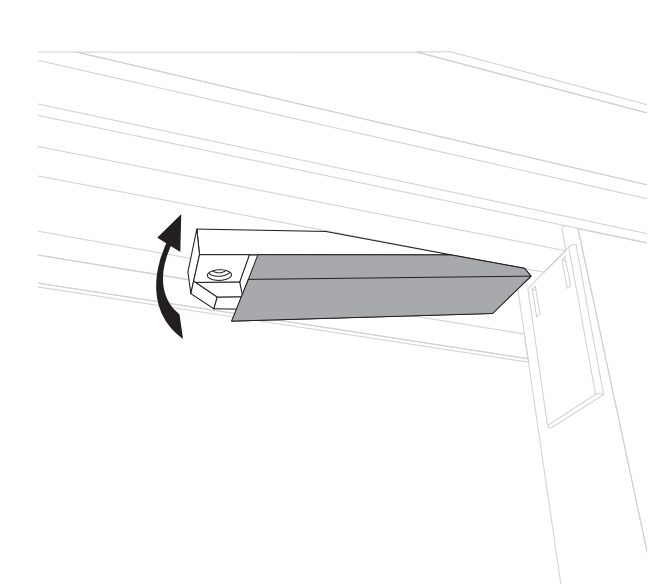


Fig #8