

Step 9

Screw covers & Pocket covers

- Install 2 Pocket covers, 1 for outside and 1 for inside, are snapped into Jamb pockets that are not receiving panels. **(FIG #9)**
- Install screw covers **(FIG #10A)** and install top and bottom screw cover **FIG #10B & #10C** that is installed on sash at top & bottom of sash **(FIG 10A)** Install top & bottom screw covers using removed screws to sash. **FIG #10B(TOP) & #10C(BOTTOM)**
- 1 on fixed panel at top (if purchased with screen), both top & bottom (if purchased with no screen).
- 4 on middle panel 2 top & 2 bottom screw covers.
- 2 on locking panel 1 each top & bottom screw covers.

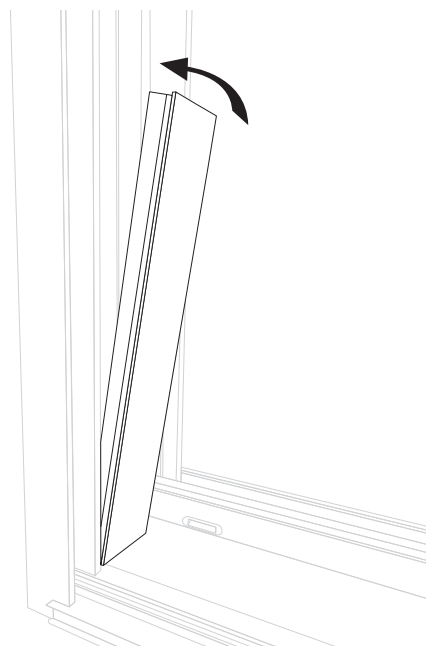


Fig #9

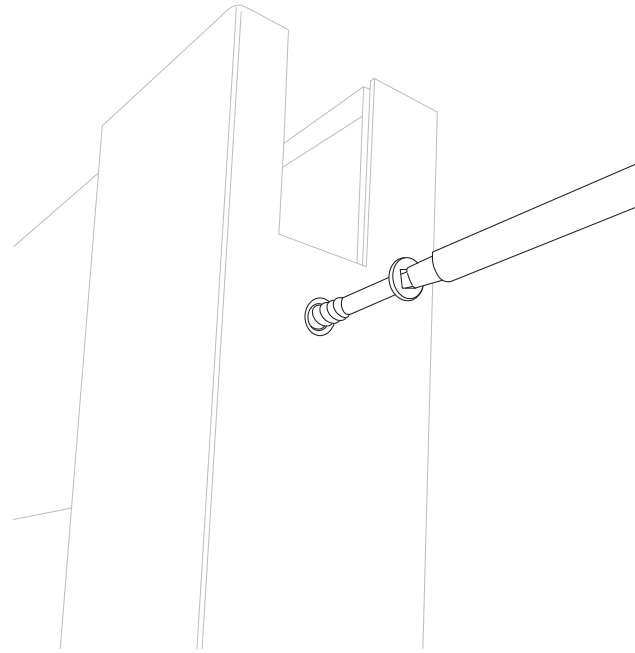


Fig #10A

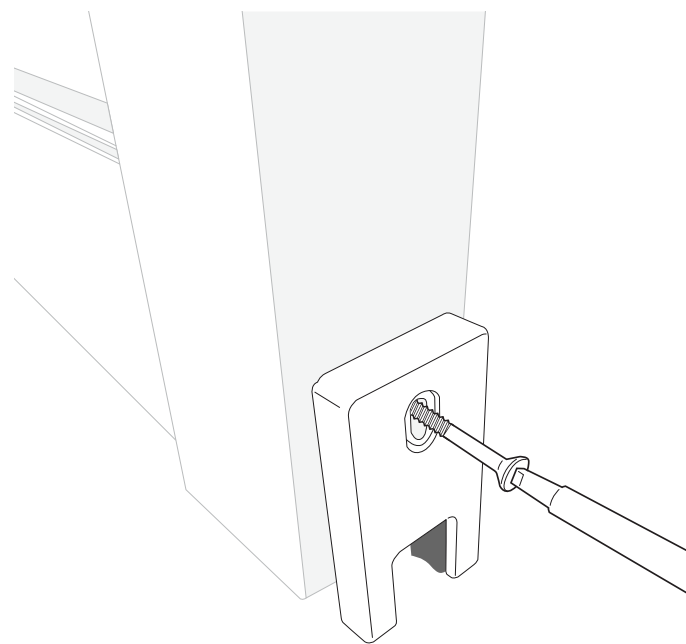


Fig #10B

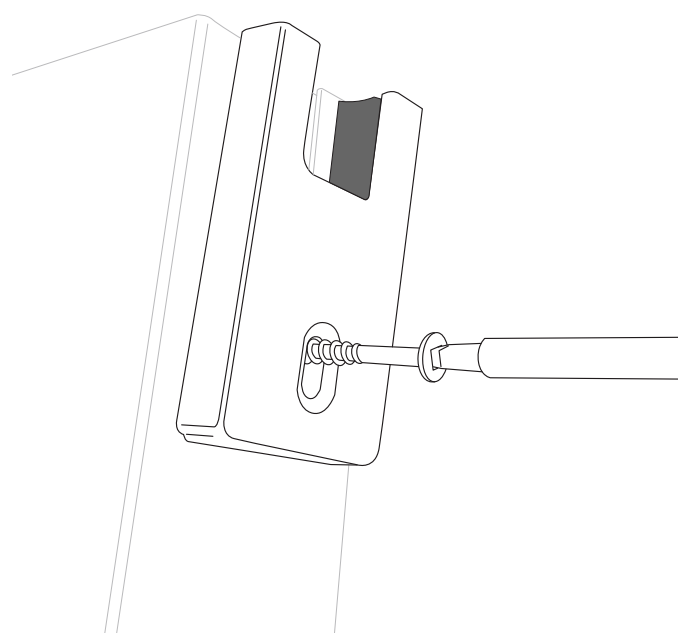


Fig #10C

Step 10

Screen Installation

- Retractable screen frame verticals are installed against the fixed panel and outer jamb pocket. The retractable screen horizontals are installed on outer header rail an aluminum track on sill.
- Please see Genius Zig Zag screen for installation instructions.


ORR / LLO

Installation Instructions Rimini 2.0 (3 Panel Stacking)


**SUCTION CUPS ARE REQUIRED FOR INSTALLATION
PLEASE ENSURE OPENING PRIOR TO ORDERING**

This kit contains:

2 Rollers
with 2 x #8 x 5/8" screws

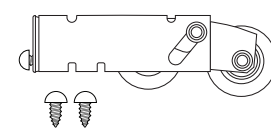

**20 x #8
2 1/2" screws**




**8 x #8
3 1/2 screws**




2 Bumpers




**Fix Panel Support
Weather Stripping**
with 1 x #8
1 1/4" screw

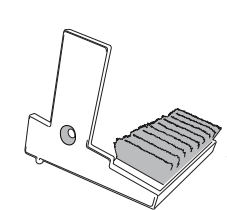

4 Jamb Clips
with 8 x #8
1 1/4" screws

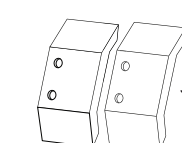


**3 Screw
Covers**




**2 Middle Panel
Bumpers**
with 4 x #8 3/4"
self-tapping screws



**2 Fixed Panel
Anti Lift**

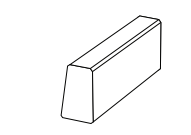

2 Anti Lift
with 4 x #8
1 1/4" screws

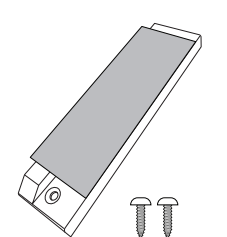

Step 1

Frame Assembly

(If you purchased an assembled Patio door please go to Section "Frame Installation")

- Lay the sill (bottom), Header (top), and Jambs (sides) on the ground with interior side facing down. (lay down drop sheets to protect frame from scratches during assembly).
- Install 5 #8 x 2 1/2" screws (found in hardware bag) into the pilot holes at each frame corner. Ensure that you tighten screws enough to fully compress foam gaskets at each corner..

Step 2


Frame Installation

- Apply a heavy bead of urethane caulking along the full width of the sill opening where sill of patio door will be placed. (Screws are NOT recommended to fasten sill to floor).
- Fasten the door frame to the opening using 8 -#8 -x 3 1/2" screws (found in hardware bag). 3 screws on each side jamb and 2 screws in the Header. Using shims helps squaring up the frame.
- Ensure the door frame is square before installing panels.

Step 3

Fix Panel Support Assembly (not required if door is pre assembled)

- Apply Silicone along the SILL groove to receive the FIX PANEL SUPPORT.
- Slide the FIX PANEL SUPPORT tight against the Jamb. **SEE FIG #1**
- Install 2 - #8x1 1/2" screws (found in hardware bag) 4 to six inches from either end to secure FIX PANEL SUPPORT to SILL (do not over tighten).

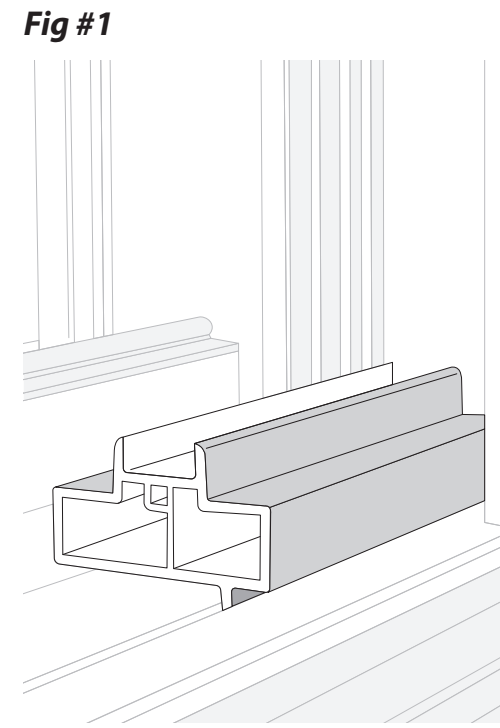

Step 4

Fixed Panel installation (SUCTION CUPS REQUIRED)

- Install 2 Jamb Clips to the pre-drilled holes in the Jamb where fixed panel will be placed using 2 #8 x 1 1/4" screws per clip (found in hardware bag). **FIG #2**
- Insert Fix panel first into the outside Header pocket and lift onto FIX PANEL SUPPORT.
- Slide Fixed panel about 1" from the jamb. Using the suction cup raise fixed panel up and in towards jamb pocket and lower panel onto the Jamb Clips just installed.
- Install the rubber fixed panel anti lift into top of fixed panel where meets jamb on interior side of panel. **FIG #3**
- Install Fixed Panel support w/weatherstripping onto fix panel support using # 8 1 1/4" screws . **FIG #4**

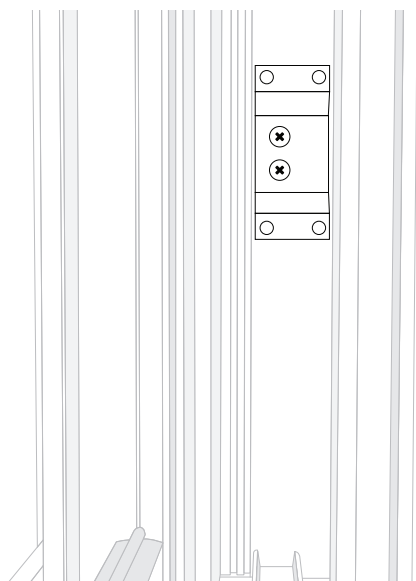


Fig #2

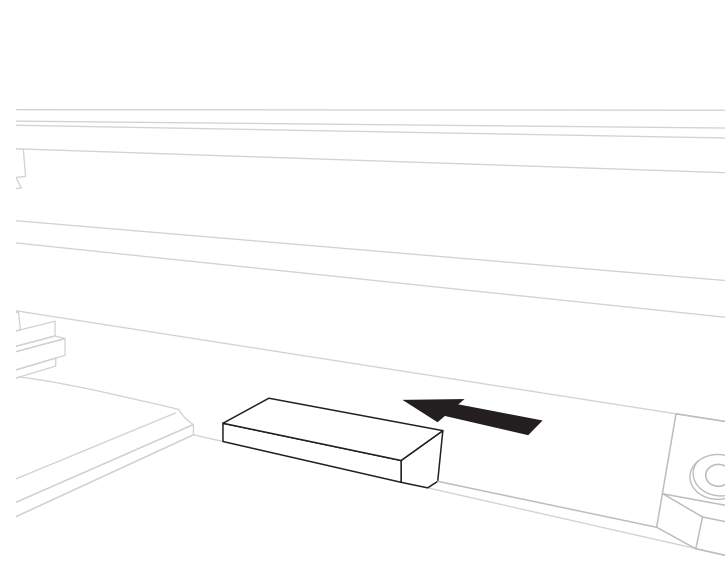


Fig #3

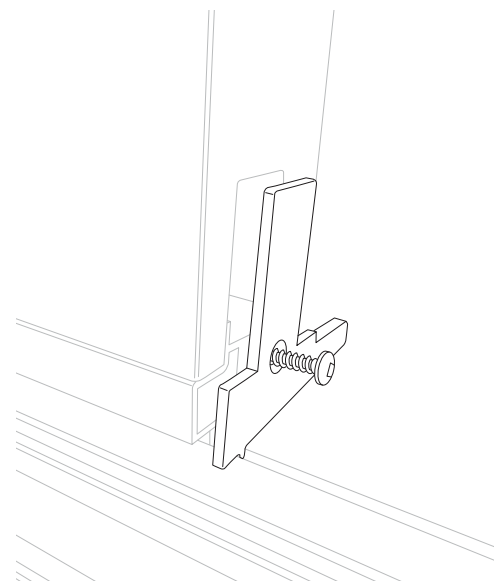


Fig #4

Step 5

Middle Panel installation

- Install 2 Rollers into the pre-drilled holes on bottom rail. **(FIG #5)**
- Lift panel into middle header pocket and lower onto roller track.
- Adjust wheels if necessary to square up panel.

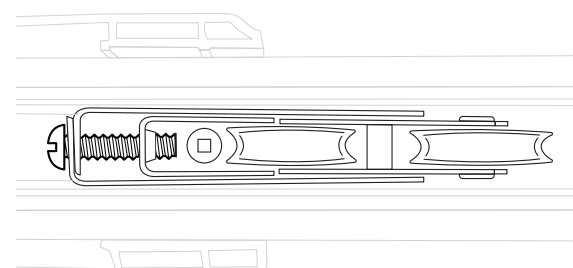



Fig #5

Step 6

Locking Panel installation

- Install 2 Rollers into the pre-drilled holes on bottom rail. **(FIG #5)**
- Lift panel into header pocket and lower onto roller track.
- Adjust wheels if necessary to square up panel.

Fig #5

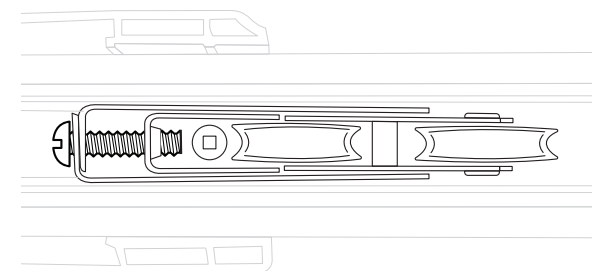

Step 7

Hardware Installation

- Insert Mortise into routed cavity and secure using screws supplied in Hardware kit.
- Insert toggle lever and Fasten Handle (Use hand screwdriver). ****DO NOT OVER TORQUE****
- Fasten the keeper onto the Jamb using screws (found in hardware bag).

Step 8

Bumpers & Weatherstripping

- Install bumpers. 1 in the Head pocket and 1 in the Sill Pocket. **See FIG #6 & #7**
- Install bumpers on middle panel at bottom and top of middle panel. **See FIG #7a & #7b**
- Install ANTI LIFT into the header pocket using #8 -1", where meeting (interlock) rails meet so half is visible from outside and half visible from inside. **See FIG #8**

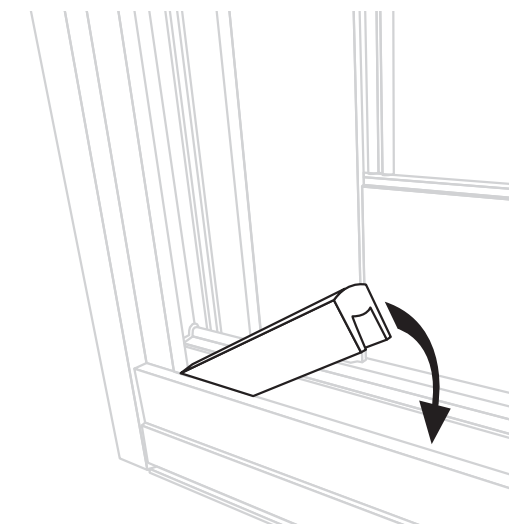


Fig #6

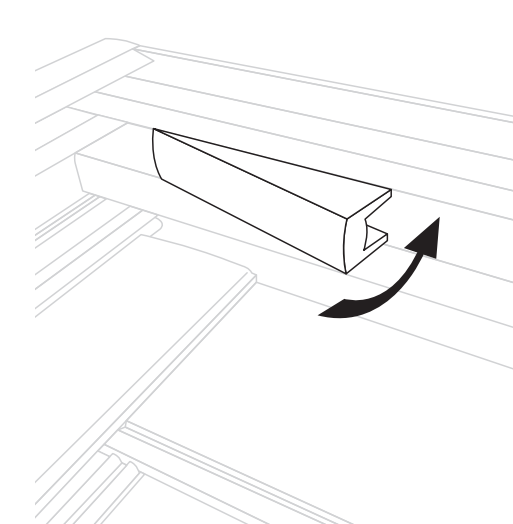


Fig #7

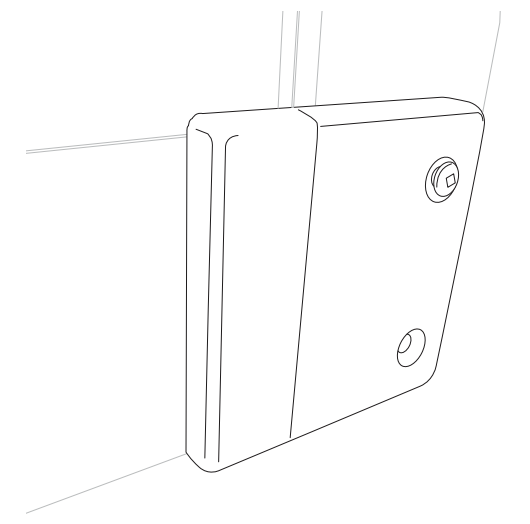


Fig #7a

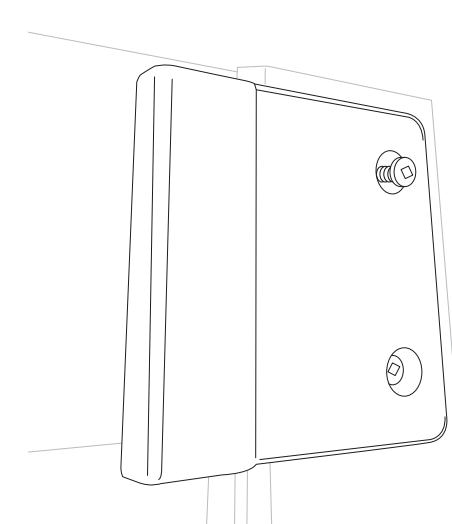


Fig #7b

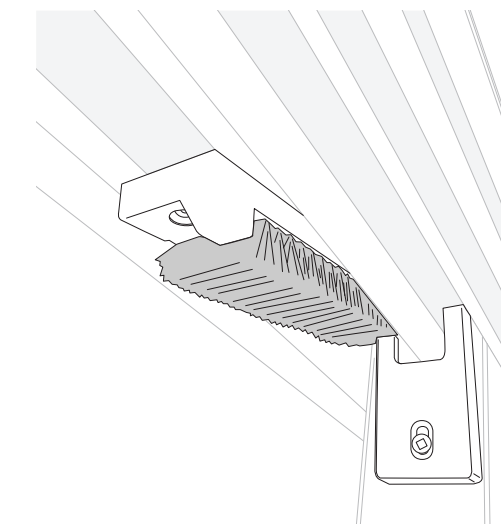


Fig #8