

Step 9

Screw covers & Pocket covers

- Install 2 Pocket covers, 1 for outside and 1 for inside, are snapped into Jamb pockets that are not receiving panels. **(FIG #9)**
- Install screw covers **(FIG #10B & #10C)** that is installed on sash at top & bottom of sash. Install top & bottom screw covers using removed screws to sash. **FIG #10B(BOTTOM) & #10C(TOP)**
- 1 on fixed panel at top (if purchased with screen), both top & bottom (if purchased with no screen).
- 4 on middle panel 2 top & 2 bottom screw covers.
- 2 on locking panel 1 each top & bottom screw covers.

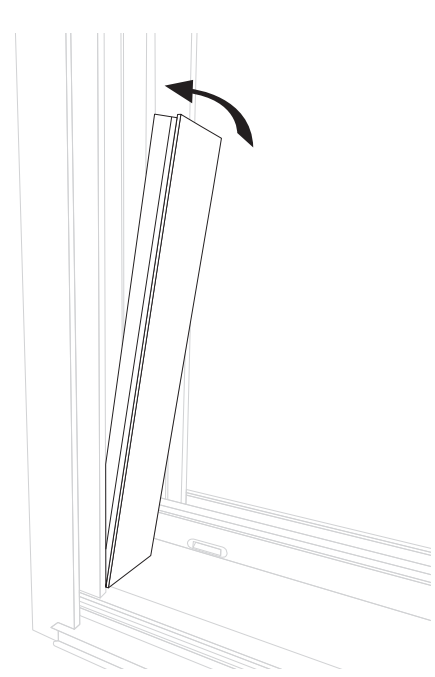


Fig #9

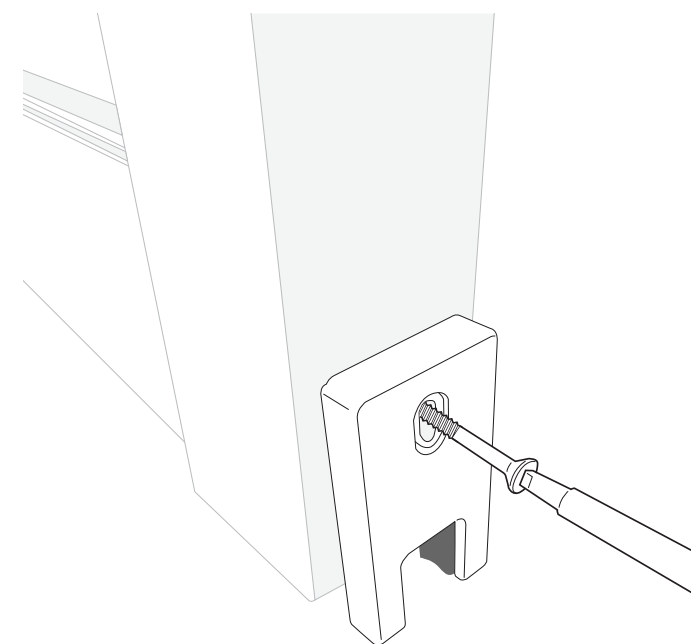


Fig #10B

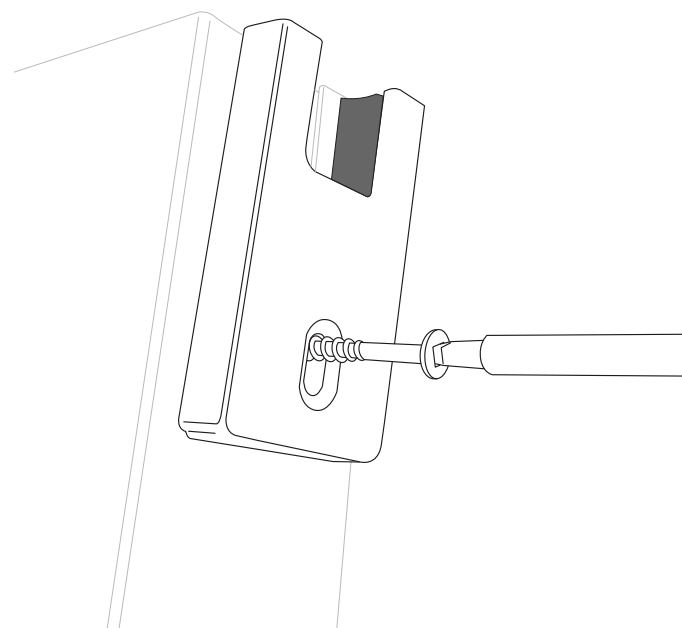


Fig #10C

Step 10

Screen Installation

- Retractable screen frame verticals are installed against the fixed panel and outer jamb pocket. The retractable screen horizontals are installed on outer header rail an aluminum track on sill.
- Please see Genius Zig Zag screen for installation instructions.


ORR / LLO

Installation Instructions Aria 1.0 (3 Panel Stacking)

**SUCTION CUPS ARE REQUIRED FOR INSTALLATION
PLEASE ENSURE OPENING PRIOR TO ORDERING**

This kit contains:


2 Rollers
with 2 x #8 x 5/8" screws

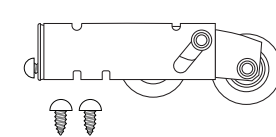

**20 x #8
2 1/2" screws**




**8 x #8
3 1/2 screws**




2 Bumpers




**Fix Panel Support
Weather Stripping**
with 1 x #8
1 1/4" screw

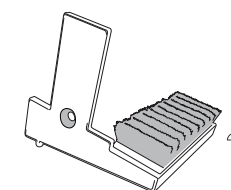


4 Jamb Clips
with 8 x #8
1 1/4" screws

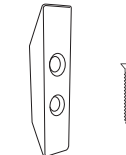


**3 Screw
Covers**

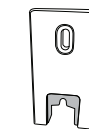


**2 Middle
Panel**
with 4 x #8 3/4"
self-tapping screws

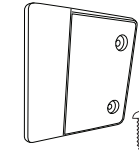

**2 Fixed Panel
Anti Lift**

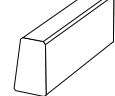

2 Anti Lift
with 4 x #8
1 1/4" screws

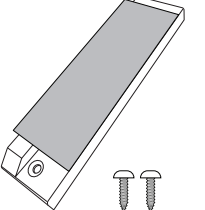

Step 1

Frame Assembly

(If you purchased an assembled Patio door please go to Section "Frame Installation")

- Lay the sill (bottom), Header (top), and Jambs (sides) on the ground with interior side facing down. (lay down drop sheets to protect frame from scratches during assembly).
- Install 7 #8 x 2 1/2" screws (found in hardware bag) into the pilot holes at each frame corner. Ensure that you tighten screws enough to fully compress foam gaskets at each corner. Ensure that you tighten the screws enough to fully compress the foam gasket at each corner.

Step 2


Frame Installation

- Apply a heavy bead of urethane caulking along the full width of the sill opening where sill of patio door will be placed. (Screws are NOT recommended to fasten sill to floor)
- Fasten the door frame to the opening using 8 -#8 -x 3 1/2" screws (found in hardware bag). 3 screws on each side jamb and 2 screws in the Header. Using shims helps squaring up the frame.
- Ensure the door frame is square before installing panels.

Step 3

Fix Panel Support Assembly (not required if door is pre assembled)

- Apply Silicone along the SILL groove to receive the FIX PANEL SUPPORT.
- Slide the FIX PANEL SUPPORT tight against the Jamb. **SEE FIG #1**
- Install 2 - #8x1 1/2" screws (found in hardware bag) 4 to six inches from either end to secure FIX PANEL SUPPORT to SILL (do not over tighten).

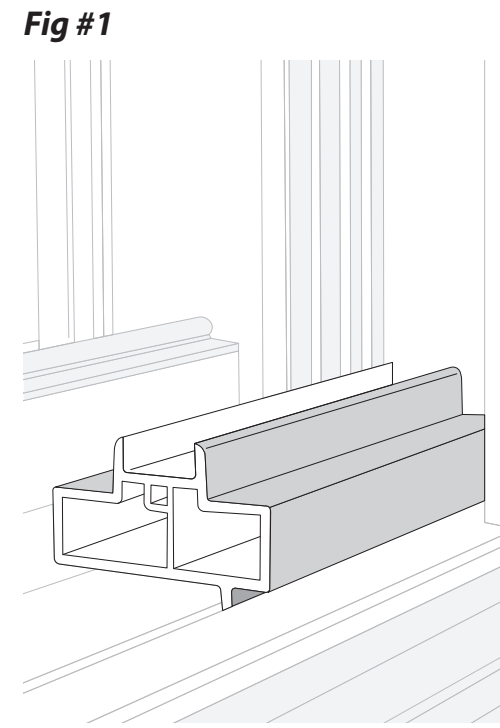

Step 4

Fixed Panel installation (SUCTION CUPS REQUIRED)

- Install 2 Jamb Clips to the pre-drilled holes in the Jamb where fixed panel will be placed using 2 #8 x 1 1/4" screws per clip (found in hardware bag). **FIG #2**
- Insert Fix panel first into the outer Header pocket and lift onto FIX PANEL SUPPORT.
- Slide Fixed panel about 1" from the jamb. Using the suction cup raise fixed panel up and in towards jamb pocket and lower panel onto the Jamb Clips just installed.
- Install the rubber fixed panel anti lift into top of fixed panel where meets jamb on interior side of panel. **FIG #3**
- Install Fixed Panel support w/weatherstripping onto fix panel support using # 8 1 1/4" screws . **FIG #4**

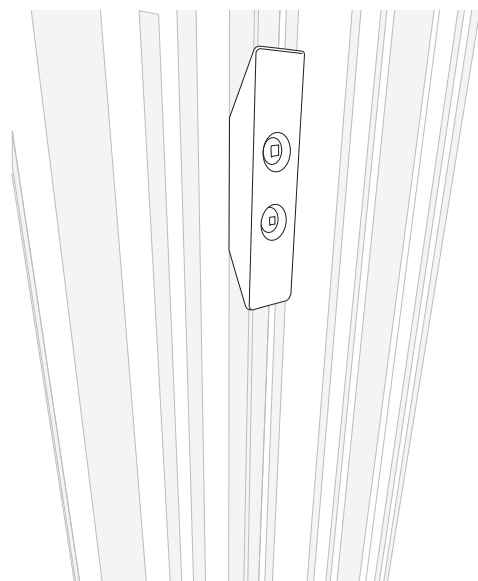


Fig #2

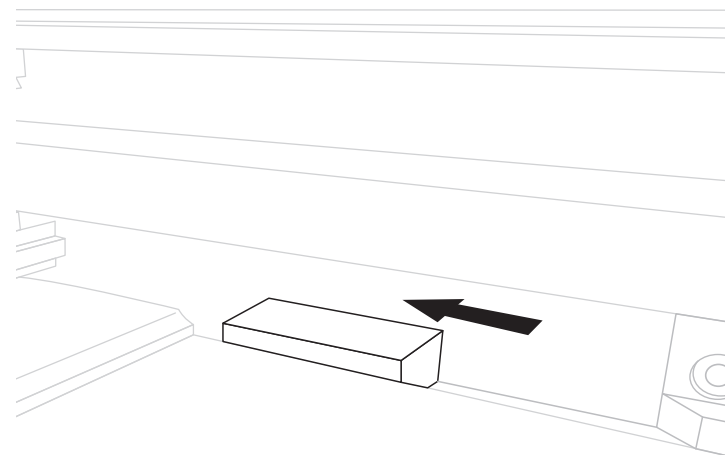


Fig #3

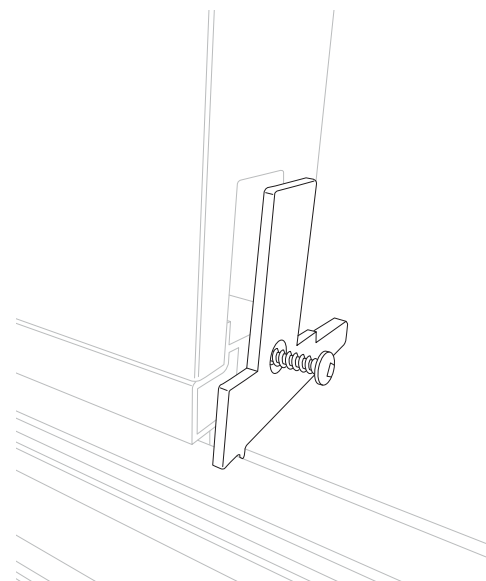


Fig #4

Step 5

Middle Panel installation

- Install 2 Rollers into the pre-drilled holes on bottom rail. **(FIG #5)**
- Lift panel into middle header pocket and lower onto roller track.
- Adjust wheels if necessary to square up panel.

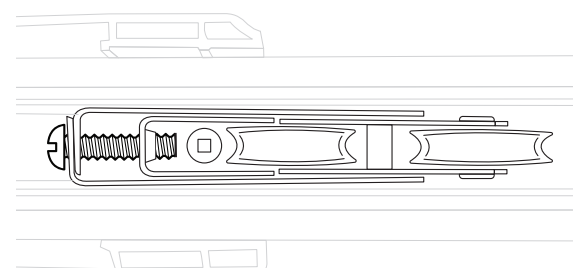



Fig #5

Step 6

Locking Panel installation

- Install 2 Rollers into the pre-drilled holes on bottom rail. **(FIG #5)**
- Lift panel into outer header pocket and lower onto roller track.
- Adjust wheels if necessary to square up panel.

Fig #5

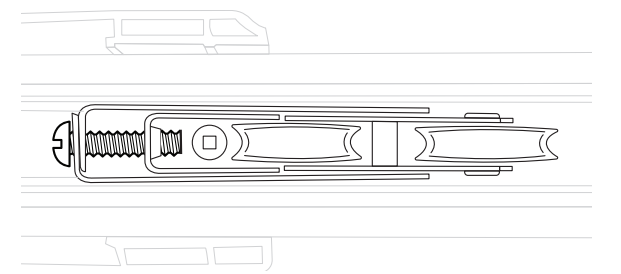

Step 7

Hardware Installation

- Insert Mortise into routed cavity and secure using screws supplied in Hardware kit.
- Insert toggle lever and Fasten Handle (Use hand screwdriver). ****DO NOT OVER TORQUE****
- Fasten the keeper onto the Jamb using screws (found in hardware bag).

Step 8

Bumpers & Weatherstripping

- Install bumpers. 1 in the Head pocket and 1 in the Sill Pocket. **See FIG #6 & #7**
- Install bumpers on middle panel at bottom and top of middle panel. **See FIG #7a & #7b**
- Install ANTI LIFT into the header pocket using #8 -1", where meeting (interlock) rails meet so half is visible from outside and half visible from inside. **See FIG #8**

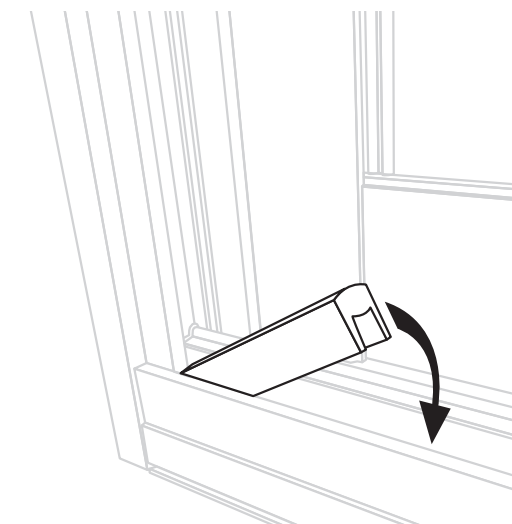


Fig #6

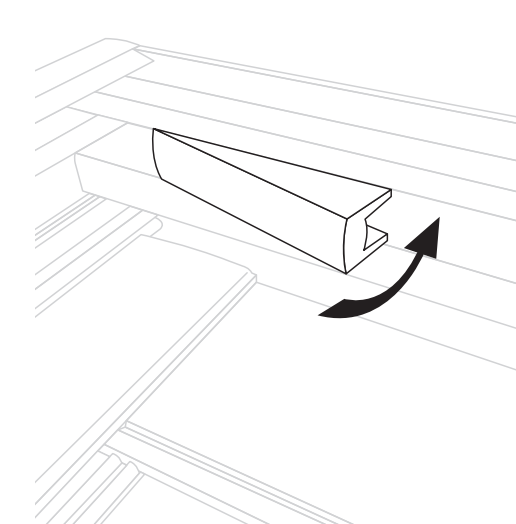


Fig #7

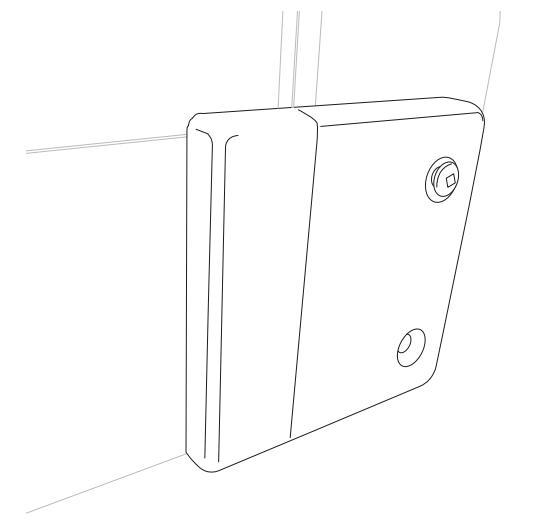


Fig #7a

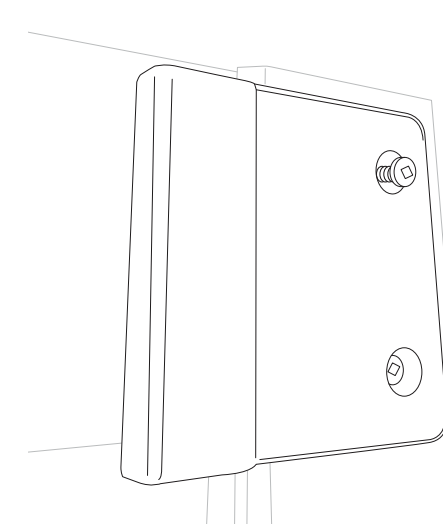


Fig #7b

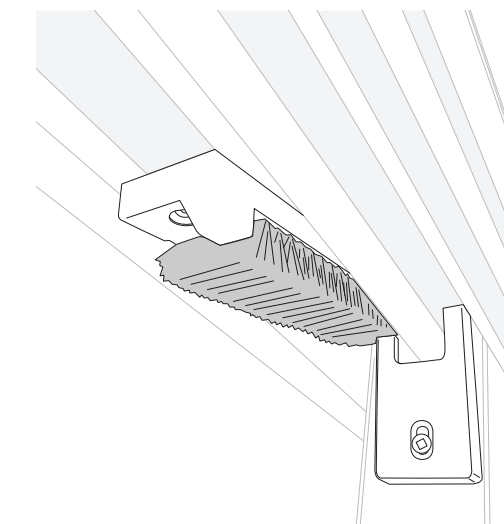


Fig #8