

Step 8

Screw covers & Pocket covers

- Using the 3 screw covers (**FIG. 8**) snap into cavity of moving meeting rail at top & bottom. Snap remaining 2 screw covers at top of fixed panel meeting rails.
- Install 2 Pocket covers, both inside by snapping them into the jamb pockets that are not receiving panels. **SEE FIG #9**

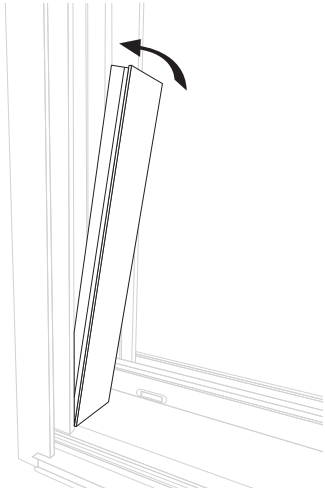


Fig #8

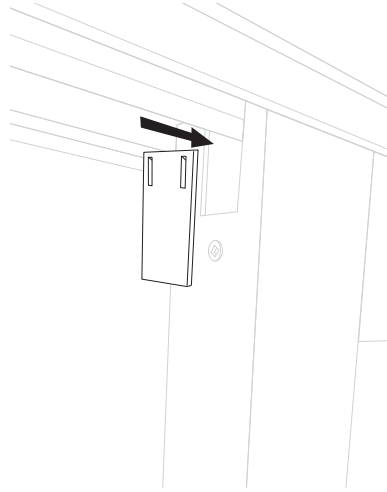


Fig #9

Step 9

Screen Installation

- Lift and tilt Screen into screen pocket and position onto screen roller track. (adjust rollers if necessary)
- Install screen keeper into other screen HBAR and adjust if necessary.

Vista

ORO / OLO

Installation Instructions Amalfi 1.0 (3 PANEL DOORS)


**SUCTION CUPS ARE REQUIRED FOR INSTALLATION
PLEASE ENSURE OPENING PRIOR TO ORDERING**

This kit contains:


2 Rollers
with 2 x #8 x 5/8" screws



**20 x #8
2 1/2" screws**

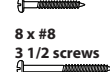

**8 x #8
3 1/2 screws**



2 Bumpers



**Fix Panel Support
Weather Stripping**
with 1 x #8
1 1/4" screw



4 Jamb Clips
with 8 x #8
1 1/4" screws




**3 Screw
Covers**



**2 Fixed Pane
Anti Lift**



Anti Lift
with 2 x #8
1 1/4" screws

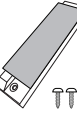

Step 1

Frame Assembly

(If you purchased an assembled door please go to directly to section 3 Frame Installation)

- Lay the sill(bottom), Header (Top), and Jambs (sides) on the ground with Interior side facing down.
- Install 4(four) #8 x 2 1/2" screws (found in your hardware bag) into the pilot holes at each frame corner. Ensure that you tighten the screws enough to fully compress the foam gasket at each corner.


Step 2

Installing the 2 Fixed Panel Supports

The 2 Fixed Panel Supports (FPS) are the pieces that the fixed panels will rest on. **SEE FIG #1**

- Apply a bead of silicone based sealant into the groove that you will find on the sill directly behind the aluminum screen track. Be sure to apply the sealant only to the sides that will accept the FPS.
- Slide the FPS tightly against the jamb and make sure that the grooves on the FPS line up with the groove on the sill. (repeat on other end)
- Install 2(two) #8 x 1 screws to each FPS 4 to six inches from either end of the FPS and ensure you do NOT over tighten screws.

Fig #1

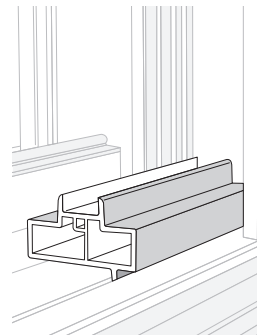

Step 3

Frame Installation

- Fasten the door frame to the opening using 8 - #8 x 3 1/2" screws. 3 screws on each side Jamb and 2 screws in the Header. (Using wood shims helps with squaring up the frame)
- Ensure the door frame is square before installing panels.

IF YOU HAVE PURCHASED A FACTORY ASSEMBLED DOOR, IT IS NECESSARY TO READJUST THE ROLLERS ON BOTH THE SCREEN AND THE SLIDING PANEL AFTER INSTALLATION IN ORDER TO INSURE SMOOTH AND EASY OPERATION. IT MIGHT ALSO BE NECESSARY TO ADJUST THE LOCK TO ENSURE IT WORKS PROPERLY.

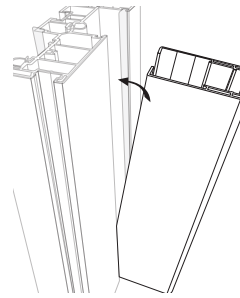


Fig #4A

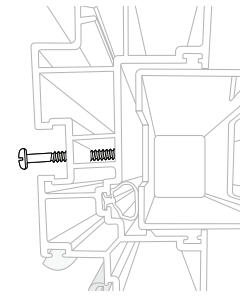


Fig #4B

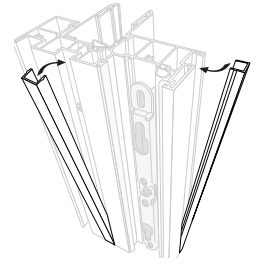


Fig #4C

Step 4

Fixed Panel & Mullion Installation (SUCTION CUPS REQUIRED)

- There are 2 Fixed panels 1 is a Regular Fixed panel with an interlock and a fixed rail. The 2nd is a Special Fixed panel with NO interlock rail just fixed rails. Install 2 Jamb clips to the pre drilled holes in the jamb where both the fixed & special fixed panel will be placed using 2 #8 x 1/14" screws per clip (found in hardware bag). **FIG #2**
- If your door is a Right opening the Special Fixed Panel should be installed on the right side. Viewing door from outside. If your Door is a Left slide the Special Fixed Panel should be installed on the left side. Viewing door from outside.
- Position your Fixed panels with the panel clips facing the jamb on to the FPS while lifting into the corresponding pocket in the Header.
- Slide either Fixed panel about 1 inch from the jamb. Using the Suction cup, raise the panel up and then over to jamb and back down to engage panel clips onto Jamb clips. Your Fixed panel is now installed (repeat on the other fixed panel). Should the fixed panel(s) not engage properly, lift and remove the fixed panel and repeat step 4c.
- Install fixed anti lift bumpers at the top of both fixed panels where they meet Jamb on inside of house. **FIG #3**
- Attach Fix panel support cap at Regular Fixed panel. **FIG #4** • Fully attach Mullion to special fixed panel. **FIG #4A**
- Using self drilling screws pre installed on Mullion, fasten screws into Special Fixed Panel from inside the house and also on the side from outside the house. **FIG #4B** • Cover screw ports with screw cover. **FIG #4C**

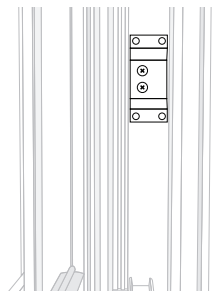


Fig #2

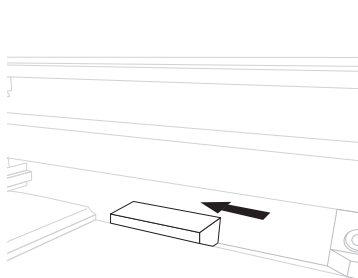


Fig #3

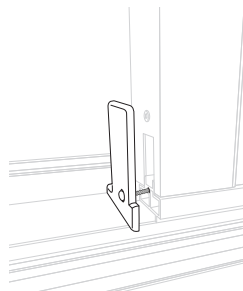



Fig #4

Step 5

Moving Panel Installation

- Install 2 Rollers (**FIG #5**) into pre-drilled holes on bottom rail of moving panels.
- Lift Moving panel into the Header pocket and lower onto roller track.
- Rollers have an adjustable screw. Adjust rollers if necessary to square up panel.

Fig #5

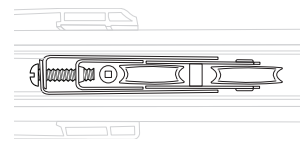

Step 6

Hardware Installation

- Insert Mortise into Routed cavity and secure using screws using screws supplied in Hardware kit.
- Insert toggle lever and fasten handles (Use hand Screwdriver) ****DO NOT OVER TORQUE****
- Fasten the keeper onto the Mullion using screws supplied in Hardware kit.

Step 7

Bumpers & Weatherstripping

- Install bumpers 1 at each end of the Head pocket and 1 at each end of the Sill pocket. **See FIG #6**
- Install ANTI LIFT into the header pocket using #8 -1", where meeting (interlock) rails meet so half is visible from outside and half visible from inside. **See FIG #7**

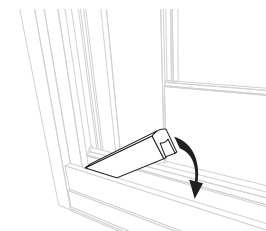


Fig #6

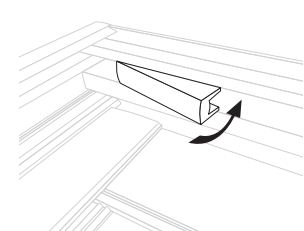


Fig #7